



Monteringsanvisning

Installation manual

- Tilleggsveiledning / Additional instructions

Monteringsanvisning

Installation manual

Table of contents:

1. Sectioning alternatives

1.2 Alternative sectioning specific for Fjord

1.3 Alternative sectioning specific for Villa

2. Alternatives for end post mounted beside wall

3. Better fitment of bottom cover

4. If rail is a little too long

5. Removal of slack in posts


Monteringsanvisning

Installation manual

1. Sectioning alternatives


Standard solution:

("A" is sections cut to fit)

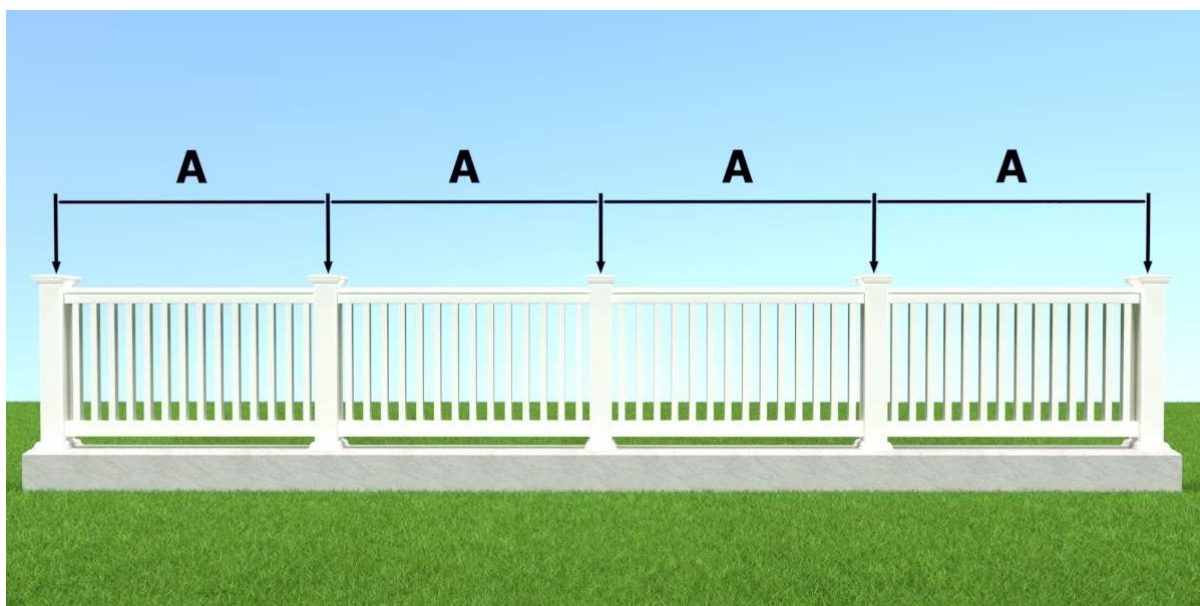

Alternative solution 1:

("C" is full length sections, "B" is sections cut to fit)

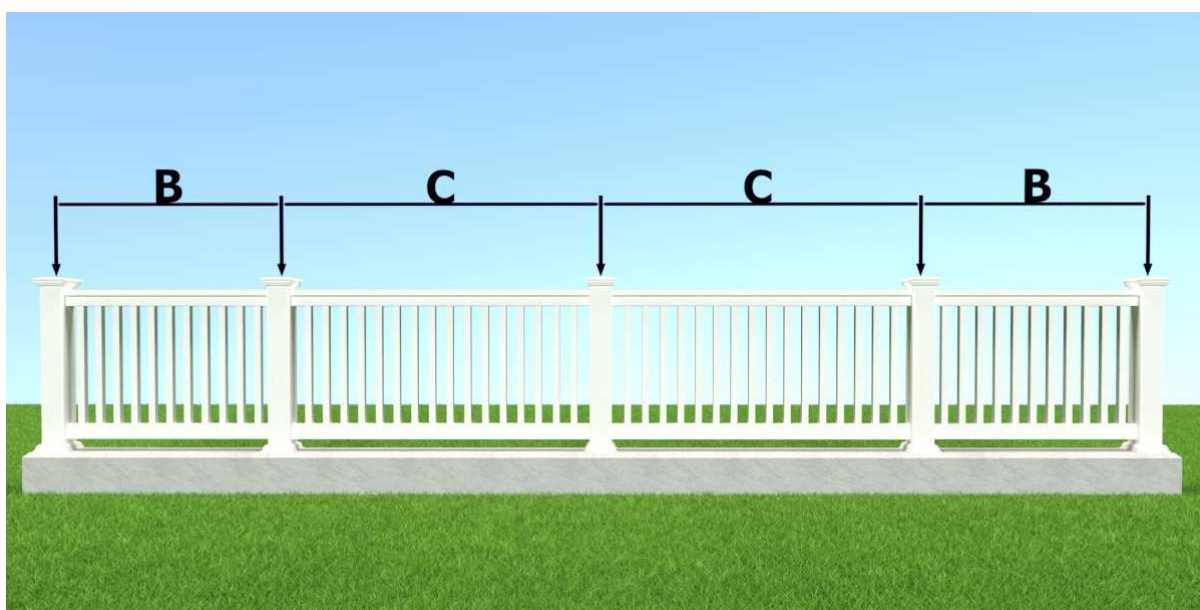


Monteringsanvisning

Installation manual

Alternative solution 2:

("C" is full length sections, "D" is section cut to fit)

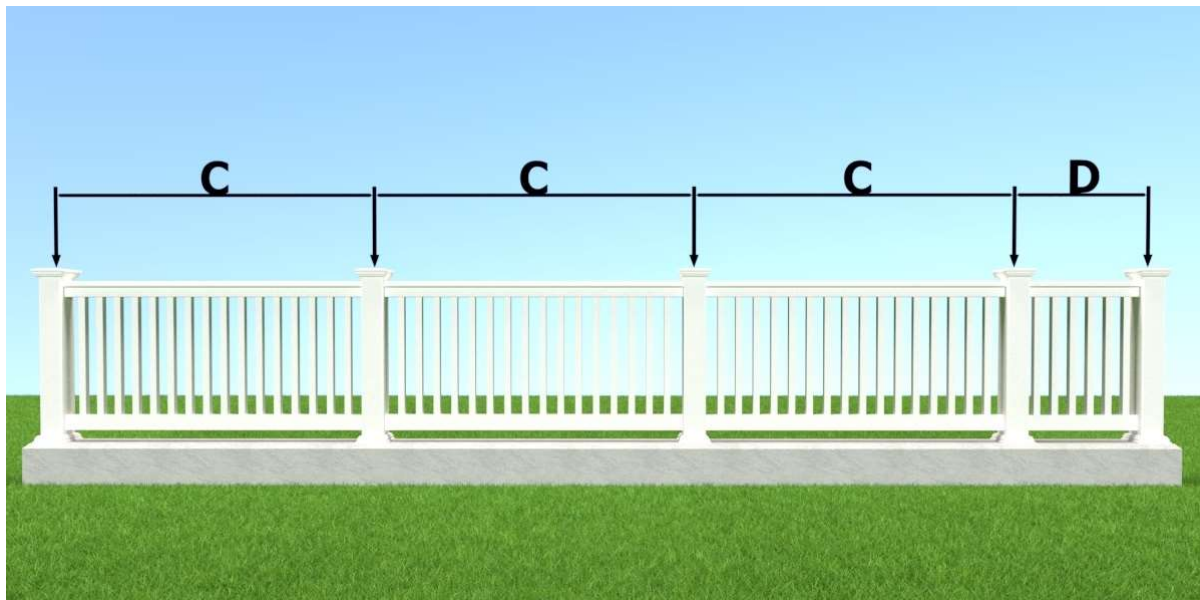



Monteringsanvisning

Installation manual

1.2 Sectioning alternatives Fjord

Possible outcome of standard sectioning of Fjord:



(All sections same length)

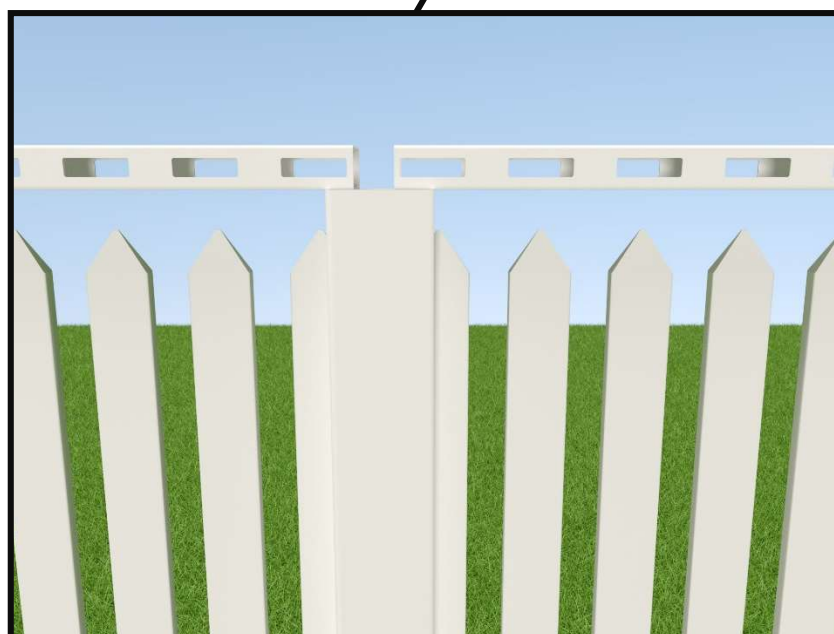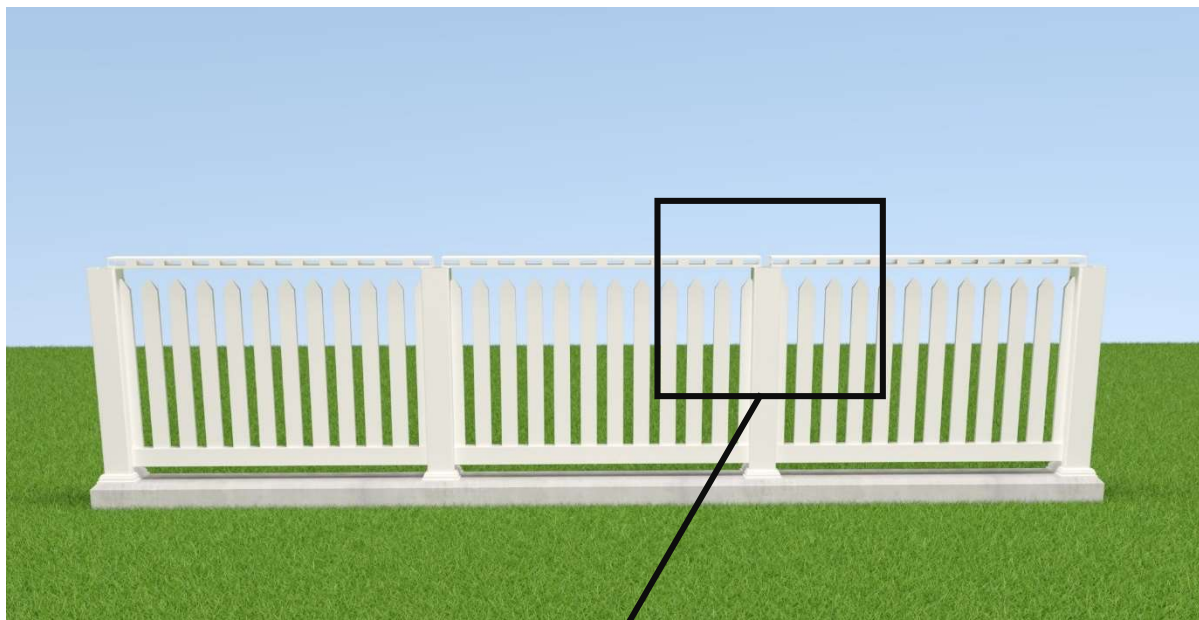

Monteringsanvisning

Installation manual

Resectioning/adjusting Fjord sections to avoid cutting pickets lengthwise: (Different section lengths)

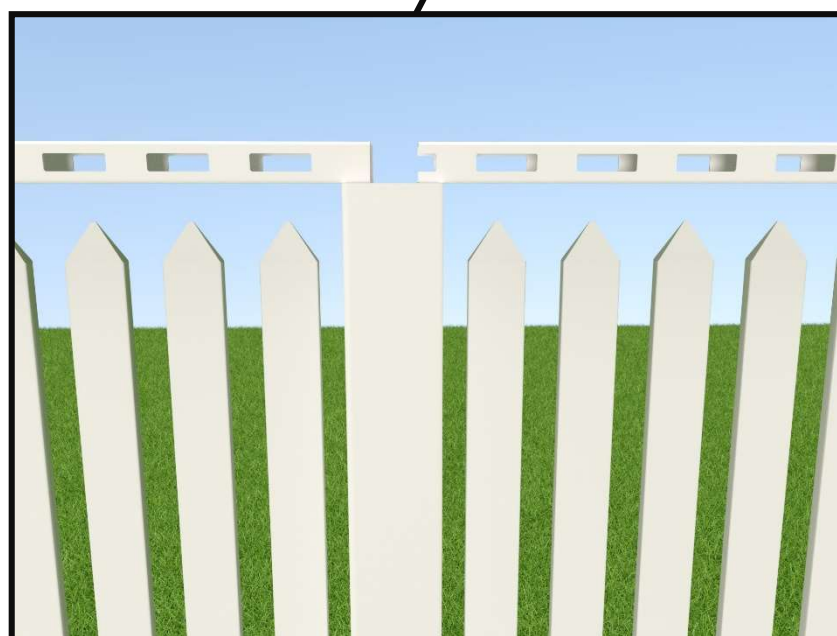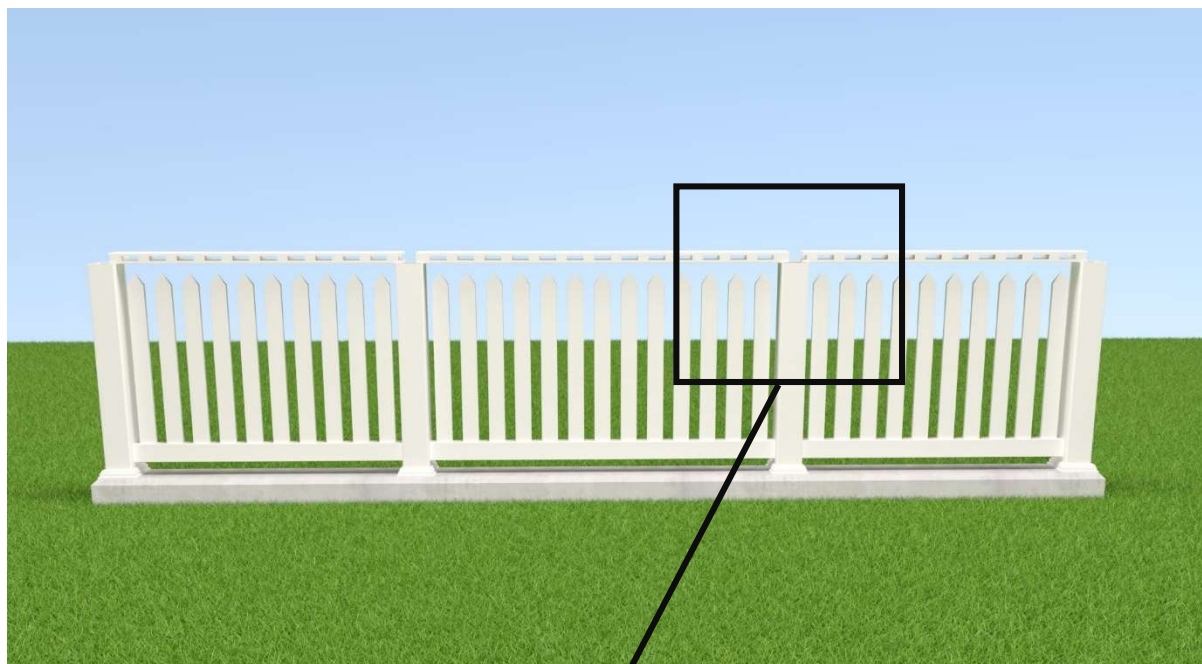



1.3 Sectioning alternatives Villa

Monteringsanvisning

Installation manual

Possible outcome of standard sectioning of Villa:



(All sections same length)

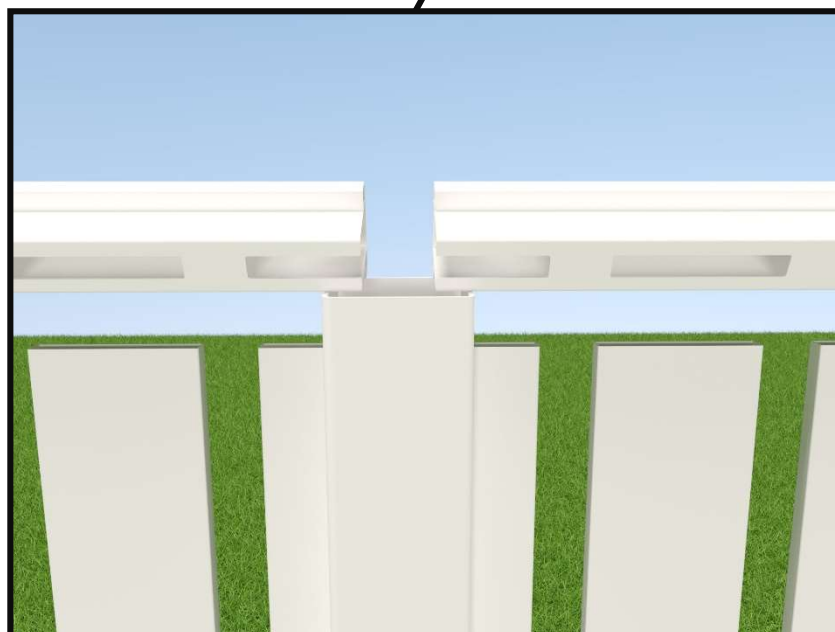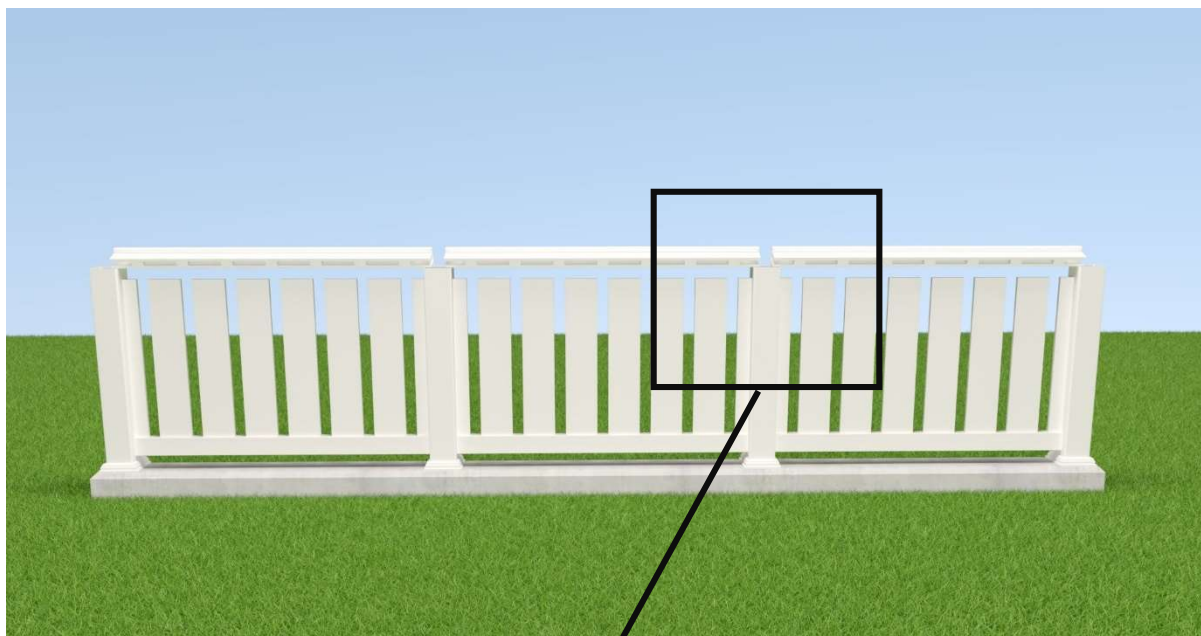

Monteringsanvisning

Installation manual

Resectioning/adjusting Villa sections to avoid cutting pickets lengthwise: (Different section lengths)

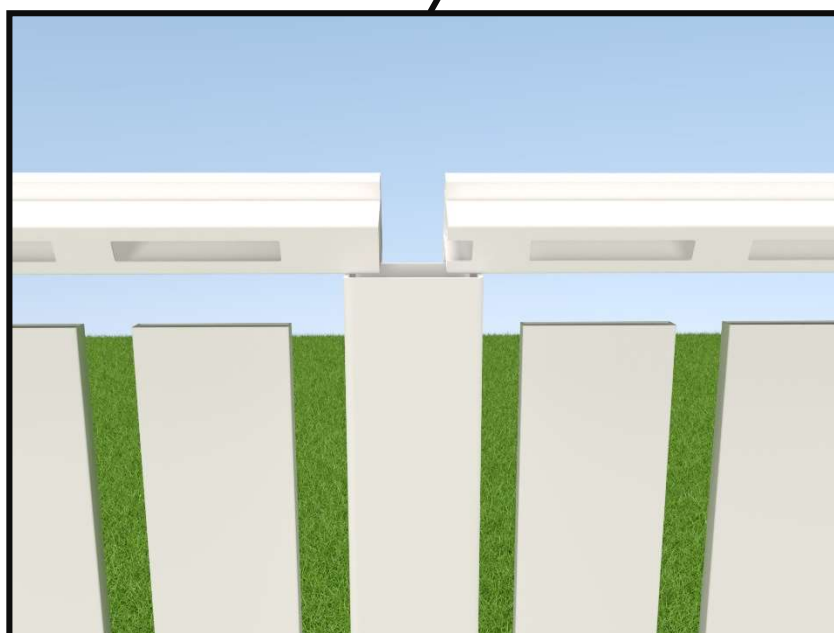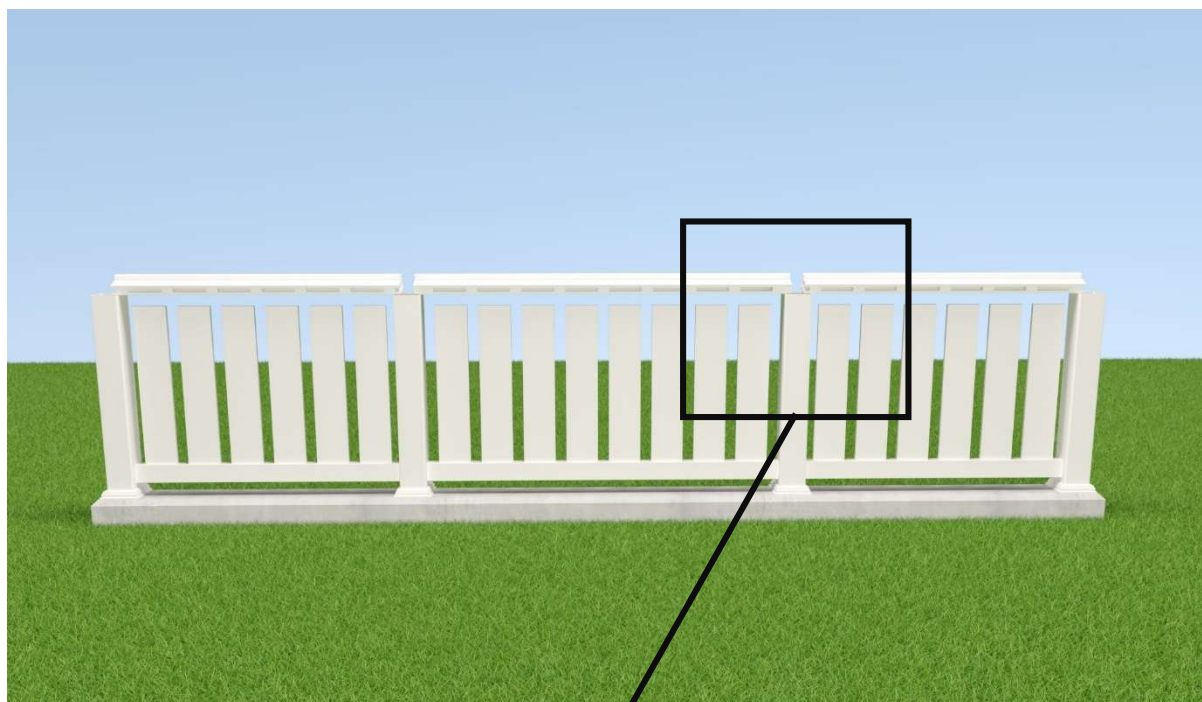


Monteringsanvisning

Installation manual

2. Alternatives for end post mounted to wall

Standard solution:

(When only 2 screws used to fasten insert)

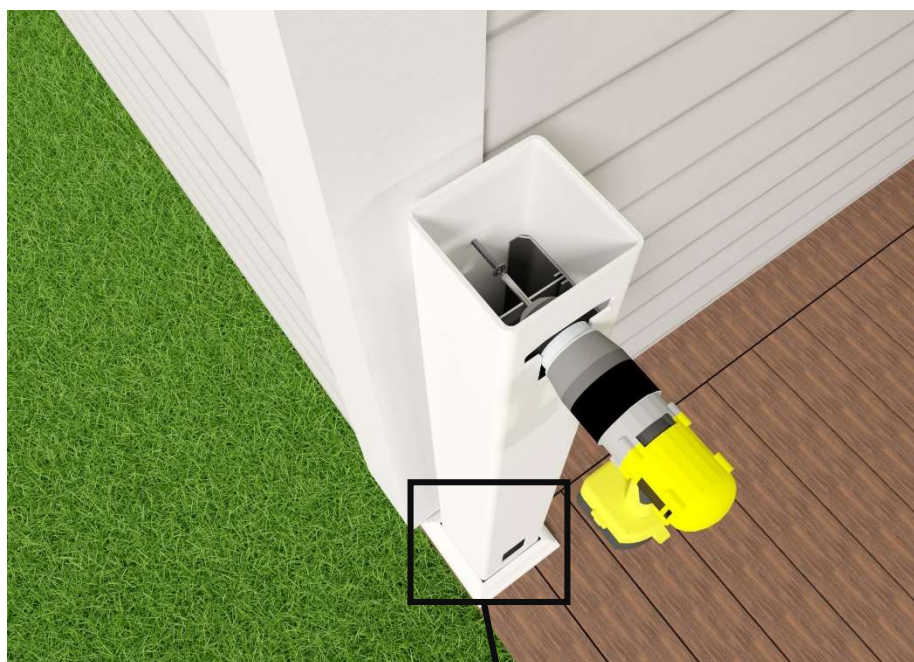

Monteringsanvisning

Installation manual

Alternative solution 1:



(With the use of lengthener to reach screws at wall side, no fastening to wall needed)



Monteringsanvisning

Installation manual


Alternative solution 2: (Flush to wall)

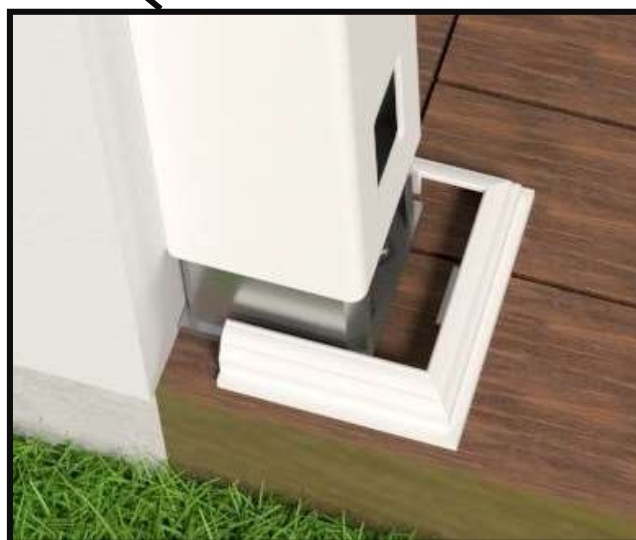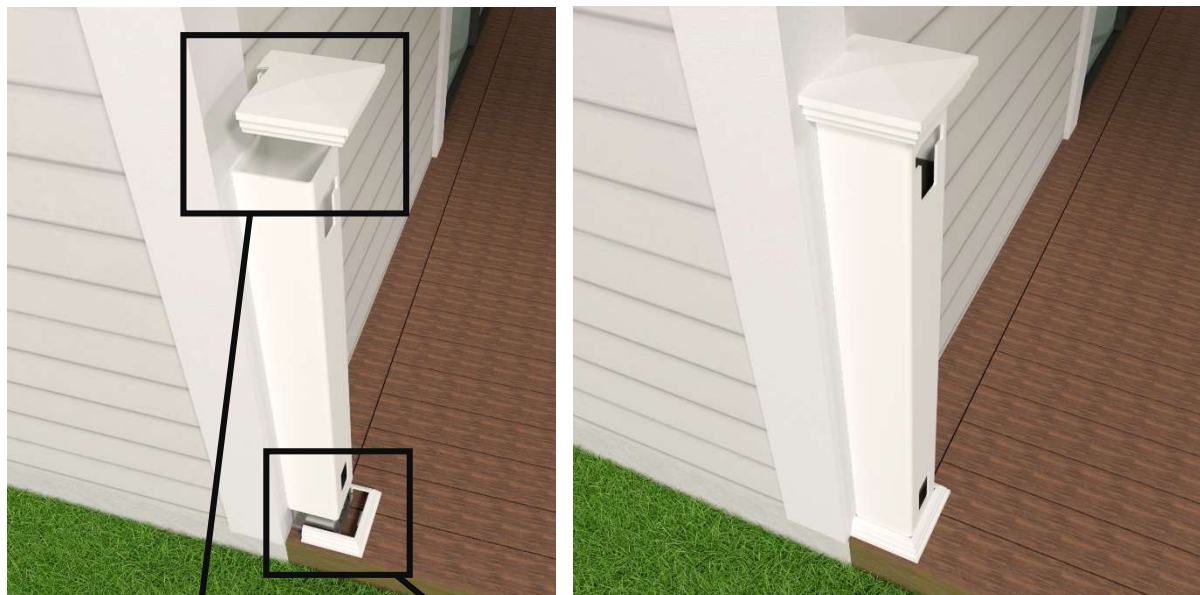

Monteringsanvisning

Installation manual

3. Better fitment of bottom cover

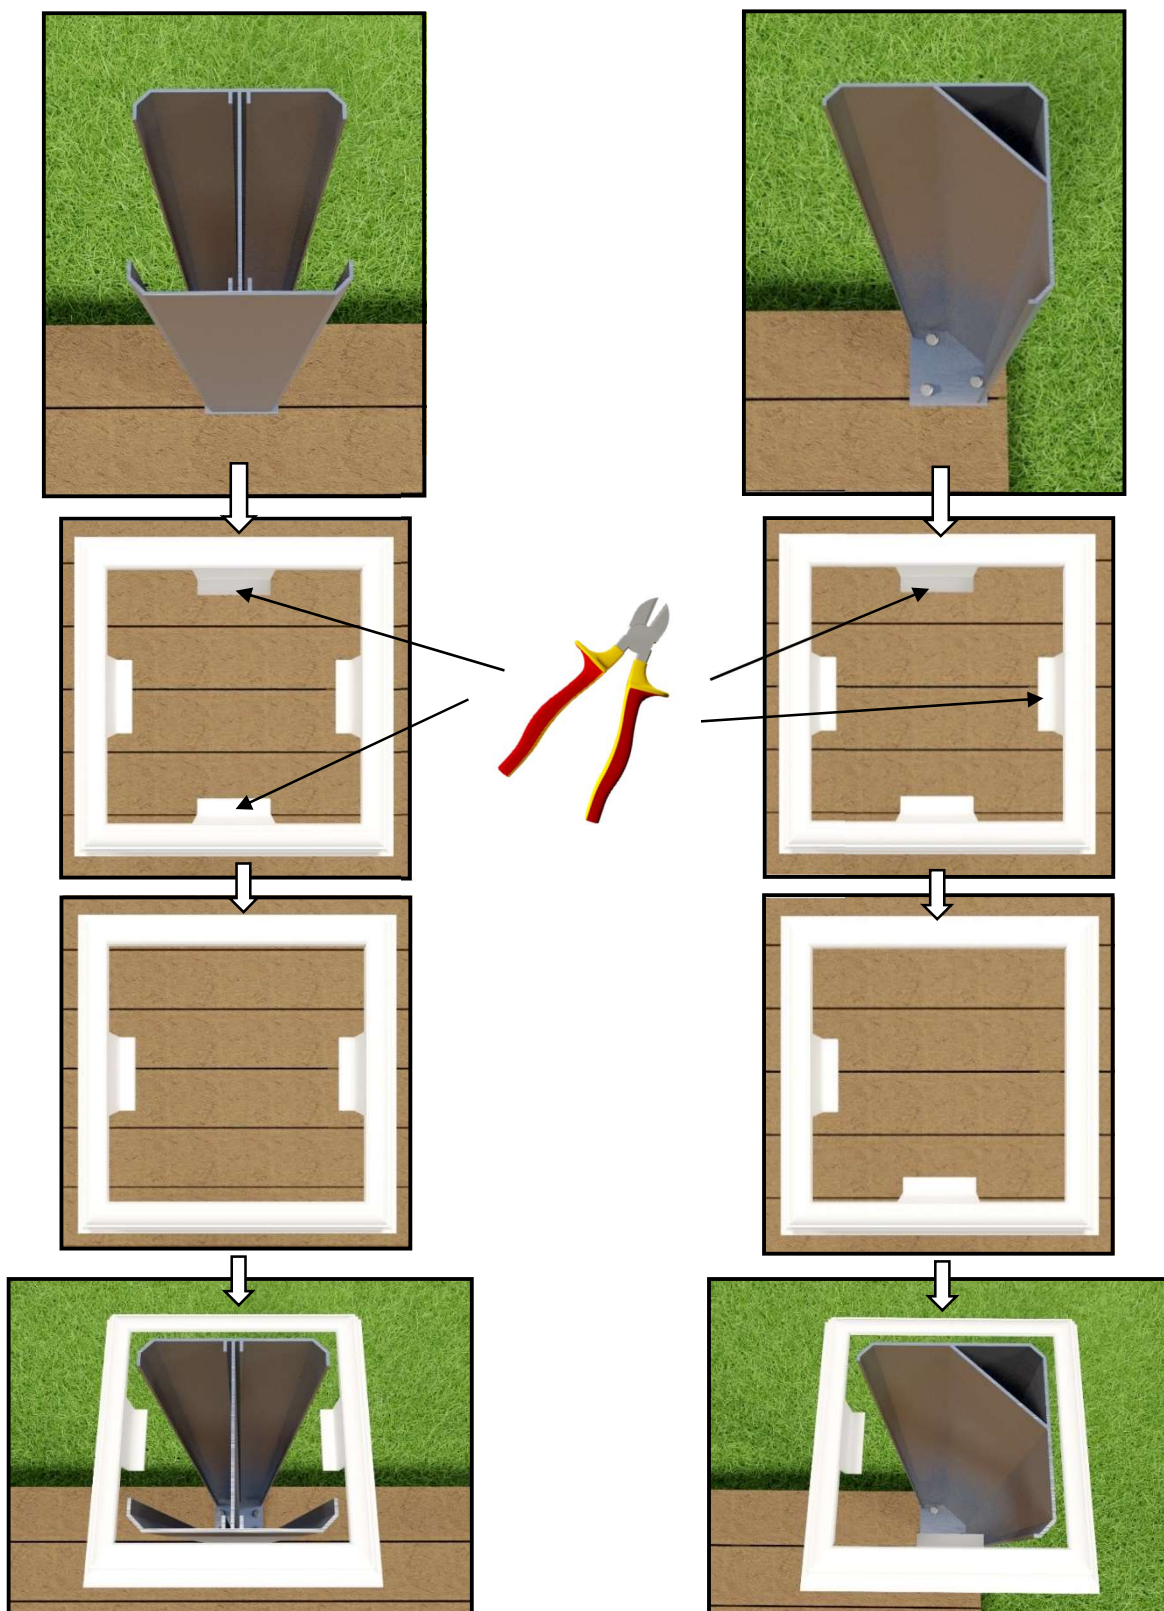

Monteringsanvisning

Installation manual

4. If rail is a little too long



Monteringsanvisning

Installation manual

Solution:

(Lift one of the posts to set rail into hole in post, then press post back down)



Monteringsanvisning

Installation manual

5. Removal of slack in posts



Solution:

(Use wedge or glue to close any gap between pvc and aluminum insert)

