

Rope Installation Guide for TP Pole Pruners


STEP 1: Insert rope upside down between rivet & screw




See diagram below to see how it would look inserted.




STEP 2: Pull rope down to roller, insert between casting & roller and pull rope to pulley assembly.

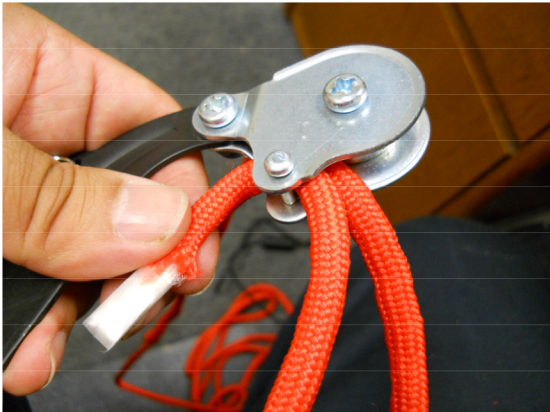

STEP 3: Insert rope between rivet and rope and pull enough rope to cramp tight with baker clip. (See *"Tying a Rope Knot"* video for reference.)

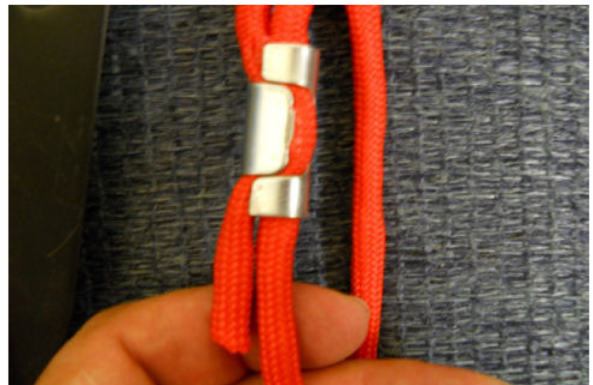

STEP 4: Insert rope on wood handle, make a knot, and cut excess as needed.

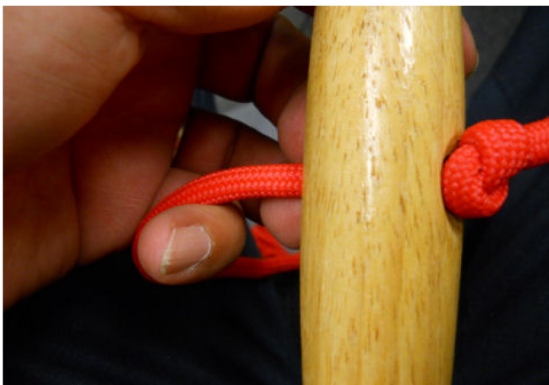

CORONA[®]

SEASON AFTER SEASON

coronatoolsusa.com

Printed 8/29/11