


HOME CREATOR

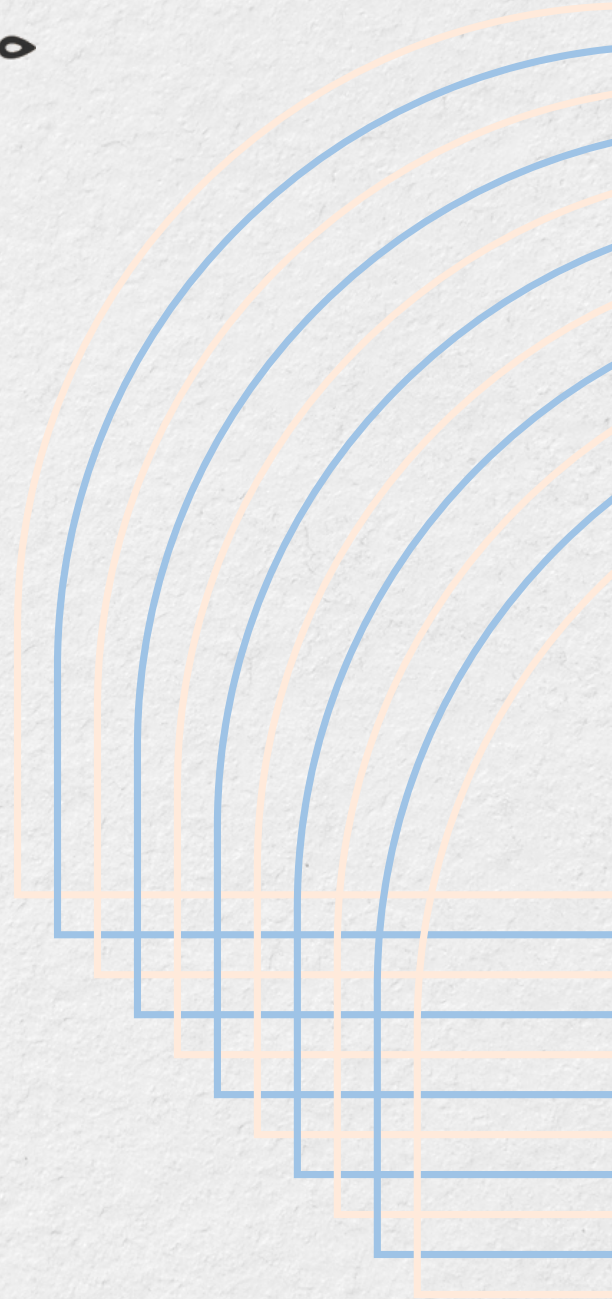

Measuring Guide - S Fold Curtains



General Information

Please use a metal measuring tape to take measurements with millimetres.

Track Width

- The width you will enter on the order is finished track width.
- Decide the track width is a personal preference. When deciding the preferable width of your track, we recommend you adding 20-30% on the width of your window or sliding door. This will allow the curtains to hang off the glass when curtain is open and let maximum sun light come through to the room.
- The curtain stack is around 1/3 of the track width.

Curtain Drop

- Decide the curtains drop is a personal preference too.
- Curtain drop is from top of the track to the bottom of curtains.
- Please take around 20mm off the floor as ordering drop if you want curtain hung off the floor.
- Please add 30mm or more as ordering drop if you want curtains dragged to the floor.

Suggested Sizes Deduction


Wall to Wall width less 40mm as finished track width.

Butt (90 degree corner window) width less 100mm for butting track.


Floor clearance drop less 20mm.

Sliding Door or Window Types


1. Sliding door or window open from left to right

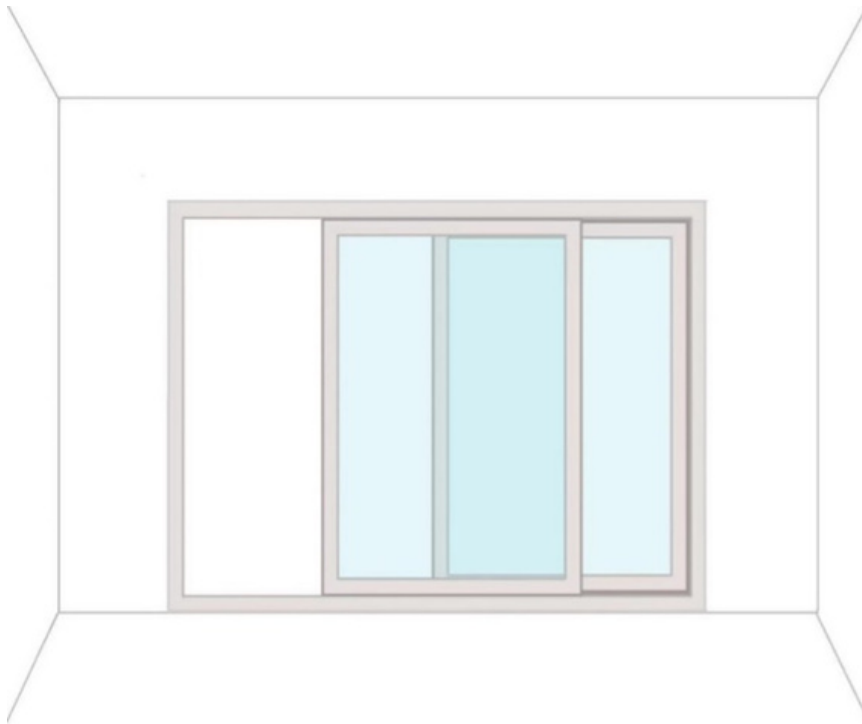

2. Sliding door or window open from right to left

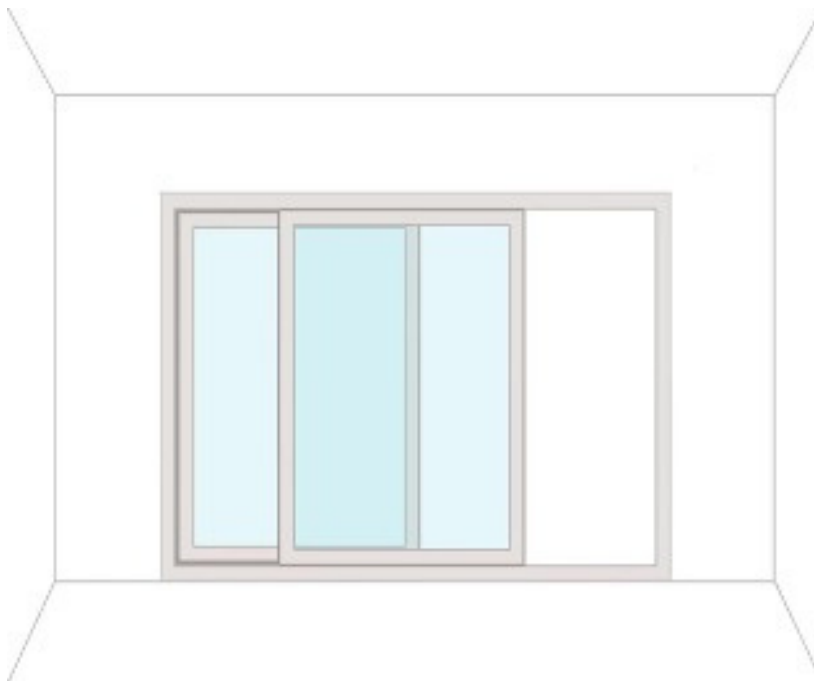




3. Sliding door or window open with central open

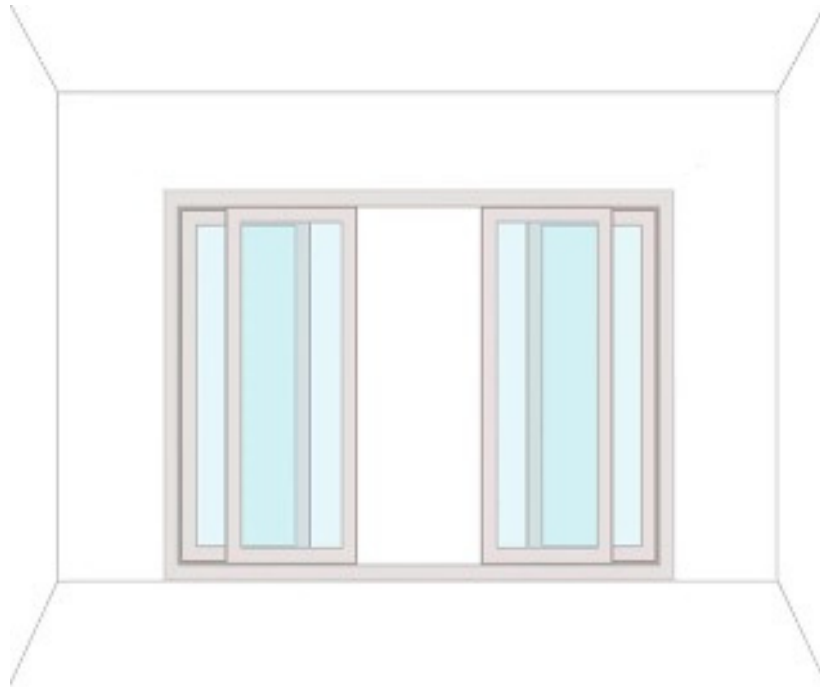


Please select the track width you preferred.


A.Track width is sliding door or window outer frame.

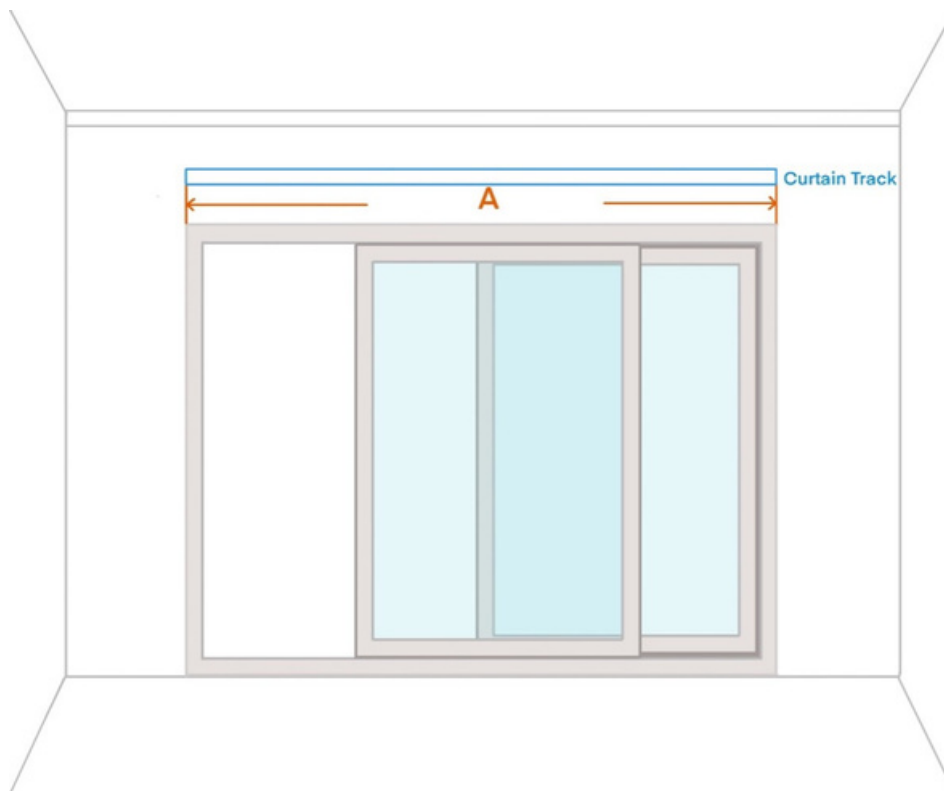

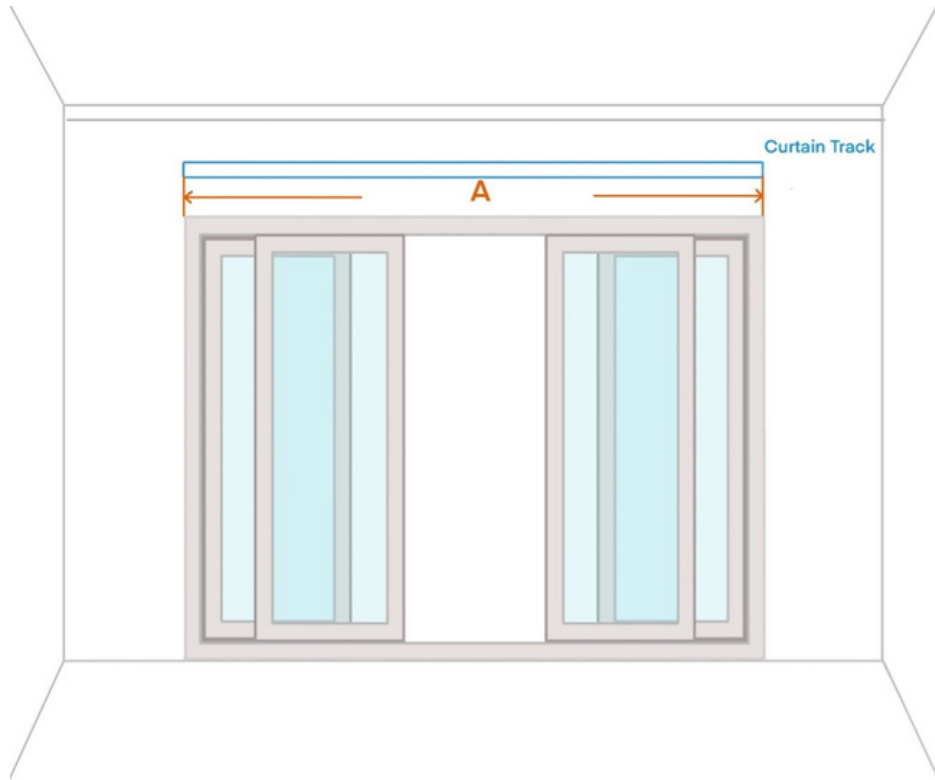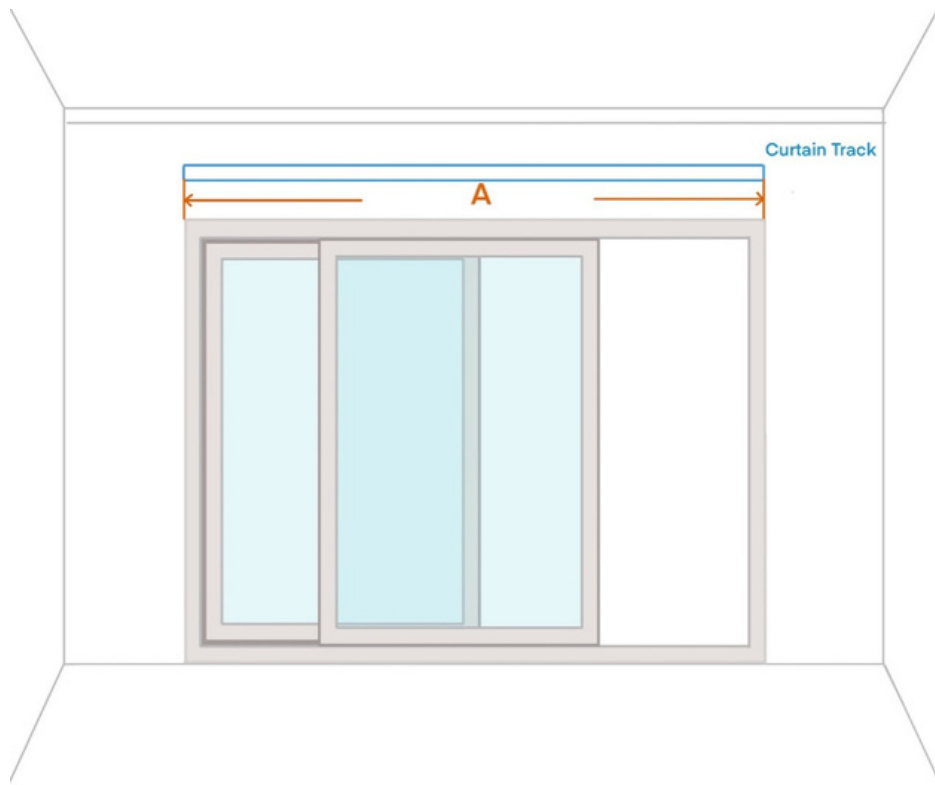




B. Track width is outer frame plus extra width on each side. Extra width is around 20-30% on sliding door or window width or any where you desired.

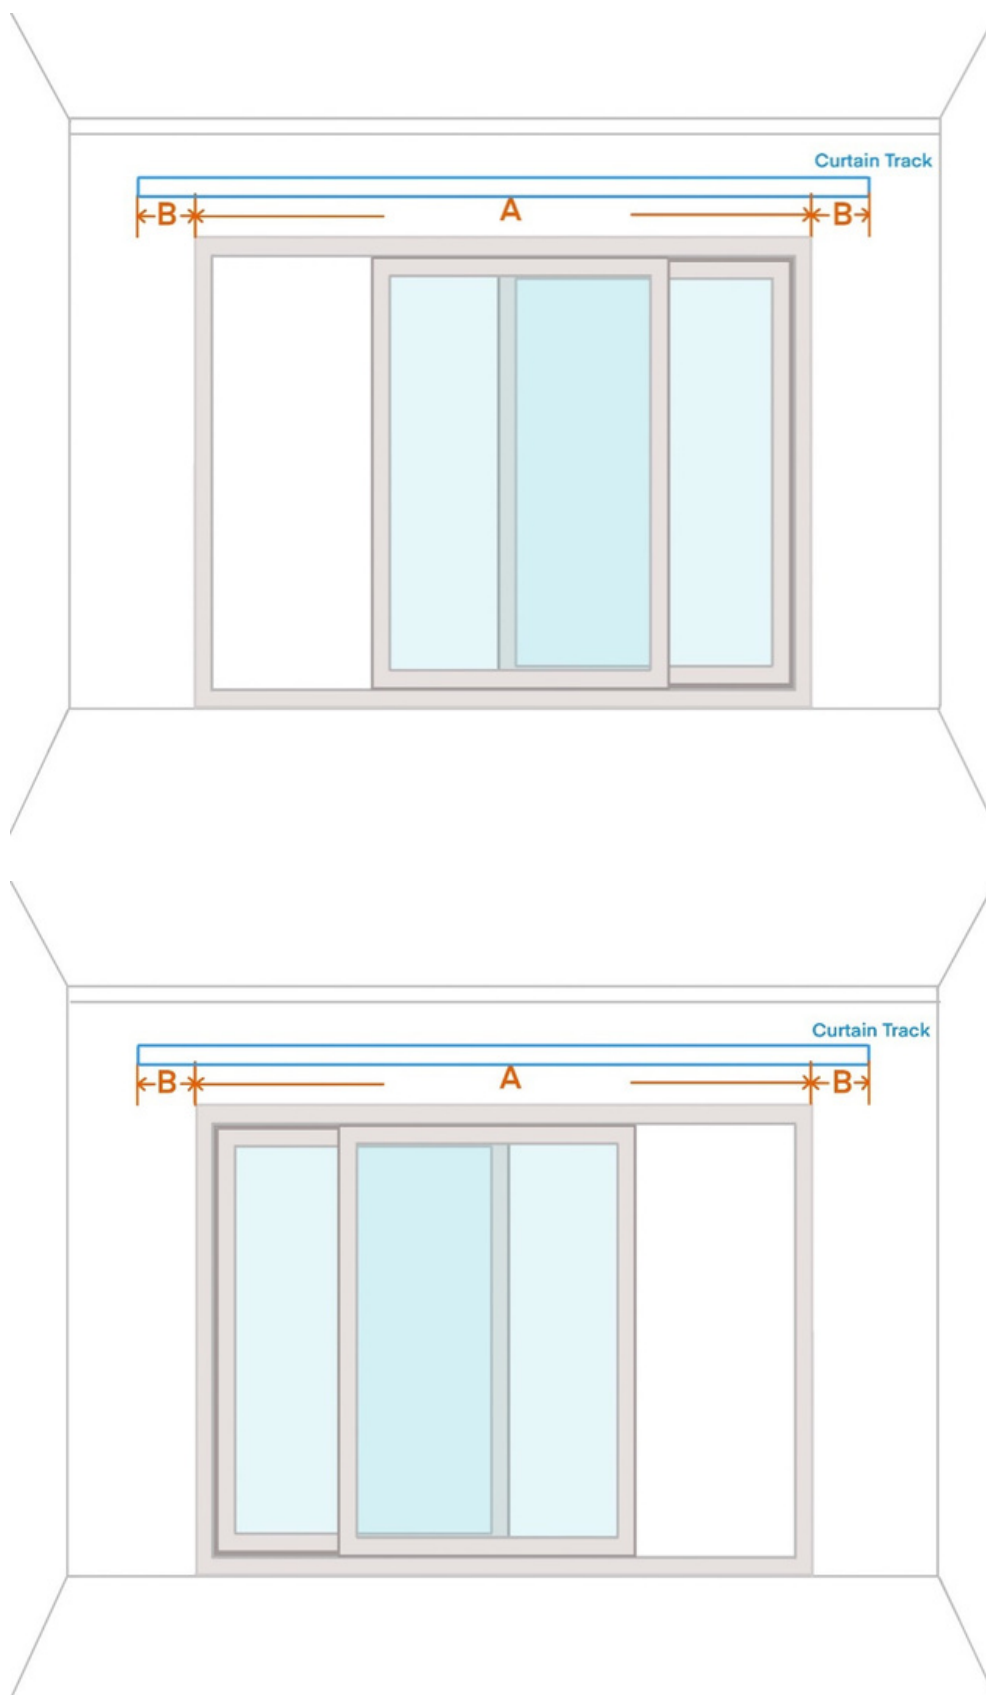

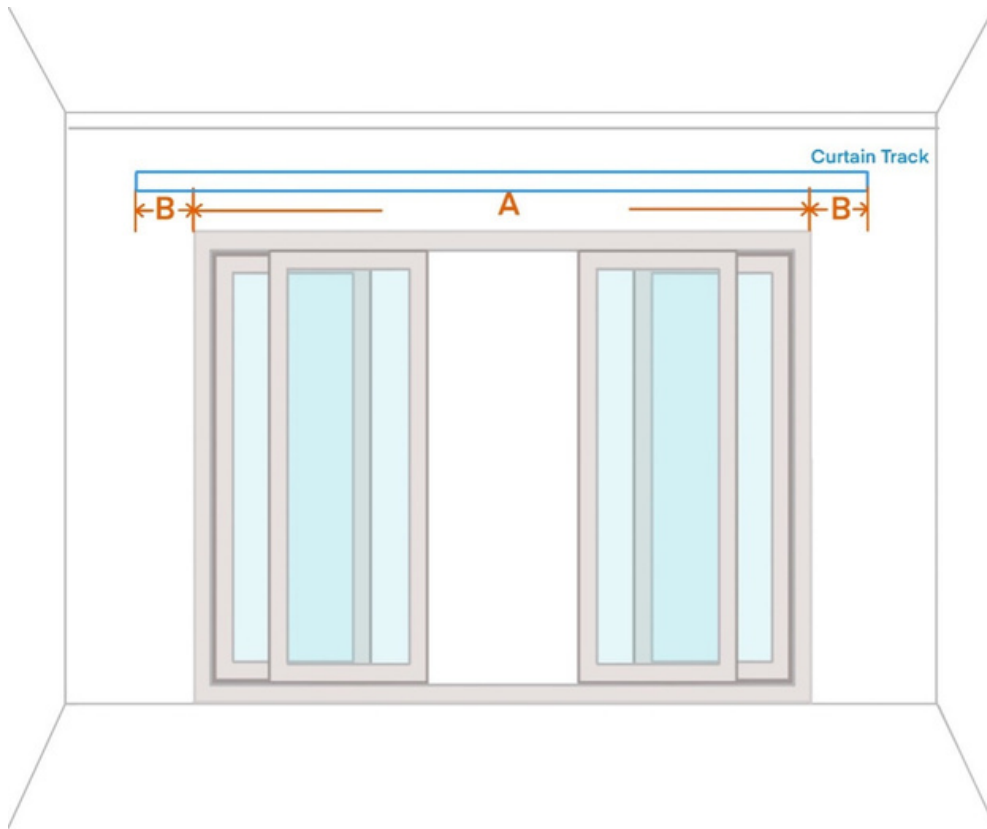

C. Track width is from wall to wall. Please take 40mm as finished track width.

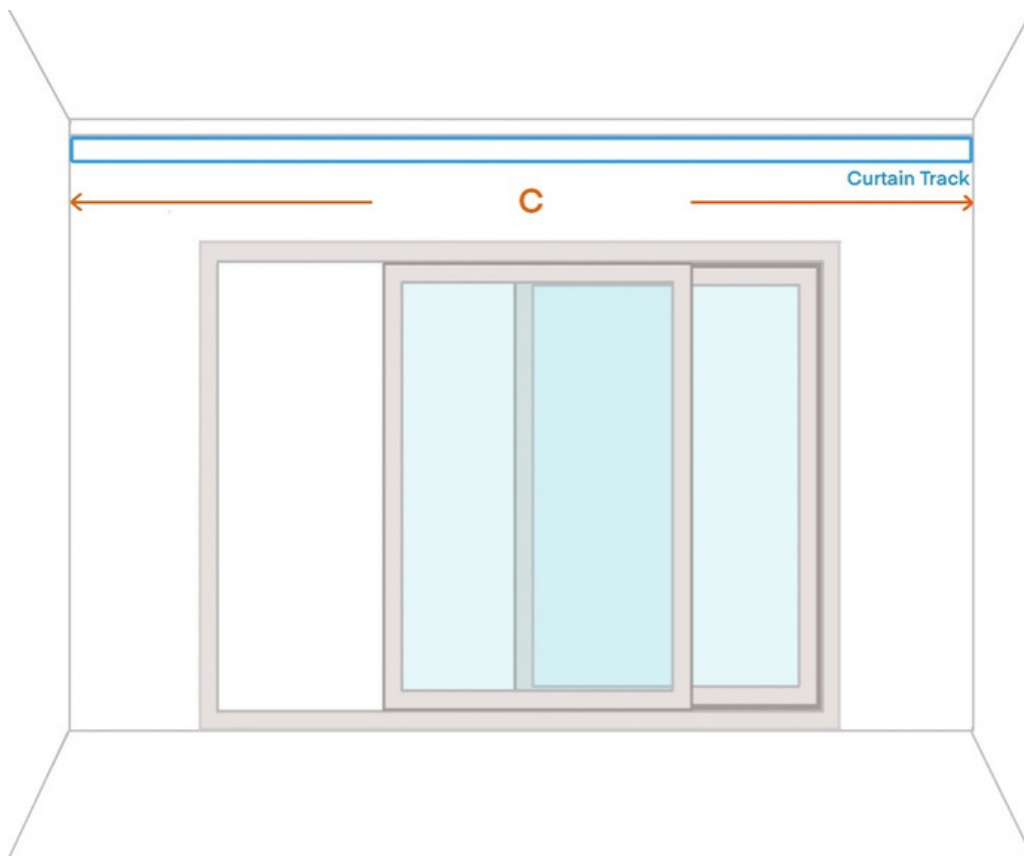

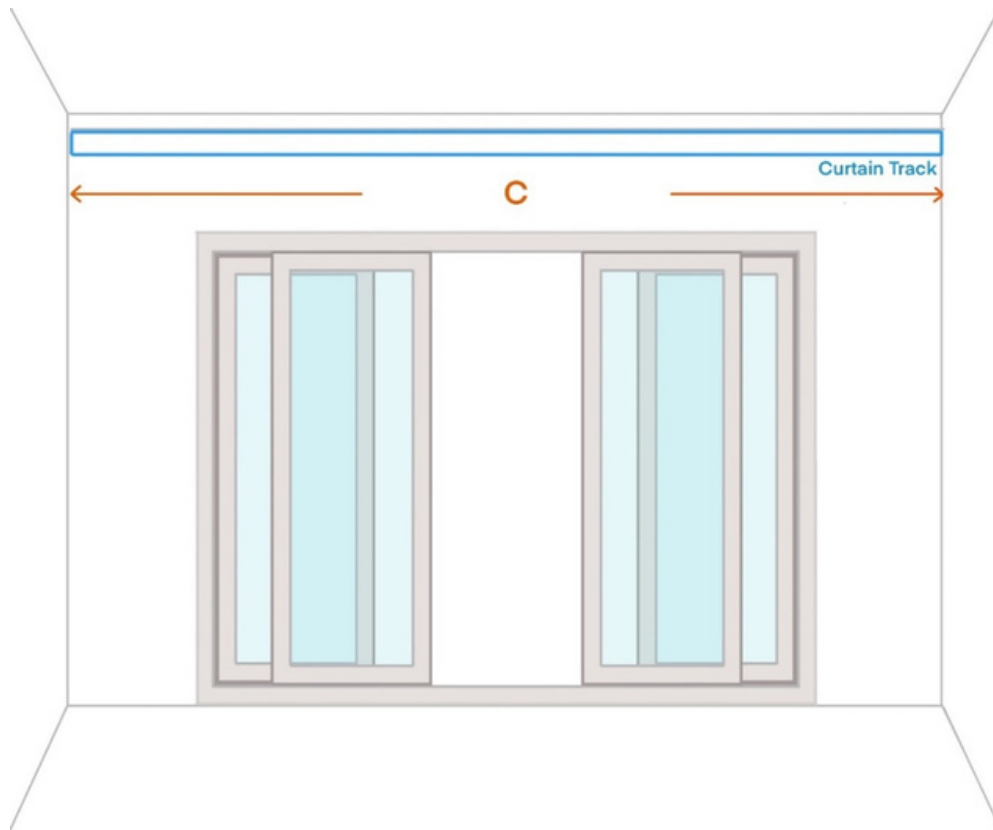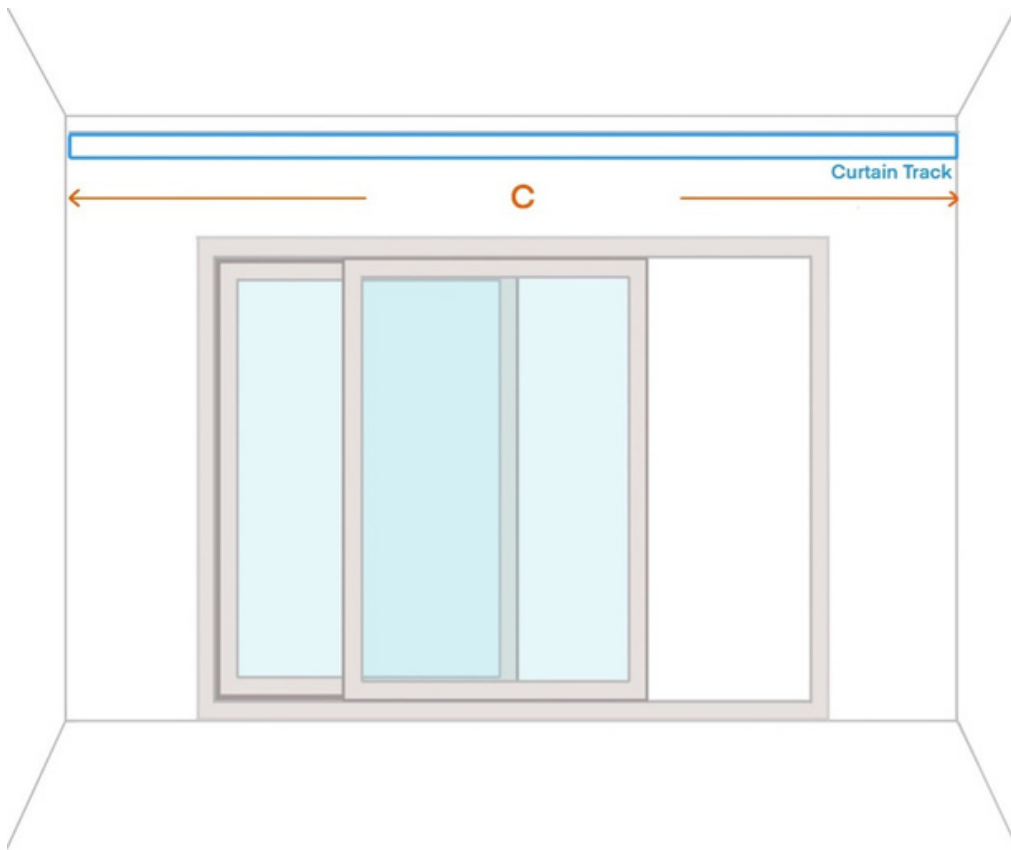

Please select curtain drop you preferred

Some finished flooring or ceiling are not on the same level.


There are some factors that you may have to consider when you measure for floor-length curtains, for example, the levelness of either floor or ceiling, which may lead to different heights in between the floor and the bottom hem of curtains.



Please measure 3 or more points shown on the below pictures to get 3 or more drops from the top of track to floor. Select biggest drop and deduct measurements you preferred as ordering drop.

Suggested to take around 20mm off the floor as ordering drop.


We will take track thickness as final curtains drop.


From top of sliding door or window frame to floor.

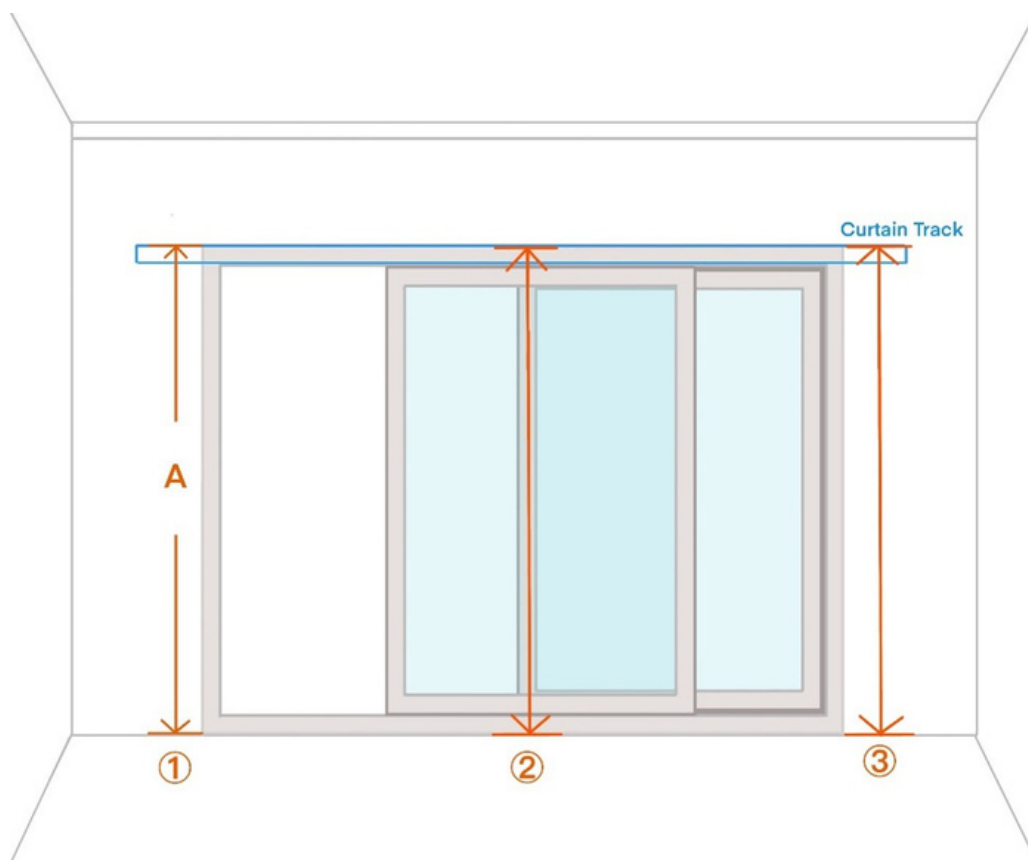

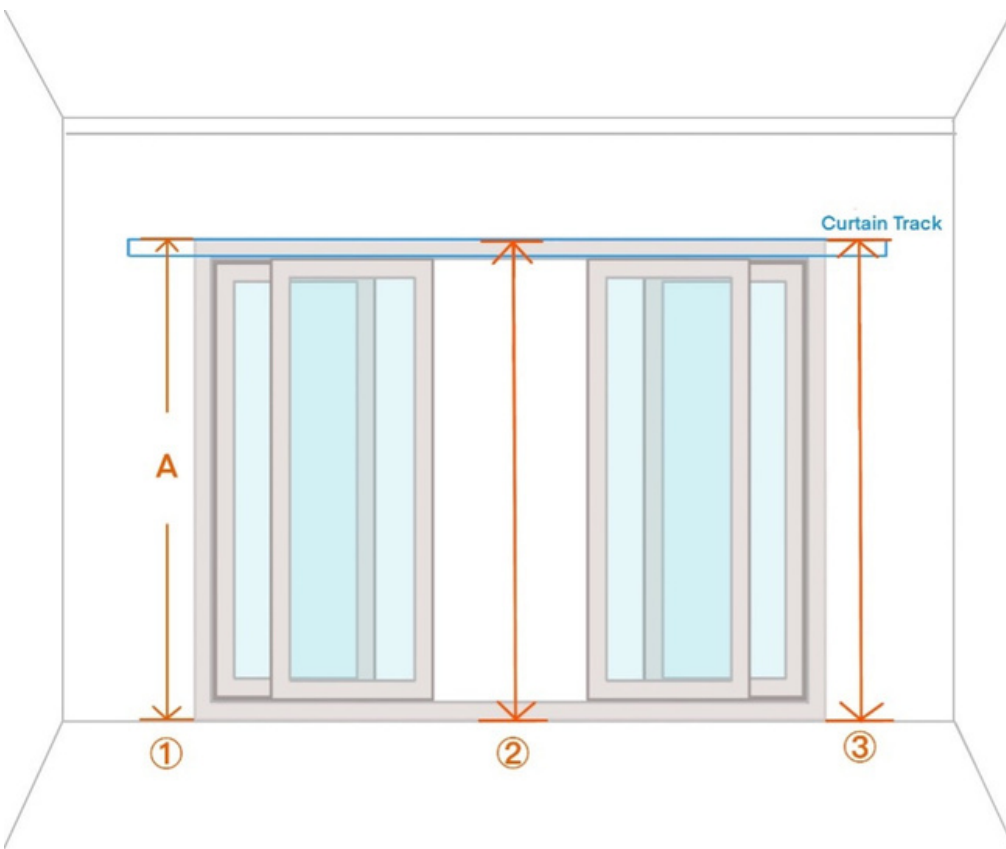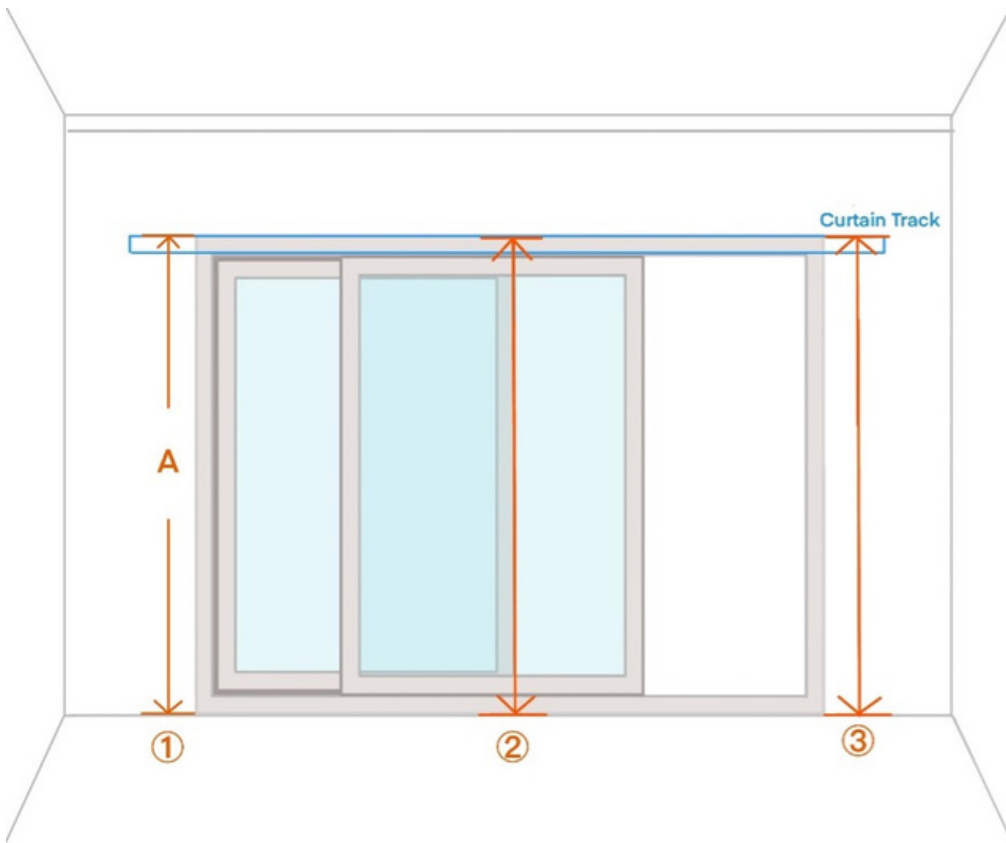




A. From top of sliding door or window frame to the floor plus any where between top frame to cornice. You can fit the track around 100-200mm above the top frame, or half way between top frame to cornice.

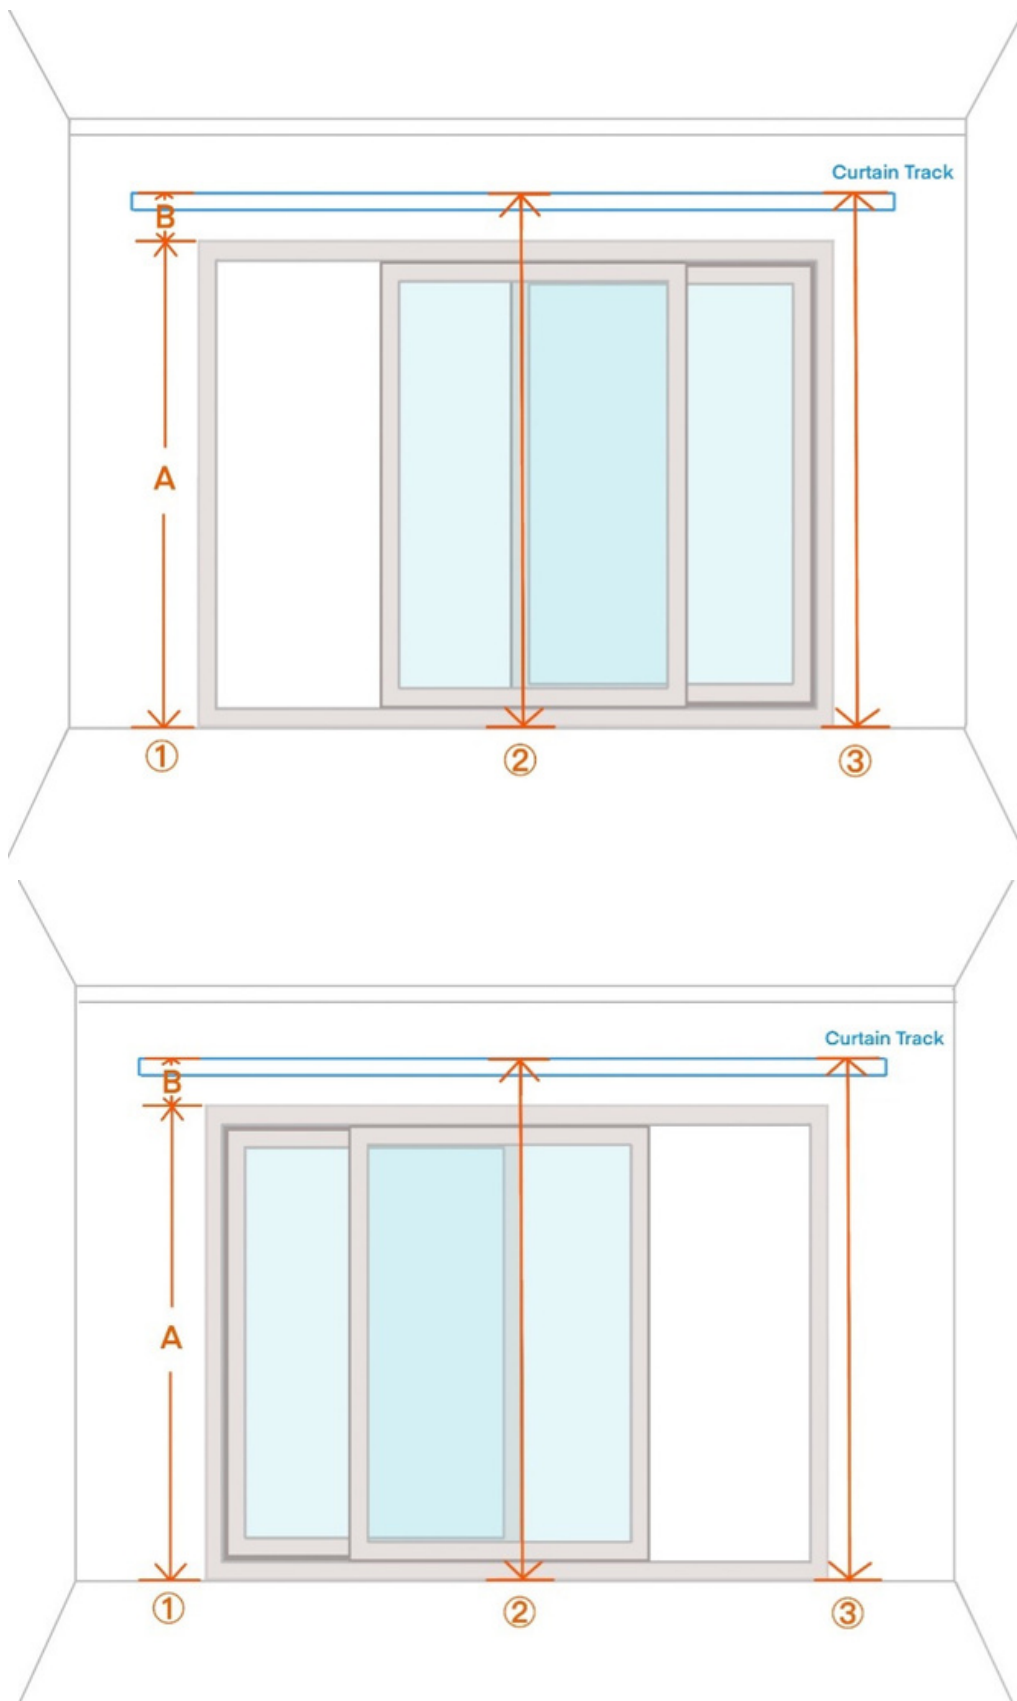

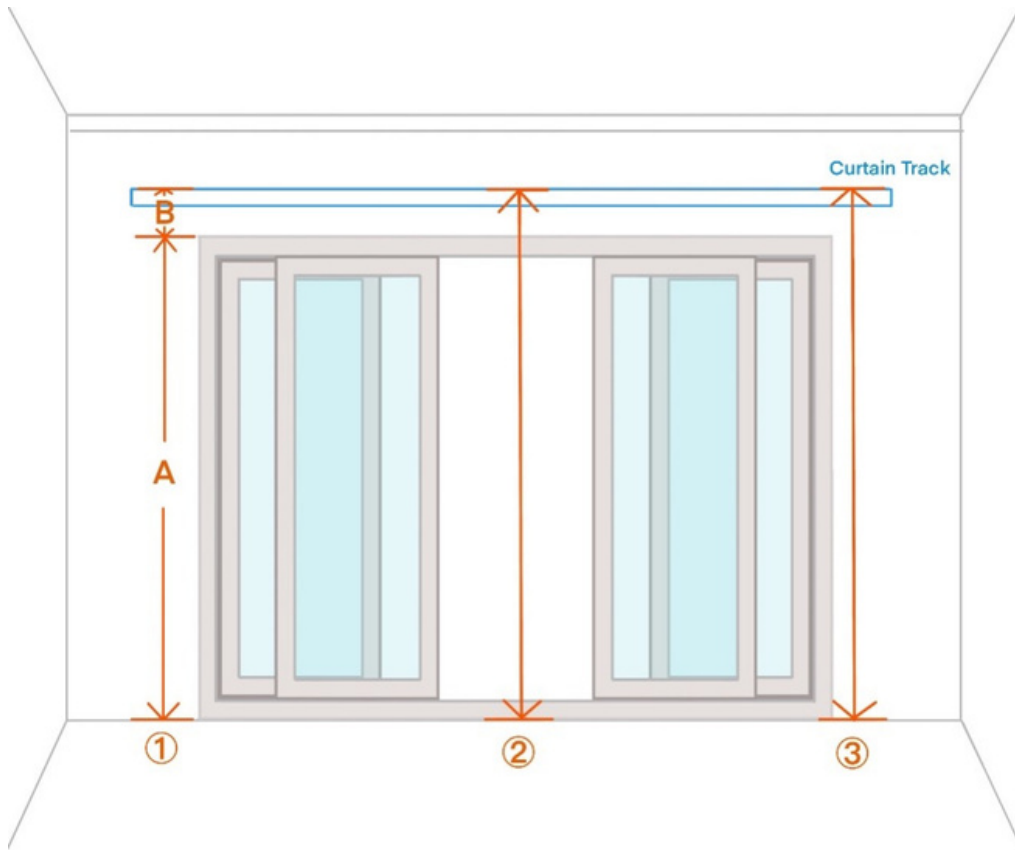

B. From top of sliding door or window frame to the floor plus distance under cornice

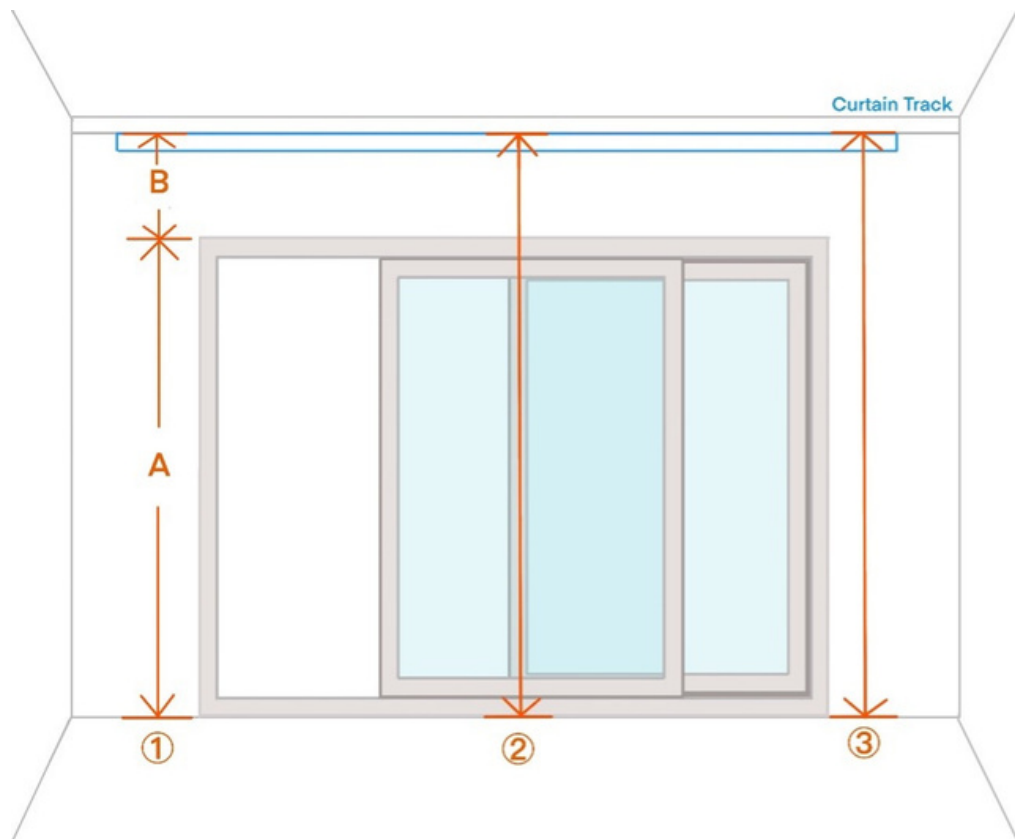

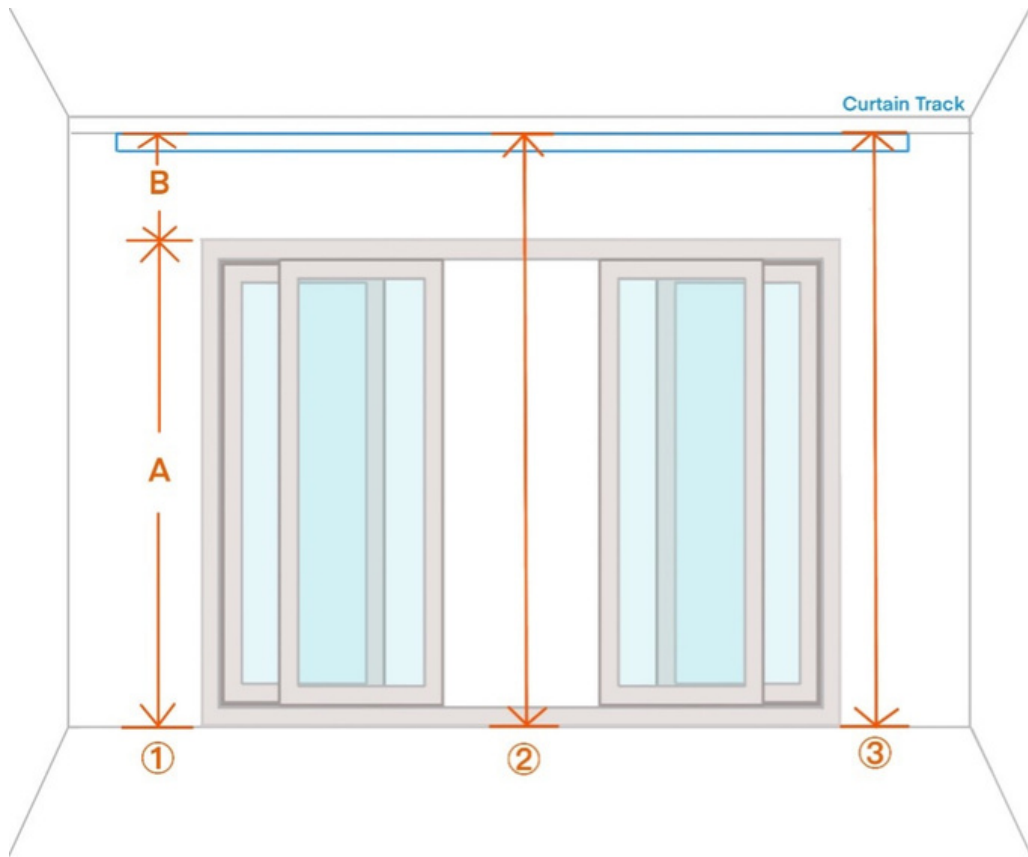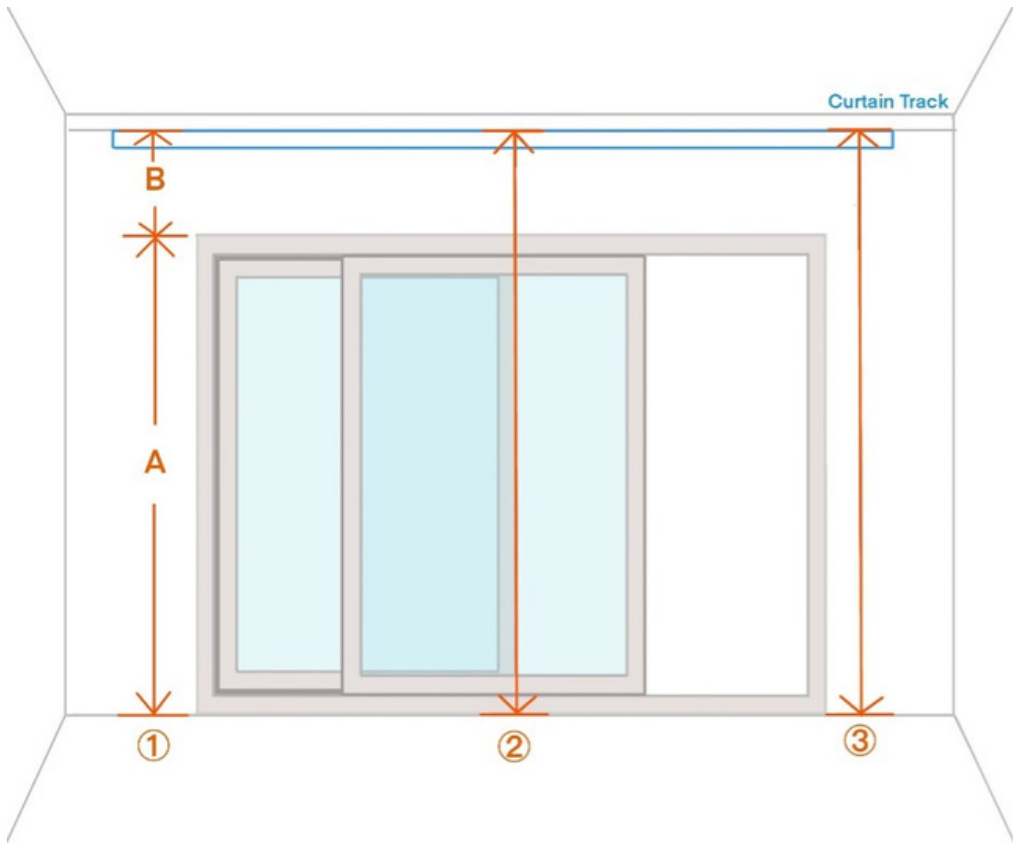

C. From ceiling to floor.

