


JOYDECO

Cordless Roman Shade Installation Instructions



Thank you for purchasing
Cordless Roman Shade,
please read the instructions
carefully before installation.

Hardware List

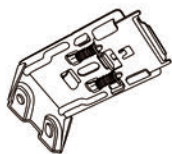

Mounting Bracket x 2




Expansion Bolt x 5



Screw x 5

Tools You May Need

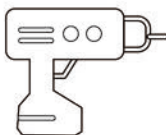

Drill with Bit



Metal Tape Measure




Screwdriver




Pencil

Two Installation Methods

The look after installation is
complete for inside mount
and outside mount

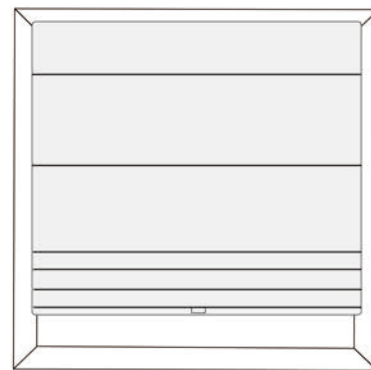


A. Inside Mount

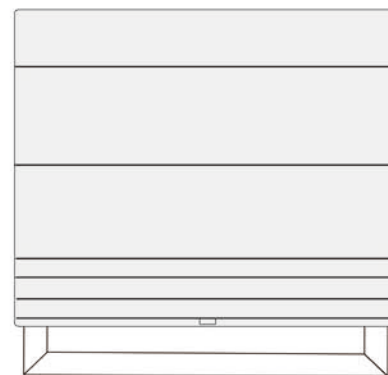

B. Outside Mount


Installation Step 1: Measure and Mark

Measure and mark at the places you want to fix the brackets, ensure the two marks are at the same height, depth and symmetric (same distance from side)

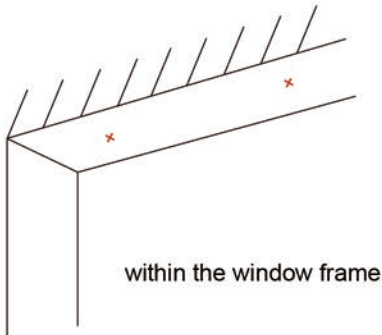

within the window frame

A. Inside Mount

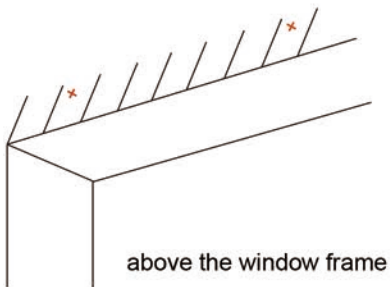


above the window frame

B. Outside Mount


Step 2: Fix the Brackets

Fix two brackets with screws (use expansion bolts when needed) and ensure they are aligned.

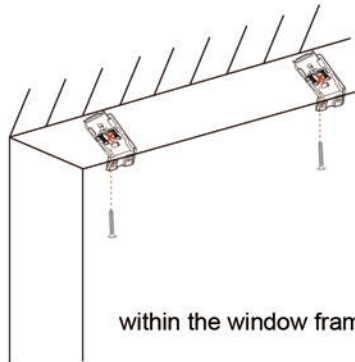

within the window frame


A. Inside Mount

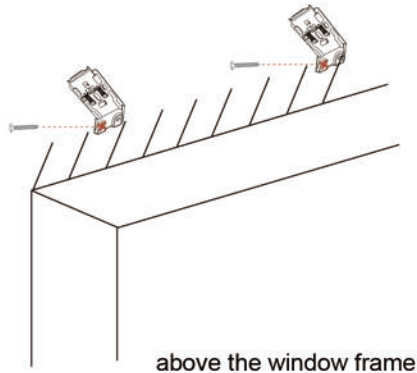


above the window frame

B. Outside Mount

Step 3: Install Shade into Brackets

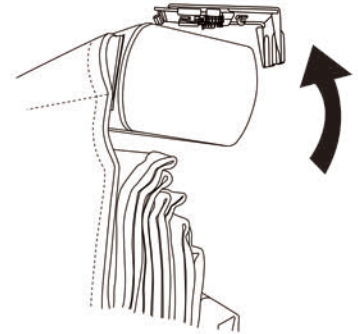

Place the front top groove of the headrail into the brackets, push and rotate the headrail upwards to install it into the brackets completely.

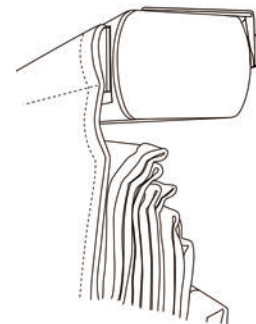

Complete installation when you hear "click"