




2/4 seat Polaris RZR PRO XP Slider Installation

Thank you for purchasing our product. Below is a brief description on installation. Installation is basically the same for all products mentioned above.

1. Remove skid plate.
2. Install aluminum spacers into lower frame openings.
3. Place rock slider against the spacers and install the 4.5" Long 7/16" bolts with the smaller washer on the outside.
4. Use the larger fender washer and flanged lock nut on the inside of the frame.
5. Tighten all bolts.
6. Re-install skid plate.

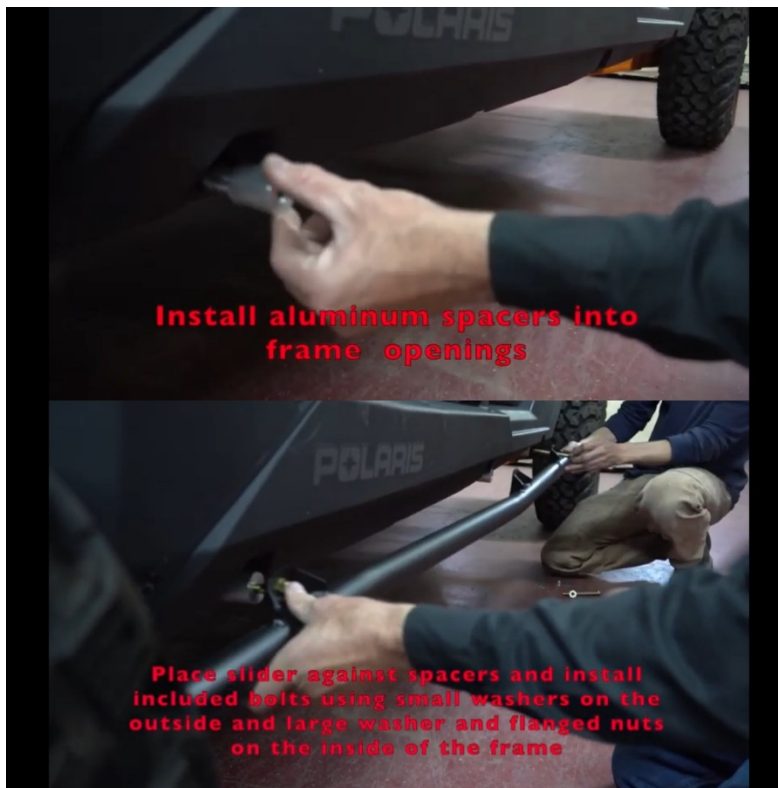

www.bmfabrications.com

612-202-9245