

DISCLAIMER: We are not liable if you injure yourself while installing a Luimoto seat cover. Remember, **Safety First**, and to always wear your eye protection. To successfully install a Luimoto seat cover, it requires patience. This instruction sheet is meant only as a guide; there may be alternatives that may suit you better (**to have you install your seat cover with the best knowledge**). We strongly recommend working with another person and if you ever have any doubts, we recommend that you visit your local upholstery shop for installation.

For video demonstration please visit www.luimoto.com/video

Before you begin, please have these ready:

- eye protection
- a partner to help (recommended)
- staple gun and staples (6mm, 1/4")
- needle-nose pliers
- flat-head screwdriver
- clips




WE ARE ONLY HUMAN

For those who have little or no experience with the staple gun, you may find it difficult, or even frustrating at times. We know how it is, we've been there, but we have to start somewhere. The plastic on the seat pan is tough, and unless you have an air operated, or electrically operated staple gun, it will take force. Be patient and you will see that it's not bad at all!

BEFORE YOU BEGIN

You have a choice of either leaving your stock cover on or taking it off. To remove the cover, simply use a flat head screw-driver and get underneath the staple and loosen it with a twisting motion. Use needle nose pliers to remove the staple.

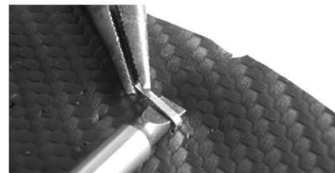

PLEASE REMOVE ANY HARDWARE THAT MAY GET IN THE WAY OF YOUR SEAT COVER INSTALL.

Please note: diagrams on the next page are only used as a general reference. Your seat may not look the same.

IF YOUR SEAT COVER IS MADE WITH: **SYNTHETIC SUEDE**

Before installing your suede seat cover you must install the plastic sheet.

The plastic sheet acts as a moisture barrier between Suede and Foam.

If you decide to leave your OEM cover on, you do not have to install the plastic sheet.

Step 1. Remove OEM seat cover if applicable. (refer to Seat Cover Installation

Instructions - BEFORE YOU BEGIN)

Step 2. (Optional) Apply spray glue on your seat.

Step 3. Carefully place the plastic sheet over your seat foam. Avoid wrinkling of the sheet.

If there are difficult curves, you may use a blow dryer or heat gun to soften the sheet to mold better around curves.

Step 4. The plastic sheet should wrap around your seat. You may apply a small amount of adhesive along the bottom to secure the plastic sheet.

Step 5. Trim off any excess plastic.

Step 6. You may now proceed to the next instruction sheet for the seat cover install.

Luimoto Synthetic Suede Care Instructions

- * Use a soft nylon bristled brush to quickly remove dust off suede.
- * Wash your bike like you usually would with mild soap and water.
- * Soak up excess water with chamoise or sponge as soon as possible and allow 15 minutes of air drying under the sun.
- * It is normal to experience wrinkling in the fabric when wet. When it has dried, the suede will settle back into it's normal state.
- * Do not allow the suede to stay wet for long periods as water can seep into the foam.
- * Do not allow suede to sit under the sun all year round uncovered, the color may fade.
- * Following these steps should ensure long life of your Luimoto suede seat cover.

MARINE GRADE VINYL


Clean with mild soap and water. For stubborn stains you may try using a soft nylon bristle brush.

Required Tools:

- Upholstery Spray Glue
- Screwdriver

STEP 1 MAIN PADS

- Remove original cover by removing staples from the rear of the pad with a screwdriver

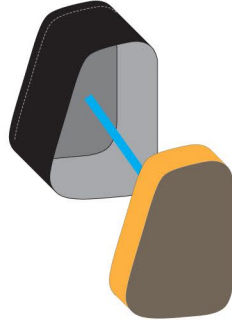


STEP 2

- Slip the Luimoto cover over the foam and base
- Pull at the ends to ensure a tight fit

STEP 3 (optional)

- Spray adhesive to the areas highlighted in RED
- Allow the adhesive to dry 1 minute before making contact

*be sure to avoid spraying on the top portion of the fabric. If you do, let the adhesive dry and harden and you should be able to peel off the adhesive.

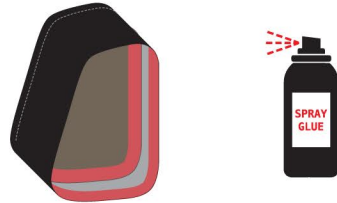

STEP 4

- Begin wrapping the ends of the cover around the edge of the pad's base and staple




STEP 4 REAR PADS

- Remove original cover
- Peel the cover cautiously as it may rip the foam

STEP 5

- Lay the cover face down
- Place pad face down on top of the backside of the cover

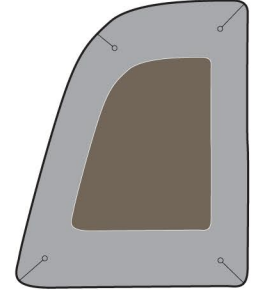


STEP 6

- Spray adhesive along the edge of the back side of the cover AND the edge of the back side of the pad assembly (highlighted in Red)
- Allow the adhesive to dry for 1 minute



STEP 7

- Wrap fabric around the edge of the pad assembly. The fabric should stick to the pad base. If not allow the adhesive to dry longer

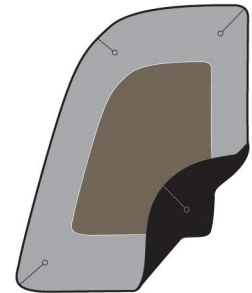

STEP 8

- Cut away any excess material