




Required Materials:

* Upholstery Spray Glue

STEP 1

- You must remove the decal/sticker badge to access the allen screw.
- Heat the decal with a heat gun or blow dryer to soften the adhesive.
- Take a fishing line or dental floss and beginning from one end of the decal, slice through using a sawing motion.
- Clean off any excess adhesive left behind on the side panel.


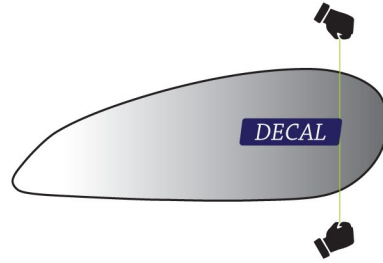


STEP 2

Remove the allen screw. Lift the side panel away from the gas tank to release from the gas tank then slide the panel towards to front of the gas tank to remove the side panel. The rubber hardware may still be attached to the gas tank. If so remove the rubber hardware and re-install it onto the hook.


STEP 3

- To secure the Luimoto side cover onto the panel you will need to apply upholstery spray glue to both the cover and the panel.
- In a well ventilated area, apply spray glue on the back side of the side panel along the indicated areas marked in red in the diagram
- Apply spray glue along the inside of the cover along the indicated areas marked in red.
- Please note most spray glues require a curing time before becoming effective. Please refer to the spray glue label for specific curing times.

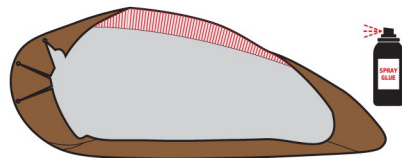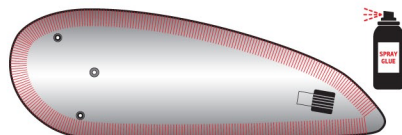


STEP 4

- Slip the cover onto the panel from side A.
- Try not to apply any pressure on the cover where there is spray glue. Although the cover may stick to the panel, the glue isn't dry yet and adjustments can be made

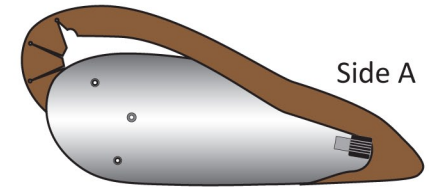


STEP 5

- On side B, flip the cover inside out and wrap the cover around the side panel. Be sure that the seams are fully wrapped around the edges of the side panel. Seams should not be visible from the front of the side panel.
- Again do not apply any pressure where there is glue.

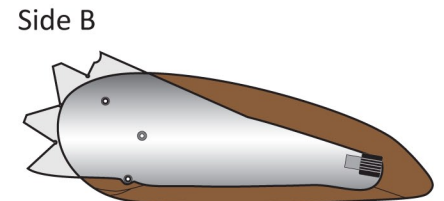


STEP 6

- At the front side of the cover, locate the screw hole opening cut out (circled in red). Line up the opening on the cover with the hole on the panel.

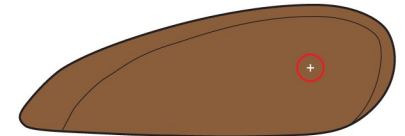

STEP 7

- Now you can apply pressure along the areas with the spray glue to create a bond between the cover and the panel. It may take several more minutes for the glue to completely bond.
- Be sure the nubs (circled in red) are not covered.

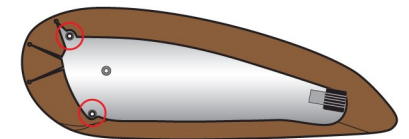

STEP 8

Reinstall the side panel and enjoy the new look!



**IF YOUR COVER IS MADE WITH:
SYNTHETIC SUEDE**

Luimoto Synthetic Suede Care Instructions

- * Use a soft nylon bristled brush to quickly remove dust off suede.
- * Wash your bike like you usually would with mild soap and water.
- * Soak up excess water with chamoise or sponge as soon as possible and allow 15 minutes of air drying under the sun.
- * It is normal to experience wrinkling in the fabric when wet. When it has dried, the suede will settle back into it's normal state.

- * Do not allow the suede to stay wet for long periods as water can seep into the foam.
- * Do not allow suede to sit under the sun all year round uncovered, the color may fade.
- * Following these steps should ensure long life of your Luimoto suede seat cover.

MARINE GRADE VINYL


Luimoto Marine Grade Vinyl Care Instructions

Clean with mild soap and water. For stubborn stains you may try using a soft nylon bristle brush.

FOLLOW US


Post your experience, check out cool bikes and updates!

luimotoproducts

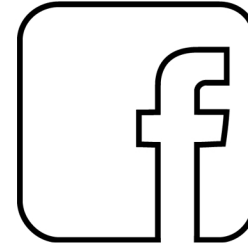

<https://www.facebook.com/luimotoproducts/>

@luimoto

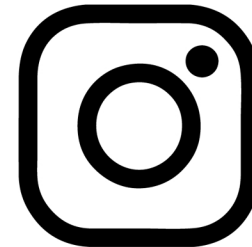

<https://www.instagram.com/luimoto/>