

---

+

# INSTALLATION GUIDE SHEERS AND CURTAINS




## FOR CEILING INSTALLATION

### 1. CONNECT THE RAIL


\*This option is only required for rails of 90 inches and more

- + Slide the ends of each rail into the connector.
- + Secure the rails together by tightening the connector locks with the hex key included in the installation kit.
- + Make sure the locks are on the back (facing the wall).
- + Also make sure that the carriages remain well inserted in the rail.

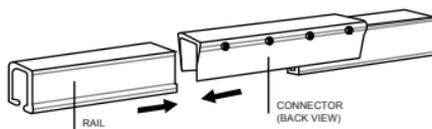


### 2. INSTALL THE BRACKETS

- + The installation brackets should be attached approximately 3 inches from the wall.
- + In order to distribute them properly, make a mark about 3 inches from both ends of the rail to indicate where to place the fasteners.
- + Distribute the rest of the fasteners evenly and mark the appropriate locations.
- + We strongly recommend that you use screw anchors for optimal installation. Make sure the screw is loose enough to allow the rail to flex slightly, then repeat with the remaining fasteners

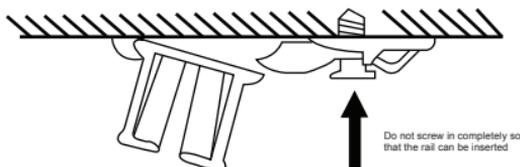


### 3. FIX THE RAIL

- + Insert the rail onto the brackets as shown in the illustration and press until the rail clicks into the bracket.
- + Tighten the screws to finalize the fixation of the rail.

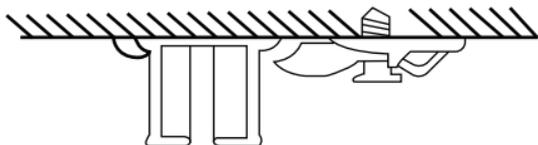

### 4. INSTALL SHEERS AND CURTAINS

- + Hang the hooks one by one in the wire carriages, starting with one end
- + Once hooked, be sure to alternate the crimps as in the photo below by pulling and pushing the crimps

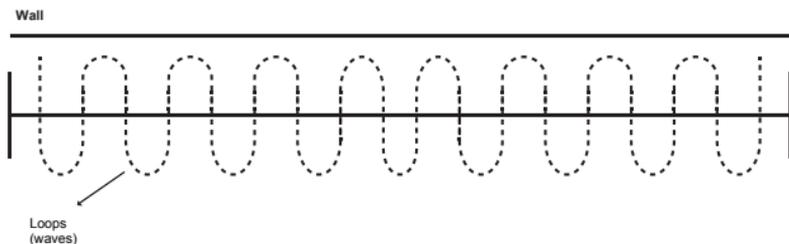


## FOR WALL INSTALLATION

### 1. CONNECT THE RAIL


\*This option is only required for rails of 90 inches and more

- + Slide the ends of each rail into the connector.
- + Secure the rails together by tightening the connector locks with the hex key included in the installation kit.
- + Make sure the locks are on the back (facing the wall).
- + Also make sure that the carriages remain well inserted in the rail.

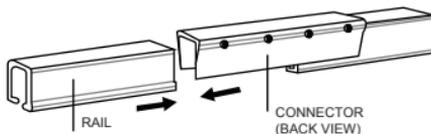


### 2. INSTALL THE BRACKETS ACCORDING TO THE HEIGHT ENTERED IN YOUR ORDER

- + Make a mark about 3 inches from both ends of the rail to indicate where to place the fasteners.
- + Distribute the rest of the fasteners evenly and mark the appropriate locations.
- + To install the fasteners on a wood window frame or wall stud, pre-drill holes the size of your screws.
- + For any other support, pre-drill and insert anchors before attaching the screws.

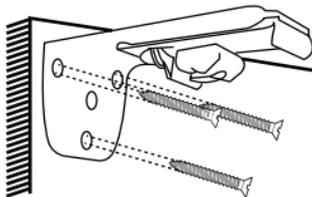

### 3. FIX THE RAIL

- + Insert the rail onto the brackets as shown in the illustration and press until the rail snaps into place.
- + Make sure the screw is loose enough to allow the rail to flex slightly, then repeat with the remaining fasteners.

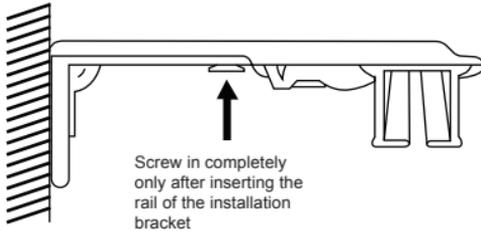

### 4. INSTALL SHEERS AND CURTAINS

- + Hang the hooks one by one in the wire carriages, starting with one end
- + Once hooked, be sure to alternate the crimps as in the photo below by pulling and pushing the crimps

WALL

