

# iCBL

## This DIY will help guide you install iCBL's Carbon Fiber Paddle Shifters

**Step 1:** Disconnect the negative battery cable with a 10mm socket. **IMPORTANT:** Please make sure to keep your trunk lid open. If your trunk closes while battery is disconnected, you will be in big trouble.


**Step 2:** Use a skinny flat head/Philips screw driver to push the pins in the that hold the airbag in place. This step will have to be done twice, one on each side of the steering wheel. After both sides are released, airbag should be loose to pull out.



**Step 3:** Remove the T20 torx bolt that hold the paddle shifters in place as shown in the picture circled in red.



**Step 4:** Next you will need to remove the pin that holds the 2 pieces together. Then lift off the top part while being careful not to lose any parts, especially the little spring.

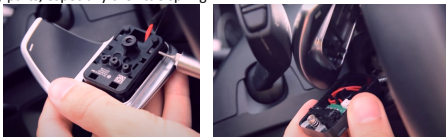

**Step 5:** Now it's time to take your new paddle shifters and install them in reverse order. No additional accessories are required.

**Step 6:** Now that the paddle shifters are sitting correctly with the button, you can insert the pin that holds the 2 pieces together.



**Step 7:** Put the assembly back in place and tighten the T20 torx you removed earlier.

**Step 8:** Repeat same steps to the other side now and finish up by installing the airbag back.

**Step 9:** Reconnect the battery.

**Once finished, step back and enjoy the new look of your steering wheel Paddle Shifters!**