


iCBL

This DIY will help guide you with the installation of *iCBL's* Carbon Fiber Front Bumper Canards.

Step 1: First off, you will need to clean & prep your front bumper before installation. Use a clean microfiber towel to wipe down the side of the bumper.

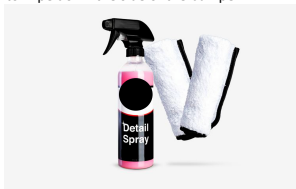

Step 2: For this next step, you will need to hold your canards and adjust it by moving it around till you achieve the right angle/fitment. Follow the exact placement location (based on your model) that are demonstrated in my pictures. If you don't, it won't fit the way it was designed to. **THIS IS CRITICAL!!**



F80 M3



F82 / f32 / M4 / 4-series



F30-F34 3-series



F90 / G30 / M5 / 5-series



F82 M4



F22/F23 2-series

Step 3: Now that you have aligned the canards, you can go ahead and start removing the top red layer to expose the double sided tape.

Step 4: After peeling the top layer of the double sided tape, apply the canards to your front bumper (Double sided tape tested to hold up to 30lbs).

Step 5: Repeat steps 1-4 for the other side of your vehicle.
Once finished, step back and enjoy the new look of your Front Bumper Canards!