



PENDER®

EBIKE LIFTER

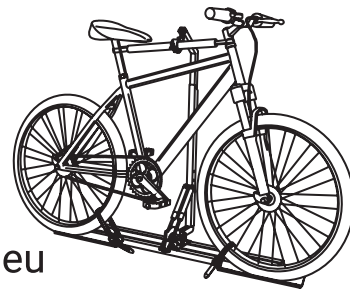

PREASSEMBLY

ebikelifter.eu

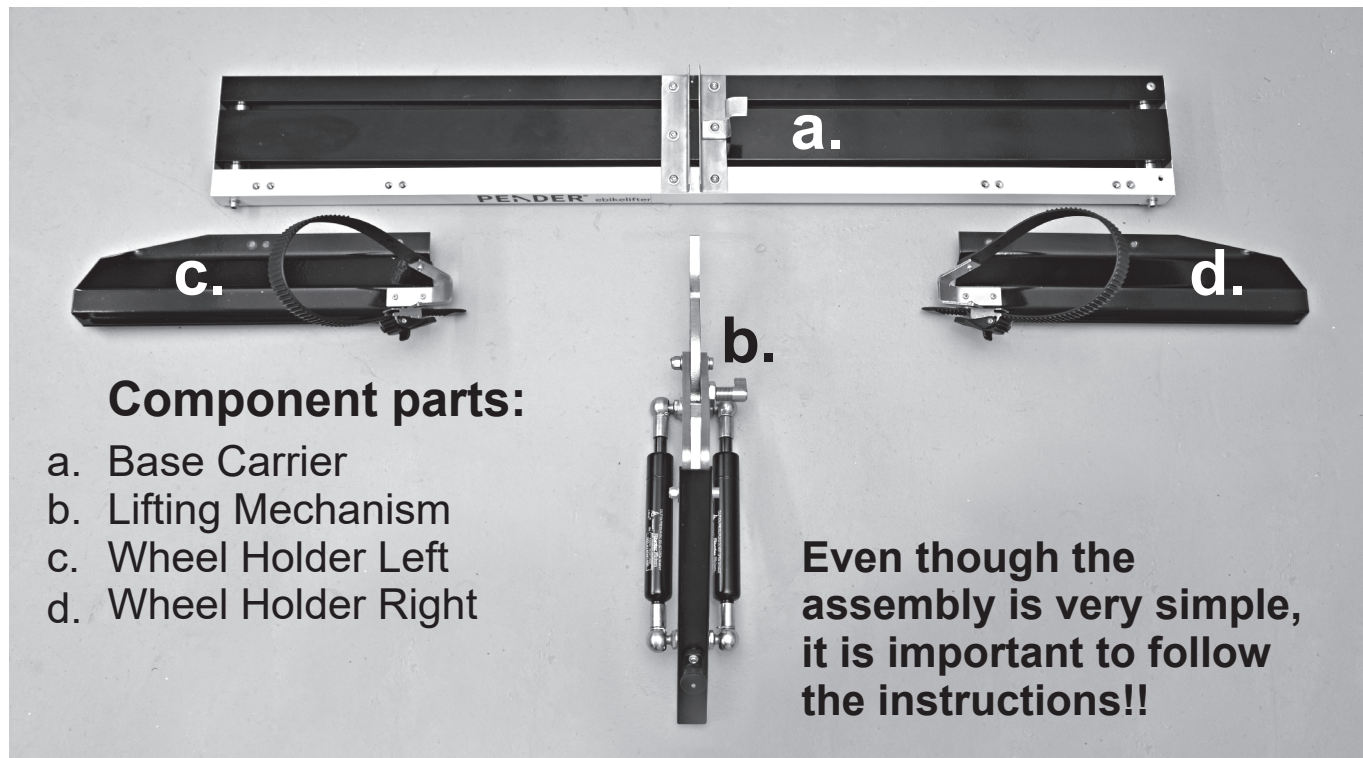



Component parts:

- a. Base Carrier
- b. Lifting Mechanism
- c. Wheel Holder Left
- d. Wheel Holder Right



Even though the assembly is very simple, it is important to follow the instructions!!



1. Insert the lifting mechanism into the angle plates of the base carrier so that the screws can be pushed through.

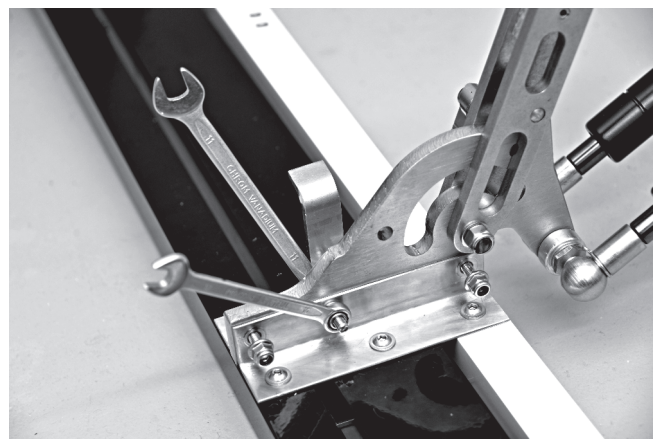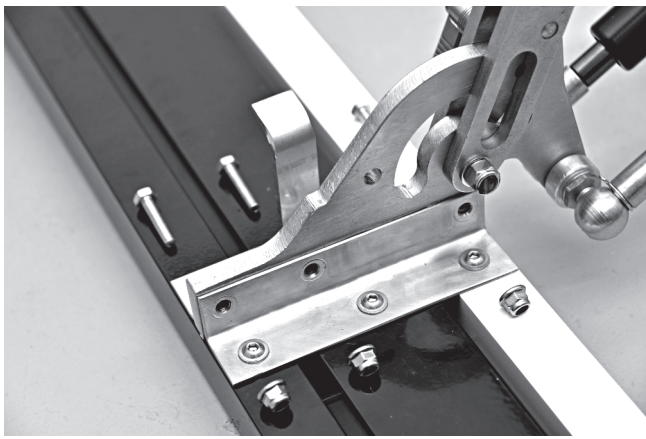

2. insert the 3 screws (M6x25 mm) through the holes and tighten them with the nuts (M6, self-locking) and the supplied combination spanners (10 Nm).

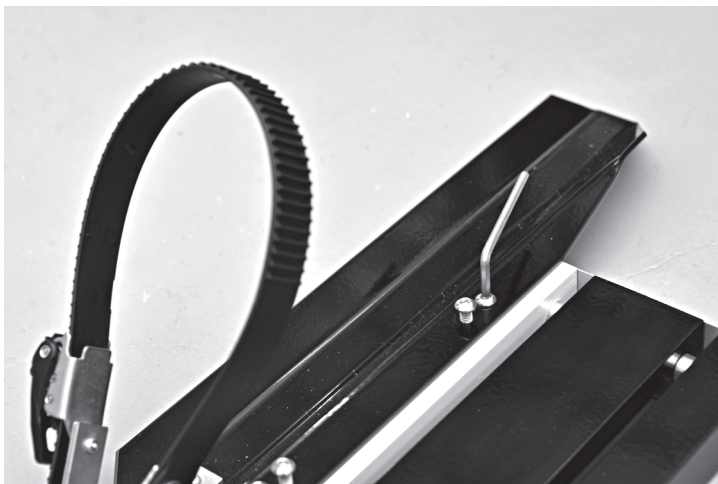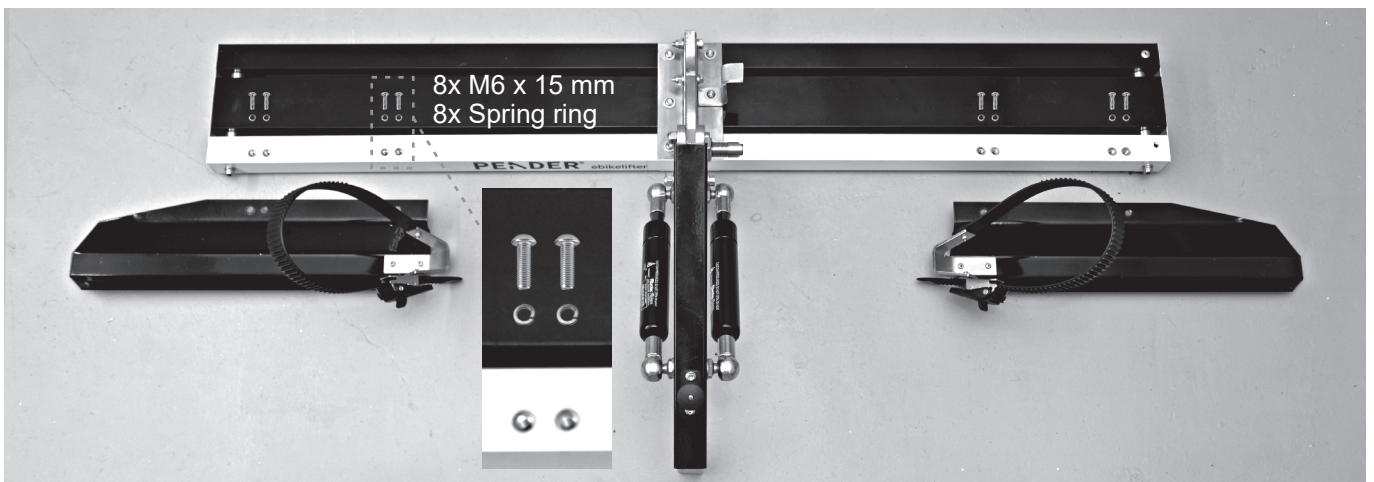

3. place the wheel holder on the corresponding rivet nuts of the base carrier (note right and left side) and tighten each with 4 screws (M6, 15 mm) with the spring washers using the supplied Allen Key (6 Nm).

