

# BRAEMERE MODELS

GREAT BRITISH KITS

**CLEAN ALL RESIN PARTS IN WARM SOAPY WATER**

The silicone release agent used in the casting process will react with paint, it must be thoroughly cleaned off before painting.


1:32 Sheep Quad Trailer

1x Laser Cut Plastic Sprue, 1x Mesh Sheet, 2x Resin Wheels, 1x Axle Rod, 1x Hinge Pin Rod.



This is a rough guide to using the kit. Care should be taken at each stage to make sure the model is going together correctly and any alterations that are not in the instructions should be carried out.

**Paint:** Components can be painted at any time in the build, it is a case of what suits the builder, these parts were painted with Halfords Aluminium Effect spray paint after a coat of grey plastic primer.



**Glue:** Recommended glue is super glue or contact adhesive such as Gorilla Blue Super Glue.

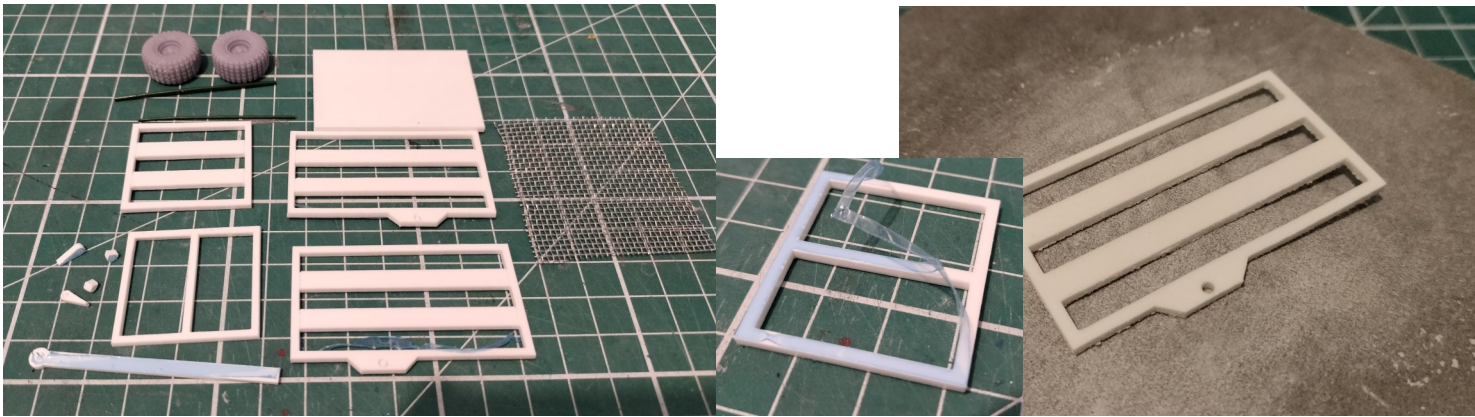

1. Remove the blue plastic backing and separate parts from the sprues by gently cutting the remaining plastic holding them in place, sand both sides and the edges of all parts with 220 grit or similar sand paper to improve adhesion.

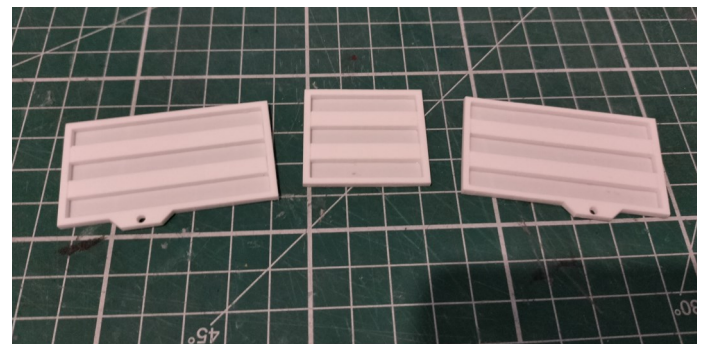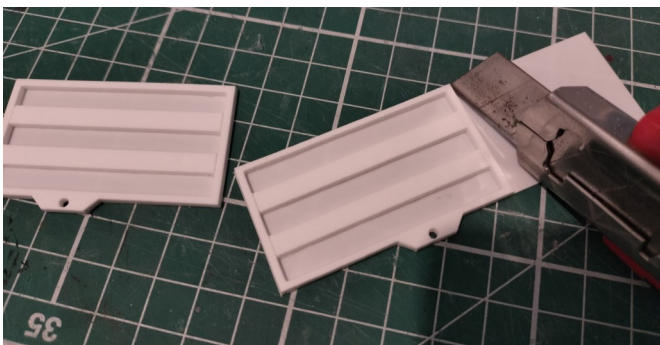


2. Glue the sides (No.4 & No.5) and front (No.2) to the 0.5mm plastic sheet, trim to suit.

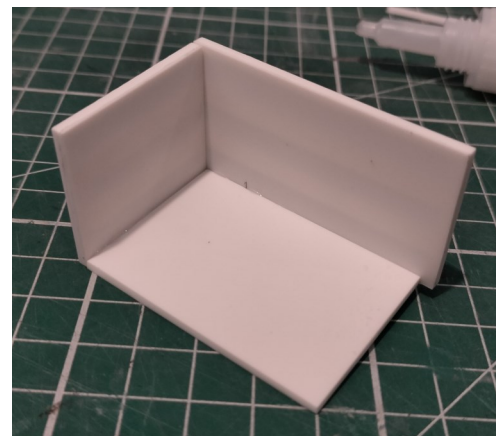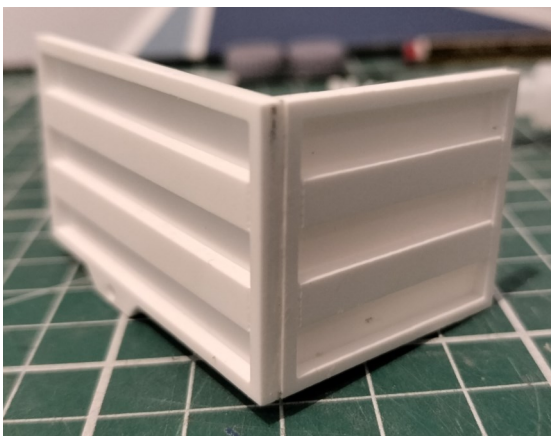


3. Glue one side to the front as illustrated and glue the floor (No.1) inline with the base to begin building the trailer up. The hole for the axle should be far away from the front not close. Ensure the joints are square and flush.

BRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICS



BRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICSBRAEMEREBASICS

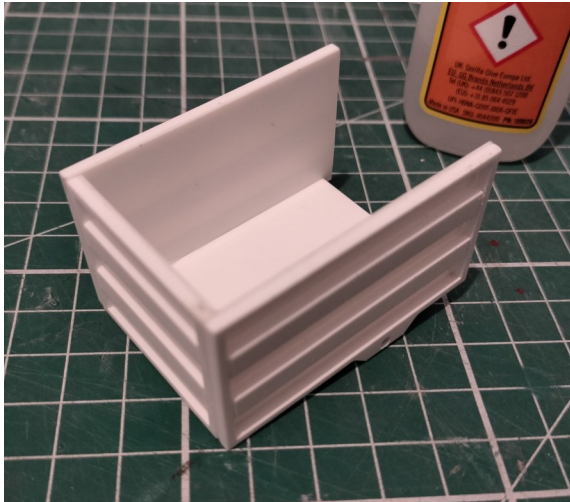

4. Glue the second side in place as shown


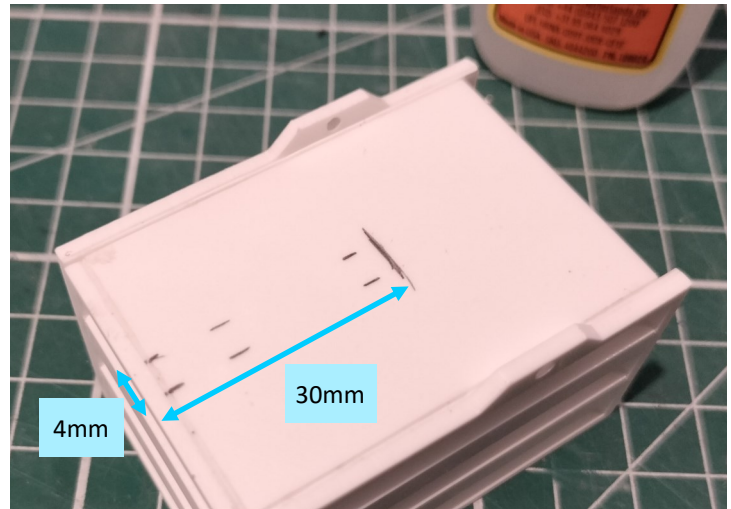



5. Mark out the bottom of the trailer as shown to then glue the drawbar (No.6) in place centrally along the trailer and 30mm in from the front.

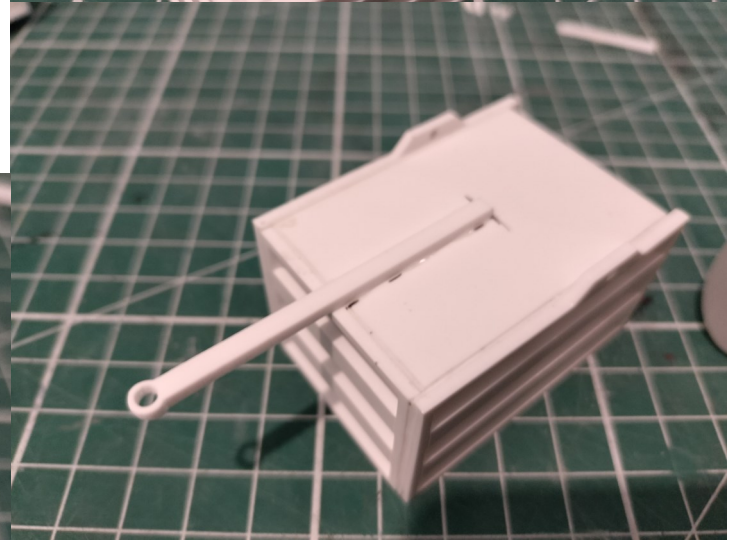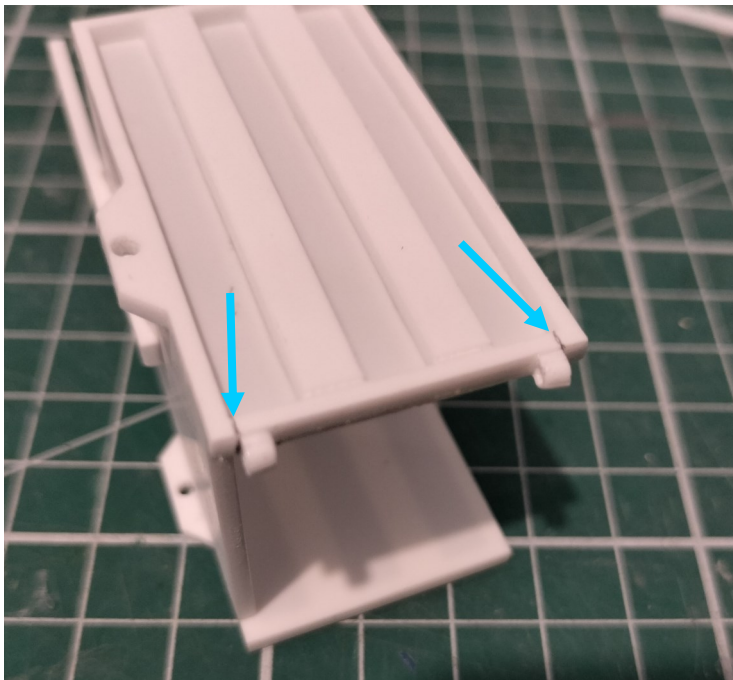

6. The last step on the main body is to add the hinges. Glue two hinge pieces (No.7) to your chosen side, glue one just below the top rail and one just above the bottom rail (see arrows).

7. Glue the mesh to the door (No.3) and trim to fit. You may need to weigh it down while the glue sets.

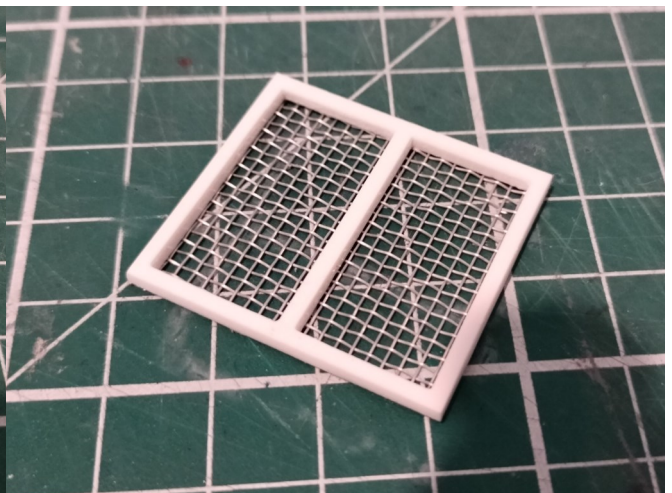
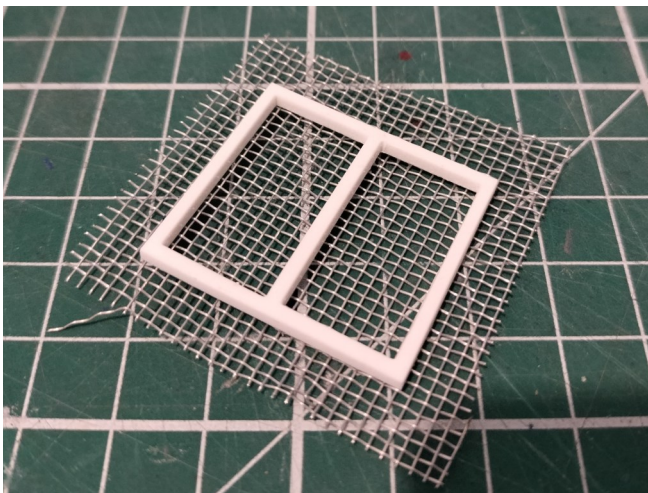


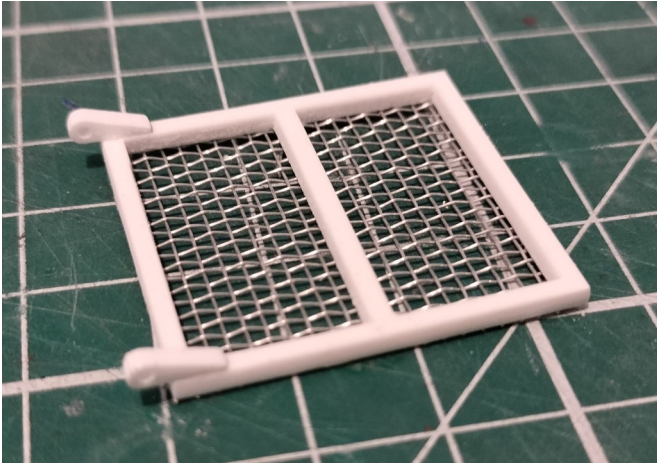

9. Cut two lengths of wire and bend 90 degrees to form a pin, slot into the door hinges as illustrated then fold the other end up to lock in place, this requires great care, you can instead glue the pin instead of making the second bend. Glue the two thin plastic strips to the door.

If you aren't an experienced modeler you may prefer to just glue the door in place.

8. Glue the door hinges (No.8) in place as illustrated. They should sit in from the edge approx. 4mm, to ensure the door opens check they align with the side hinges by placing the door in place at the rear of the trailer before final gluing

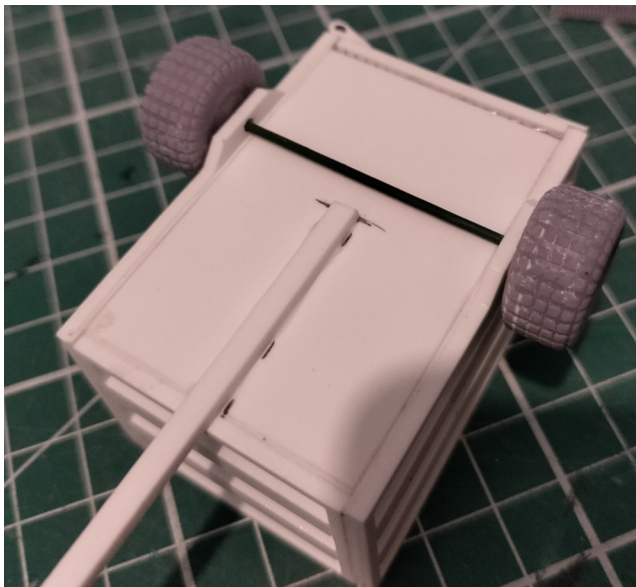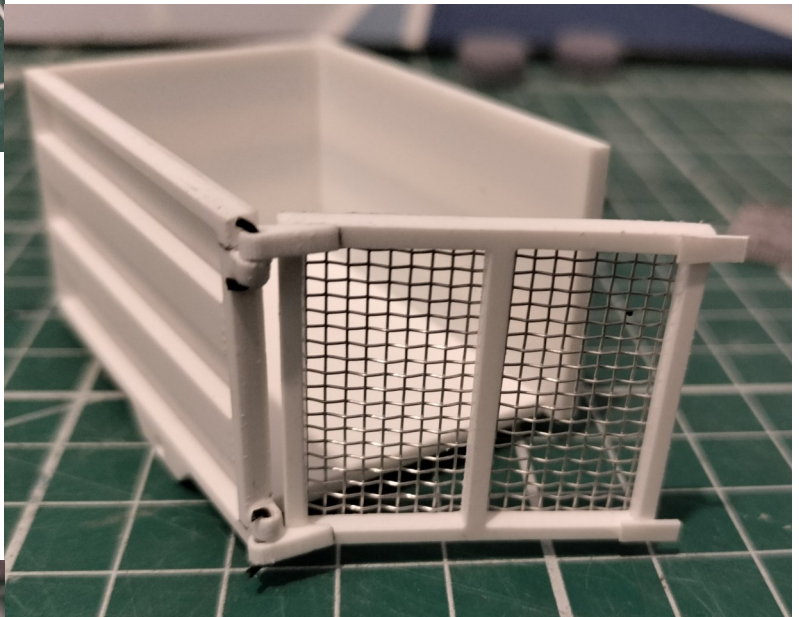

10. The wheels slot onto the axle and are held in place with a piece of glue. The axle slots through the two holes in the sides as shown.

11. The parts can now be painted, everything was first sprayed with Halfords Grey Plastic Primer then a coat of Aluminium Effect Spray Paint, the tyres were brush painted in matt black. Any form of model paint can be used to paint the model and any shade of silver will be suitable.

**The model can now be assembled and you can sit back and enjoy the model you have made!**

