


# **BRAEMER MODELS**

**GREAT BRITISH MODEL KITS**

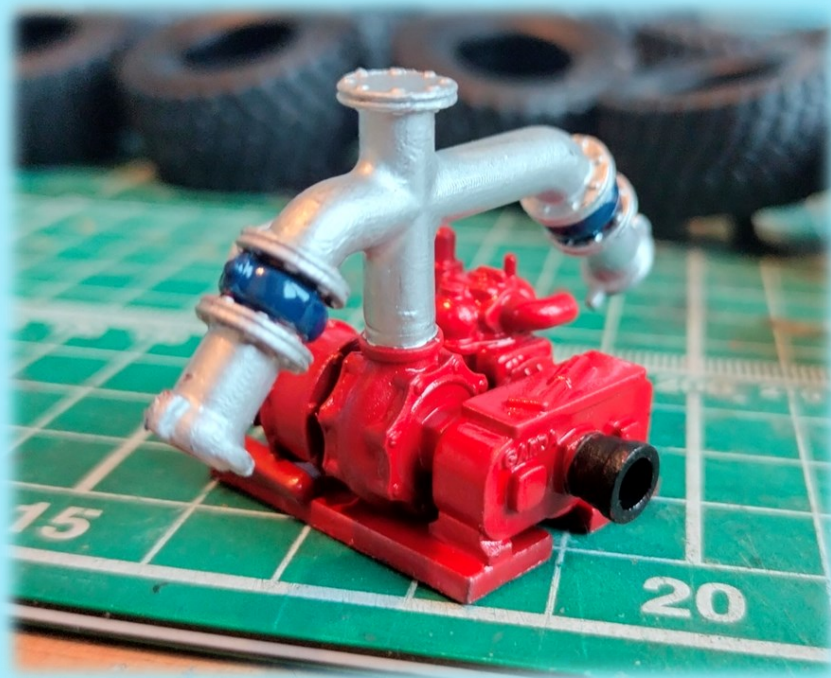

**1:32 SlurryKat 3500G  
Dual Doda Umbilical Pump  
Instruction Manual**

1:32 SlurryKat Tandem Axle Tanker—Doda Kit

### CLEAN ALL RESIN PARTS IN WARM SOAPY WATER



The silicone release agent used in the casting process will react with paint, it must be thoroughly cleaned off before painting.

**This is a rough guide to using the kit.** Care should be taken at each stage to make sure the model is going together correctly and any alterations that are not in the instructions should be carried out.

**Paint:** Components can be painted at any time in the build, it is a case of what suits the builder. We tend to use Automotive spray paints such as Halfords or Hycote or Hobby Paints like Humbrol, Revell or Tamiya.




**Glue:** Recommended glue is contact adhesive or super glue. Blue Lid Gorilla Super Glue is what we prefer.

**Step One.** Glue the fins to either side of the mounting plate, glue them to the end with a wider cut out. Glue the PTO input to the front of the gearbox. Glue the two pumps to the back of the gearbox as illustrated. Glue the gate valve to the back of the Doda pump.

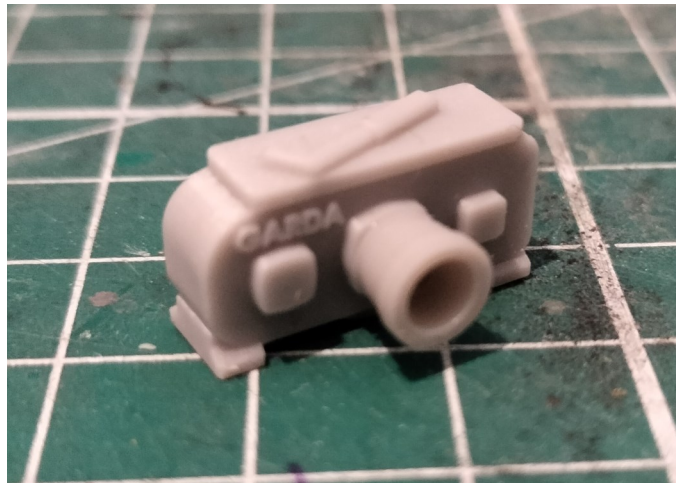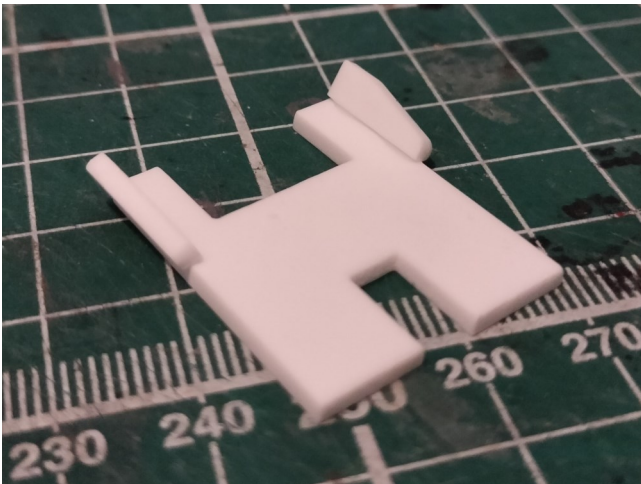



**Step Two.** Glue the assembly to the mounting plate. Glue the mounting plate to the drawbar using the slot in the drawbar to align. The gate valve may need trimming to get the fit correct. Finally add the pipe work to the top of the doda pump, with the offset side hanging over the other pump. Paint with the rest of the tanker.

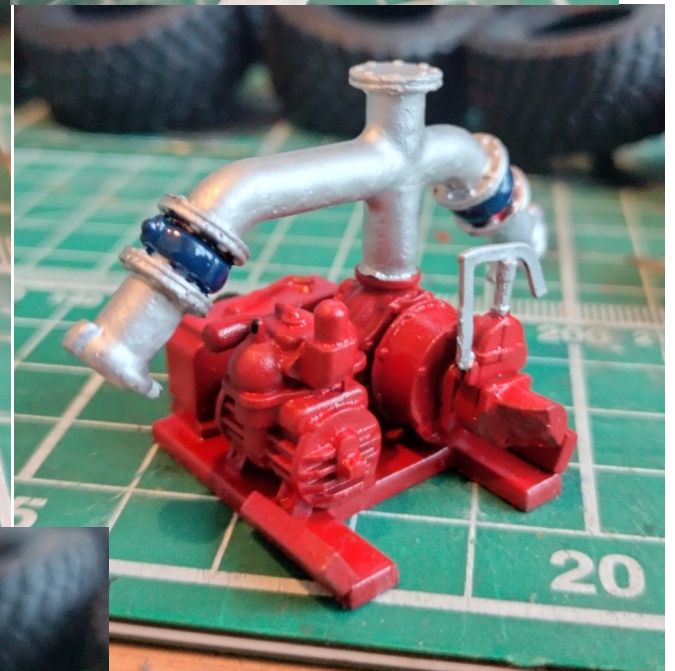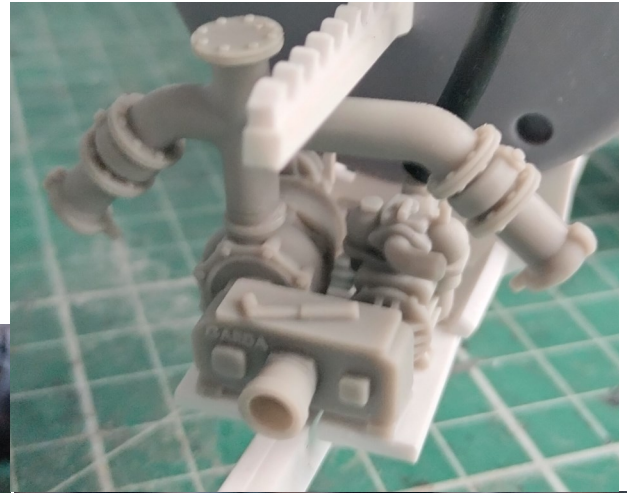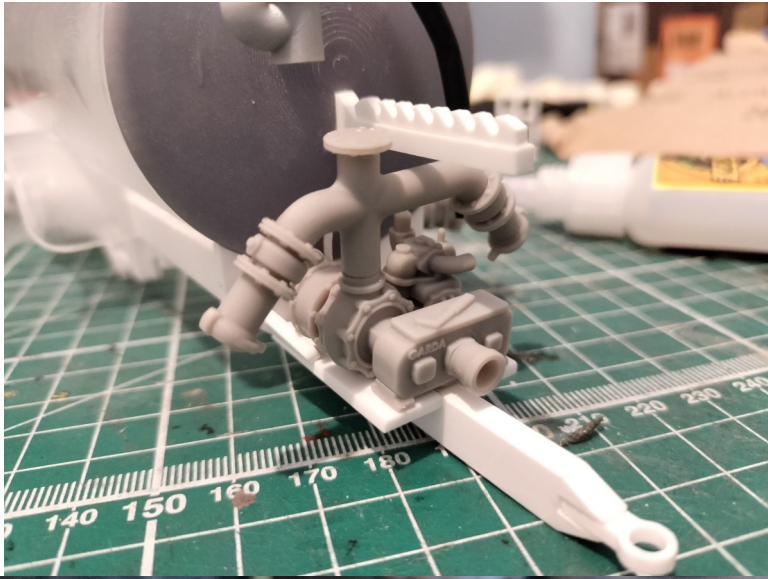

BRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELSBRAEMERMODELS