

1:32 Bailey Bale Trailer


CLEAN ALL RESIN PARTS IN WARM SOAPY WATER

The silicone release agent used in the casting process will react with paint, it must be thoroughly cleaned off before painting.


This is a rough guide to using the kit. Care should be taken at each stage to make sure the model is going together correctly and any alterations that are not in the instructions should be carried out.

Paint: Components can be painted at any time in the build, it is a case of what suits the builder

Glue: Recommended glue is a good quality super glue or Tensol 12 adhesive.

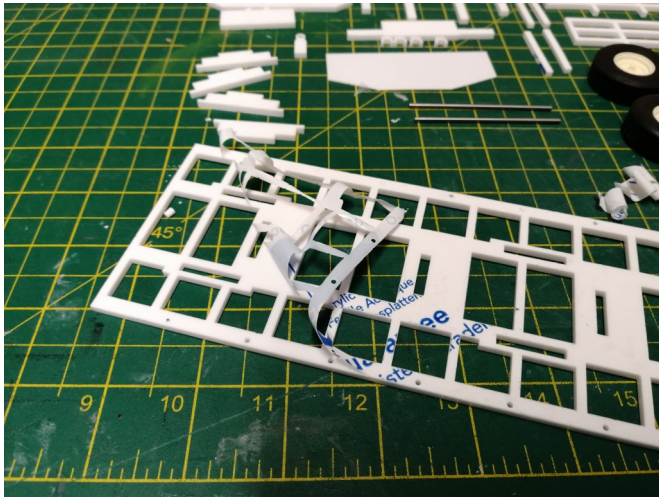


Insert the two chassis rails into the slots in the chassis, the engraved parts should face outwards, and the rear of the trailer is the where the wider part of plastic is .

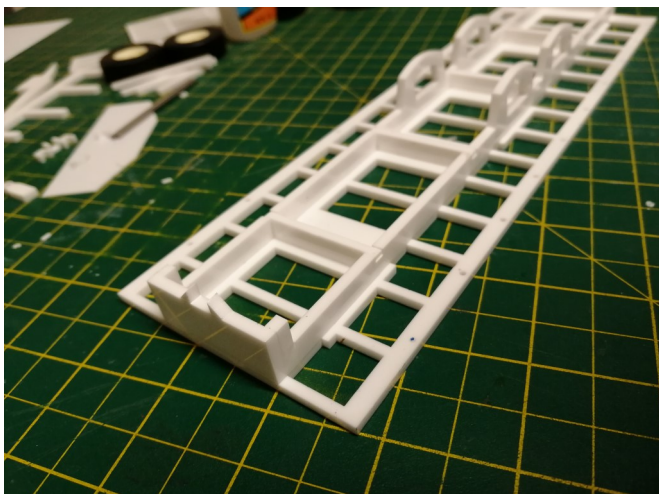


Glue the rear chassis member into place with the engraved light details facing outwards.


To begin remove the plastic film from either side of all the parts.

To glue acrylic plastic the two best adhesives are a good quality superglue, such as Gorilla Gel, or to chemically weld it with Tensol 12 adhesive.

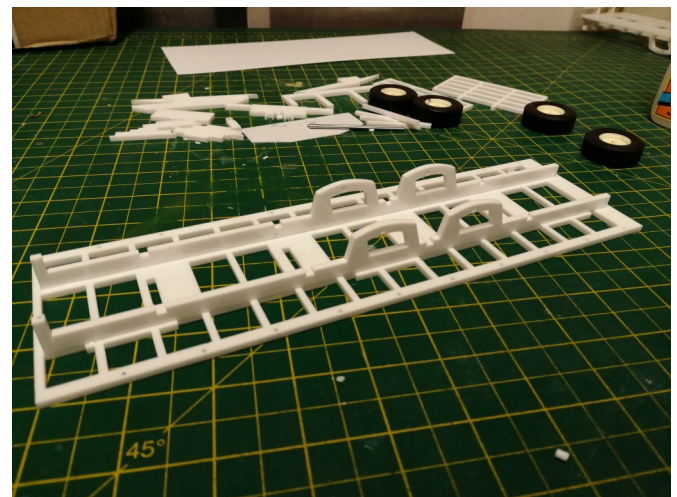


Glue the front of the chassis in place, the four cross members will slot into place.

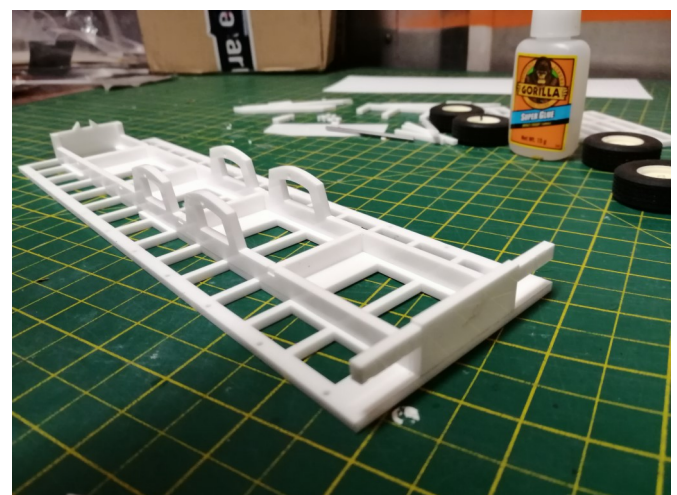

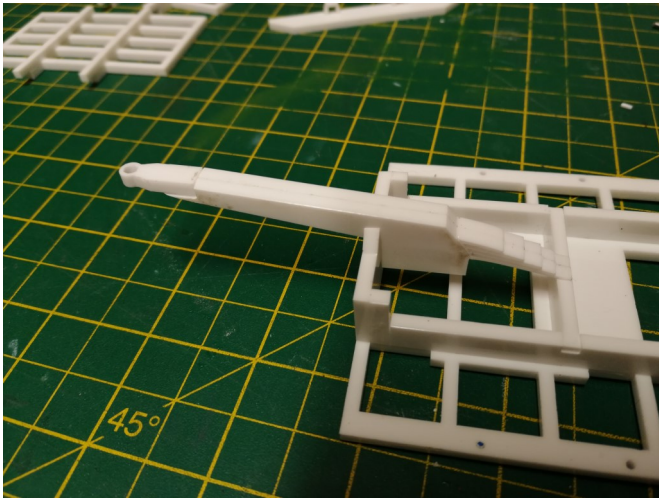


Glue the three parts of the drawbar together, with the engraved details pointing out. You may wish to sand the drawbar thinner to improve fitment on a tractor.


Glue the thin sheet to the thicker sheet to make up the headboard. Glue the small tabs that support the bale lades in place, there are engraved lines to show where to glue them.

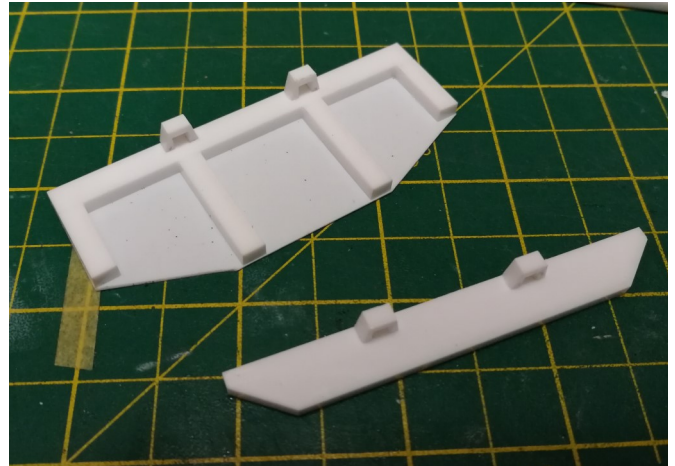

Glue the narrow strips to the bale lades, they should be flush at the top and protrude further than the lade at the bottom.

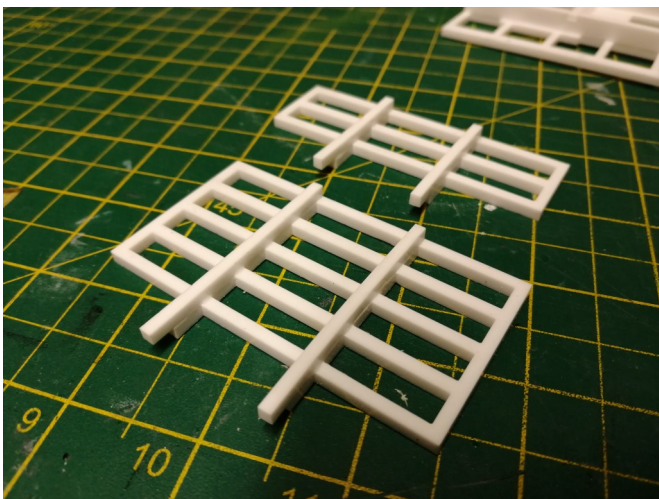

Glue the floor onto the trailer. The parts can now be painted. It is recommended to use a good quality grey plastic primer. For the top coat RAL 6002 is a good match for modern Bailey Green, or RAL 6005 for an older Bailey Green. You may wish to test fit the wheels first before painting.

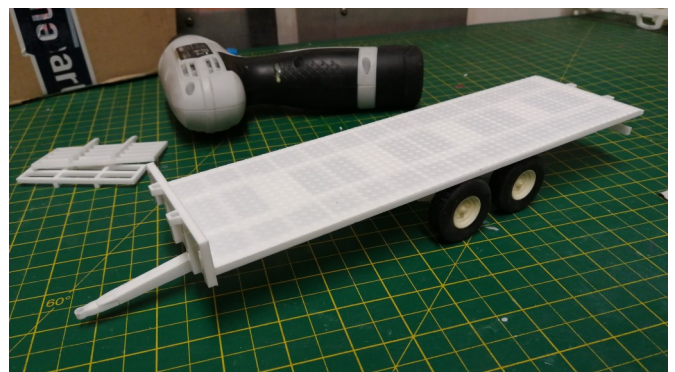

When painting the rims ensure they have been washed thoroughly in soapy water to remove the release agent. Once painted the wheels can be fitted, cut the straw to make the spacers on the axle $7/8$ mm should be suitable.

You can now sit back and enjoy your model!

