

1:32 Tractor Mounted PTO Wood Chipper Resin Model Kit

1x Body, 1x Leg Frame, 1x Hopper, 1x Hopper Extension, 1x Chute, 1x Thick Pin Rod, 1x Thin Pin Rod.

## CLEAN ALL RESIN PARTS IN WARM SOAPY WATER

The silicone release agent used in the casting process will react with paint, it must be thoroughly cleaned off before painting.

**This is a rough guide to using the kit.** Care should be taken at each stage to make sure the model is going together correctly and any alterations that are not in the instructions should be carried out.

**Paint:** Components can be painted at any time in the build, it is a case of what suits the builder

**Glue:** Recommended glue is contact adhesive or super glue.

We used Gorilla Super Glue (Blue Lid)



**1 Clean Flash.** The first step is to clean the parts in soapy water and, with a craft knife remove any flash left over from the casting process. This is thin lines of material that accumulate along the joins in the mould.



**2 Assemble the linkage.** Cut the thicker rod to the width of the grey linkage pins and glue into the holes in the links. Using the tractor you intend to mount on the linkage position the three link arms on the back of the body as illustrated, when happy with the position glue in place.





**3 Assemble the body.** Glue the chassis to the leg frame with the legs slanting away from the linkage. If you want the chute to be fixed also glue that in place. If you want it to rotate leave it unglued and paint separately. Glue the chute to the body, there is a raised line indicating where the chute sits.

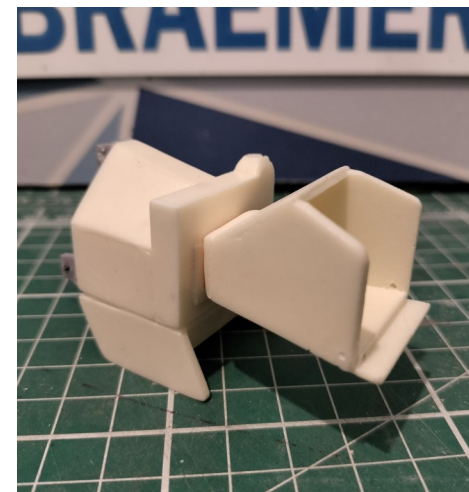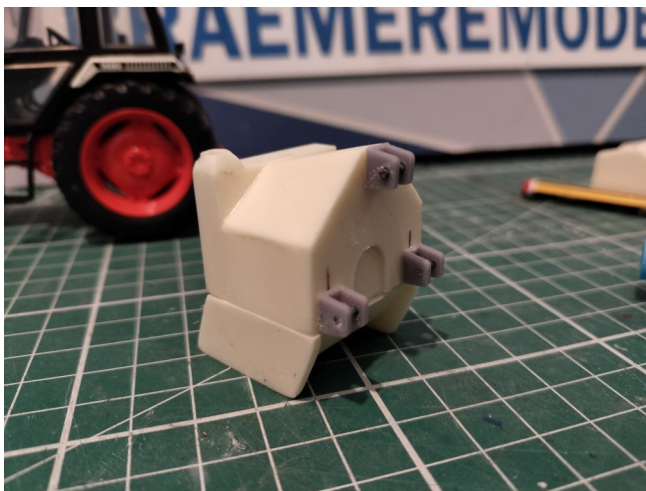



# BRAEMER MODELS

GREAT BRITISH KITS

**4 Dry assembly.** The rest of the parts can be dry assembled as shown. To aid painting the oil tank and folding chute are painted separately.

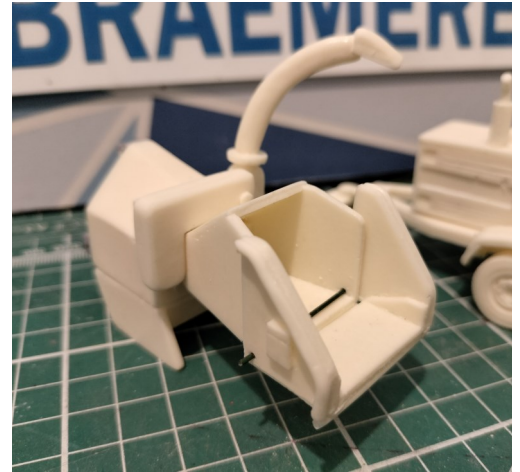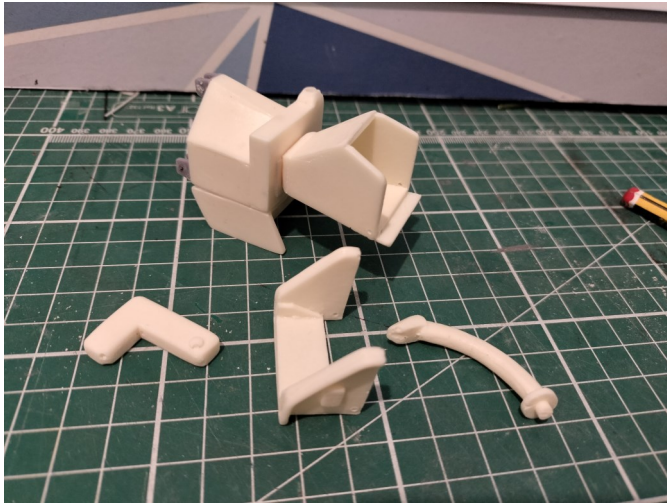

**5 Paint and assemble the model.** The model was painted with Halfords Grey Plastic Primer and Ford Electric Orange Spray Paint, any modelling paints are suitable. To assemble the hopper cut two length of the thin wire, thread through the pre drilled holes and bend the wire to hold in place. Glue the hydraulic tank in place as shown.

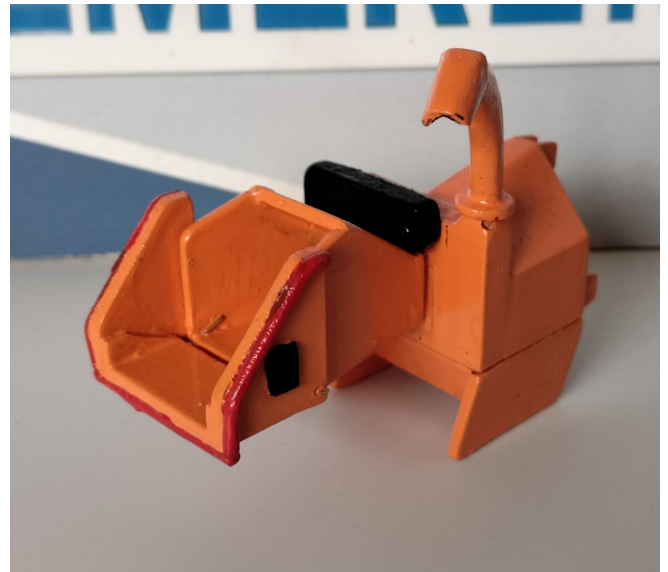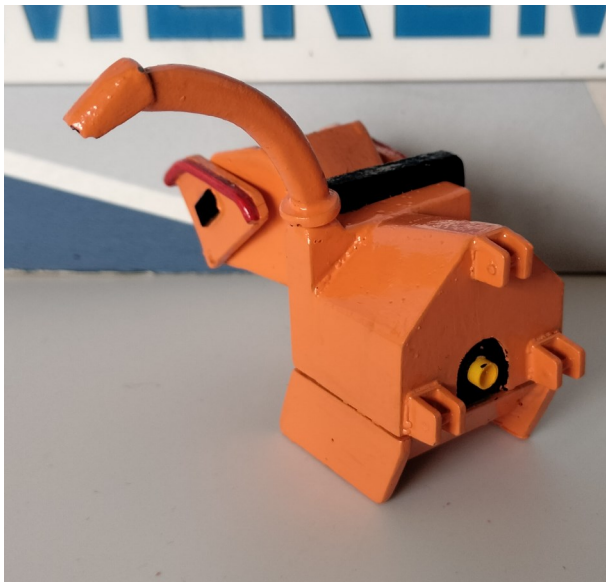

Sit back and enjoy your new model!

BRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICS

BRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICSBRAEMERBASICS