## **BRAEMERE** MODELS

## **GREAT BRITISH KITS**

1:32 Trailed Wood Chipper Resin Model Kit

ГЛ

ЛЛ

лЛ

M

M

SBRAEM

M

ጦ

ரி

пл

1x Body, 1x Chute, 1x Exhaust, 1x Hopper, 1x Hopper Extension, 1x Chassis, 1x Small Fuel Tank, 1x Light Bar/Bumper, 1x Tow Eye, 2X Wheels, 1x Axle bar, 2x Small Pins, 2x Plastic Tabs.

## **CLEAN ALL RESIN PARTS IN WARM SOAPY WATER**

The silicone release agent used in the casting process will react with paint, it must be thoroughly cleaned off before painting.

This is a rough guide to using the kit. Care should be taken at each stage to make sure the model is going together correctly and any alterations that are not in the instructions should be carried out.Paint: Components can be painted at any time in the build, it is a case of what suits the builderGlue: Recommended glue is contact adhesive or super glue.


**1 Clean Flash.** The first step is to clean the parts in soapy water and, with a craft knife remove any flash left over from the casting process. This is thin lines of material that accumulate along the joins in the mould.


2 Assemble the chassis. Glue the lightbar/bumper to the rear of the chassis. Glue the mudguards to the chassis 1.2cm from the rear. Glue the tow eye to the front. Glue the small fuel tank to the back as shown in the photos.


**3 Assemble the body.** Glue the hopper to the back of the body as indicated by the slots. Glue the exhaust to the top of the body. If you want the chute to be fixed also glue that in place. If you want it to rotate leave it unglued and paint separately.

**4 Assemble the axle.** Cut the metal rod down so that when a wheel is fitted to either end the overall track width is 5cm. Glue in place.



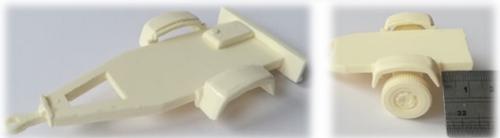

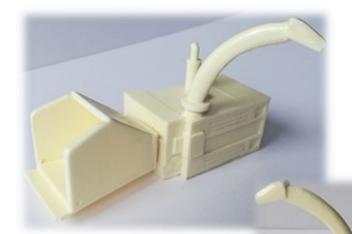

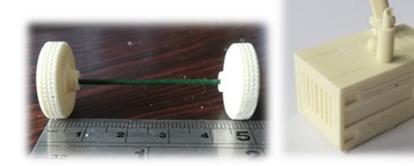

BRAEMERE BASICS BRAEMERE BASICS BRAEMERE BASICS BRAEMERE BASICS

## **BRAEMERE**MODELS


**5 Paint the parts.** Apply any filler to the model where air bubbles are present. Paint all the components of the model as desired and allow the paint to fully set.



GREAT BRITISH KITS



6 Assemble the model. Glue the body to the chassis. Slide the folding section of the hopper on, and secure using the two small pins. Place the axle underneath and secure with the two plastic strips (as indicated by red arrows).

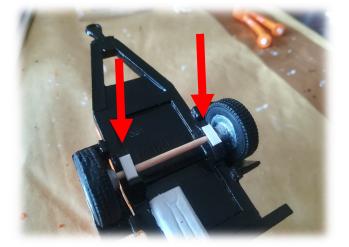



BRAEMERE BASICS BRAEMERE BASICS BRAEMERE BASICS BRAEMERE BASICS

Sit back and enjoy your new model!