


AB-2a- Cabinet Assembly Instructions


Note: If you have two of the same cabinet each cabinet will have a different cabinet number.

Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

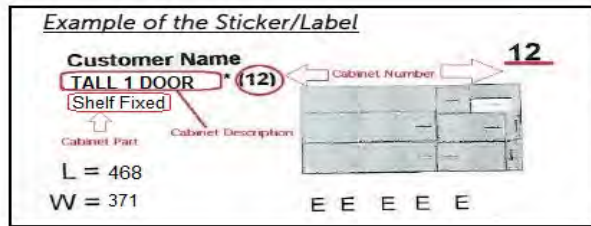

Please Note:
Cabinet number shown is an example only.

AB-2a Cabinetry Panels

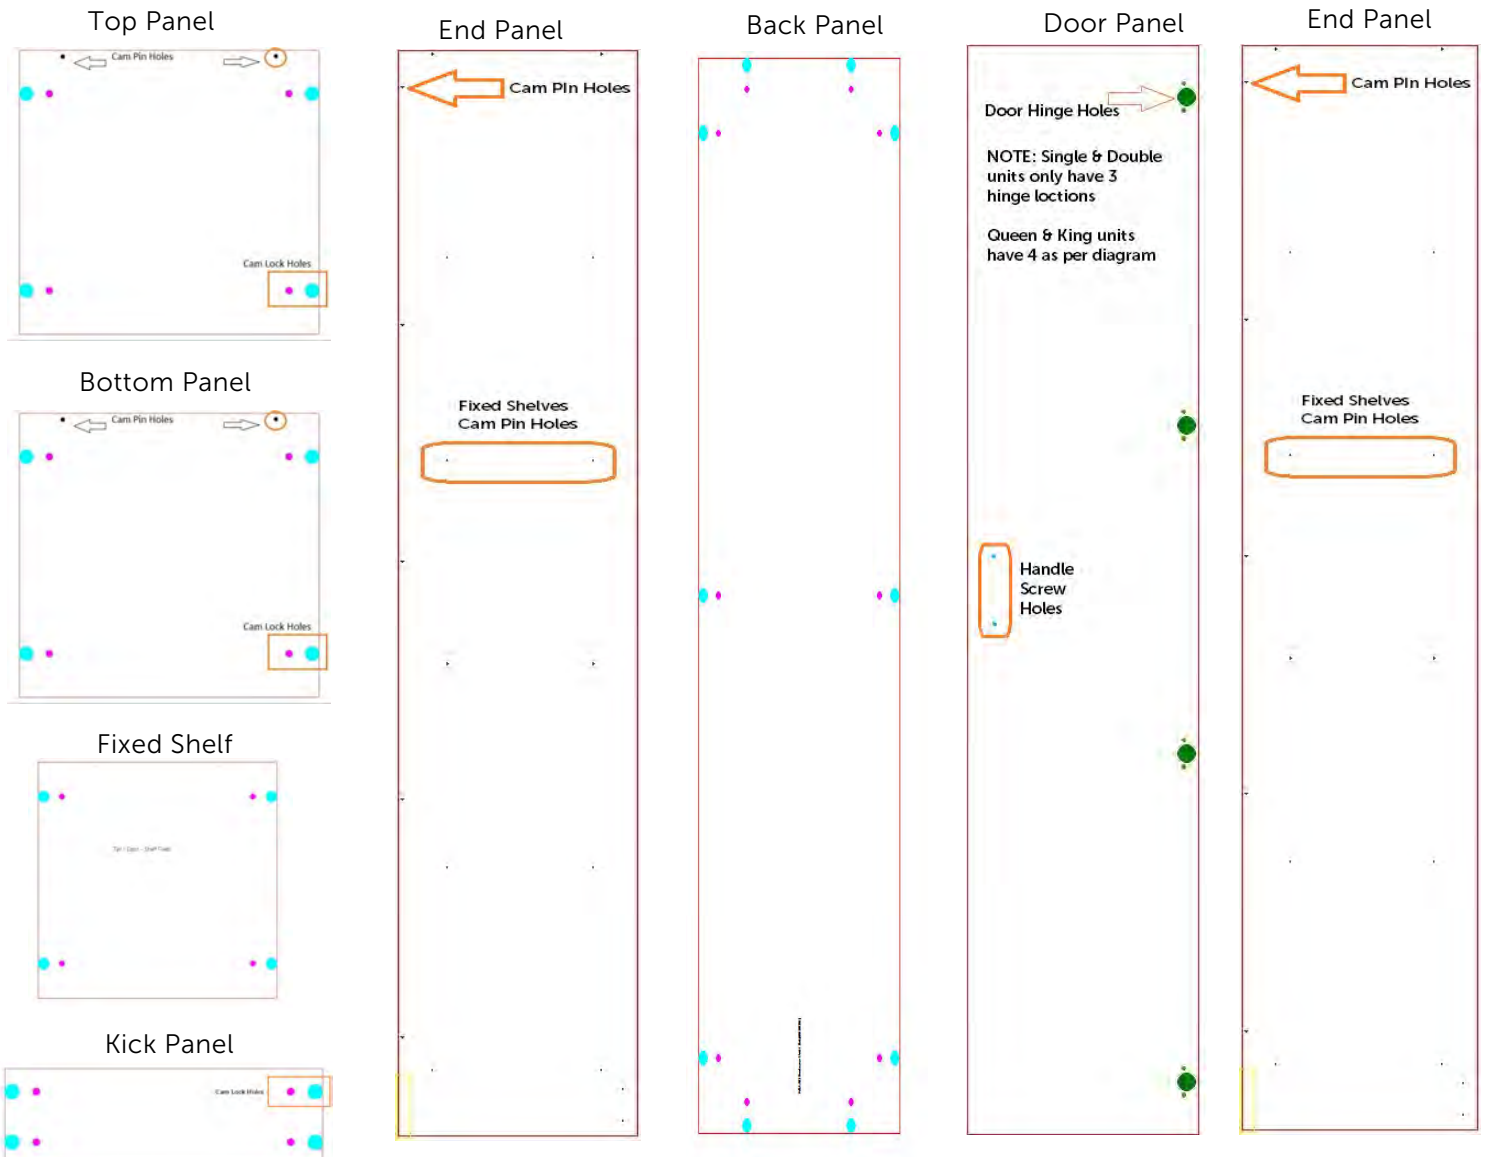

AB-2a Hardware Parts

Cam Lock



Cam Pin



Small Handle



Handle Fixing Screw



Door Hinge Clip






Door Hinge







Step 1 – Inserting Cabinetry Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

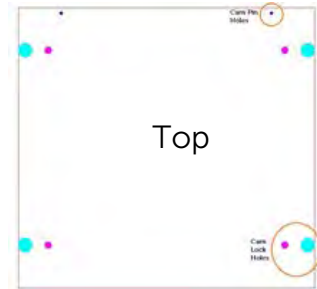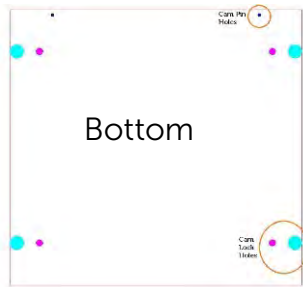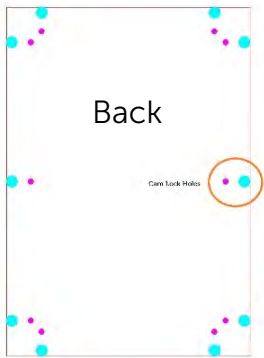

Cam Pins - Insert all Cam Pins into the following panels as described by the cabinet part located on the cabinet sticker.

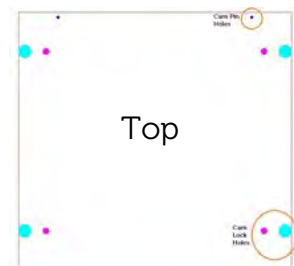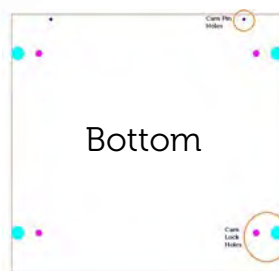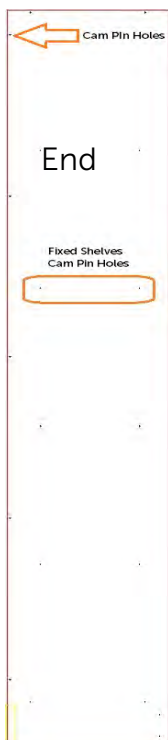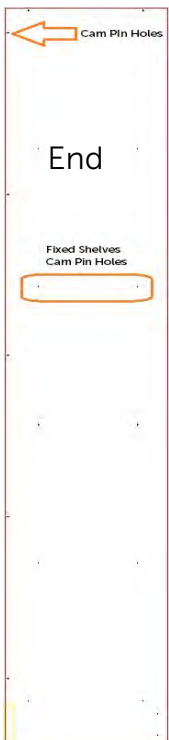

NOTE: In the Top and Bottom Panels Insert the cam pins on the opposite side to the Cam Lock.

Attach the Hinge Clips before assembling the cabinetry.

Door Hinge Clips -



Line up the Hinge Clip with the pre-drilled holes in the End Panel. Ensure that the arrow on the Hinge Clip is pointing towards the edge tape. Fix these by tapping them in gently with a hammer, then tightening the screws. *Refer to image 3 page 5*

Step 2 – Cabinet Assembly

Start the cabinet assembly by using either one of the End Panels

Back Panel - With the cam locks facing away from the inside, place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips Head hand screwdriver.

Bottom and Top Panels - With the cam locks facing away from the inside of the cabinet attach these panels to the end panel and back panel. *Refer to images 1 & 2 page 5*

Kick Panel - With the cam locks facing to the inside of the cabinet attach this panel to the end panel.

- Place the remaining end panel over the top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Note: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are. Failure to do so may result in damage.

Once assembled, stand the cabinet up to fit the fixed shelving.

Fixed Shelves – Place the Cam Locks over the previously installed Cam Pins. Then tighten the Cam Pins using a Phillips Head hand screwdriver.

Step 3 – Fitting the Door Hinges and Door Panel

Before attaching the door panel, place the cabinet next to the side of the wall bed that it will be attached too.

Do not make the end panel of the cabinet flush with the end panel of the wall bed.

Door Hinges -



Place the cup part of the hinge into the cupboard door panel, ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinged flap, this will secure them into place. There are no screws required to attach these hinges. *Refer to images 4, 5 & 6 page 5*

Attaching the Door to the Cabinet – Insert the hinge prongs on the hinge arms into the hinge clip. Once inserted press the back of the hinge arm until you hear it click into place. *Refer to image 7 page 5*

- Once the door is attached, check that the cabinet door panel is flush with the front edge of the end panel of the wall bed.

Step 4 Attaching the Cabinet to your wall bed

To attach the cabinet to the wall bed you will need to pre-drill four 5mm pilot holes. These holes will be covered using the FastCaps supplied.

IMPORTANT - When pre-drilling the wood screw pilot holes use caution not to go all the way through to the end panel of the wall bed.

- Temporarily fasten the cabinets together with clamps. Pre-drill a total of four 5mm pilot holes in the end panel of the cabinet – two towards the top of the unit and two at the bottom. Attach the cabinet to the wall bed using the 28mm screws supplied. Then remove the clamps.

Caution: Do Not over tighten the wood screws into the side of the cabinet End Panel as it may end up protruding through the opposite side of the panel.

Attaching Door Handle -



Place the handle over the pre-drilled holes in the door panel. Insert the handle screws through the pre-drilled holes in the door panel and tighten using a Phillips head screwdriver.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

Image 1

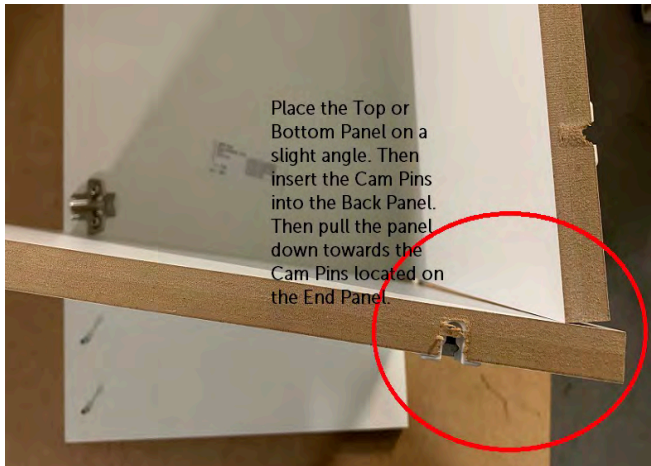


Image 2

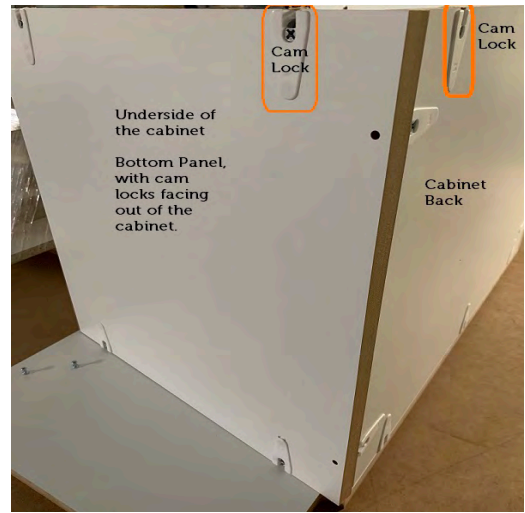


Image 3

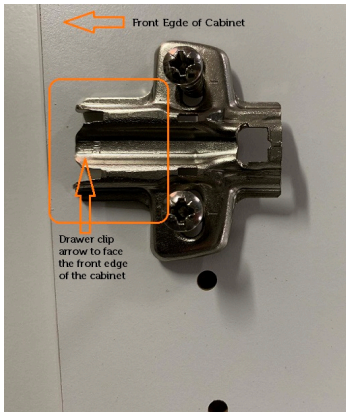


Image 4

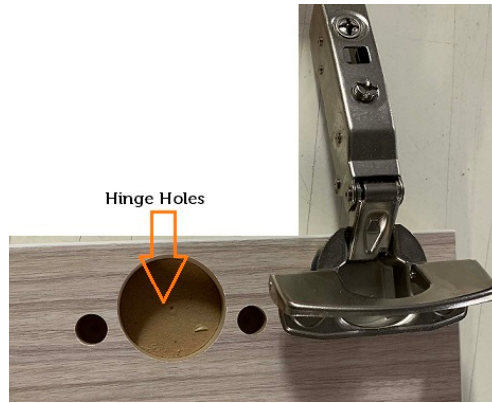


Image 5



Image 6



Image 7

