

WALLBEDS



Australia

Reclaim Your Space



Important Safety Advice Sheet

PLEASE READ BEFORE YOU BEGIN:


- Please read and understand the instructions prior to assembly. Incorrect installation of this product could possibly result in personal injury or physical damage.
- WallBeds Australia recommends two people to safely assemble and install the wall bed - It is not recommended you try to install this bed on your own.
- The wall bed **MUST** be securely fastened to the wall. Failure to do so will cause the bed to tip over & may cause damage to the cabinet or serious personal injury.
- All additional cabinetry must be securely fasten to the Wall Bed cabinet.
- Whilst these products are DIY it is recommended the wall bed be installed by a qualified trades person if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by incorrect installation of this product.

AB3a Cupboard Drawer and Bookcase Assembly Instructions


Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels numbers.

Panel Stickers/Labels – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

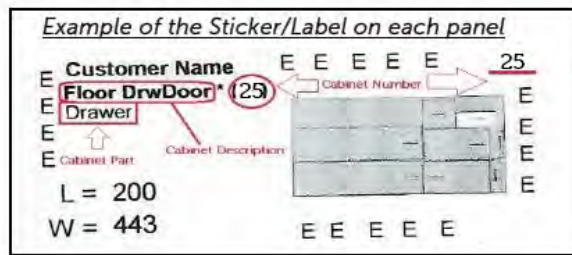

Please Note:
Cabinet number shown is an example only.

AB3a Cupboard & Drawer Cabinetry Panels

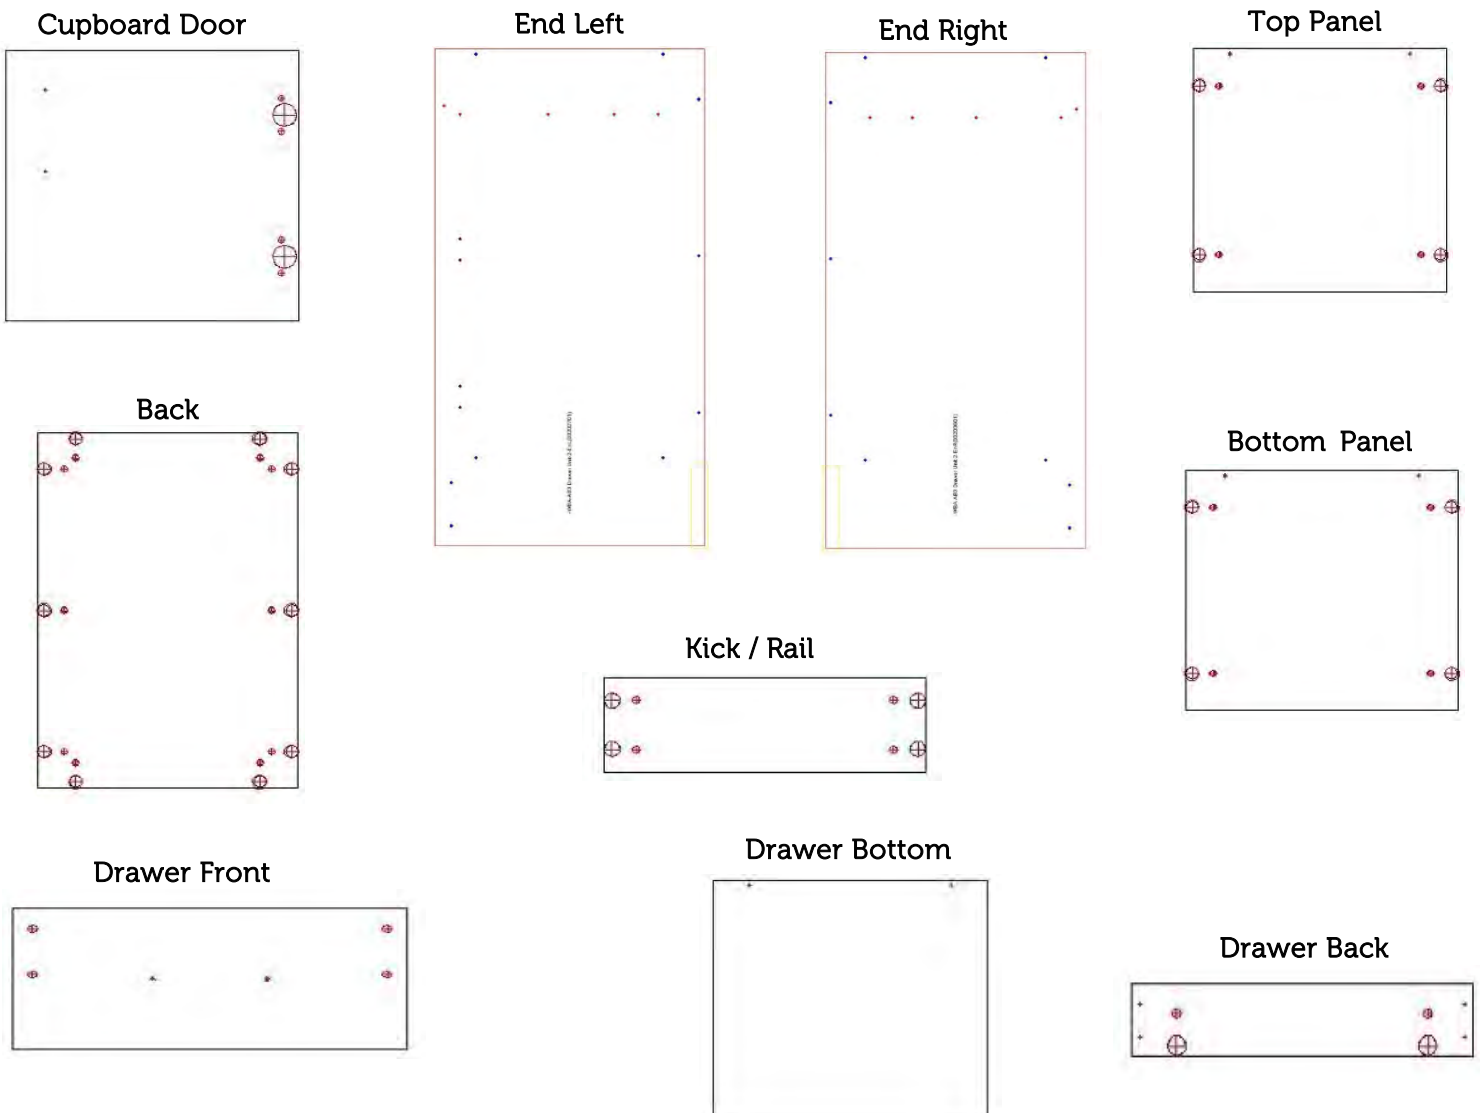

AB3a Cupboard and Drawer Hardware Parts

Small Handle



Drawer Runners & Metal Drawer Sides



Drawer Clip



Handle Fixing Screw



Door Hinge



Door Hinge Clip



Euro Screw




Cam Lock



Cam Pin



Done Head Screw



28mm Wood Screw



Step 1 – Inserting Cupboard and Drawer Cabinetry Hardware


Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.




Back Panel



Bottom Panel

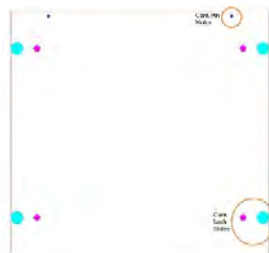

Top Panel

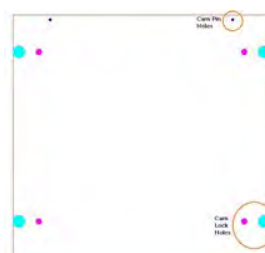

Drw Back



Rail / Kick



Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.





End Panel

End Panel

Drw Bot

Bottom Panel

Top Panel

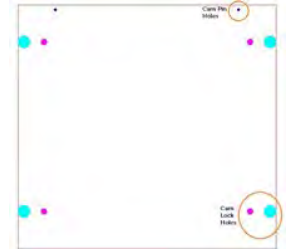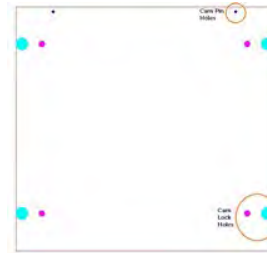

NOTE: In the Bottom Panel Insert the cam pins on the **opposite side** to the Cam Lock.

NOTE: In the Top Panel Insert the cam pins on the **same side** as the Cam Lock

Attach the runners prior to assembling the cabinetry.

Drawer Runners –



Line up the holes in the metal runner with the pre-drilled holes in the End Panel. Attach these runners using the Euro screws. *Do this for both End Panels Refer to images 7 & 8 page 10*

DoorHinge Clips –



Attach the Hinge Plates before assembling the cabinetry.

With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws. *Refer to image 3 page 9*

Drawer Clips –



Insert these into the drawer front ensuring the up & down arrows on the drawer clips are facing the outside edge of the drawer panel.

Fix these into the drawer front by tapping them in gently with a hammer. *Refer to image 11 page 11*

Cupboard Door Hinges –



Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. There are no screws required to attach these hinges. *Refer to images 4 & 5 page 9 and 10*

Step 2 – Cupboard & Drawer Cabinet Assembly

Start the cabinet assembly by using either one of the cabinet End Panels.

Cabinet Back Panel - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Philips head hand screwdriver. *Refer image 12 page 11*

Cabinet Bottom Panel - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel. *Refer image 12 page 11*

Cabinet Top Panel - With the cam locks facing the inside of the cabinet attach the bottom panel to the end panel and back panel. - It is essential that the cam locks are facing the inside of the cabinet.

Cabinet Kick / Rail Panel - With the cam locks facing to the back of the cabinet attach the kick panel to the end panel. Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Drawer Assembly

Note – There are no pre-drilled guide holes on the underside of the drawer bottom panel for the dome head screws. The dome head screws supplied do not require these holes to be pre-drilled.

Drawer Back Panel to Drawer Bottom Panel - With the cam locks facing the back attach the drawer bottom panel to the drawer back panel. Tighten cam locks to cam pins. *Refer image 2 page 9*

Metal Drawer sides - Attach the metal drawer sides to the drawer bottom and drawer back panels using the dome head screws. Before attaching drawer front, place assembled drawer into the Cupboard Drawer cabinet. *Refer image 1 & 2 page 9*

Drawer Front – To ensure the drawer front is the correct way up. Place drawer front on to the drawer clips - ***DO NOT PUSH DRAWER FRONT FULLY ONTO THE DRAWER CLIPS.***


Gently close the drawer ensuring the top edge of the drawer front will be level with the top panel of the cabinet. If the drawer front is not level with the top panel, remove it from the drawer clips and turn the drawer front up the opposite way.

Double check the drawer front is now level with the cabinet top panel. Once the drawer front is the correct way up, push the drawer front into the metal sides of the drawer until you hear the drawer click into place on both sides. Tighten the screws on the outside of the drawer clips using a Phillips head hand screwdriver.

AB3a Bookcase Assembly Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

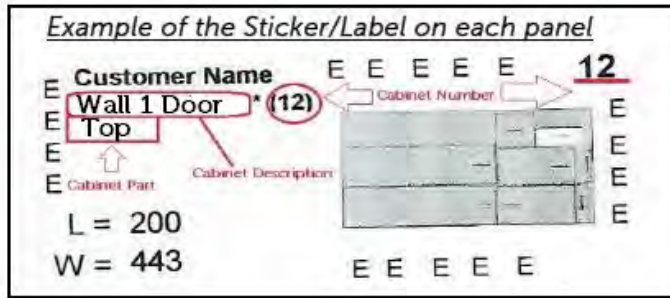


Please Note:
Cabinet number shown is an example only.

AB3a Cabinetry Panels

End Left

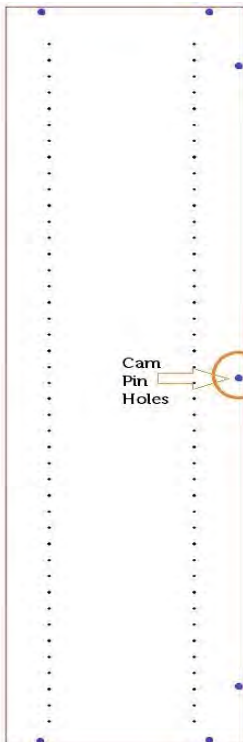


End Right

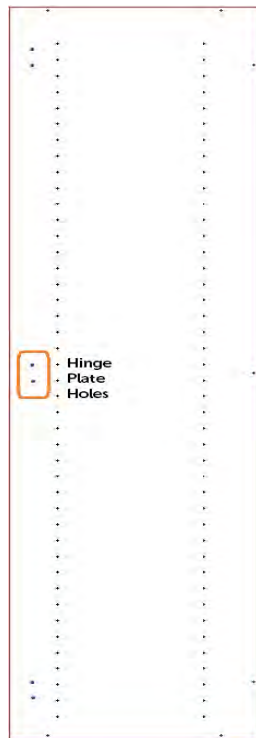


Door Panel




Back Panel

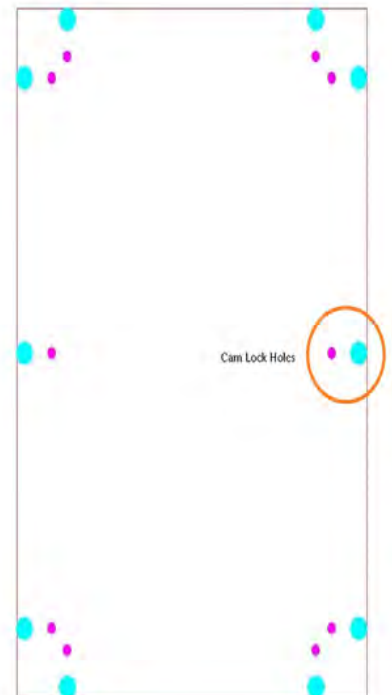


Top Panel

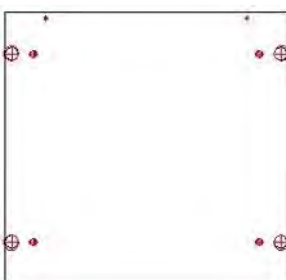

Bottom Panel

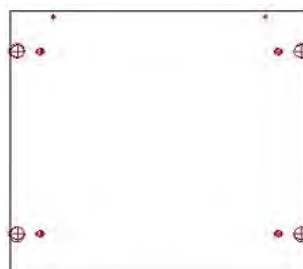

Adjustable Shelf

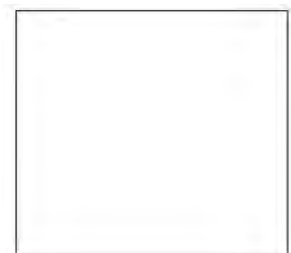

AB3a Cabinet Hardware Parts

Cam Lock



Cam Pin



Small Handle



Handle Fixing Screw



Shelf Pin



Door Hinge Clip



Door Hinge





28mm Wood Screw







Step 1 – Inserting Cabinetry Hardware

Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

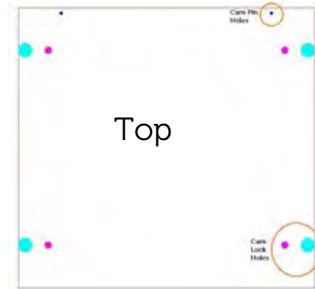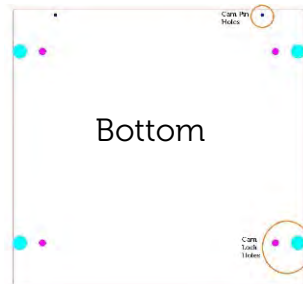

Cam Pins Insert all Cam Pins into the following panels as described by the cabinet part located on the cabinet sticker.

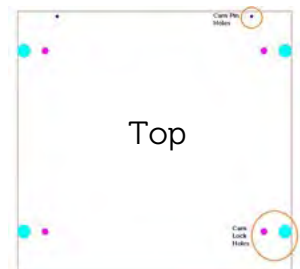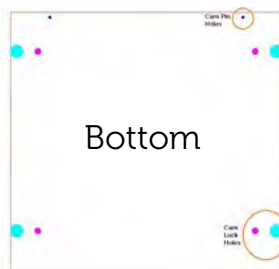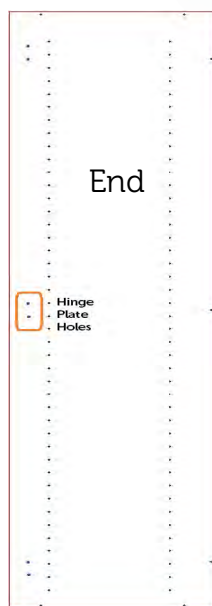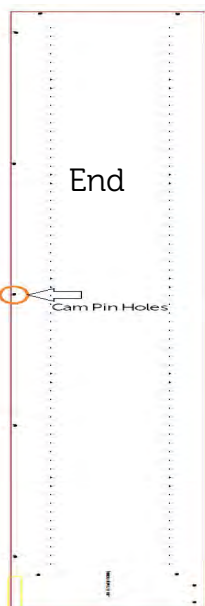

*NOTE: In both the Top and Bottom Panels Insert the cam pins on the **opposite side** to the Cam Lock.*

Door Hinge Clips –



Attach the Hinge Plates before assembling the cabinetry.

With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws.

Step 2 – Cabinet Assembly

Start the cabinetry assembly by using either one of the End Panels

Back Panel - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

End Panel - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel.

Top Panel - With the cam locks facing the outside of the cabinet attach the bottom panel to the end panel and back panel. - It is essential that the cam locks are facing the outside of the cabinet.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Note: *You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are located. Failure to do so may result in damage to the End Panel.*

Step 3 – Placing both Units to the Alpha Wall Bed

- Place the Cupboard & Drawer unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawer & cupboard is flush with the front edge of the wall bed cabinet.
- Place the Cabinet unit on top of the Drawer Unit and line up the back edge of the Cabinet with the back of the Drawer & Cupboard unit. *Refer images 13 & 14 page 12*
- **NOTE:** *This will leave the End Panel of the cabinet approximately 18mm back from the Front Edge of the wall bed End Panel. This will allow for the Door Panel to be flush with the wall bed End Panel.*

Step 4 – Fitting the Door Hinges into the Door Panel

Cupboard Door Hinges –



Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. There are no screws required to attach these hinges.

Step 5 – Fitting the Door Hinges and Door Panel

Attaching the Door to the Cabinet - Clip the hinge arm into the hinge block previously attached to the bookcase.

Attaching the Cabinet to your wall bed - Check that the cabinet door panel is flush with the front edge of the wall bed End Panel. Using existing shelf pin holes (2 up towards the top and 2 at the bottom) attach the bookshelf to the side of the bed cabinet by using the 28mm wood screws supplied.

Caution: *Do Not over tighten the wood screws into the side of the wall bed End Panel as it may end up protruding through the opposite side of the panel.*

Adjustable Shelf - Insert the shelf pins into the shelf pin holes at the desired height for your shelf. Place your shelf on them. If you find it's too high or too low for the books you want to store, it's an easy matter to adjust the shelf by moving the supports to the holes at the required height.

Attaching the door handle



Place the handle over the pre-drilled holes in the door panel. Insert the handle screws through the pre-drilled holes in the door panel and tighten using a Phillips head screw driver.

Step 6 – Attaching the Drawer & Cupboard unit to the Cabinet and WallBed

Caution: *Do Not over tighten the wood screws into the side of the wall bed End Panel or bottom of the top cabinet as it may end up protruding through the opposite side of the panel.*

Attaching the Cupboard & Drawer to the Cabinet - Remove the drawer & screw up through the top panel of the cupboard drawer unit into the base of the Cabinet using the 28mm screws supplied.
Note: *You will have to pre-drill some 5mm screw holes.*

Attaching the Cabinet to the WallBed - Using an existing shelf pin hole, fix the Cabinet to the side of the wall bed cabinet by using the 28mm wood screws supplied.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

Image 1



Image 2

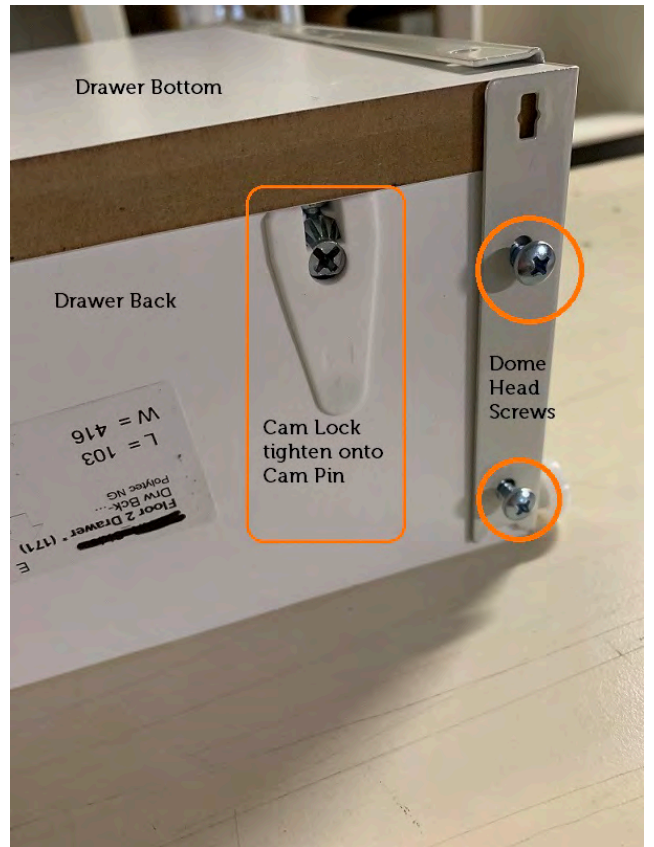


Image 3

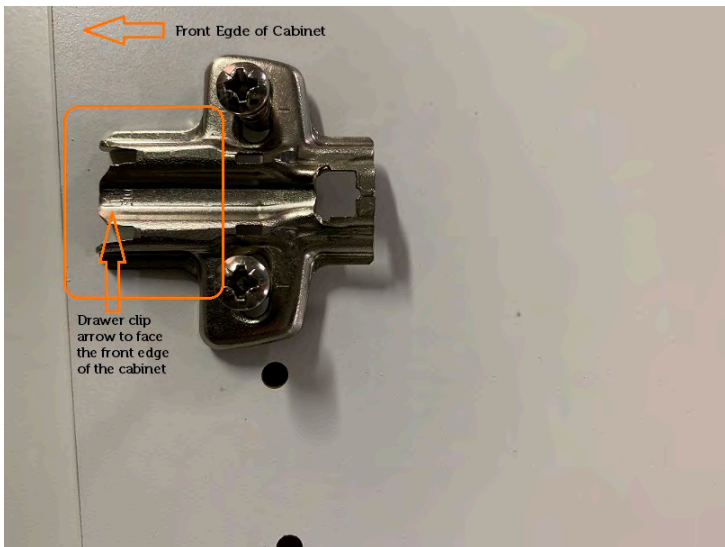


Image 4



Image 5



Image 6



Image 7

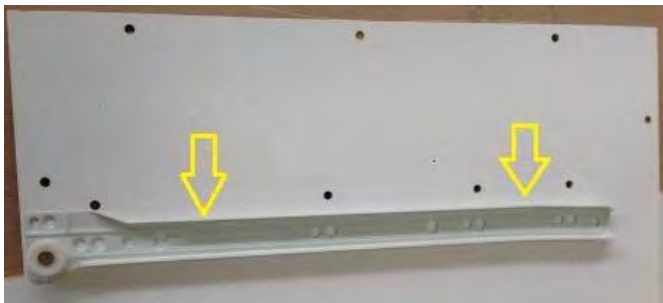


Image 8

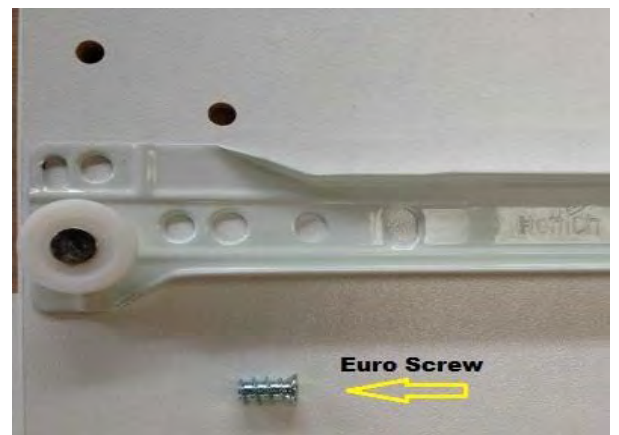


Image 9



Image 10



Image 11

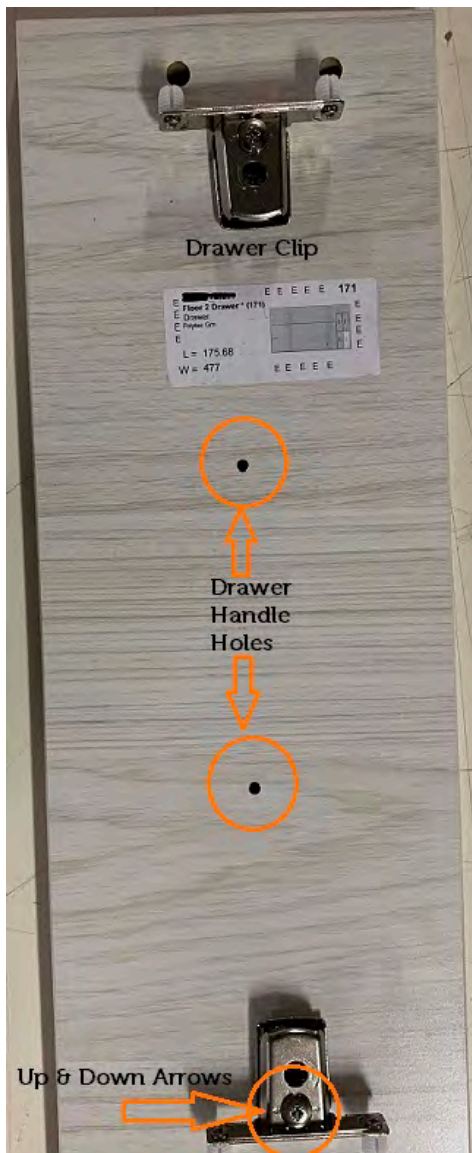


Image 12

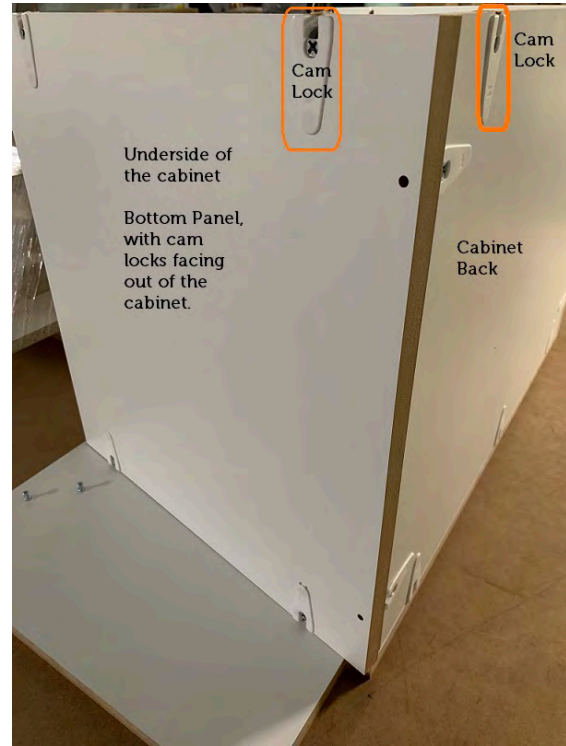


Image 14


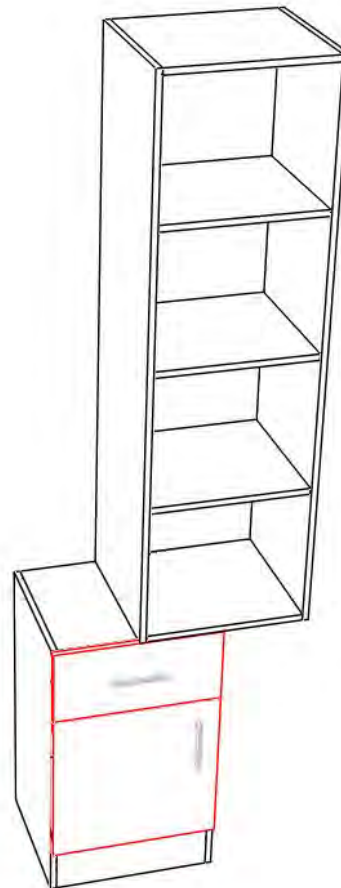


Image 13

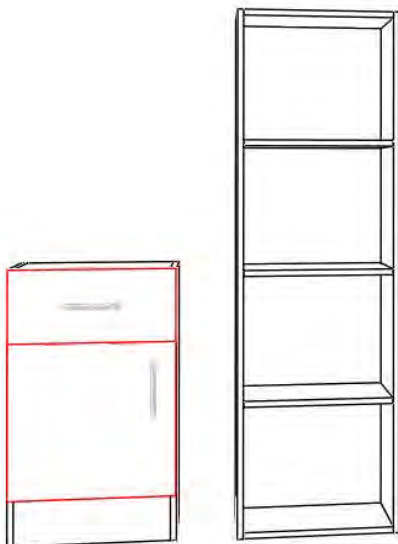

NOTE: Images 13 & 14 are a representation of how to place Top unit onto Lower unit. These images may not represent each individual product.