

# WALLBEDS



Australia

---

*Reclaim Your Space*



## **Important Safety Advice Sheet**

### **PLEASE READ BEFORE YOU BEGIN:**


- Please read and understand the instructions prior to assembly. Incorrect installation of this product could possibly result in personal injury or physical damage.
- WallBeds Australia recommends two people to safely assemble and install the wall bed - It is not recommended you try to install this bed on your own.
- The wall bed **MUST** be securely fastened to the wall prior to use. Failure to do so will cause the bed to tip over & may cause damage to the cabinet or serious personal injury.
- All additional cabinetry must be securely fasten to the Wall Bed cabinet.
- Whilst these products are DIY it is recommended the wall bed be installed by a qualified trades person if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by incorrect installation of this product.

### AB-4c Assembly Instructions


**Note:** If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels numbers.

**Panel Stickers/Labels** – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

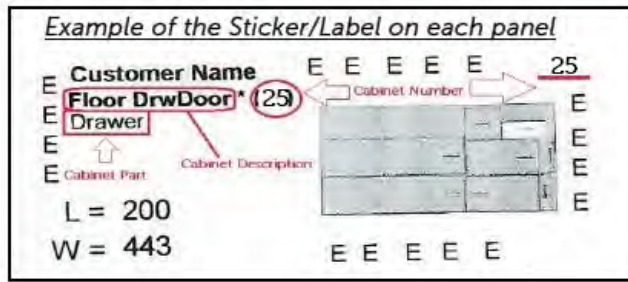

**Please Note:**  
Cabinet number shown is an example only.

### AB-4c Drawer Unit Panels

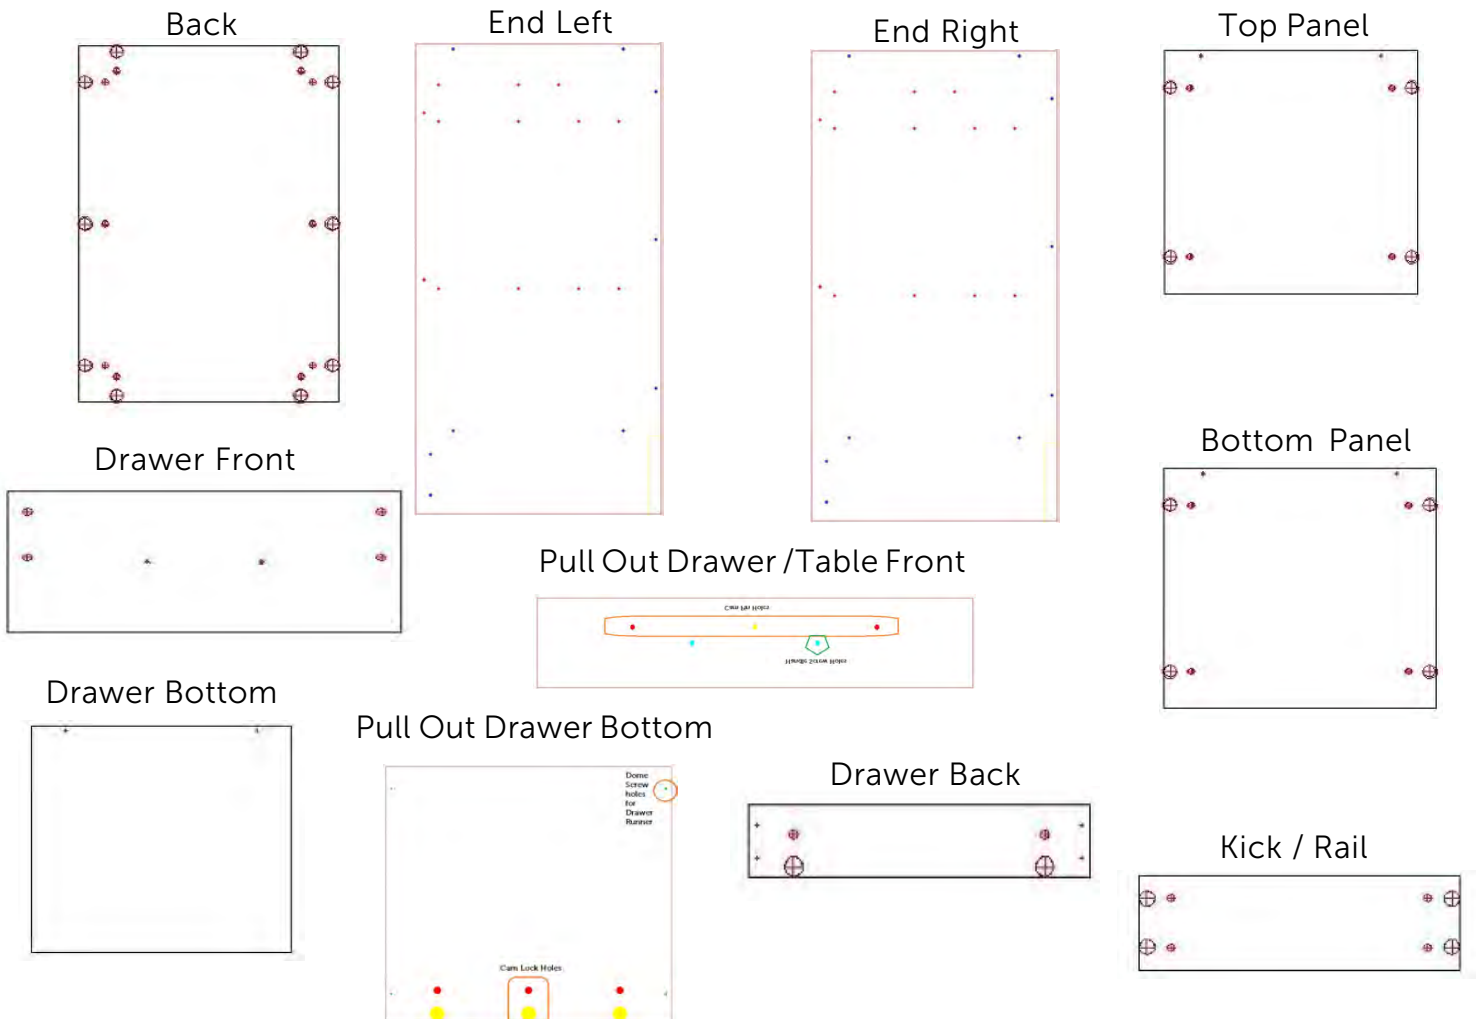

# AB-4c Drawer Unit Hardware

Small Handle



Pull Out Drawer / Table Runners



Drawer Clip



Handle Fixing Screw



Drawer Runners & Metal Drawer Sides



Cam Pin




Euro Screw



Cam Lock



Done Head Screw



28mm Wood Screw



## Step 1 – Inserting Drawer Unit Hardware


**Cam Locks** – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.




Back Panel



Bottom Panel

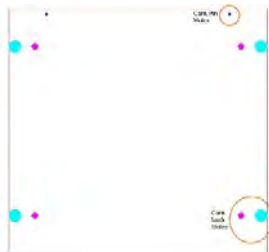

Top Panel

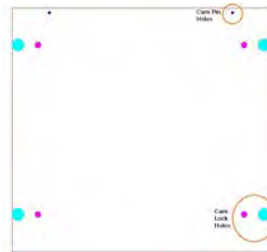


Drw Back




Rail / Kick



Pull Out Drawer / Table Bottom

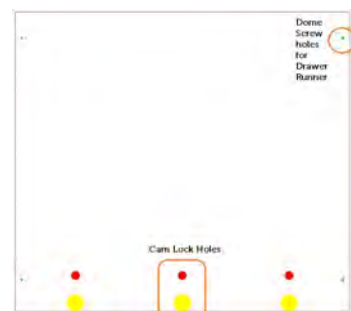

**Cam Pins** Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

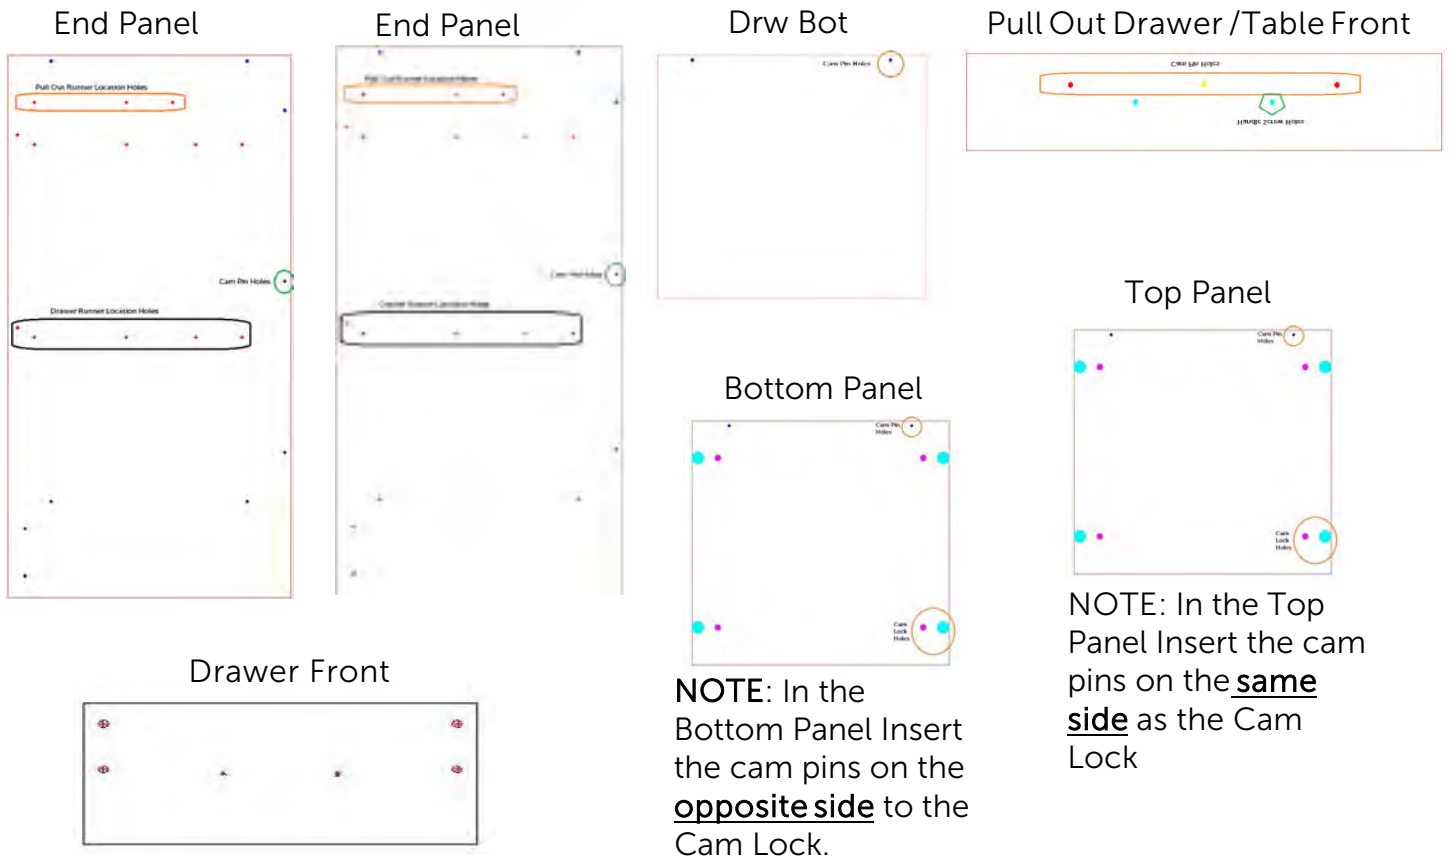

**Attach the runners prior to assembling the cabinetry.**

**Pull Out Drawer / Table Runners –**



Turn the runner over to view from the back. Detach the drawer slide from the main sliding runner by pulling the clip as indicated by the arrow on the clip. **Refer images 1&2 page 10.** Line up the three holes in the metal runner with the pre-drilled holes in the End Panel. Attach these runners using the Euro screws. **Refer to image 3 page 10.** Repeat for the remaining End Panel. DO NOT reinsert the drawer/table slide at this stage.

**Drawer Runners –**



Line up the holes in the metal runner with the pre-drilled holes in the End Panel. Attach these runners using the Euro screws. Do this for both End Panels- **Refer to images 5 & 6 page 11**

**Drawer Clips –**



Insert these into the drawer front, ensuring the up & down arrows on the drawer clips are facing the outside edge of the drawer panel. Fix these into the drawer front by tapping them in gently with a hammer - **Refer to image 15 page 12**

## Step 2 Ab-4c Drawer Unit Assembly

Start the cabinet assembly by using either one of the End Panels.

**Back Panel** - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

**Bottom Panel** - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel. *Refer to images 11&12 page 12*

**Top Panel** - With the cam locks facing the inside of the cabinet attach the bottom panel to the end panel and back panel. - Ensure the cam locks are facing the inside of the cabinet. *Refer to images 11 & 12 page 12*

**Kick / Rail Panel** - With the cam locks facing to the back of the cabinet attach the kick panel to the end panel.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

**Pull Out Drawer/Table** - Attach the Pullout Drawer/Table runners to the drawer/table panel using the dome head screws. The holes for these are pre-drilled. *Refer to image 4 page 10*

**Pull Out Drawer/Table Front** - Attach the Pull-Out Drawer/Table to the front panel by tightening the cam pins into the cam locks. *Refer to image 9 page 11*

### Metal Side Drawer Assembly

Note – There are no guide holes on the underside of the drawer bottom panel for the metal drawer sides. The dome head screws supplied do not require these holes to be pre-drilled.

**Drawer Back Panel to Drawer Bottom Panel** - With the cam locks facing the back attach the drawer bottom panel to the drawer back panel. Tighten cam locks to cam pins. *Refer to image 7 page 11*

**Metal Drawer sides** - Attach the metal drawer sides to the drawer bottom and drawer back panels using the dome head screws. *Refer to image 8 page 11*. Place assembled drawer into the drawer unit.

**DO NOT ATTACH DRAWER FRONTS UNLESS THE DRAWERS ARE IN THE CABINET.**

**Attaching Drawer Fronts** – To ensure the drawer front is the correct way up. Place drawer front on to the drawer clips -DO NOT PUSH DRAWER FRONT FULLY ONTO THE DRAWER CLIPS. *Refer to images 13 & 14 page 12*

Starting with the top drawer, gently close the drawer ensuring the top edge of the drawer is level with the top panel or drawer front above. If the drawer front is higher than the panel, remove it from the drawer clips and turn the drawer front up the opposite way.


Double-check the drawer front is now level with the cabinet top panel.

Once the drawer front is the correct way up, push the drawer front into the metal sides of the drawer until you hear the drawer click into place on both sides. Tighten the screws on the outside of the drawer clips using a Phillips head hand screwdriver. *Refer to images 19 & 20 page 12*

# AB-4c Upper Cabinet Assembly Instructions

**Note:** If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


**Panel Stickers/Labels** – Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

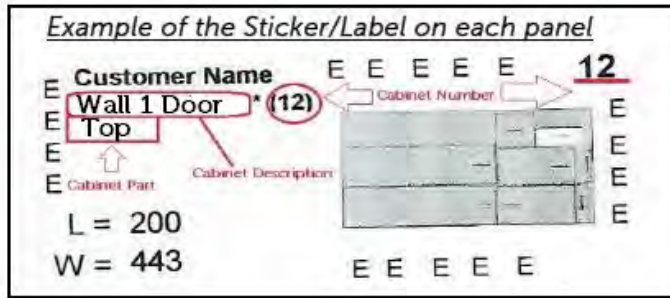


**Please Note:**  
 Cabinet number shown is an example only.

## AB-4c Cabinetry Panels

End Left

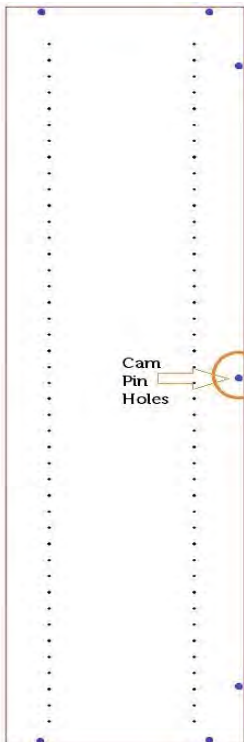


End Right

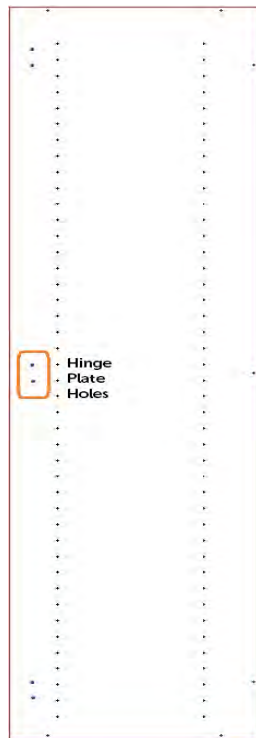


Door Panel




Back Panel

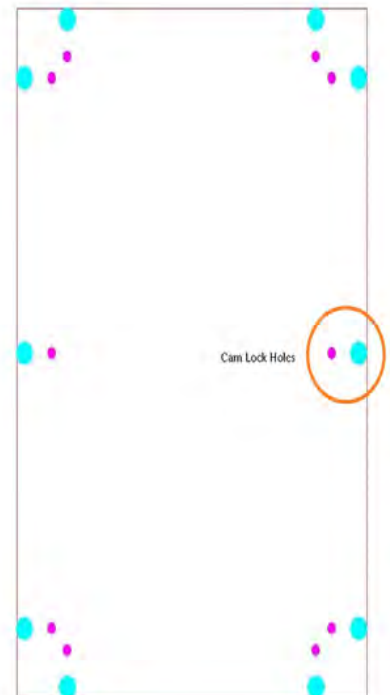


Top Panel

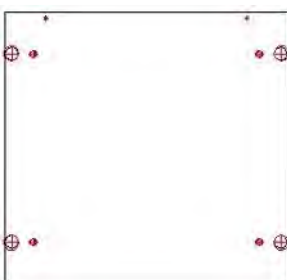

Bottom Panel

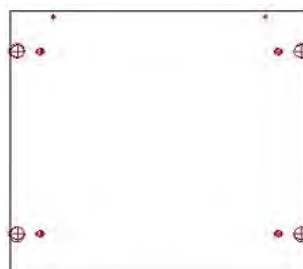

Adjustable Shelf

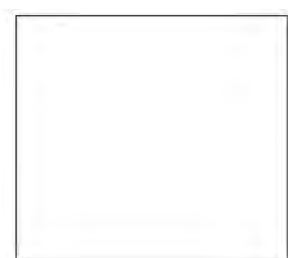

# AB-4c Cabinet Hardware Parts

Cam Lock



Cam Pin



Small Handle



Handle Fixing Screw



Shelf Pin



Door Hinge Clip



Door Hinge





28mm Wood Screw







## Step 1 – Inserting Cabinetry Hardware

**Cam Locks** – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

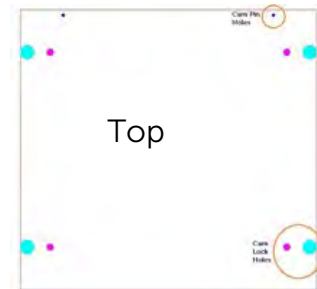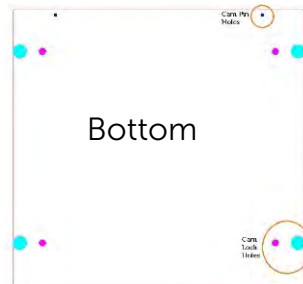

**Cam Pins** Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

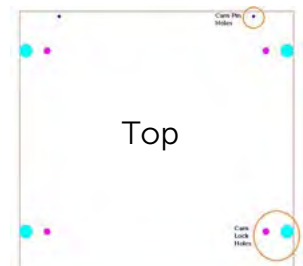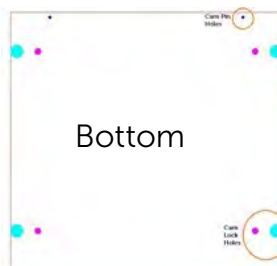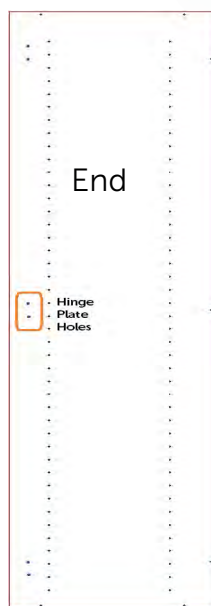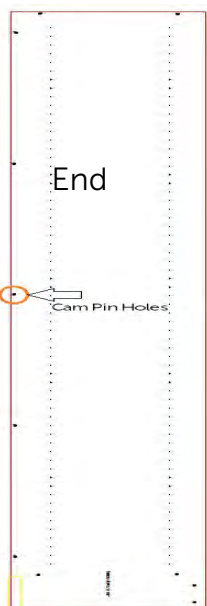

*NOTE: In both the Top and Bottom Panels Insert the cam pins on the opposite side to the Cam Lock.*

## DoorHinge Clips –



### Attach the Hinge Plates before assembling the cabinetry.

With the arrow indicator on the hinge block facing to the front edge of the panel. Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws. *Refer to image 10 page 10*

## **Step 2 – Cabinet Assembly**

Start the cabinetry assembly by using either one of the End Panels

**Back Panel** - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the end panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Phillips head hand screwdriver.

**Bottom & Top Panels** - With the cam locks facing away from the inside of the cabinet attach the bottom & top panels to the back panel. *Refer to images 11 & 12 page 11*

Place the remaining end panel over the above assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

- **Note:** *You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are located. Failure to do so may result in damage to the End Panel.*

## **Step 3 – Placing both Units to the Alpha Wall Bed**

Place the Drawer unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawers are flush with the front edge of the wall bed cabinet.

**Prior to attaching the door panel.** Place the upper cabinet on top of the Drawer Unit and line up the front edge of the bottom panel with the front of the drawer on the Drawer unit.

- **NOTE:** *This will leave the Front Edge of the End Panel of this cabinet approximately 18mm back from the Front Edge of the wall bed End Panel. This will allow for the Door Panel to be flush with the wall bed End Panel.*

## **Step 4 – Attaching the Drawer Unit to the Upper Cabinet and WallBed**

**Caution:** *Do Not over tighten the wood screws into the side of the wall bed End Panel or bottom of the top cabinet as it may end up protruding through the opposite side of the panel.*

**Attaching the Drawer Unit to the Upper Cabinet** - Remove the drawer, pre-drill a 5mm hole screw up through the top panel of the drawer unit into the base of the upper Cabinet. Attach the two units together using the 28mm screws supplied.



### Cupboard Door Hinges –



Place the cup part of the hinge into the cupboard door panel, ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. There are no screws required to attach these hinges.

### Attaching the door handle



Place the handle over the pre-drilled holes in the door panel. Insert the handle screws through the pre-drilled holes in the door panel and tighten using a Phillips head screw driver.

Attaching the Door to the Cabinet - Clip the hinge arm into the hinge block previously attached to the bookcase.

Attaching the Cabinet to your wall bed - Check that the cabinet door panel is flush with the front edge of the wall bed End Panel. Using existing shelf pin holes (2 up towards the top and 2 at the bottom) attach the bookshelf to the side of the bed cabinet by using the 28mm wood screws supplied.

Cover the screw heads using the stick on Fast-caps.

*Caution: Do Not over tighten the wood screws into the side of the wall bed End Panel as it may end up protruding through the opposite side of the panel.*

Adjustable Shelf - Insert the shelf pins into the shelf pin holes at the desired height for your shelf. Place your shelf on them. If you find it's too high or too low for the books you want to store, it's an easy matter to adjust the shelf by moving the supports to the holes at the required height.

## **IMPORTANT SAFETY INFORMATION**

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

### **Removing Panel Stickers/Labels**

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

Image 1



Image 2

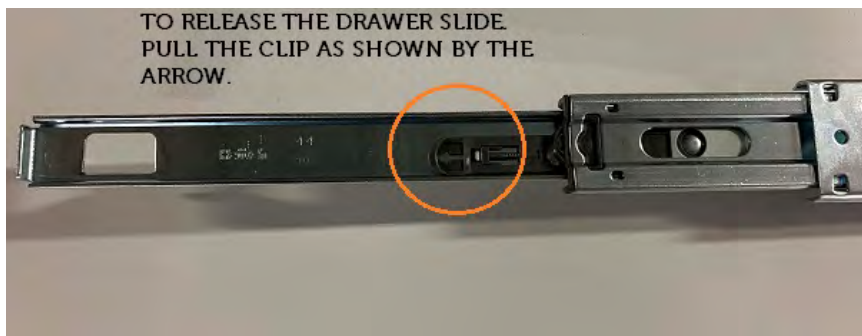


Image 3



Image 4

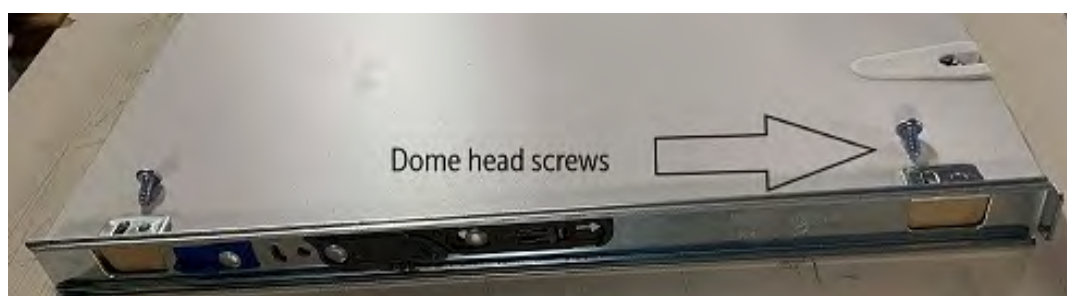


Image 5



Image 6

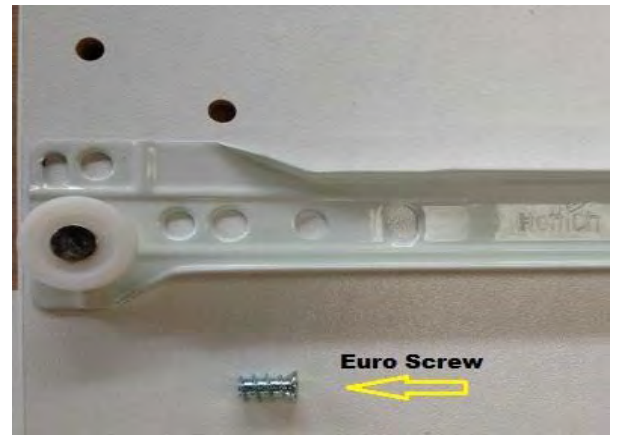


Image 7



Image 8

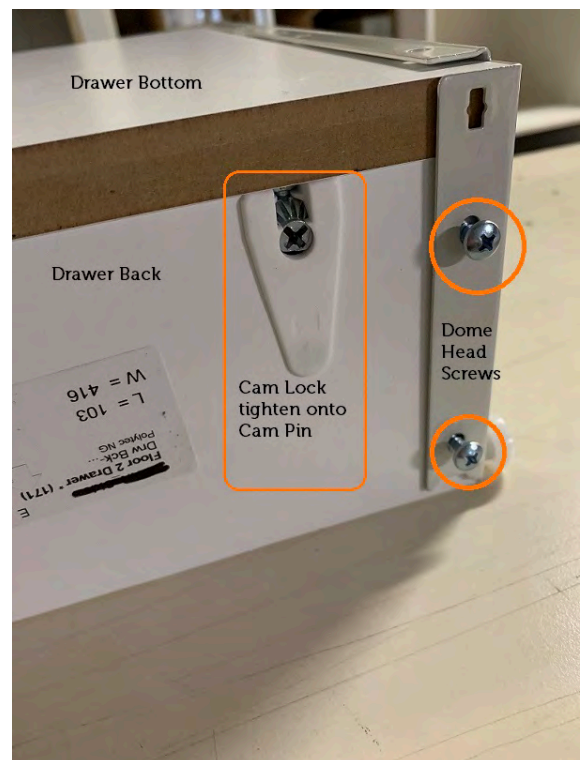


Image 9

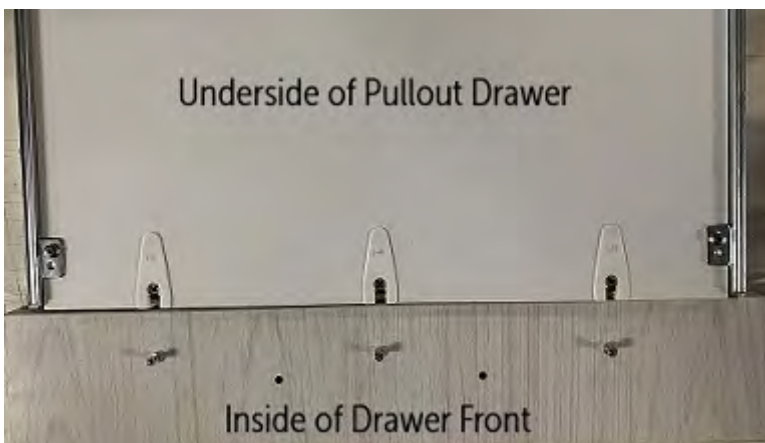


Image 10

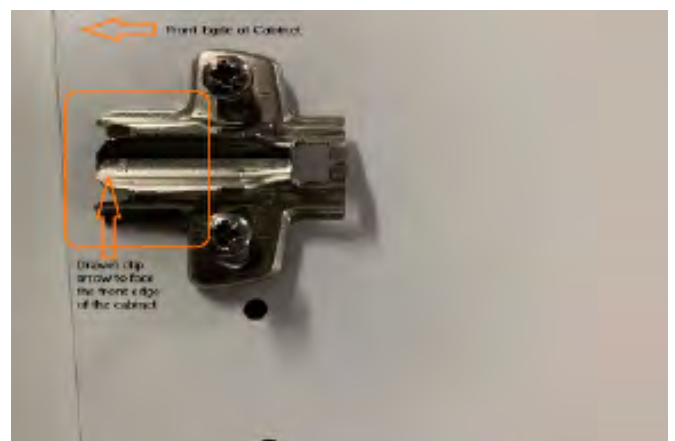


Image 11

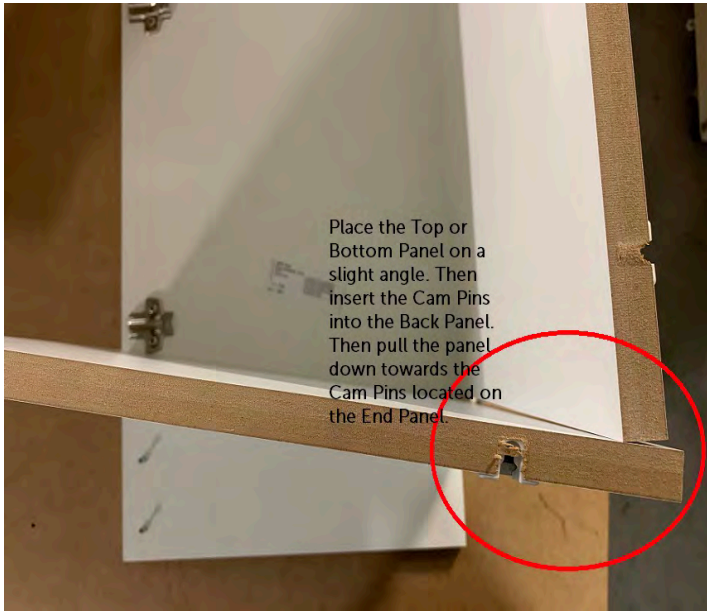


Image 12

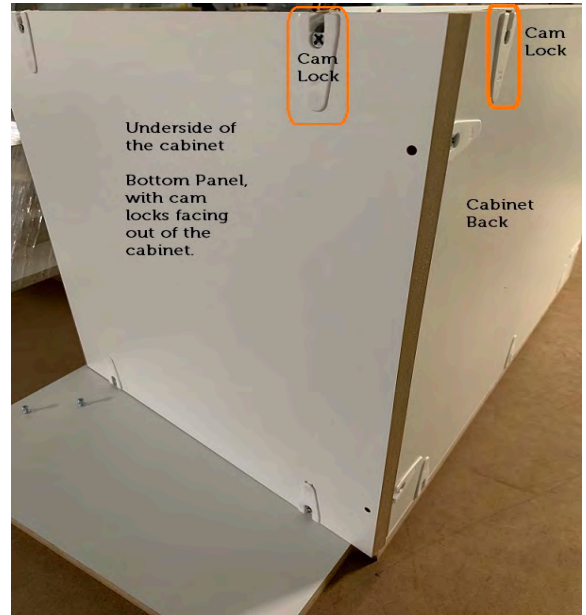


Image 13

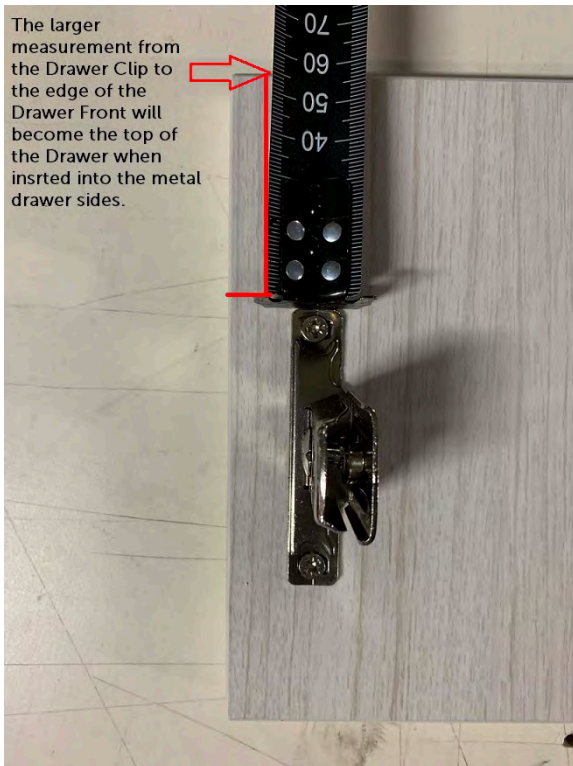


Image 14

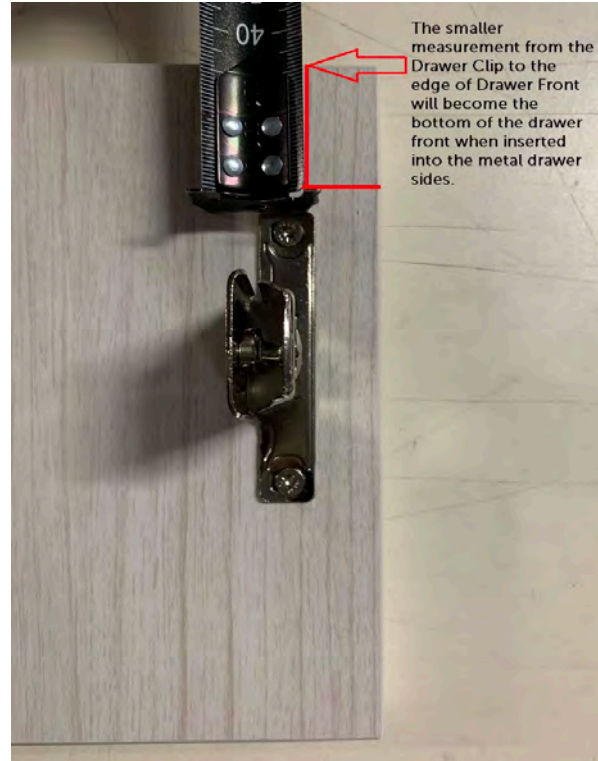


Image 15



Image 16

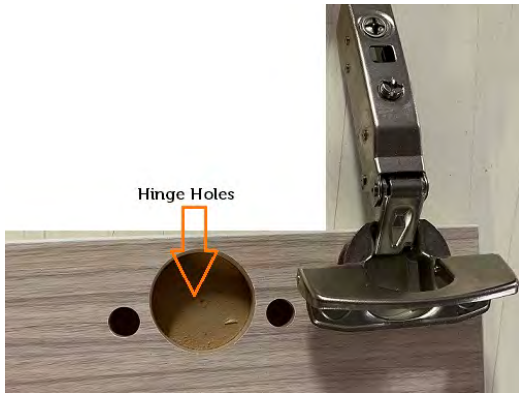


Image 17



Image 18

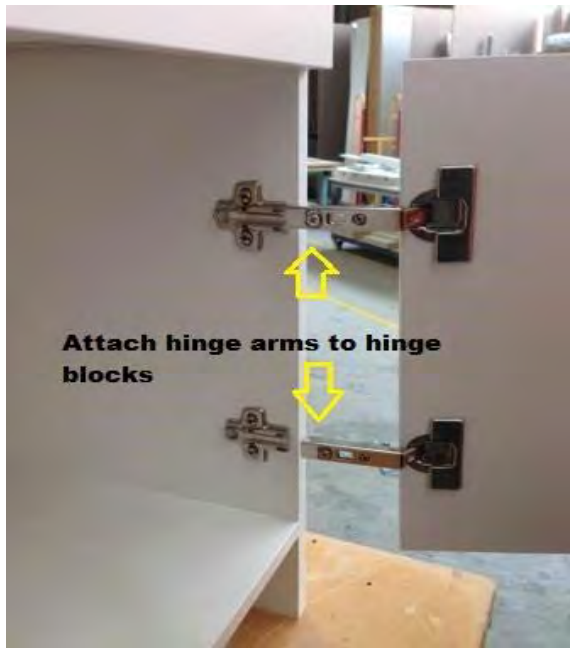


Image 19



Image 20





Image 21



Image 22



Image 23

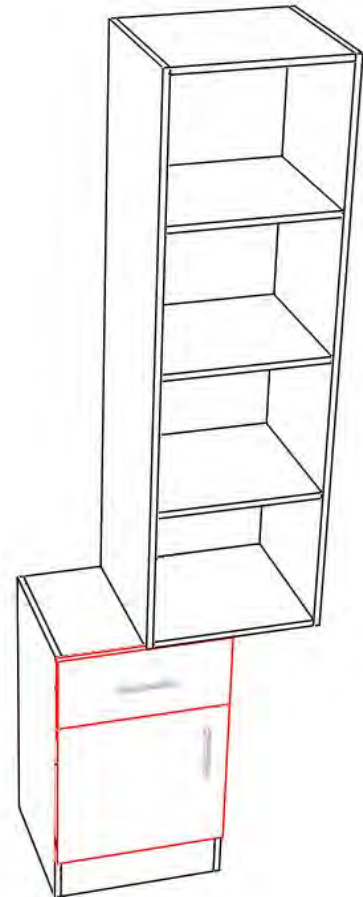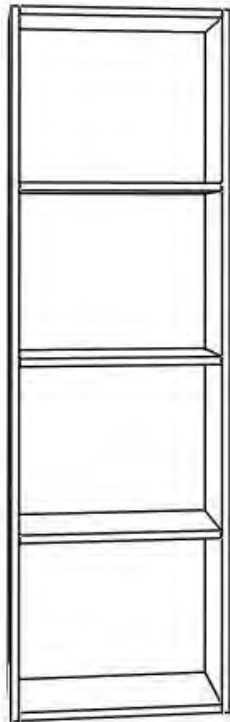

**NOTE:** Images 22 & 23 are a representation of how to place Top unit onto Lower unit. These images may not represent each individual product.

### **IMPORTANT SAFETY INFORMATION**

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

**WALLBEDS**  
Australia  
*Reclaim Your Space*