

WALLBEDS



Australia

Reclaim Your Space



Important Safety Advice Sheet

PLEASE READ BEFORE YOU BEGIN:


- Please read and understand the instructions prior to assembly. Incorrect installation of this product could possibly result in personal injury or physical damage.
- WallBeds Australia recommends two people to safely assemble and install the wall bed - It is not recommended you try to install this bed on your own.
- The wall bed **MUST** be securely fastened to the wall. Failure to do so will cause the bed to tip over & may cause damage to the cabinet or serious personal injury.
- All additional cabinetry must be securely fasten to the Wall Bed cabinet.
- Whilst these products are DIY it is recommended the wall bed be installed by a qualified trades person if you are not comfortable with the installation of this product.

WallBeds Australia is not responsible for any damages or injuries incurred by incorrect installation of this product.

AB-6 Cupboard & Drawer Assembly Instructions


Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.

Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.

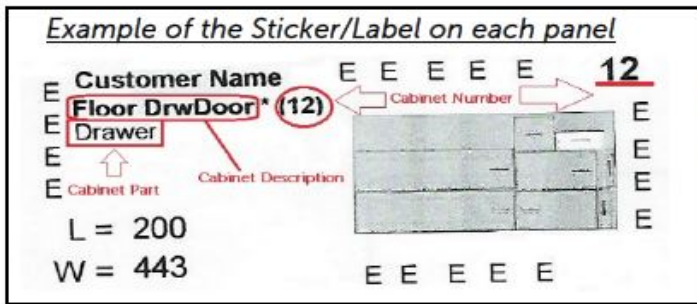

*Please Note:
Cabinet number shown is an example only.*

AB-6 Pull Out / Drawer Table Cabinetry Panels

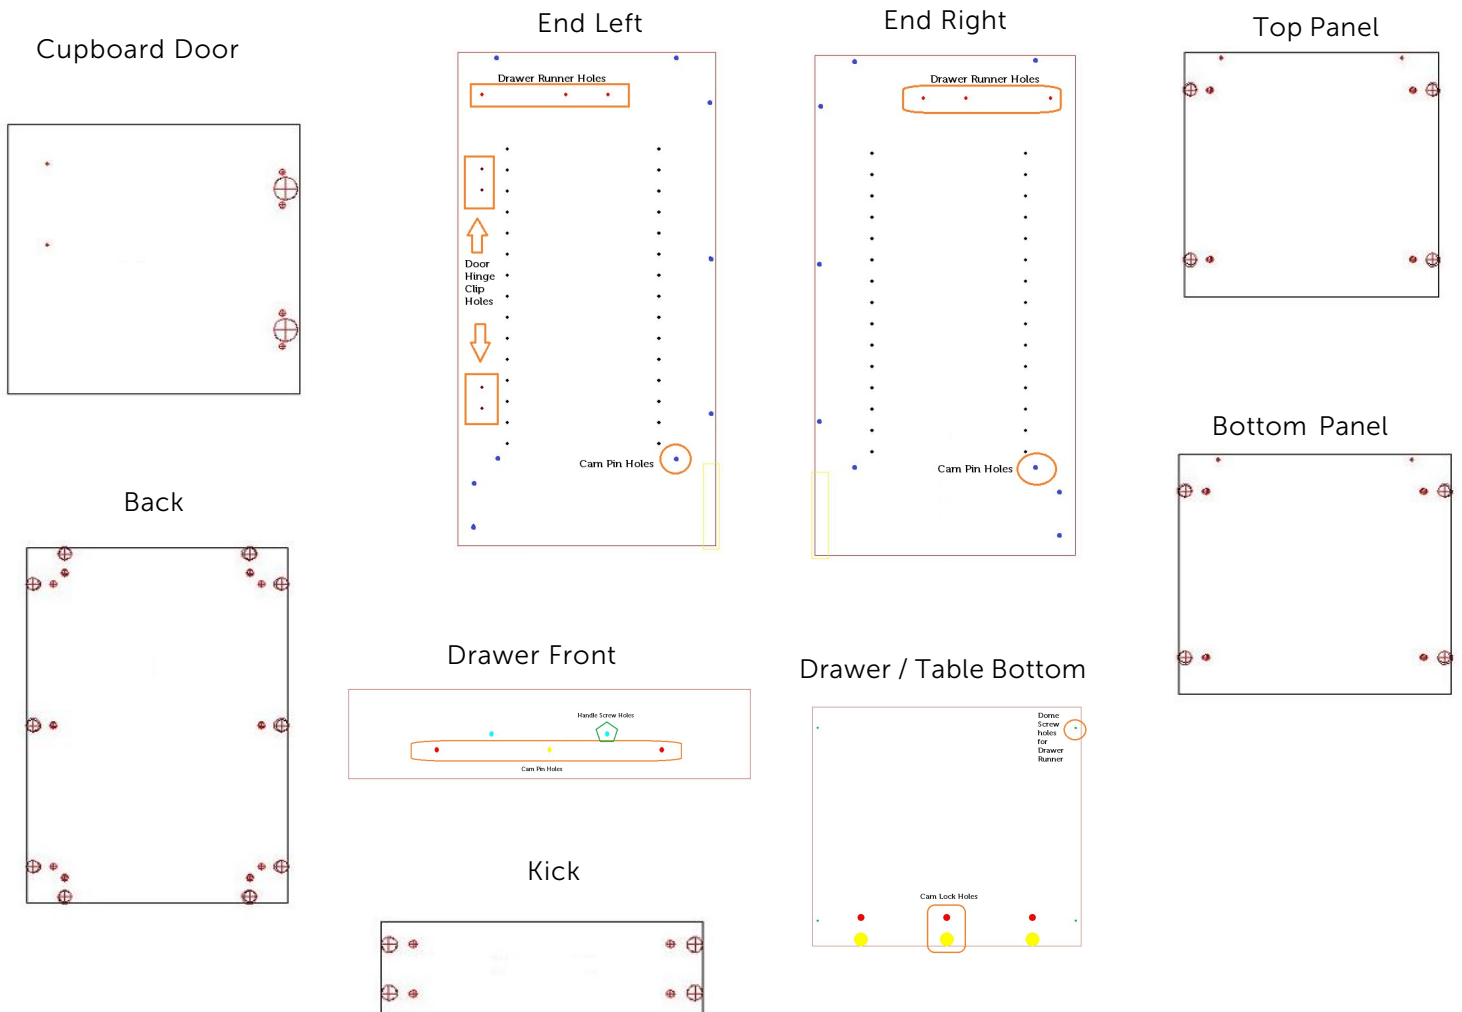

AB-6 Hardware Parts

Small Handle



Pull Out Drawer/Table Runners



Drawer Clip



Handle Fixing Screw



Door Hinge



Door Hinge Clip



Euro Screw



Cam Lock



Cam Pin



Done Head Screw







28mm Wood Screw





Step 1 – Inserting Cabinetry Hardware


Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

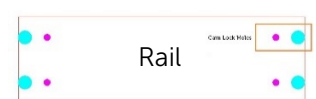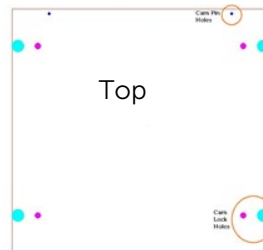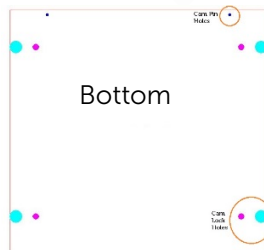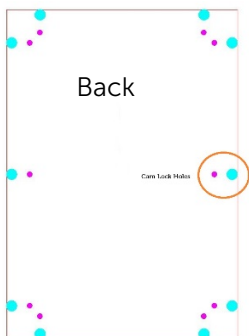


Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.

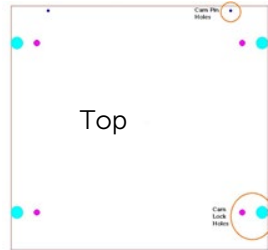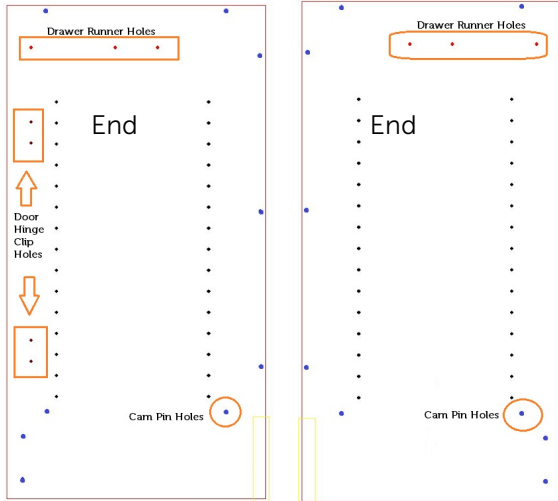

NOTE: In the Top Panel Insert the cam pins on the **same side** as the Cam Lock

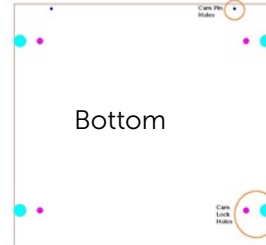

NOTE: In the Bottom Panel Insert the cam pins on the **opposite side** to the Cam Lock.

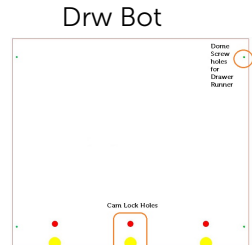

Pull Out Drawer / Table Runners –

Attach the runners before assembling the cabinetry.



Turn the drawer runner over to view from the back.

- Detach the drawer slide from the main sliding runner by pulling the clip as indicated by the arrow on the clip. Line up the three holes in the metal runner with the pre-drilled holes in the End Panel. Attach these runners using the Euro screws. *Do this for both End Panels DO NOT re-insert the drawer slide at this stage. Refer to images 1 & 2 page 9*

Door Hinge Clips –

Attach the Hinge Clips before assembling the cabinetry.



With the arrow indicator on the hinge block facing to the front edge of the panel.

- Line up the Hinge Plate with the pre-drilled holes in the End Panel. Fix these by tapping them in gently with a hammer, then tightening the screws. *Refer to image 6 page 10*

Drawer Clips –



Insert these into the drawer front ensuring the up & down arrows on the drawer clips are facing the outside edge of the drawer panel. Fix these into the drawer front by tapping them in gently with a hammer. *Refer to image 10 page 10*

Cupboard Door Hinges –



Place the cup part of the hinge into the cupboard door panel ensuring that the arm of the hinge is facing out of the door panel. Once in the position close the hinge flap, this will secure them into place. *There are no screws required to attach these hinges. Refer to images 4 & 5 page 5*

Step 2 – Cupboard & Pullout Drawer / Table Cabinet Assembly

Start the cabinet assembly by using either one of the cabinet End Panels.

Cabinet Back Panel - Ensuring the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Philips head hand screwdriver.

Cabinet Bottom Panel - With the cam locks facing away from the inside of the cabinet attach the bottom panel to the end panel and back panel. *Refer to image 7 page 10*

Cabinet Top Panel - With the cam locks facing the inside of the cabinet attach the top panel to the end panel and back panel. - It is essential that the cam locks are facing the inside of the cabinet.

Cabinet Kick/Rail - With the cam locks facing to the back of the cabinet attach the kick panel to the end panel.

Place the remaining end panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Pull Out Drawer / Table - Using the dome head screws, attach the pullout drawer/table runners to the drawer/table panel. The holes for these are pre-drilled. *Refer to image 3 page 9*

Pull Out Drawer / Table Front - *Attach the Pull Out Drawer / Table to the front panel by tightening the cam pins into the cam locks.*

Cupboard Door - With the hinge arms facing into the cabinet line up the prongs on the door hinges with the hinge clips. Push the door so these clips are all the way in and then push the back of the hinge arm until you hear it click into position. *Refer to image 8 page 10*

Place the Cupboard & Drawer unit next to the side of the Alpha Wallbed that it will be attached to. Ensure the front edge of the drawer & cupboard is flush with the front edge of the wall bed cabinet.

Attaching the handles



Place the handle over the pre-drilled holes in the door and drawer fronts panels. Insert the handle screws through the pre-drilled holes in the door panel and tighten using a Phillips head screw driver.

AB-6 Bookcase Assembly Instructions

Note: If you have two of the same cabinet each cabinet will have a different cabinet number. Prior to assembly, separate and group all matching panels panel numbers.


Panel Stickers/Labels –Do not remove any cabinet stickers from the panels until the units have been built, as these will assist with assembly. Most of the stickers are placed on the “back” or underside of the cabinet and will not be seen once assembled.




Please Note:
 Cabinet number shown is an example only.

AB-6 Bookcase Cabinetry Panels


End Left

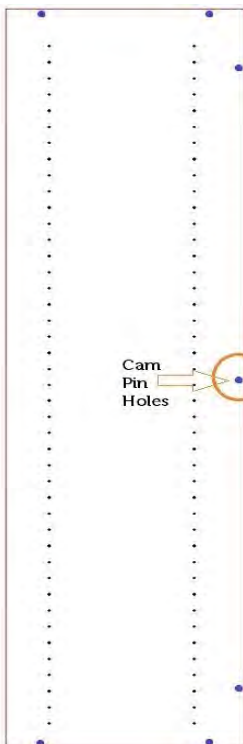


End Right

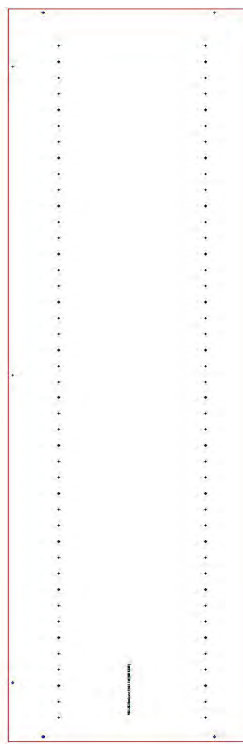


Back Panel

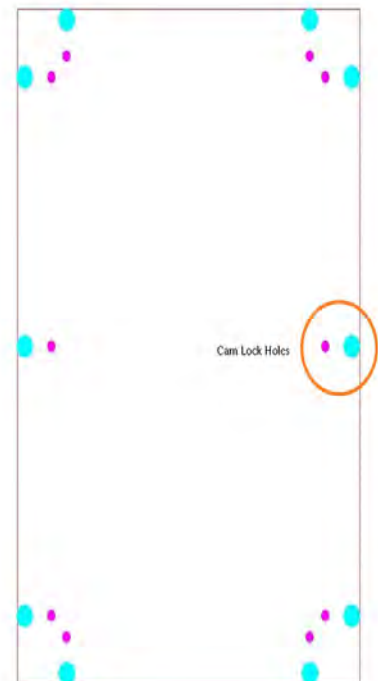

Top Panel

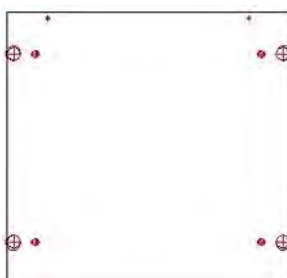

Bottom Panel

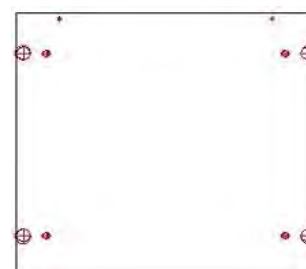


Step 1 – Inserting Bookcase Cabinetry Hardware


Cam Locks – Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.




Back Panel

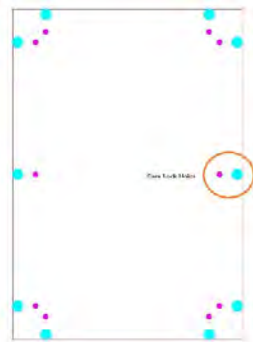

Bottom Panel

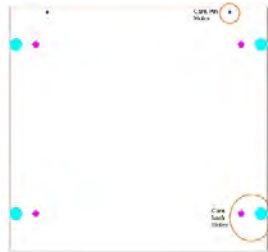


Top Panel

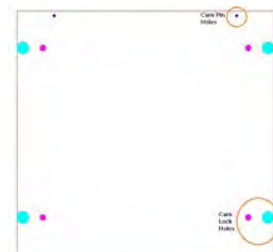


Cam Pins Insert all Cam Locks into the following panels as described by the cabinet part located on the cabinet sticker.



End Panel

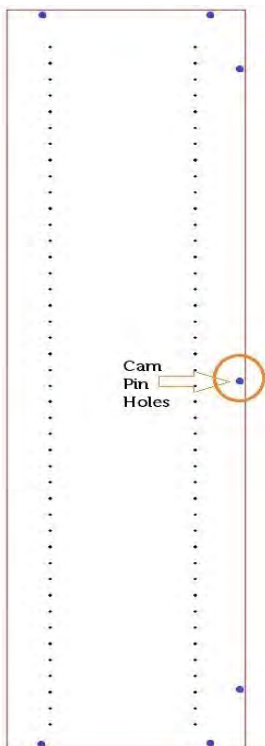

End Panel

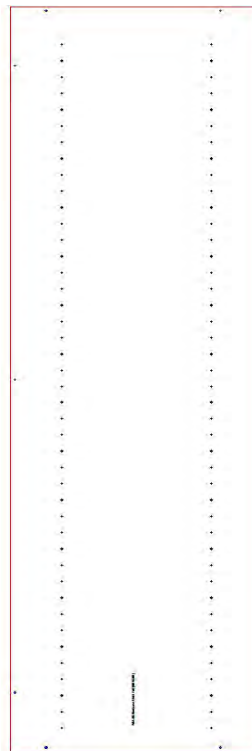


Bottom Panel



NOTE: In the Bottom Panel Insert the cam pins on the opposite side to the Cam Lock.

Top Panel

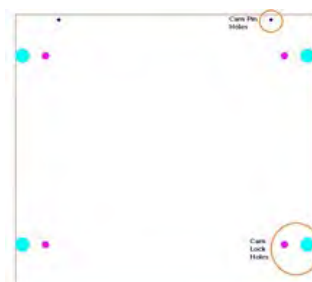

NOTE: In the Top Panel Insert the cam pins on the opposite side as the Cam Lock

Step 2 – Bookcase Cabinet Assembly

Start the cabinet assembly by using either one of the cabinet End Panels.

Back Panel - With the cam locks are facing away from the inside. Place the cabinet back panel onto the side panel. Match up the cam locks with the cam pins. Tighten the cam locks and cam pins together by using a Philips head hand screwdriver.

Top & Bottom Panels - With the cam locks facing away from the inside of the Bookcase attach the Bottom Panel to the End Panel and Back Panel. Repeat this process with the Top Panel.

Place the remaining End Panel on top of the previously assembled panels. Ensuring the cam pins are lined up with the cam locks. Tighten the cam pins to the cam locks.

Tip: You may need to lightly tap the cam pins into the cam locks with a rubber mallet. Ensure you do this where the cam pins are. Failure to do so may result in damage to the End Panel.

Step 3 – Fixing both Units together and to the Wall Bed

- Place the bookshelf unit on top of the drawer cabinet unit and line up the front of the bookcase bottom panel with the front edge of the drawer. *Refer to images 13 & 14 page 11*
- Check that the bookshelf end panel is also flush with the front edge of the wall bed cabinet end panel.

IMPORTANT: Use caution not to go all the way through the opposite sides of the panels when drilling the pilot holes for the 28mm wood screws.

Do Not over tighten the wood screws into the side of the wall bed End Panel or bottom of the top cabinet as it may end up protruding through the opposite side of the panel.

Attaching the Cabinet to the WallBed -Using an existing shelf pin hole, re-drill a 5mm pilot to fix the bookshelf to the side of the wall bed cabinet by using the 28mm wood screws supplied. Do two towards the top and two towards the bottom of the unit.

Attaching the Cupboard & Drawer to the Cabinet -Remove the drawer & pre-drill a 5mm pilot hole up through the top panel of the drawer unit into the bottom panel of the bookshelf. Do one towards the front and then one towards the back of the unit. Attach together using the 28mm screws supplied.

Insert the shelf pins into the shelf pin holes at the desired height for your shelves. If you find it's too high or too low, adjust the shelf by moving the supports to the holes at the required height.

Removing Panel Stickers/Labels

To remove once installed, heat up with hair dryer & then to remove any sticky residue use wax and grease remover or similar.

Avoid using a razor blade as you may damage the cabinetry.

IMPORTANT SAFETY INFORMATION

All WallBeds Australia Bookcases and Cabinets must be securely attached to the WallBed before use. Ensure that children DO NOT climb or hang on any part of the Bookcase or Cabinet.

Failure to do so may result in personal injury.

Image 1



Image 2

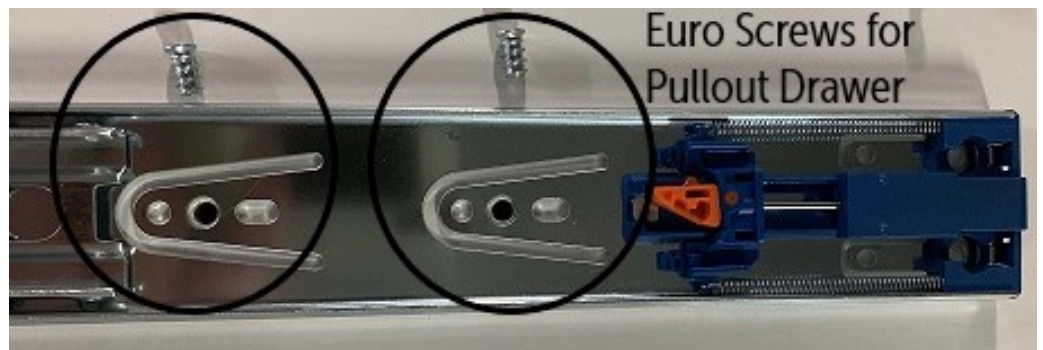


Image 3

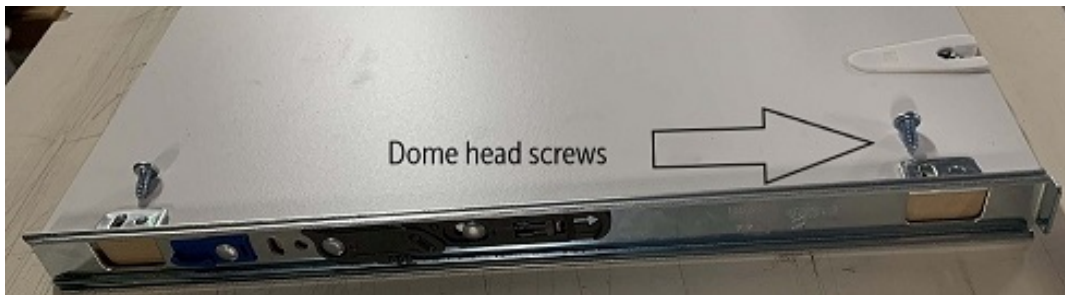


Image 4

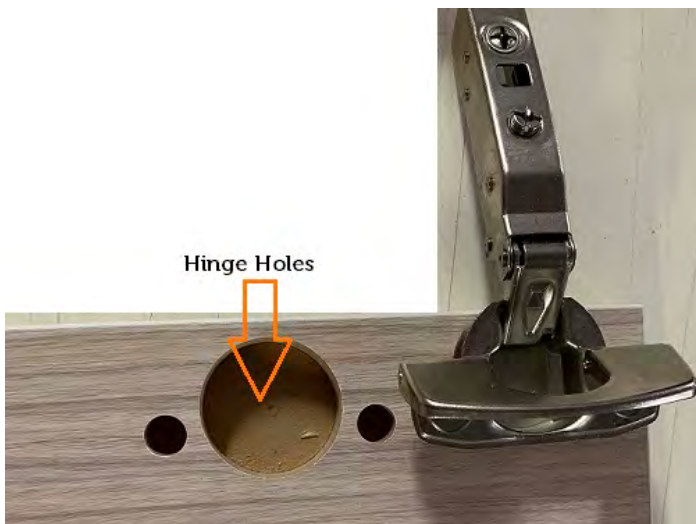


Image 5



Image 6

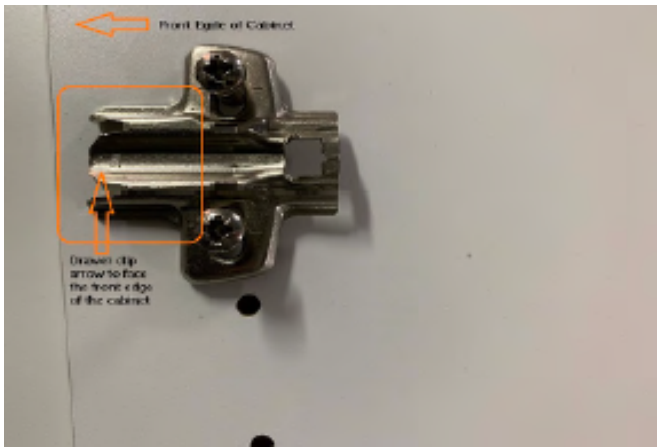


Image 7

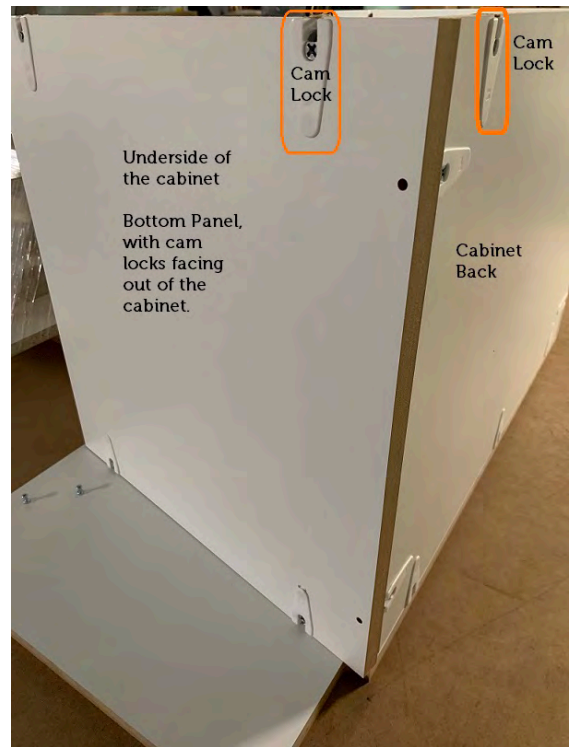


Image 8

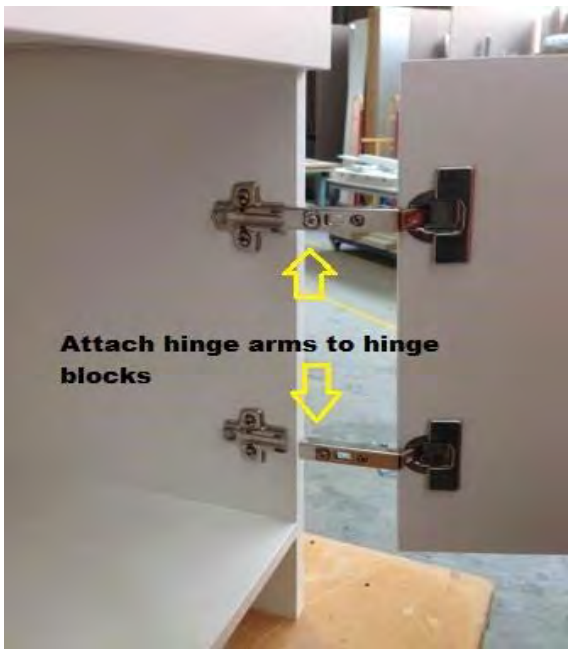


Image 10

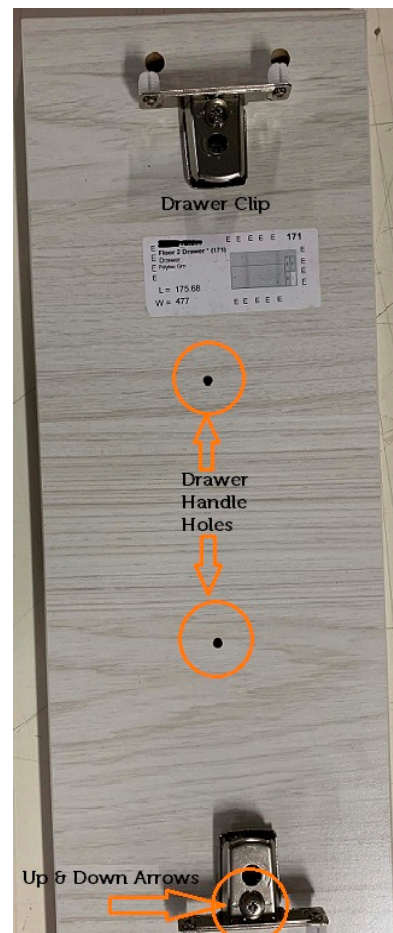


Image 9

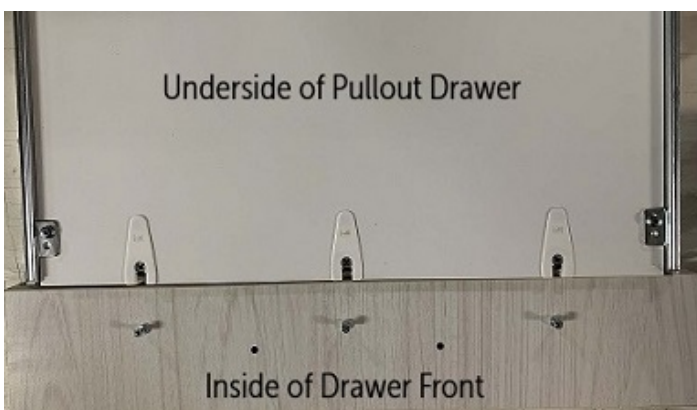


Image 11



Image 12



Image 13


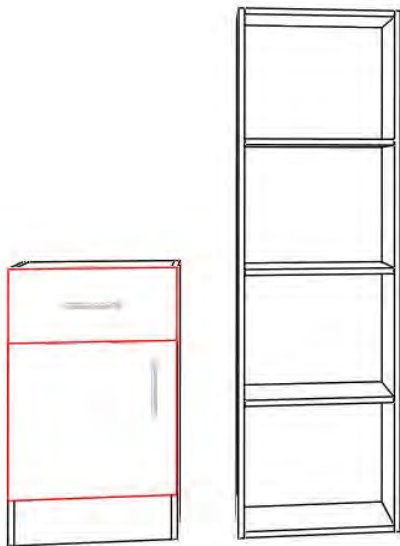


Image 14

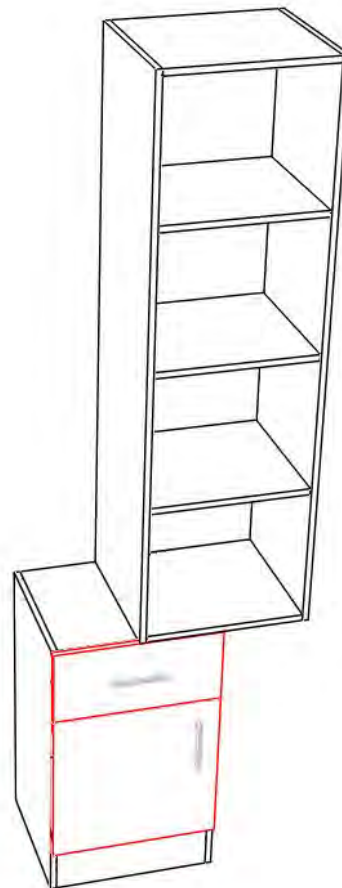

NOTE: Image 12 and 13 demonstrate how to place the Top unit onto Lower unit. These images may not represent each individual product.