
The Dream Vanity Instructions Sheet

Klaxtinel x Valyou


VALYOU

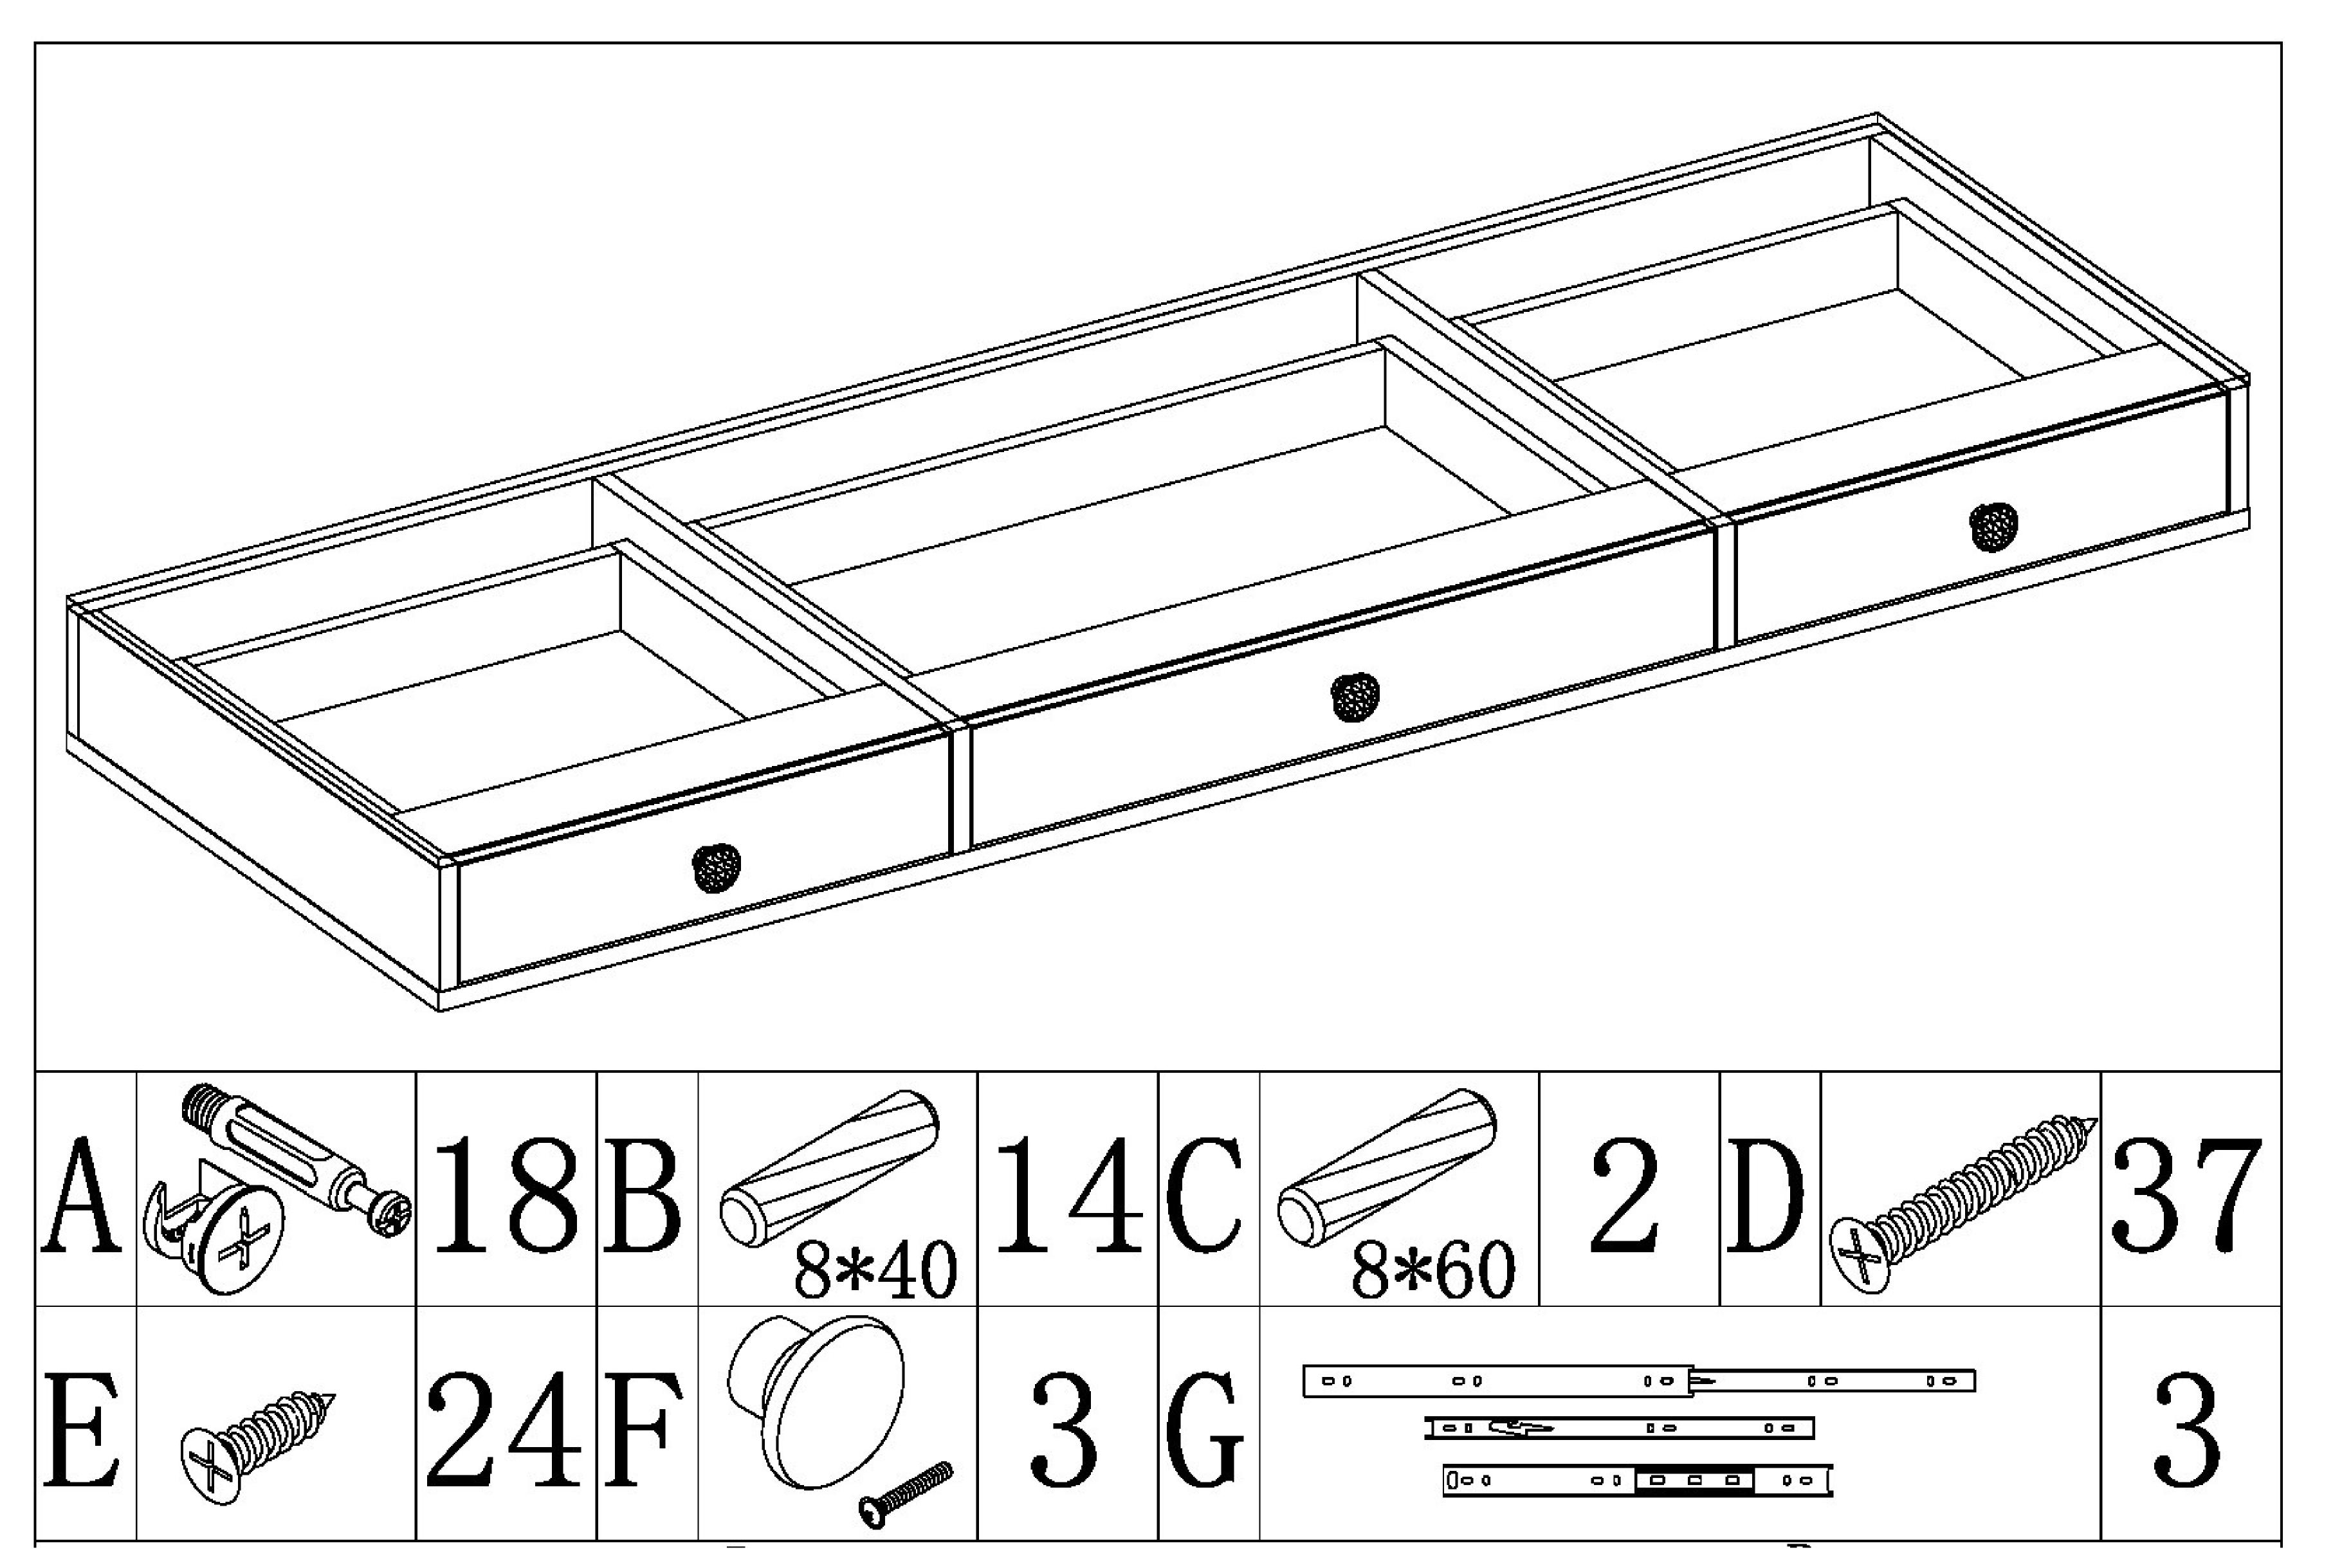


Top Vanity Table Instructions

Step one: On a comfortable area take out all parts from the box and organize them in front of you.

This will make the process so much easier! You will see different bags of screws and wood panels. They are all numbered and marked. Organize them the way you like and how it will be the easiest for you to remember!

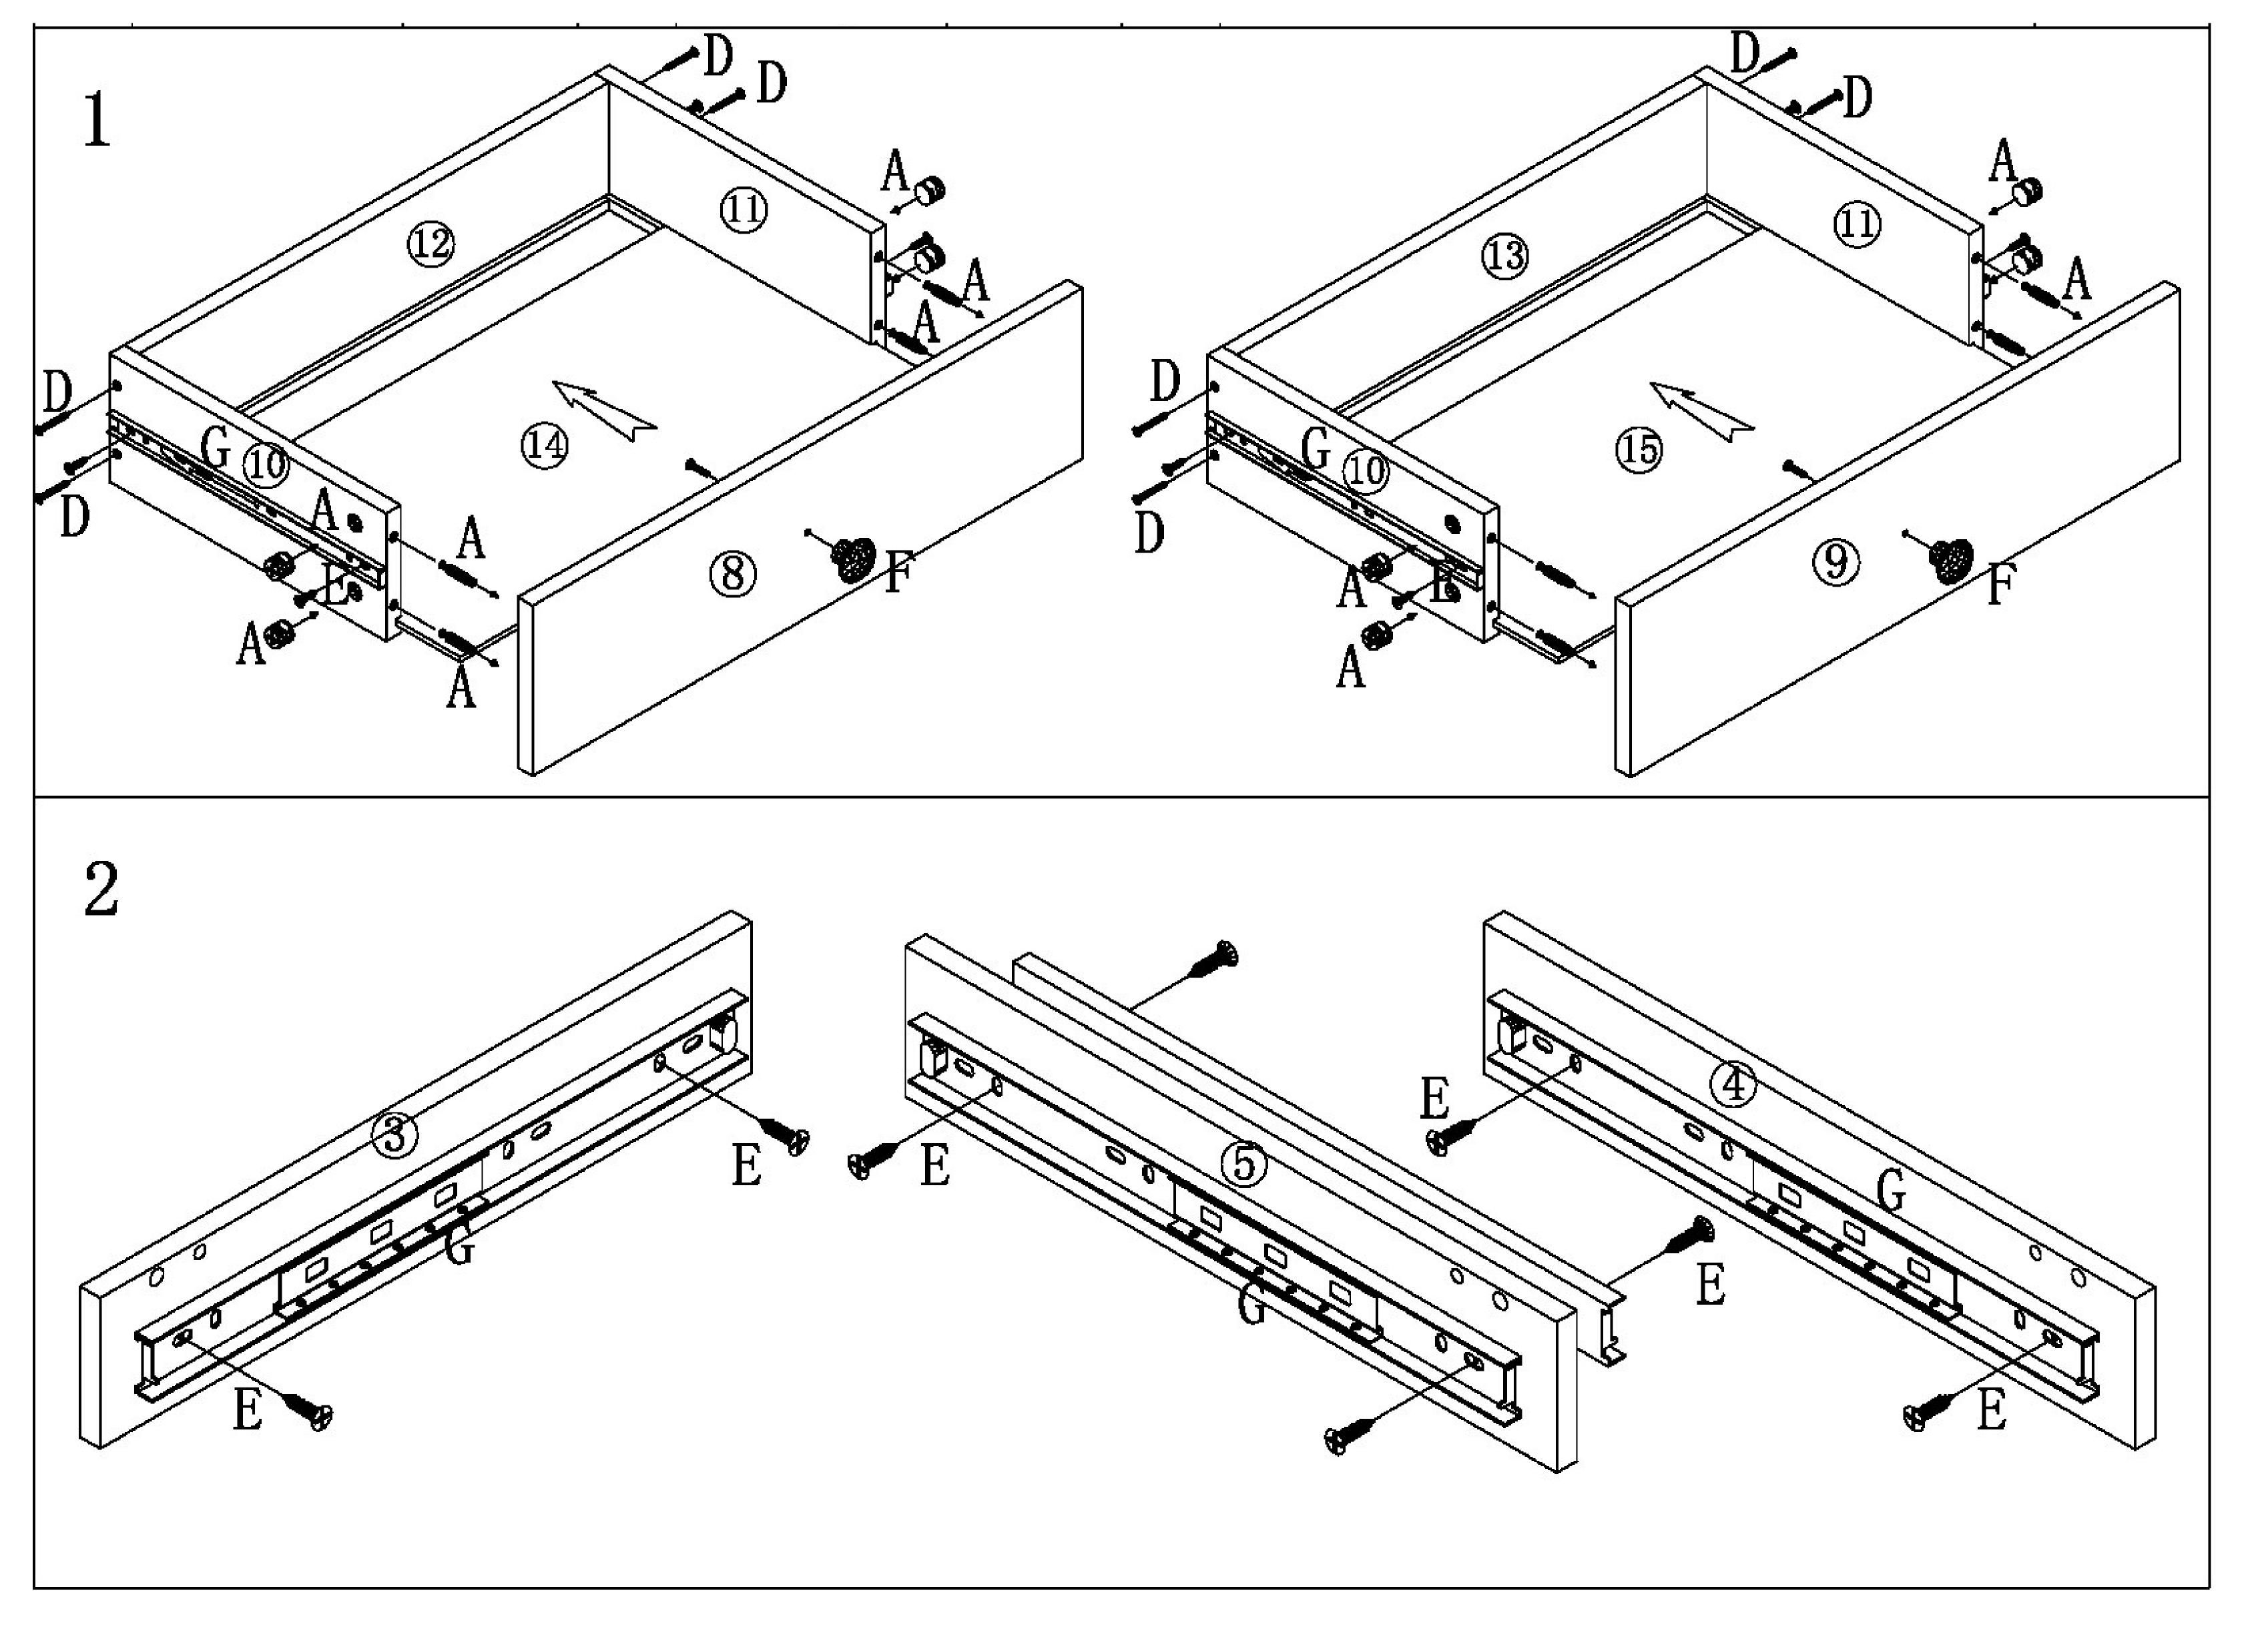

Step Two: I believe that you should start with the hardest part, then everything will seem easy. That's why we will start from building the drawers. Every drawer is assembled the same way. So once you get the hang of it, you can do the rest!

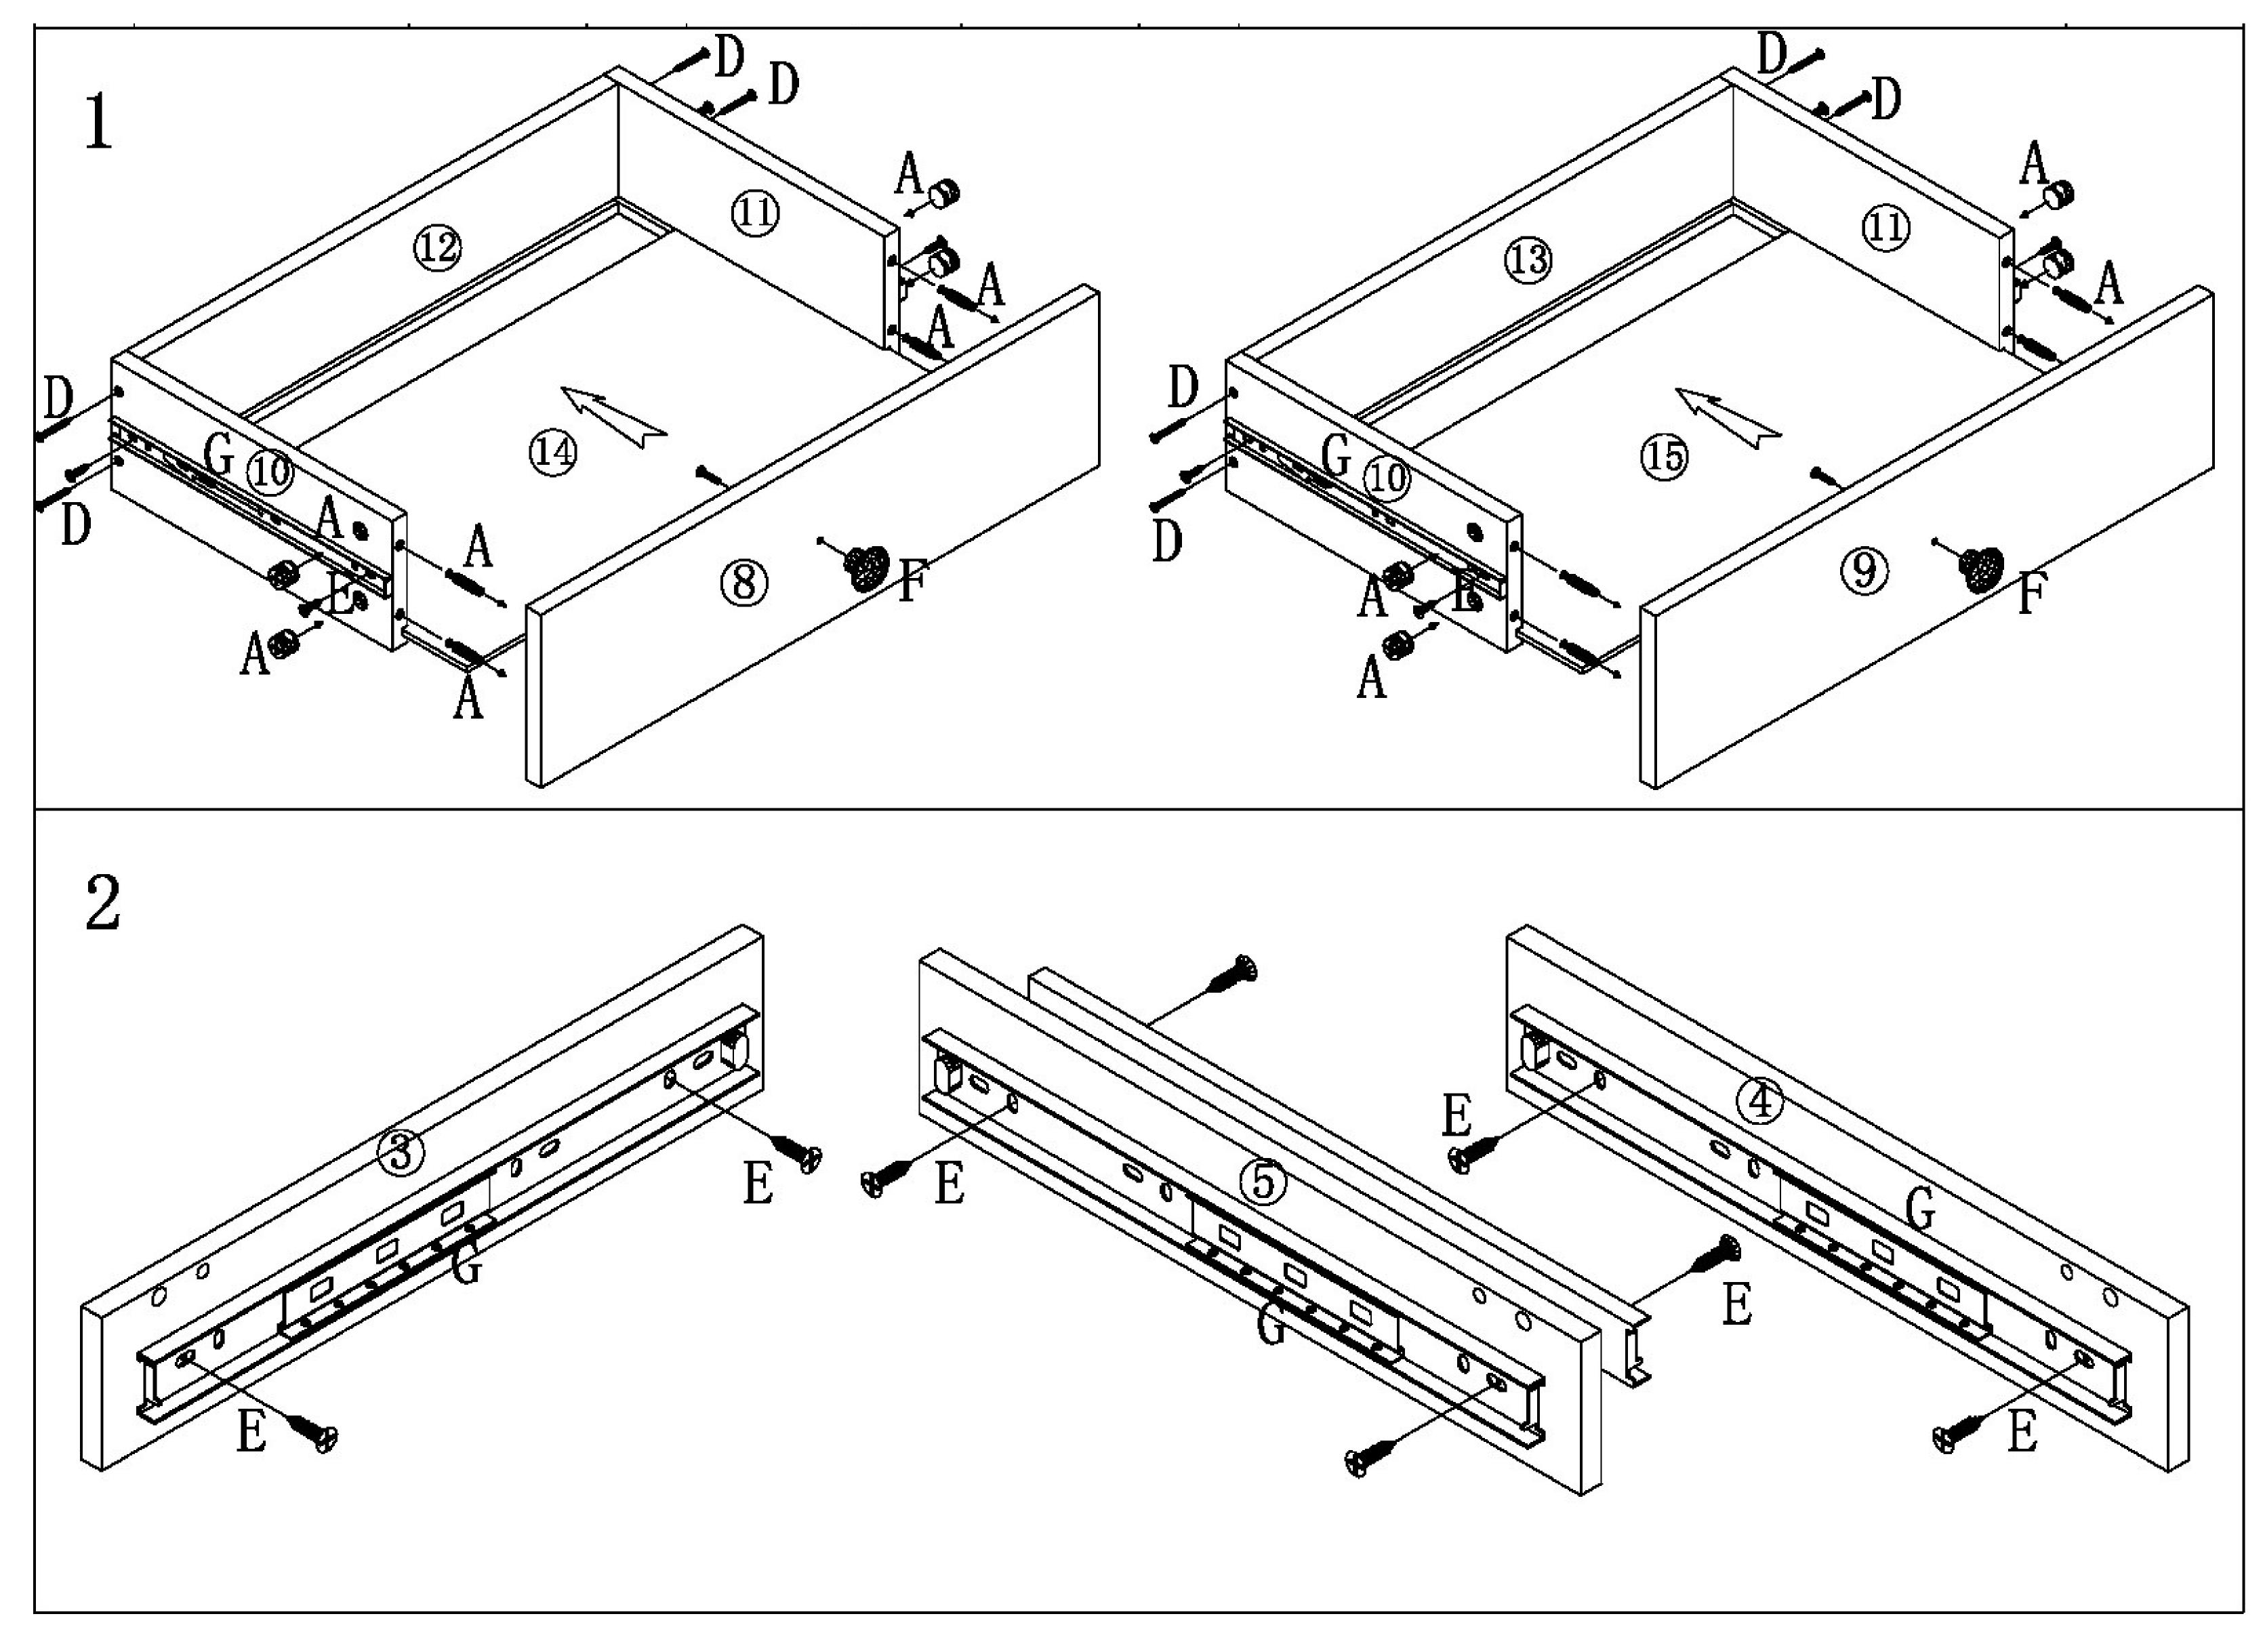


Starting from the back of the drawer, take panel number 12, and screw it in to panels 10 on the left, and 11 on the right using the D screws. (Make sure the holes on panels 10 and 11 are facing out!Once it is tight and secure, slide in piece number 14, which is the bottom of the drawer!

Can you start seeing it? Yess!! We are getting there!

Now, Take panel number 8,(this is the face of the drawer) screw in two (2) A screws on both sides, and insert the 4 screws to the matching holes on panel 10, and 11. To secure the screws add the extra A piece and twist to lock. Screw in the crystal drawer knob! And YAS you got a drawer! Now we need to make it slide, well. Take a deep breath and let's continue!


On panel 10 and 11, screw in the drawer sliding metal piece G by using E screws. Repeat this process on the second drawer. Repeat the same thing on the 3rd drawer. This time using panels 9, and 11, because this drawer is the center, bigger drawer. But it is the same concept. Once you are done with the drawers, it is time to move on to the top/main drawer compartment.

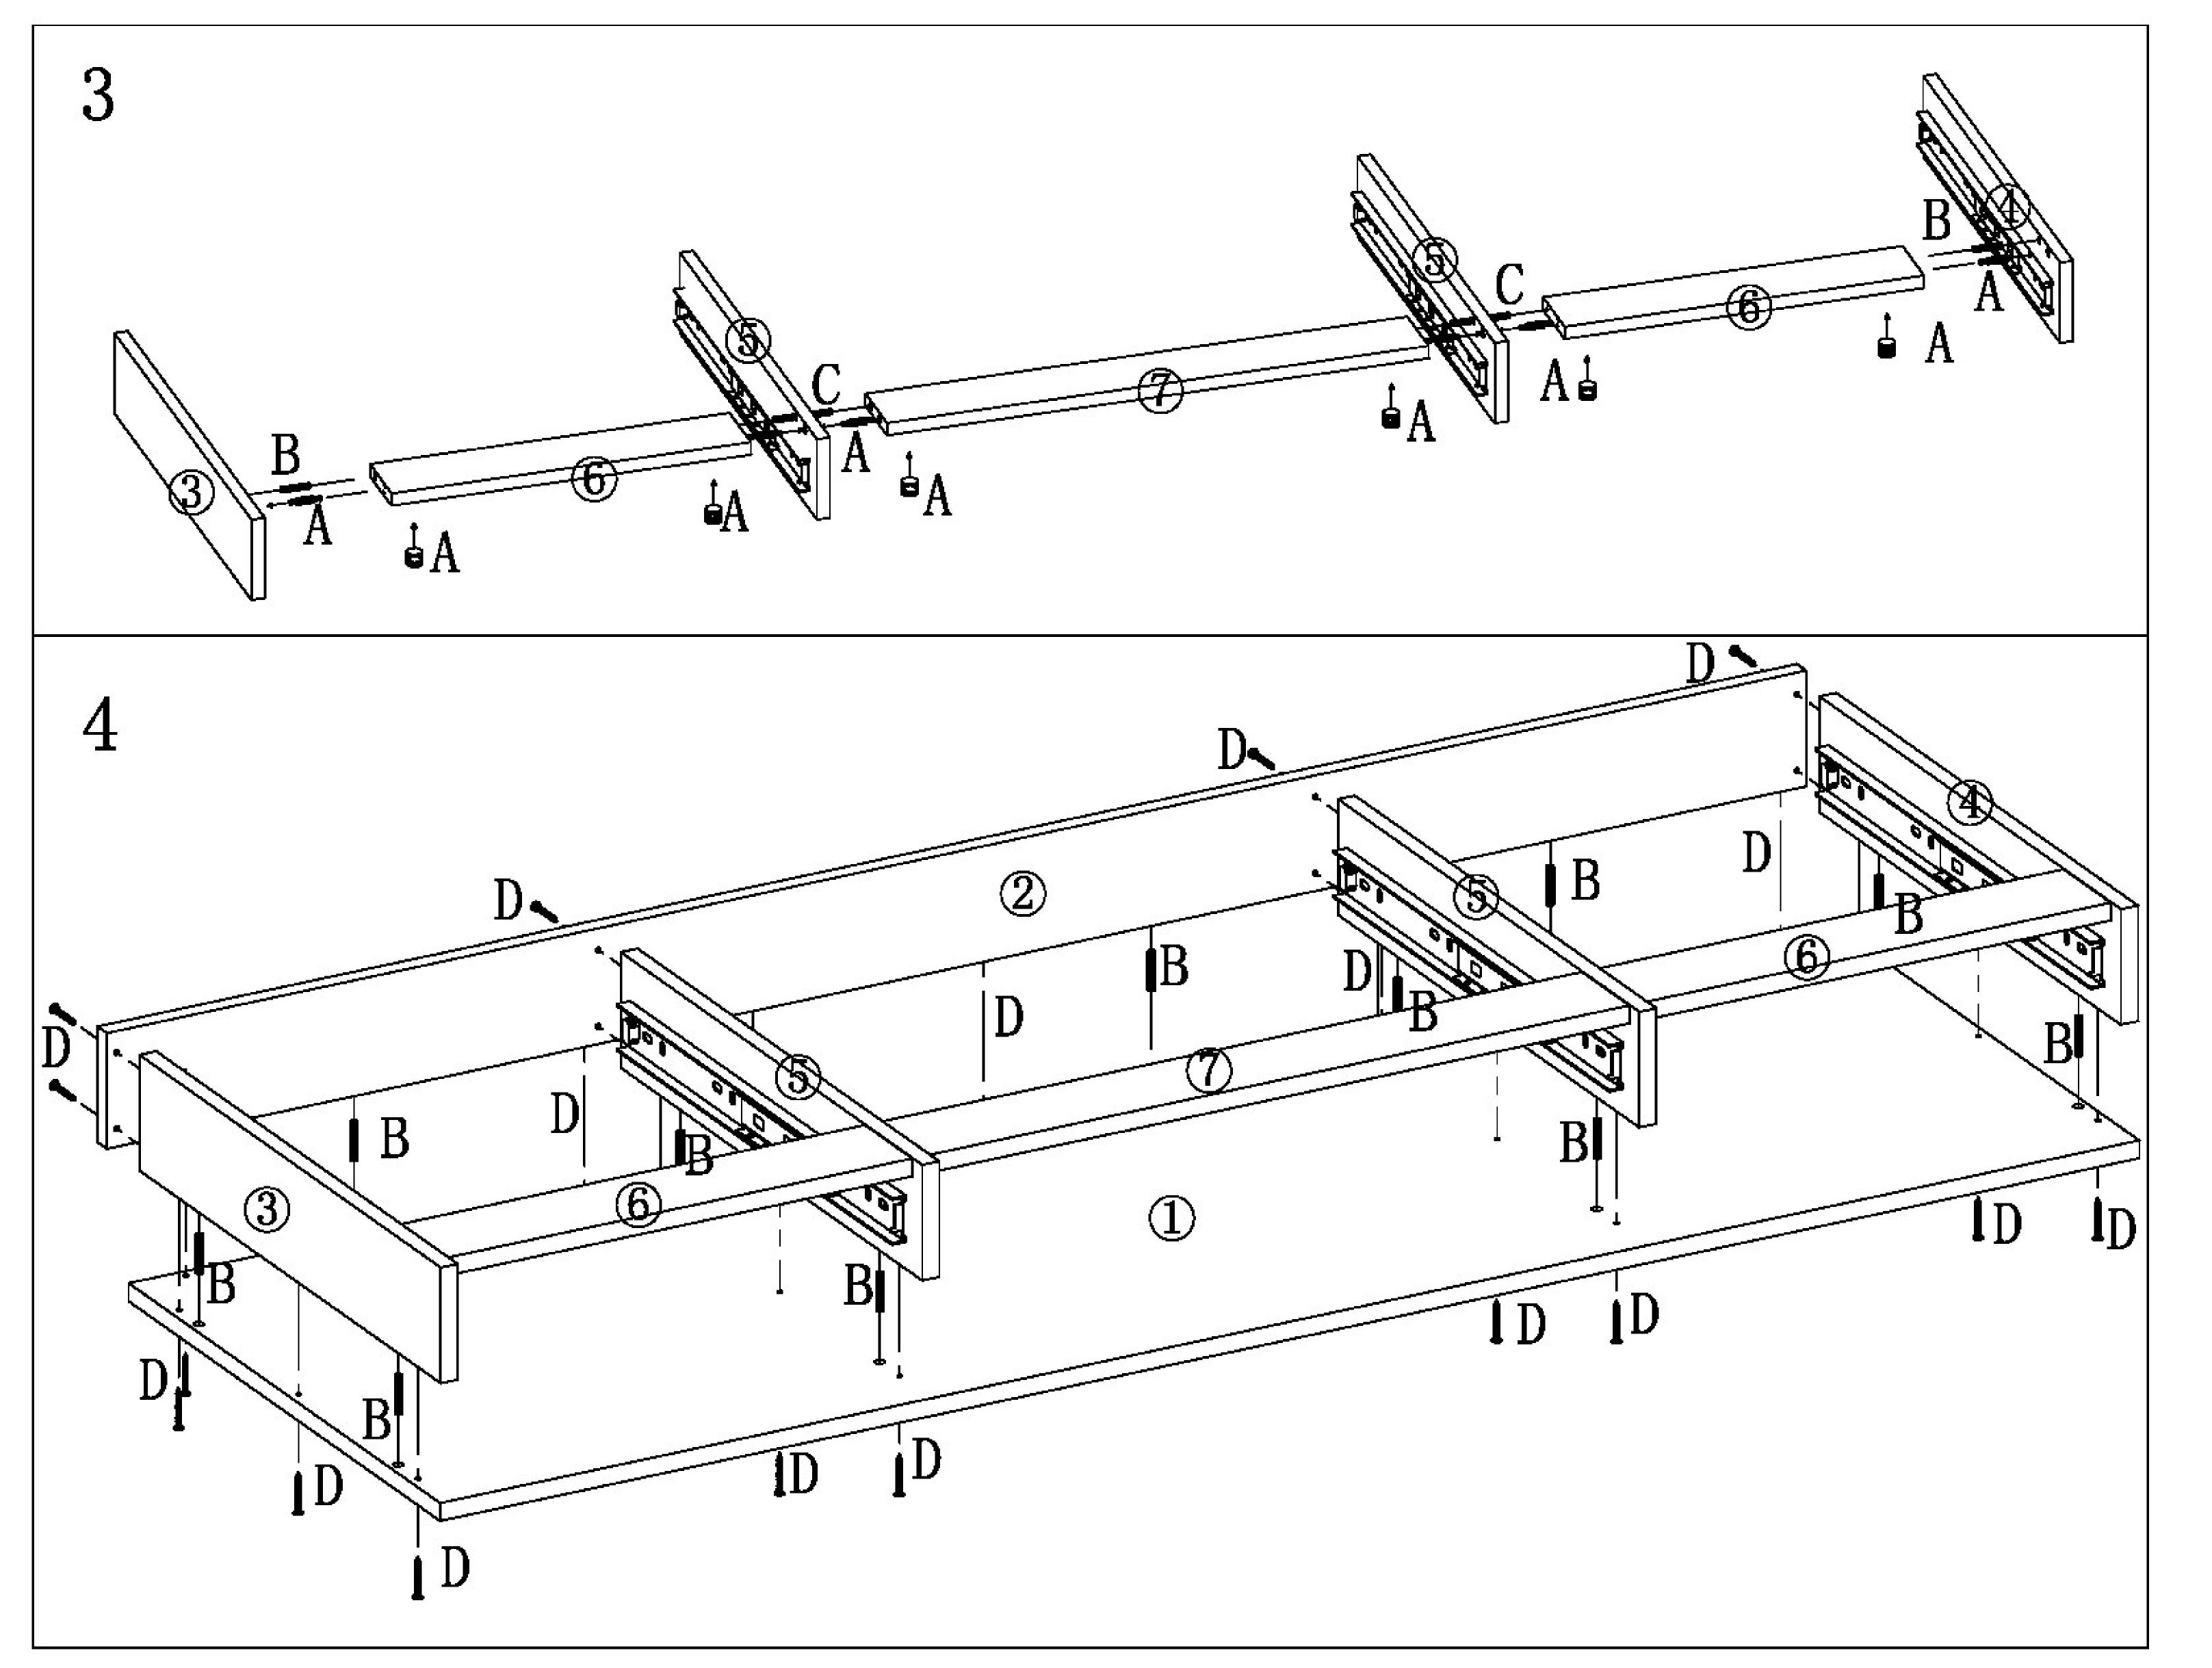

<u>Step 3:</u> Let's start building the tabletop! You will need the following pieces to start: Screws and number of each: A(6), B(2), C(2) - Panels: 3, 4, 5(2), 6(2) & 7. Once you have these items, place the panels down on the floor, as shown in the picture (from left to right 3, 6, 5, 7, 5, 6, 4)

Panel 6: Take 2 A screws and place them into the holes on the sides. Take 2 B screws and screw them into the left remaining holes next to screw A. Screw in the circular A piece into the bottom of the panel to lock everything in! There are TWO panel 6, so make sure you repeat step 3. Panel 7: Take 4 A screws, and install into the two holes on the bottom and onto the sids on the panel (similar to panel 6).


Take 2 C screws and place them both into panel 5. (1 on each) Make sure to leave the other holes open in order for two Screw A to fit. You will then start to connect the panels together as shown in the picture. Once finished, you will need 17 D screws in order to attach this section you have built. You will be placing it over panels 1 and 2.

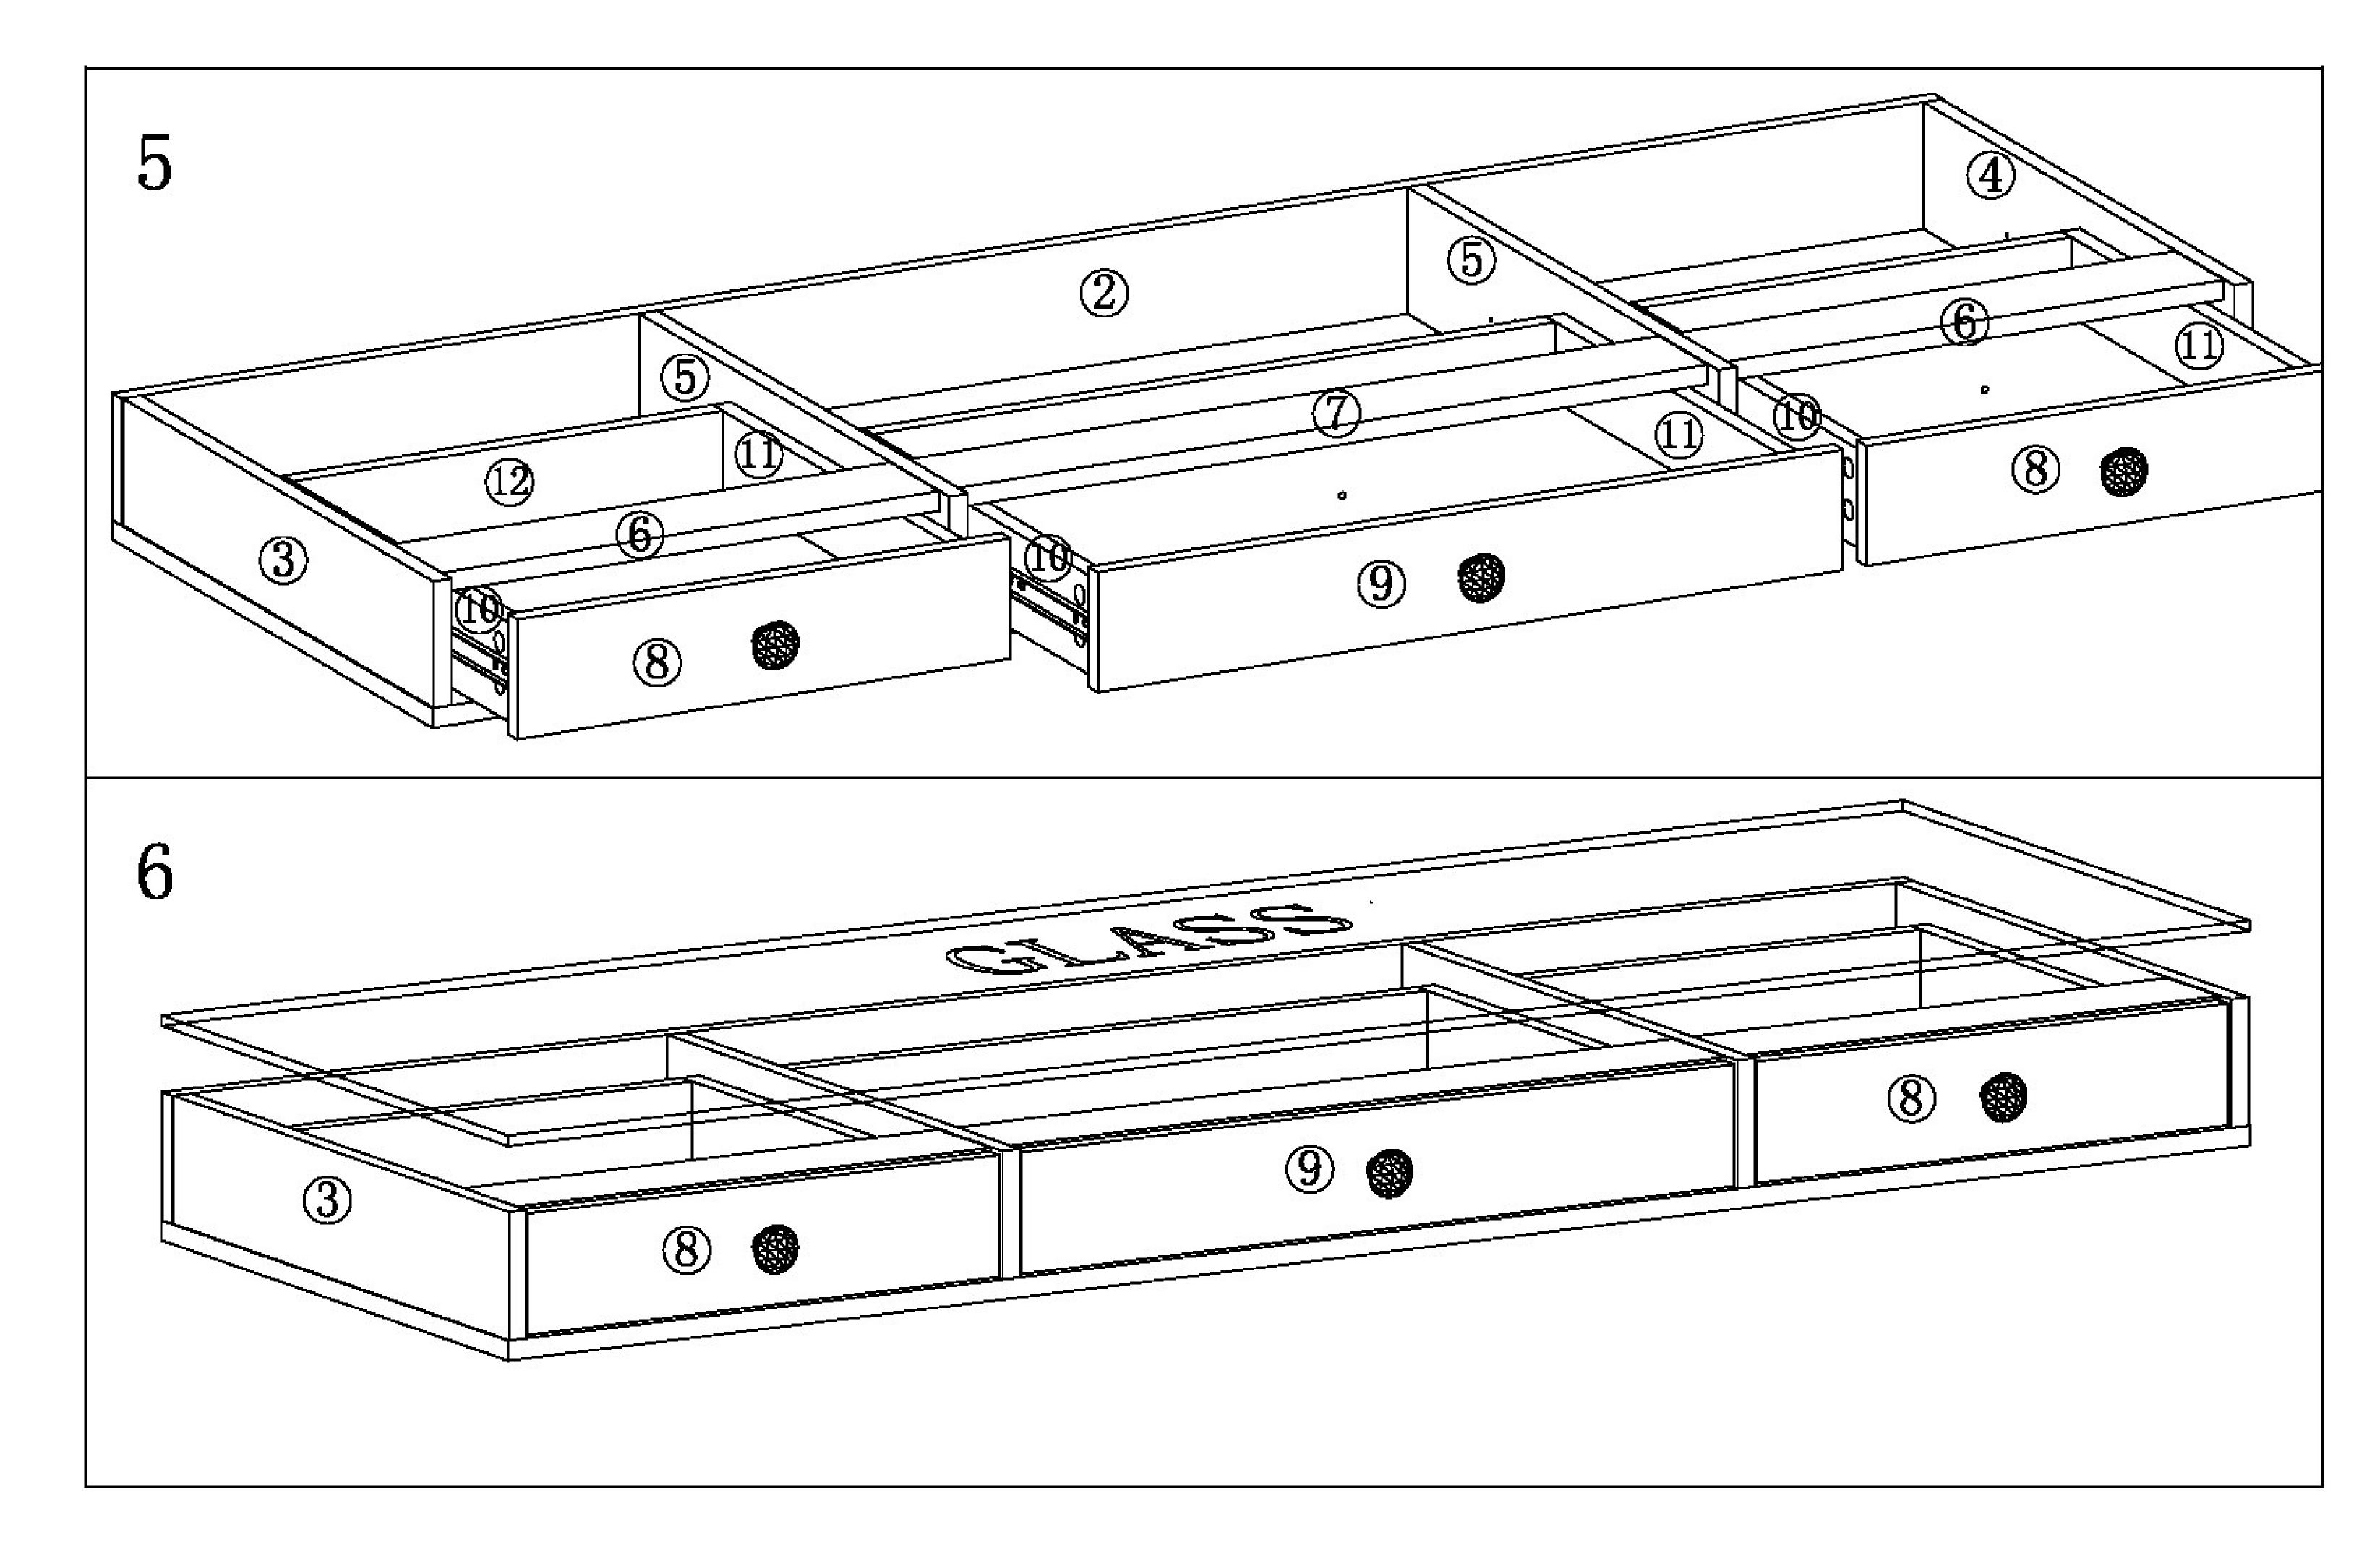

Make sure it is secured nice and tight. Lastly, place the glass top carefully onto the tabletop.




TAKE A STORY OF YOUR PROCESS TAG US @thedreamvanity @valyoufurniture TO GET FEATURED

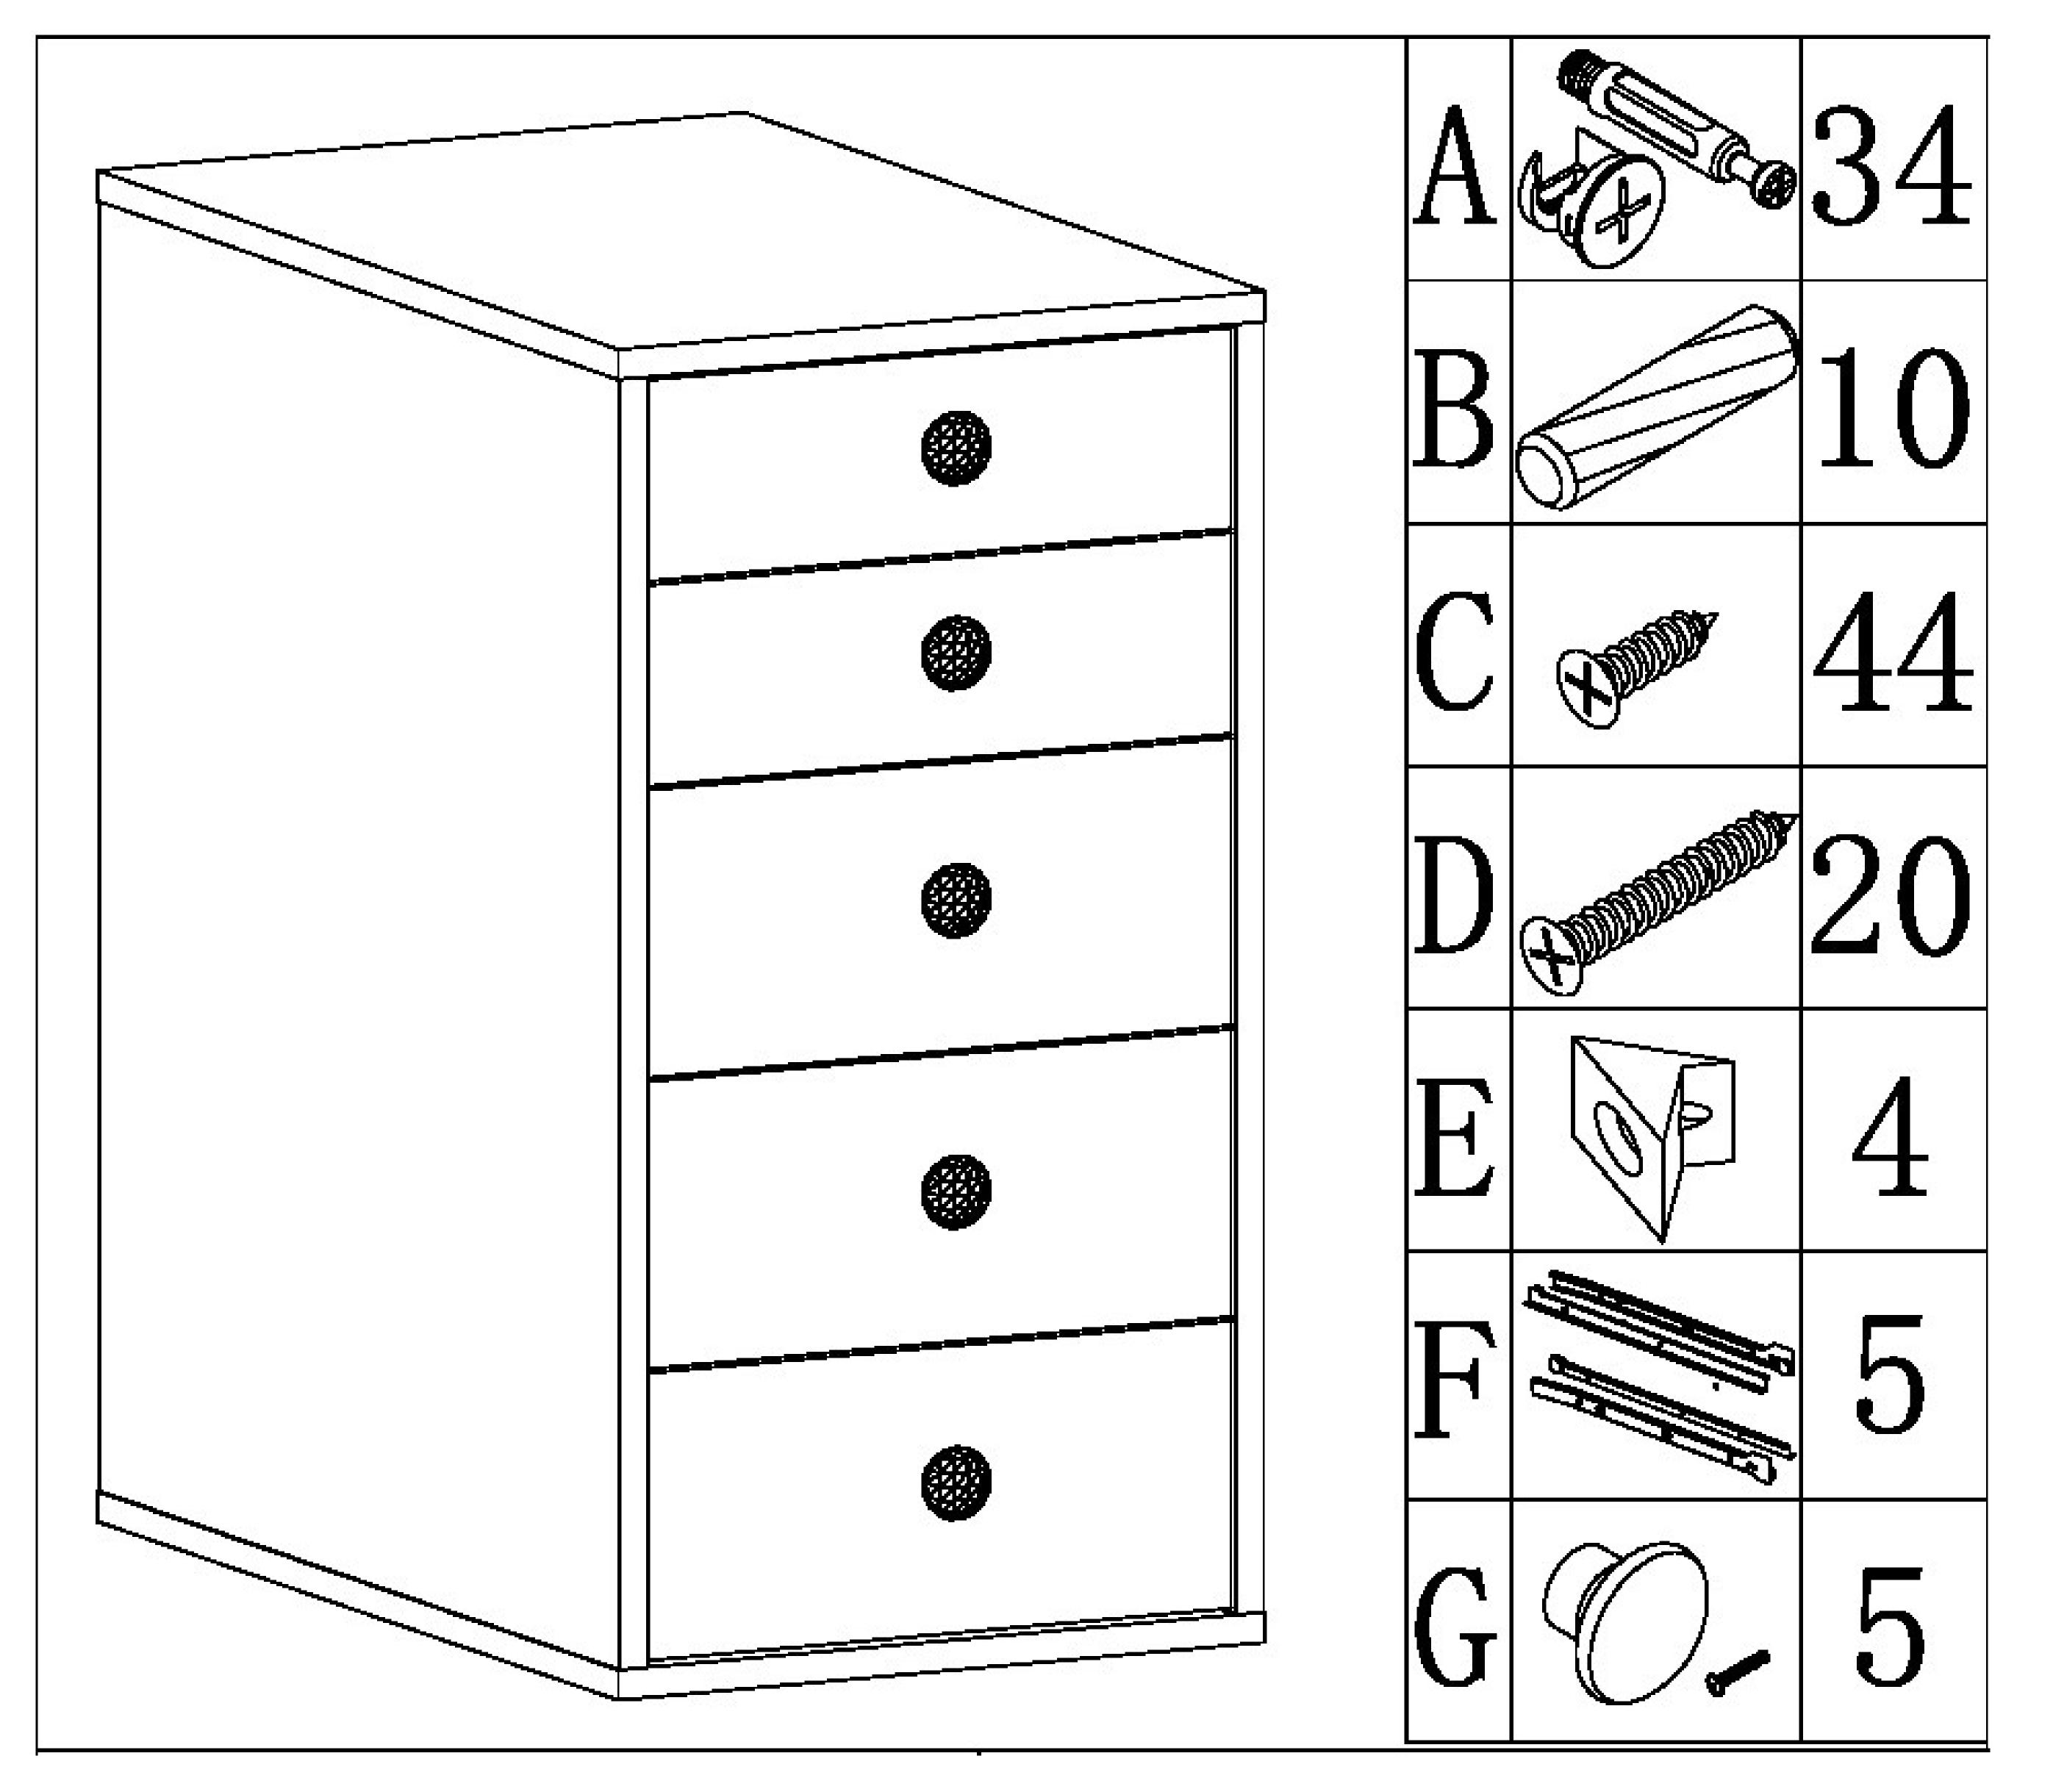

Vanity Drawer Tower Instructions

Okay, time for a break! Grab a snack, grab a drink, stretch out a bit, because we're moving on to the home stretch... Because it's time to build the two towers of drawers that will be the base of the vanity!

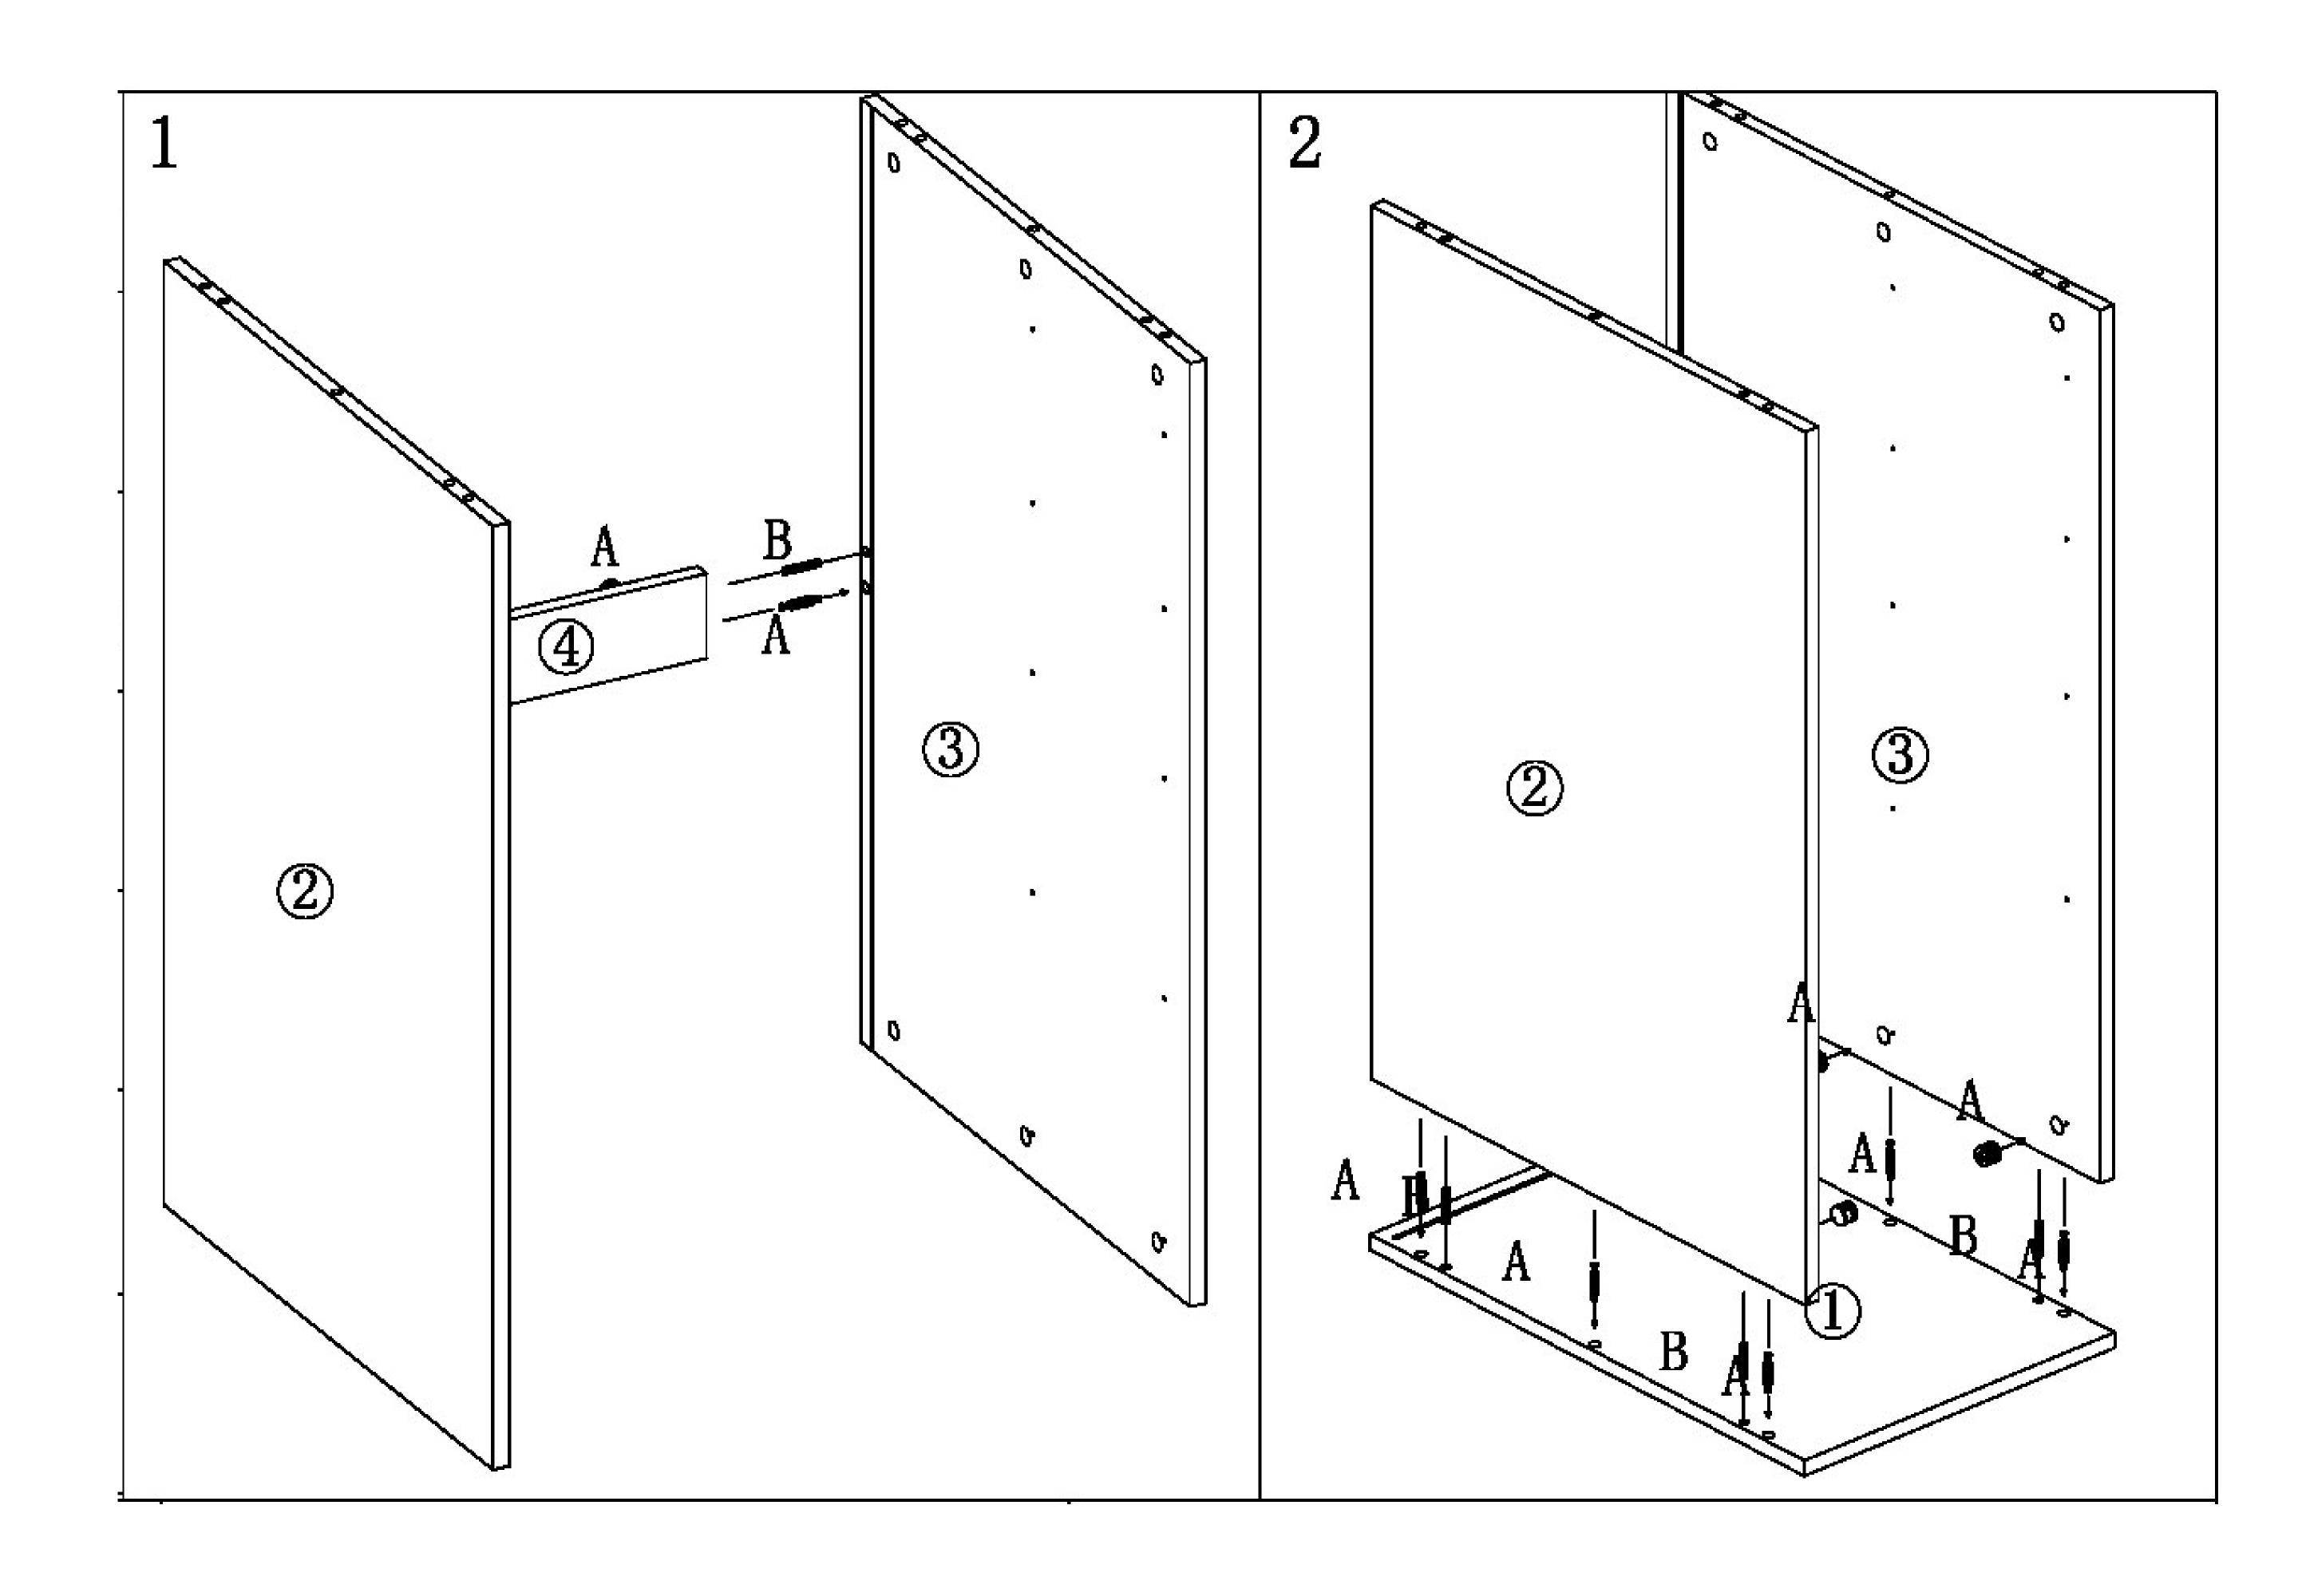


Step 1: Start with the two wood panels labeled 2 and 3. 2 will be on the left, and 3 will be on the right. Make sure the holes are facing inward. Then, use the A screw and locking piece and B dowel to connect wood piece 4 on the back of the larger wooden panels.

Once those are connected, place them on top of wooden panel 1, using A screws and B dowels as shown in the diagram. Be sure to use the extra A piece to twist and lock all the A screws into place.

Next, attach the metal piece F to the inside of the 2 and 3 panels. Use the C screws for this and make sure that the round wheel part is at the front of the tower. Take wood panel 1 and attach it to the top using the A screws and locking piece along with the B wooden dowels, as noted in the diagram.

On the back of the drawer tower, attach piece E using screw C to the side corners where indicated.

Great job! Now time to make the drawers and we'll be done!

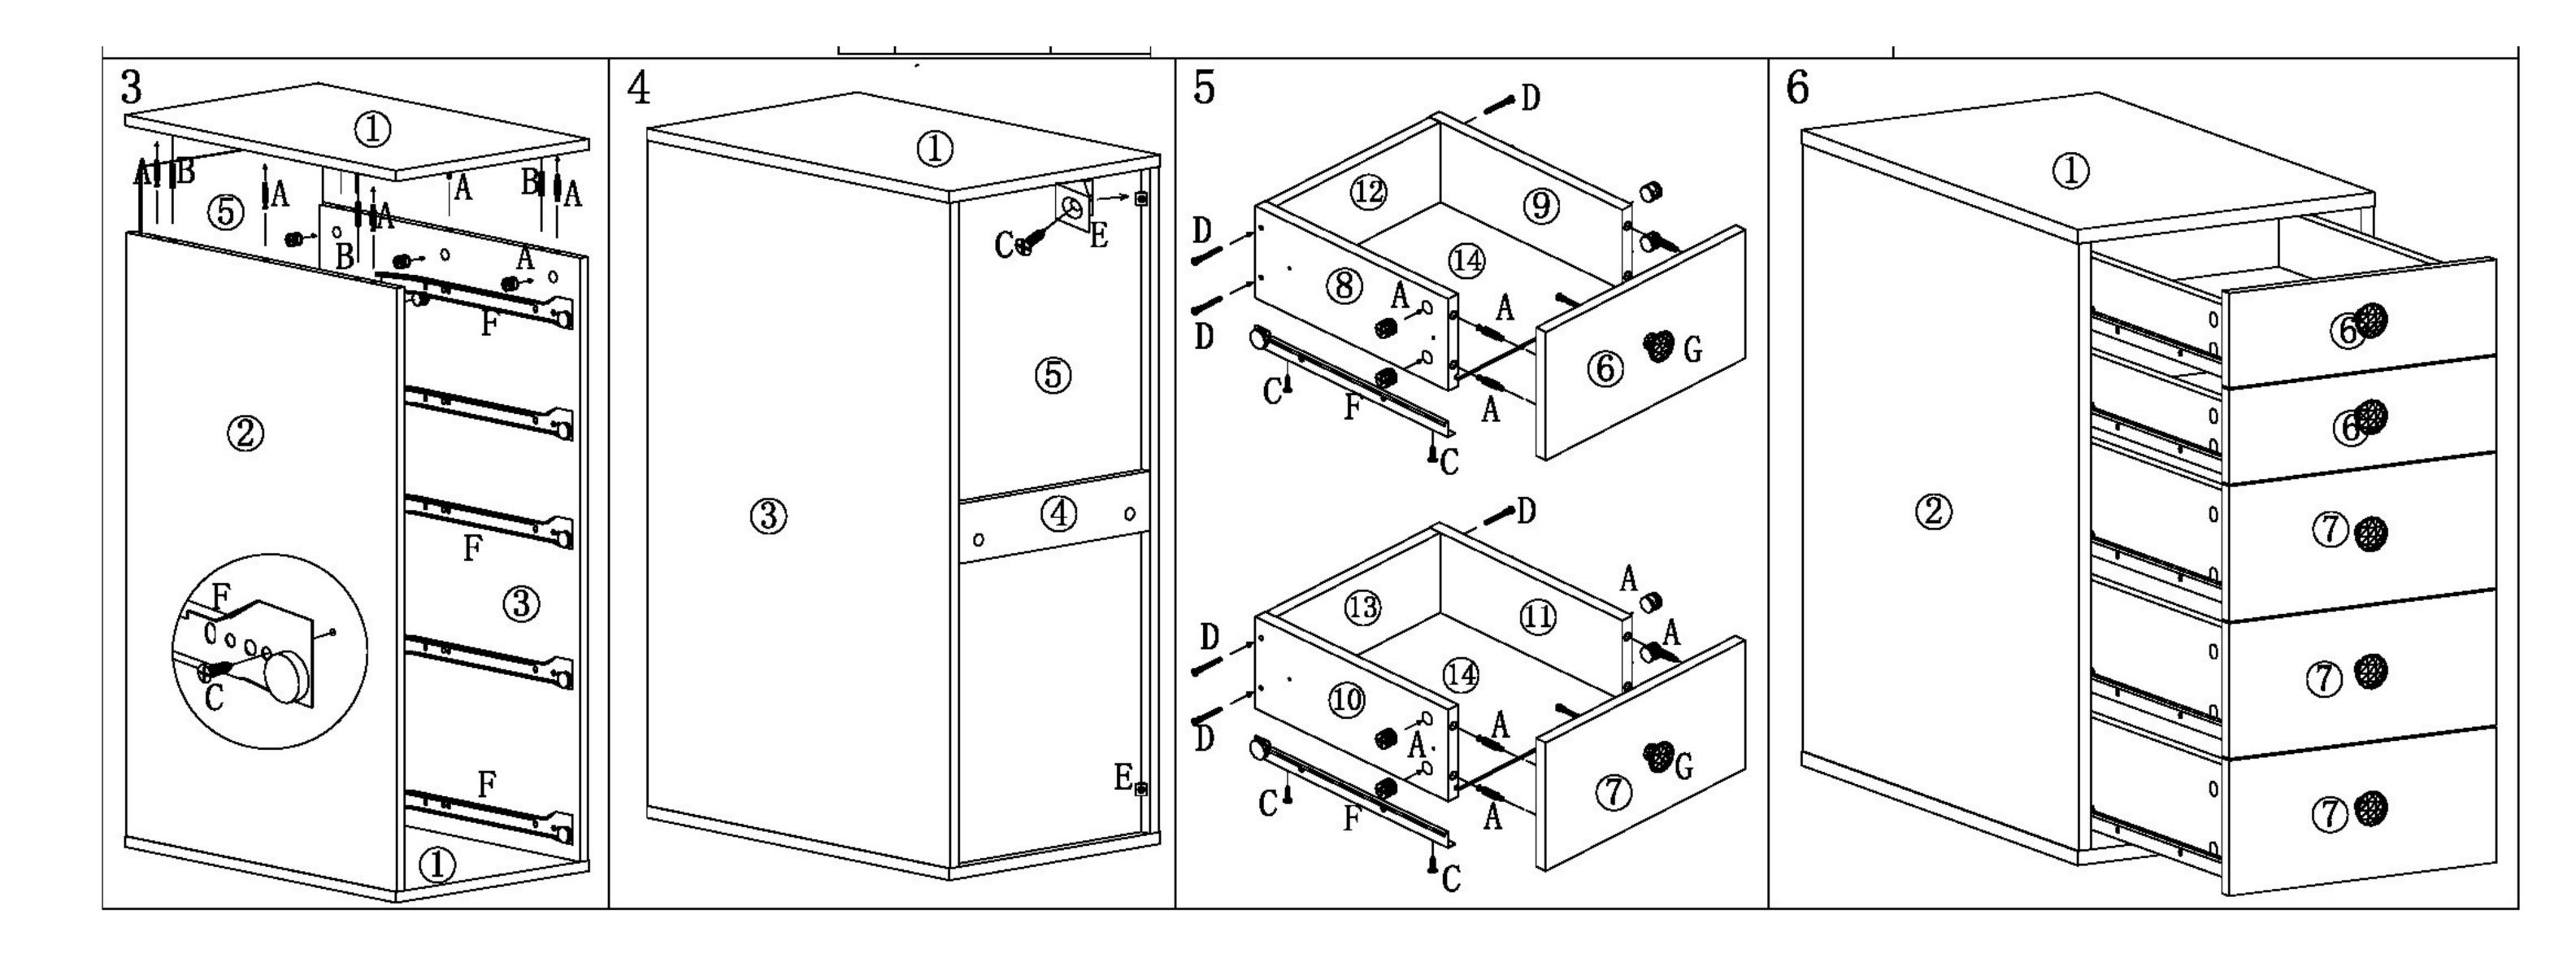


Step 2: There are two upper drawers with the same size and pieces, and the bottom three drawers are the same. For the upper two, start with wooden piece 12 as the back of the drawer. Then attach panel 8 on the left side using two D screws at the back. Then attach panel 9 on the right using D screws. Slide in the bottom of the drawer, piece 14. Then take the front of the drawer, panel 6, and attach it to the front using the A screws and locking pieces.

Next, attach the metal pieces to the outside of pieces 8 and 9 using C screws. Be sure that the round wheel part is at the back of the drawer. Then attach the knob using the G piece and screw. And voila, you have a drawer! Repeat three more times for the upper four drawers for both towers.

Okay, we're almost there!

Next, let's assemble the bottom drawers.

There will be six in total, three on each side.

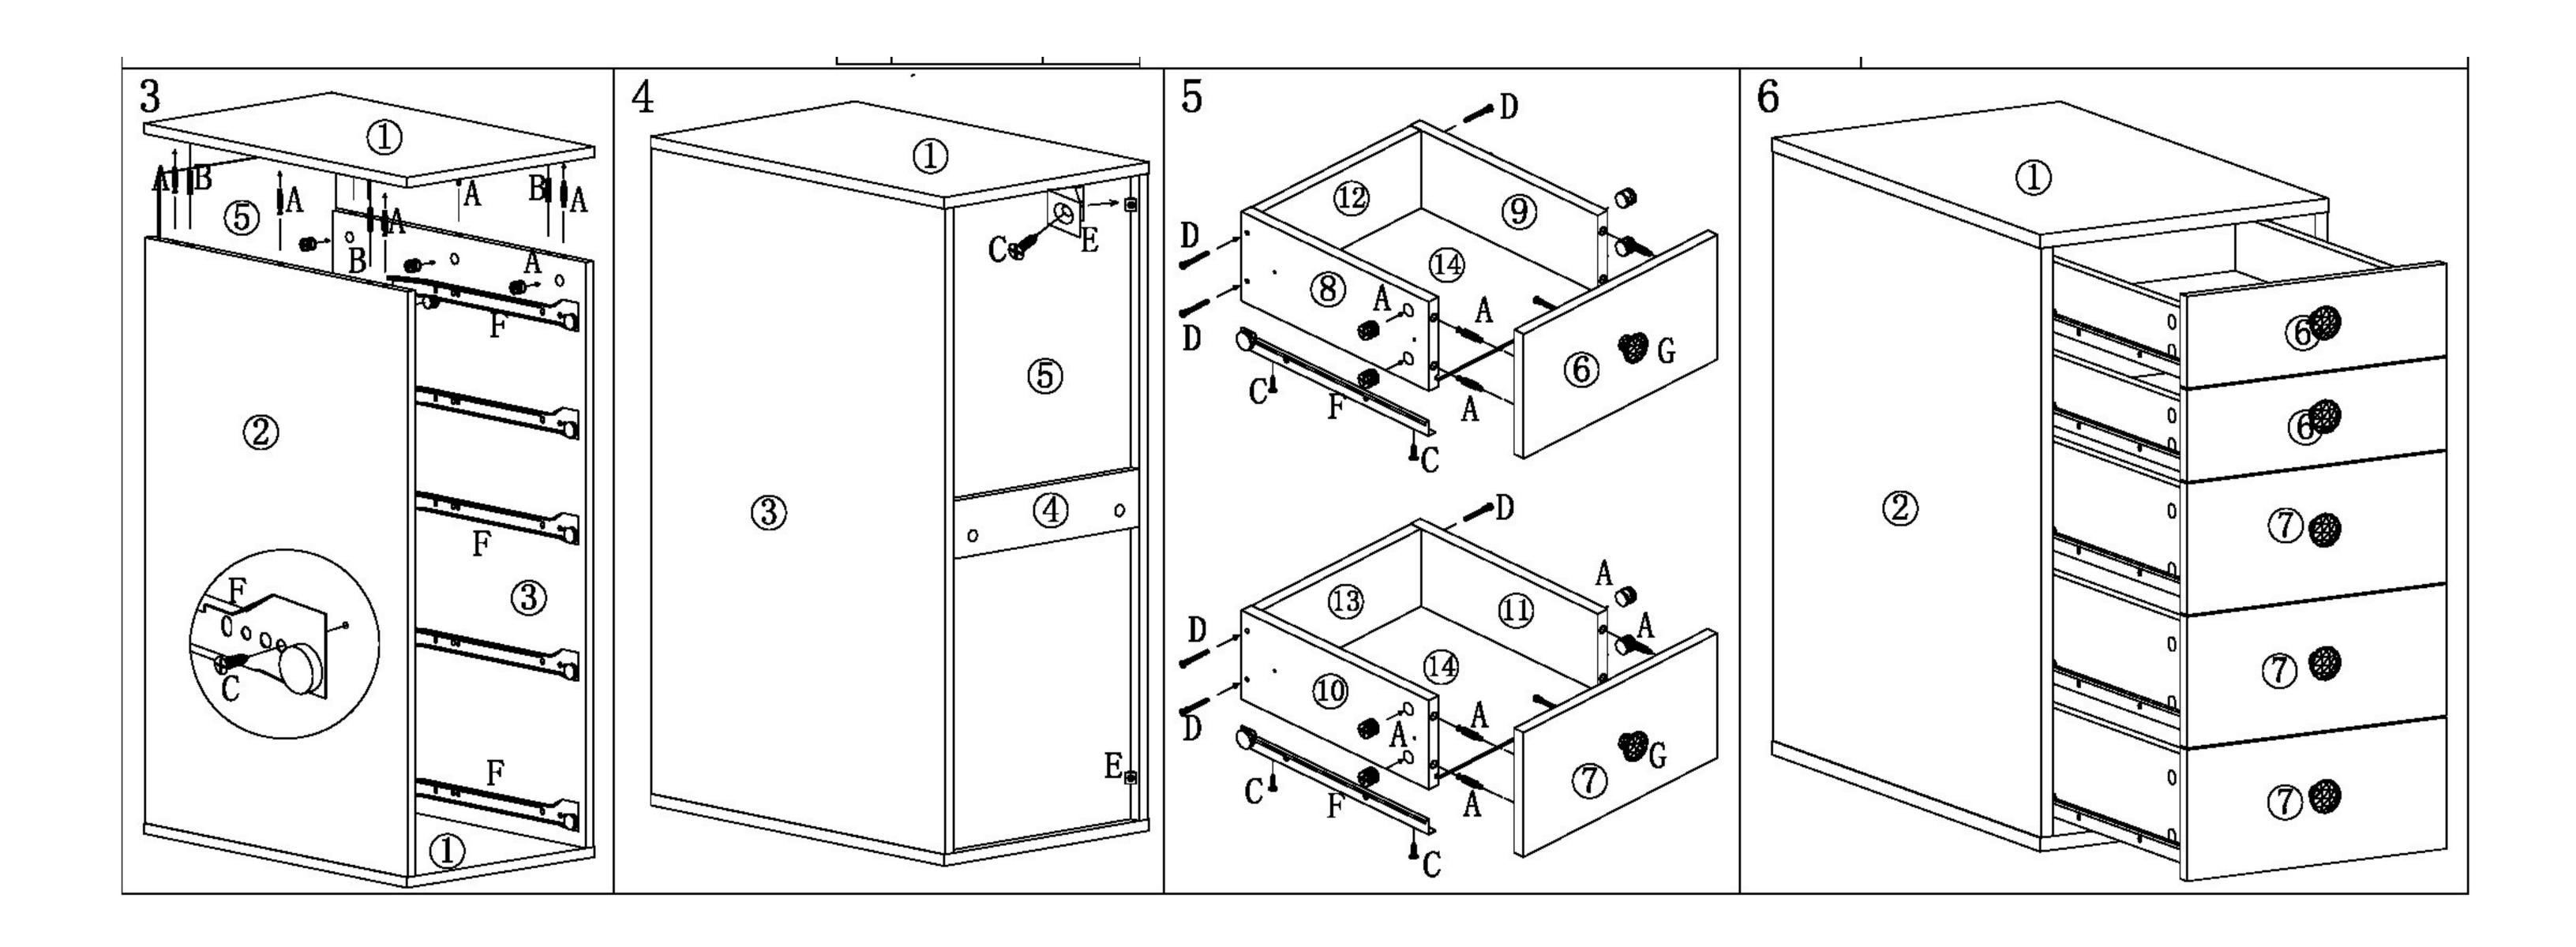

Step 3: Start with wood panel 13. Attach panel 10 on the left side using D screws, and attach panel 11 to the right side using D screws. Slide in the bottom of the drawer, piece 14.

Then take the front of the drawer, panel 7, and attach it to the front using A screws and locking pieces.

Next attach the metal pieces to the sides of the drawers using metal piece F and C screws. And then attach the knob using the G piece and screw.

Repeat the process for all six bottom drawers.

Final Step:

Once all the drawers are complete you can slide them into the tower, putting the two shorter drawers at the top, and the three taller drawers below. Congratulations! You have finished building... YOUR DREAM VANITY!



Did you tag us? do it now and get featured @thedreamvanity @valyoufurniture

The Dream Vanity

Designed and manufactured by Valyou furniture® Customer Service: 1-808-359-2775
Service@valyoufurniture.com