






**BLOSSOM**<sup>®</sup>  
luxury made simple

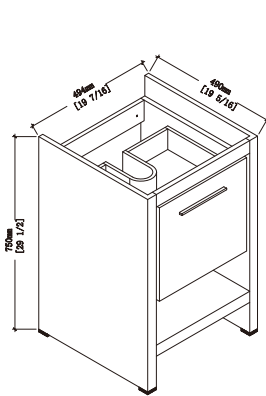


V8014-20

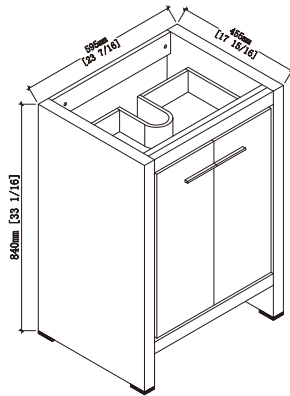


V8014-24

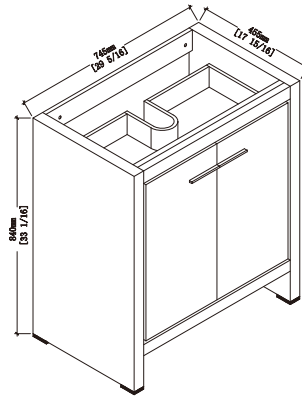


V8014-30

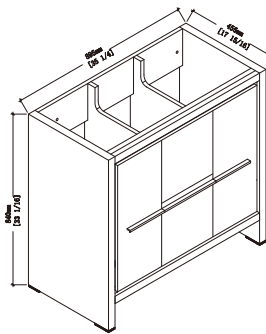

V8014-36

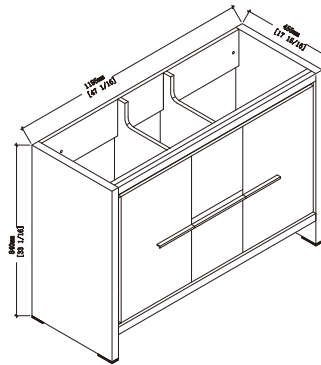

V8014-48

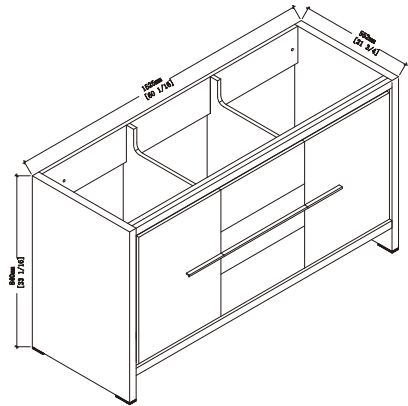

V8014-60

**[ MILAN ]**  
Series Vanities  
**Specification & Installation Guide**

## Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Soft-closing doors and drawers.
- Compatible ceramic basins or artificial stone basins.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Full extension drawers.
- Easy installation

## Package Dimension

<b>20"</b>	22 26/64" x 22 16/64" x 32 31/64"
<b>24"</b>	26 3/8" x 20 55/64" x 36 1/32"
<b>30"</b>	32 9/32" x 20 55/64" x 36 1/32"
<b>36"</b>	38 3/16" x 20 55/64" x 36 1/32"
<b>48"</b>	50" x 20 55/64" x 36 1/32"
<b>60"</b>	62 63/64" x 24 11/16" x 36 1/32"

## Colors / Finishes

Glossy White - 01

Sliver Grey - 16

## Gross Weight


<b>20"</b>	66 LBS
<b>24"</b>	81 LBS
<b>30"</b>	91 LBS
<b>36"</b>	121 LBS
<b>48"</b>	143 LBS
<b>60"</b>	178 LBS

## Sink Top Options

	Vanities	Ceramic basin	Artificial stone basin
<b>20"</b>	V8014-20	C04 2020	NONE
<b>24"</b>	V8014-24	C04 2418	A10 2418 25
<b>30"</b>	V8014-30	C04 3018	A10 3018 25
<b>36"</b>	V8014-36	C04 3618	A10 3618 25
<b>48"</b>	V8014-48	C04 4818 S/C04 4818 D	A10 4818 25 S / A10 4818 25 D
<b>60"</b>	V8014-60	NONE	A10 6022 25


**60"**

60-1/16" X 21-3/4" X 33-1/16"

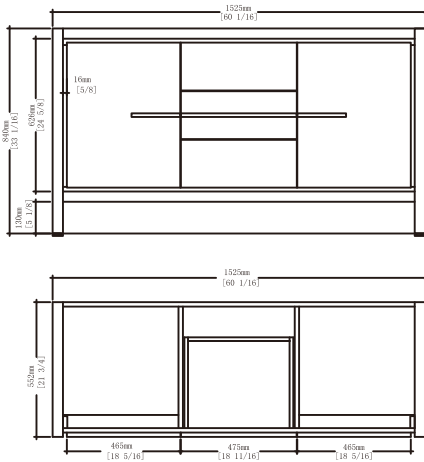


**48"**

47-1/16" X 17-15/16" X 33-1/16"

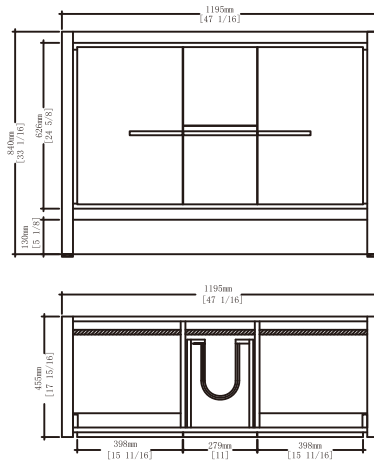


**36"**

35-1/4" X 17-15/16" X 33-1/16"

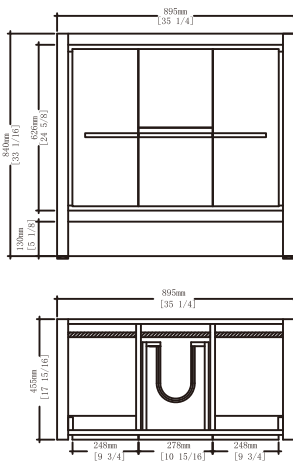


**30"**

29-5/16" X 17-15/16" X 33-1/16"

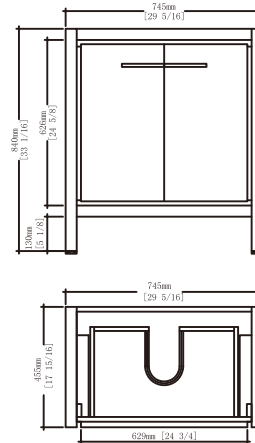


**24"**

23-7/16" X 17-15/16" X 33-1/16"

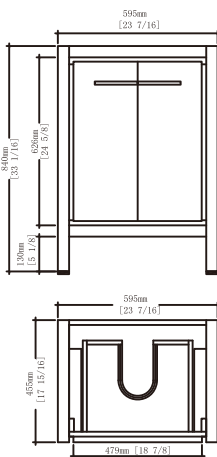


**20"**

19-7/16" X 19-5/16" X 29-1/2"

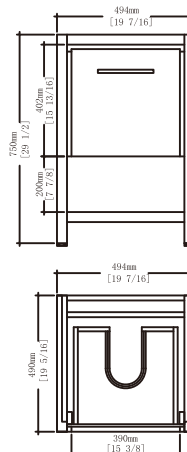


**60"**

60-1/16" X 21-3/4" X 33-1/16"

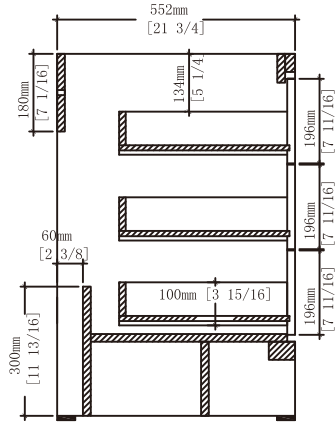


**48"**

47-1/16" X 17-15/16" X 33-1/16"

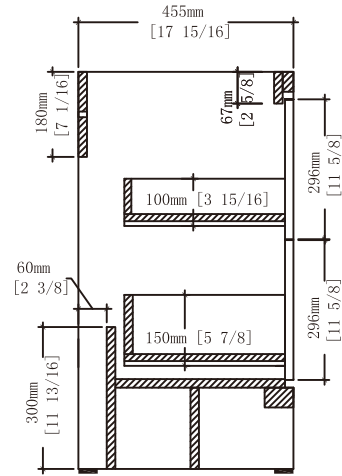


**36"**

35-1/4" X 17-15/16" X 33-1/16"

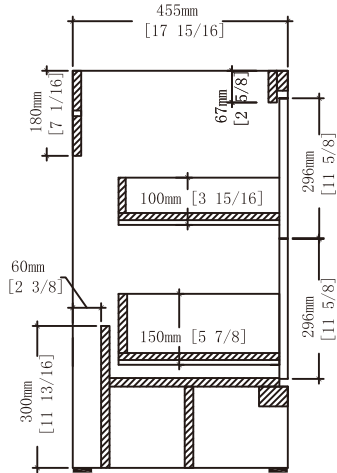


**30"**

29-5/16" X 17-15/16" X 33-1/16"

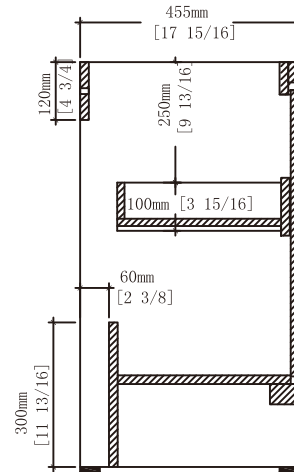


**24"**


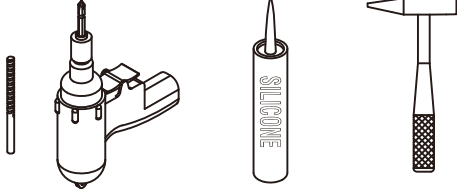


23-7/16" X 17-15/16" X 33-1/16"

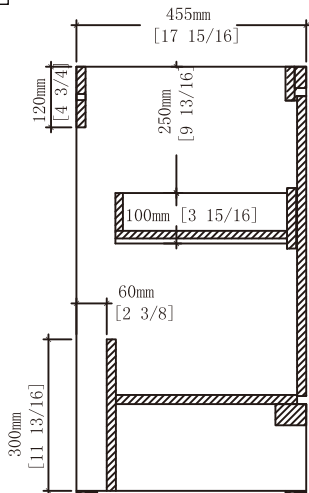

**20"**


19-7/16" X 19-5/16" X 29-1/2"

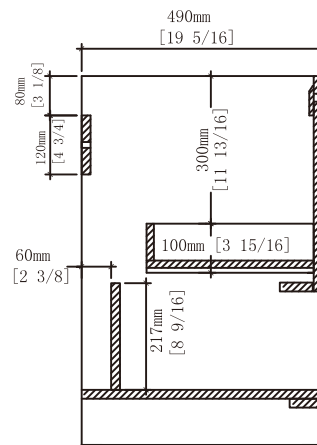

Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		2pcs		
B	Screws (Ø4 x 68mm)		2pcs		
C	Stainless steel cover		2pcs		


## STEP 1

Mark the pre-drilled holes with a pencil or marker after positioning the vanity.

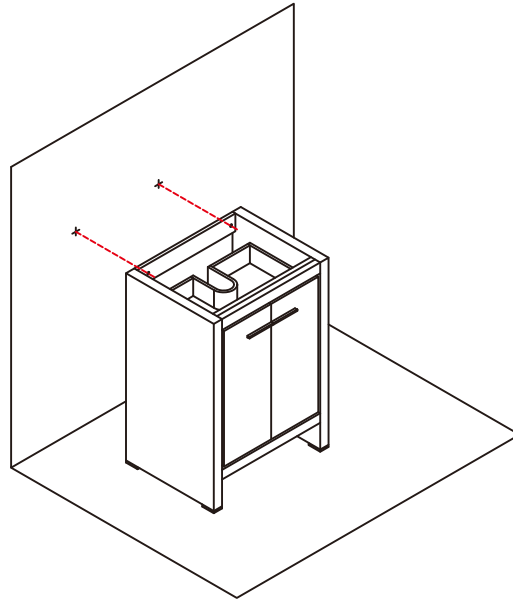


## STEP 2

Drill the holes with suitable drill-bits base on different condition of the wall.

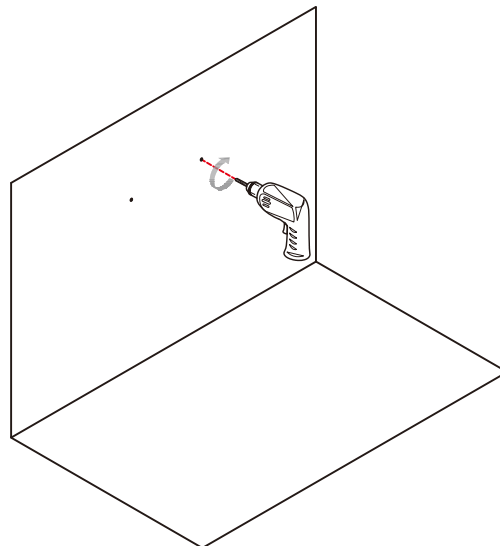


## STEP 3

Hammer in the expansion plug.

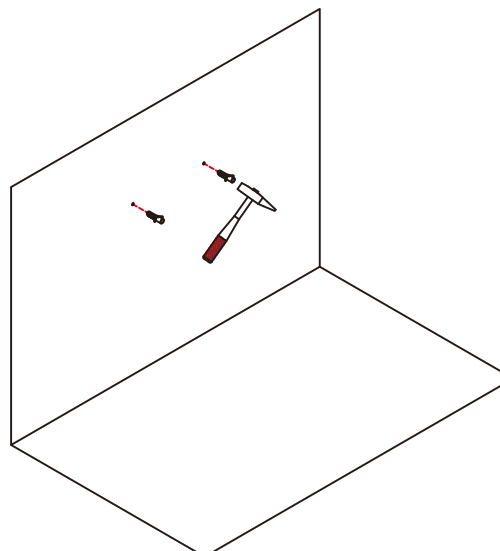


**STEP 4**

Secure the vanity onto the wall with screws.

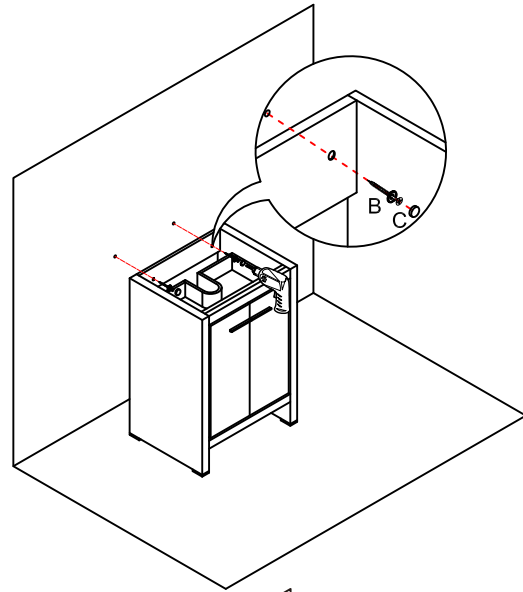


**STEP 5**

Install the basin with silicone.

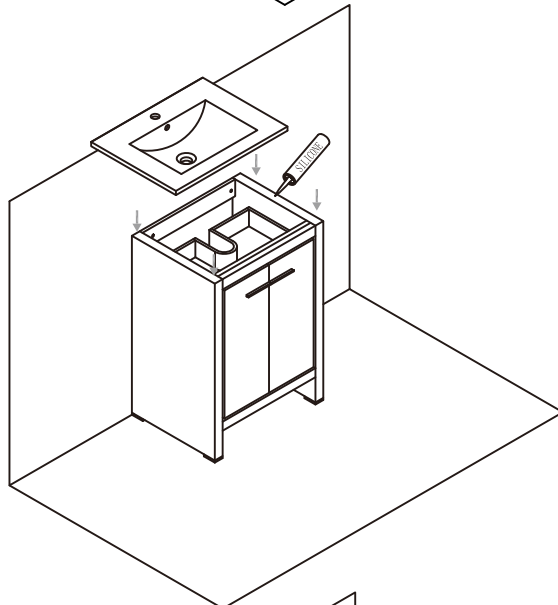

**STEP 6**


Installation complete.

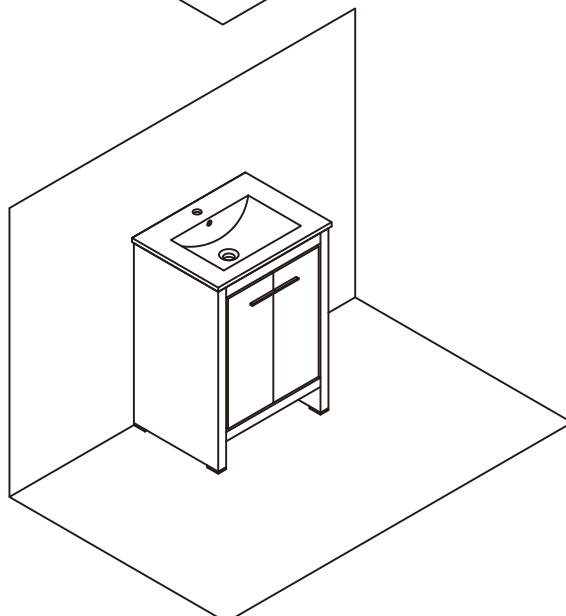




# BLOSSOM®


luxury made simple

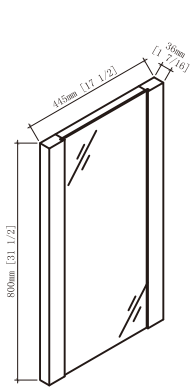


M6014-20

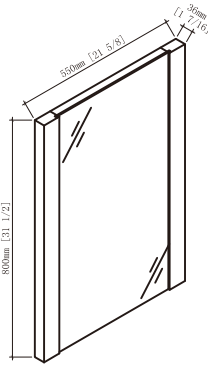


M6014-24

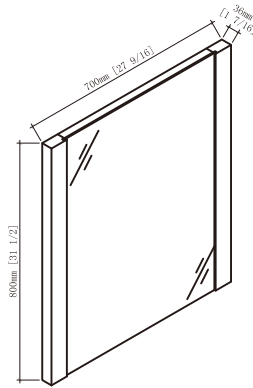

M6014-30

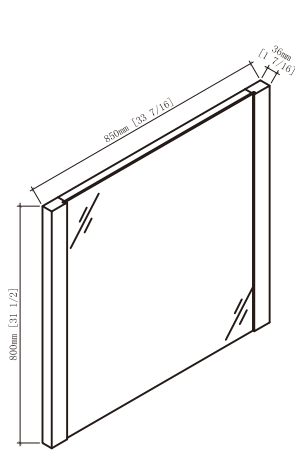

M6014-36

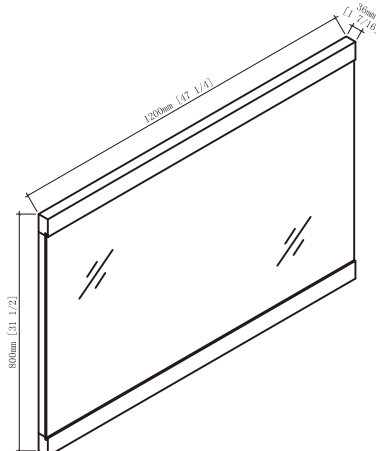

M6014-48

[ MILAN ]  
Series Mirror

## Specification & Installation Guide



## Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Easy installation.

## Package Dimension

- 20"** 20-1/2" x 4-9/64" x 34-29/64"  
**24"** 24-39/64" x 4-9/64" x 34-29/64"  
**30"** 30-33/64" x 4-9/64" x 34-29/64"  
**36"** 36-7/16" x 4-9/64" x 34-29/64"  
**48"** 50-13/64" x 4-9/64" x 34-29/64"


## Colors / Finishes

- Glossy White - 01  
 Sliver Grey - 16


## Gross Weight

- 20"** 21 LBS  
**24"** 21 LBS  
**30"** 25 LBS  
**36"** 26 LBS  
**48"** 46 LBS


**48"** 47-1/4" X 1-7/16" X 31-1/2"

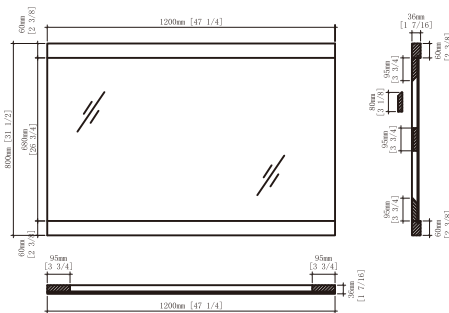


**36"** 33-7/16" X 1-7/16" X 31-1/2"

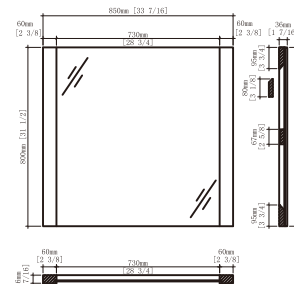


**30"** 27-9/16" X 1-7/16" X 31-1/2"


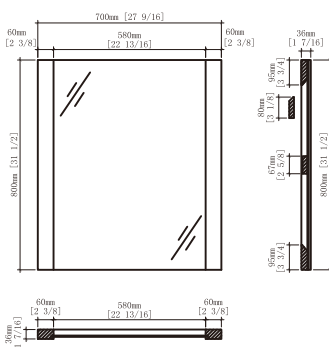



**24"** 21-5/8" X 1-7/16" X 31-1/2"

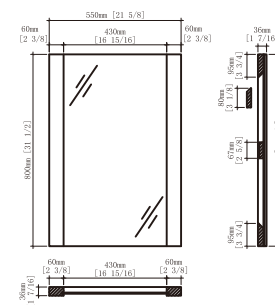


**20"** 17-1/2" X 1-7/16" X 31-1/2"

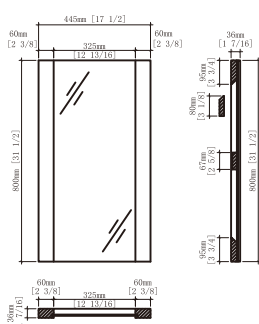

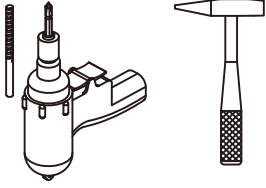Hardware				Tools (not includes )	
No.		Draw	Qty		
A	Green rubber plug		4pcs		
B	Screw		4pcs		


**STEP 1**

1. Measure the wall-hung board and mark down the holes on the wall.
2. Drill the holes with suitable drill-bits base on different condition of the wall.
3. Use a hammer to knock the green expansion rubber plug into the hole.

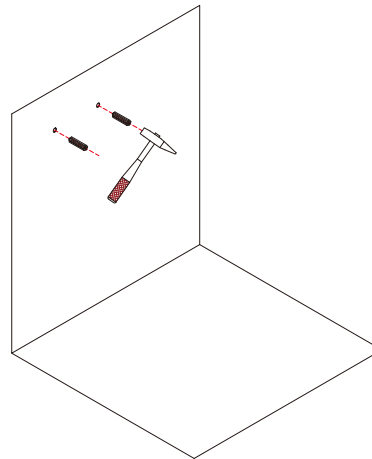


**STEP 2**

Screw the 45 degree wall-hung panel onto the wall.

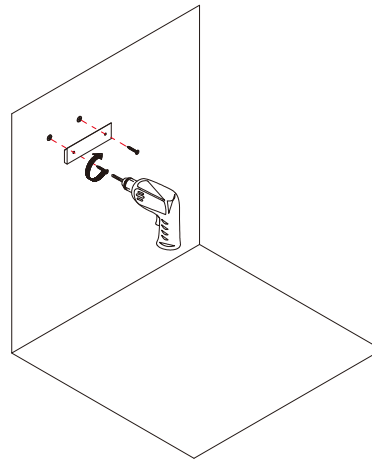


**STEP 3**

1. Put up the back top panel of mirror on the 45 degree wall-hung panel .
2. Installation completed.
3. Carefully slide the mirror left or right to center with the vanity.

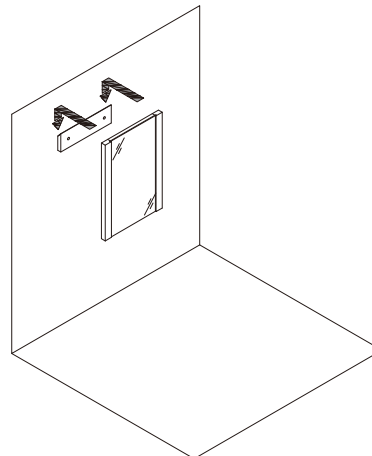





**BLOSSOM**<sup>®</sup>  
luxury made simple

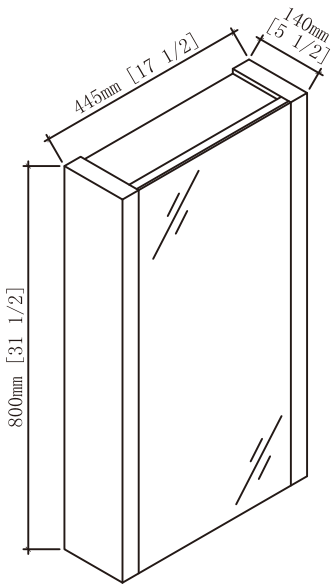

MC7014-20

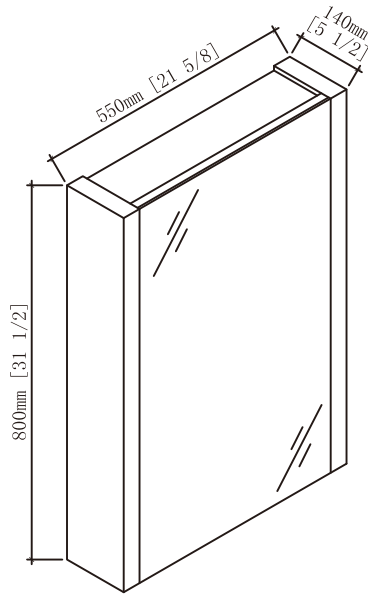

MC7014-24

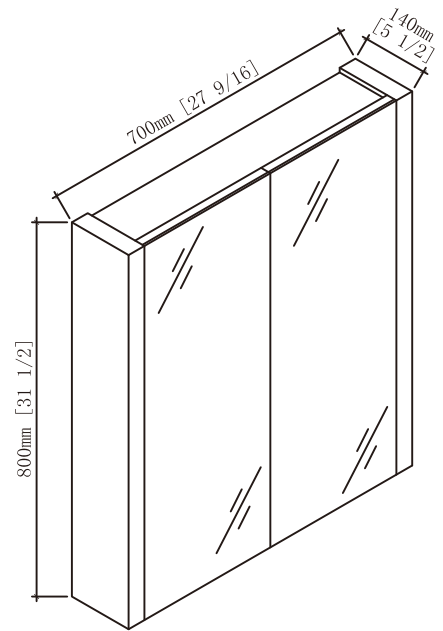

MC7014-30

[ **MILAN** ]  
Series Medicine Cabinets

## Specification & Installation Guide

## Features

- Modern design with high glossy paint or silver grey melamine finishes.
- Soft-closing doors.
- Easy installation.
- Adjustable shelves.

## Package Dimension

- 20"** 20 1/2" x 8 15/32" x 34 29/64"  
**24"** 24 39/64" x 8 15/32" x 34 29/64"  
**30"** 30 33/64" x 8 15/32" x 34 29/64"

## Colors / Finishes


Glossy White - 01

Sliver Grey - 16


## Gross Weight

- 20"** 45 LBS  
**24"** 49 LBS  
**30"** 57 LBS


**30"** 27-9/16 X 5-1/2" X 31-1/2 "

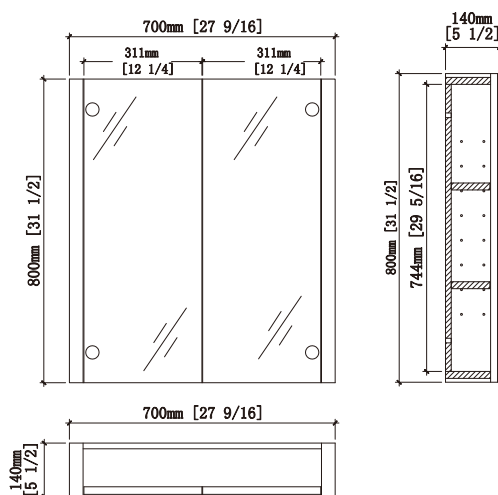

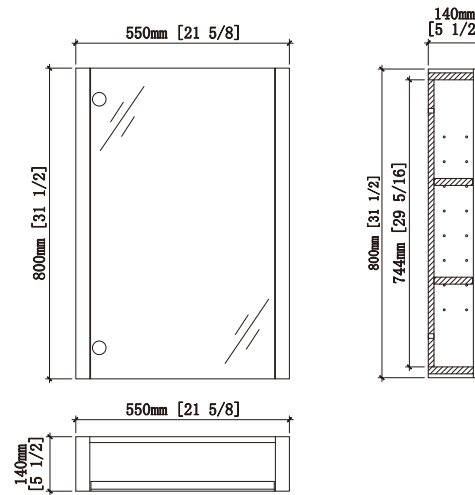






**24"** 21-5/8" X 5-1/2" X 31-1/2 "

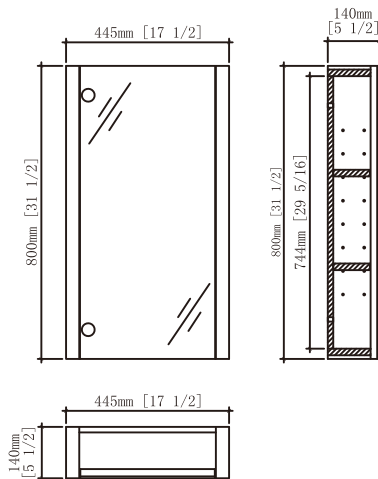


**20"** 17-1/2 X 5-1/2" X 31-1/2 "



Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		4pcs	   	
B	Screws (Ø4 x 68mm)		4pcs		
C	Stainless steel cover		4pcs		


**STEP 1**

1. Drill the holes with suitable drill-bits base on different condition of the wall.
2. Use a hammer to knock the white expansion rubber plug into the hole.

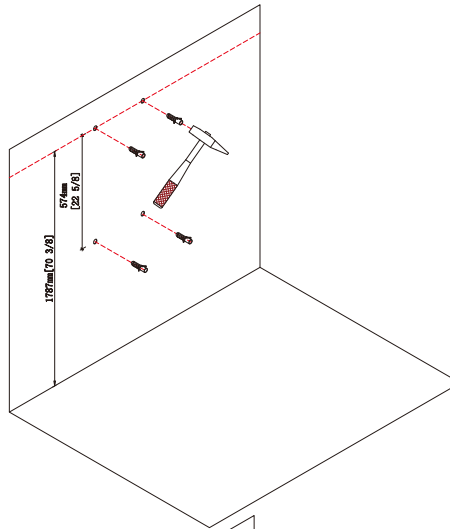

**STEP 2**

Align the holes in the wall and lock the mirror cabinet to the wall with screws.

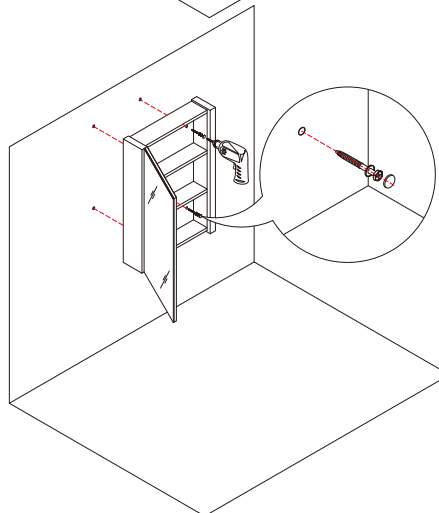

**STEP 3**

Finish

