


INSTALLATION


IN 3 EASY STEPS

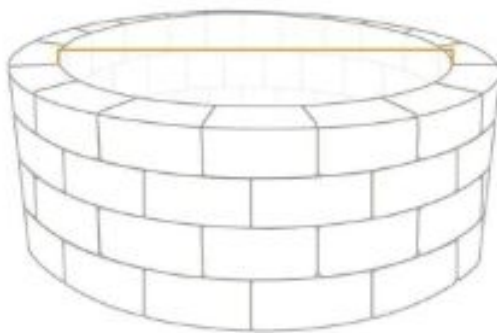

STEP 1

Ensure that you have the correct size block fire surround for your new Zentro® smokeless fire pit (see table below).

ZENTRO SIZE:	BLOCK SURROUND NEEDED:
ZENTRO 24"	27" - 33" INSIDE DIAMETER
ZENTRO 30"	34" - 39" INSIDE DIAMETER

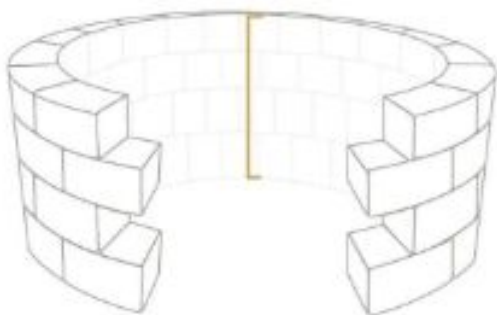

STEP 2

Ensure that the depth of your block fire surround is at least 15 inches; this will provide 3 inches of air space underneath the fire pit insert for air flow. Ensure that nothing is touching the bottom or the sides of your Zentro fire pit as this will affect airflow and interfere with the smoke reduction technology. Remove any debris or ashes from the inside of the block fire surround if necessary.



STEP 3

Using 2-3 people, set the fire pit into the block fire surround. The Zentro fire pit has 1/8" spacer brackets welded to the underside of the top flange. Your Zentro fire pit insert is positioned correctly when these spacer brackets are resting on the top layer of the block fire surround.