




GENUINE ALUMINUM BRAKE PEDAL KIT (AT VEHICLES)


INSTALLATION AND USER'S INSTRUCTIONS

Thank you for purchasing a genuine Mazda accessory.
Before removal and installation, be sure to thoroughly read these instructions.
Please read the contents of this booklet in order to properly install and use the aluminum brake pedal kit. Your safety depends on it.
Keep these instructions with your vehicle records for future reference.

WARNING

- There are several  **WARNING** and  **CAUTION** sections in this booklet concerning safety when installing or removing the aluminum brake pedal kit. Always read and follow them in order to prevent injuries, accidents, and possible damage to the vehicle.

 **WARNING:** Indicates a situation in which serious injury or death could result if the warning is ignored.

 **CAUTION:** Indicates a situation in which bodily injury or damage to the vehicle could result if the caution is ignored.

- For areas indicating the tightening torque in this instruction manual, tighten to the specified torque using a torque wrench. For areas in which the tightening torque is indicated inside parentheses (), the tightening torque is indicated as a reference value, however tightening using a torque wrench is not necessary.
- Do not modify the aluminum brake pedal kit.
- Do not install the aluminum brake pedal kit in any way other than described in the following instructions.
- If in any doubt, please ask your Mazda dealer to install the accessory in order to prevent errors in installation.
- If you have any questions about the use of the accessory, ask your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arise from the failure of the dealer or installer to follow these instructions.
- To ensure safety and reliability of the work, installation, removal and disposal work must be carried out by an Authorized Mazda Dealership.
- Be careful not to lose removed parts, and be sure that they are kept free from scratches, grease or other dirt.

PART NAME: Aluminum brake pedal kit
PART NUMBER: K0N1 V9 093 (US)
K0E1 V9 093 (EU)
VEHICLE: Cross Carline

NOTE


To the dealer

- Please turn over these instructions to the customer after installation.

To the customer



- Keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessory.
- Should the vehicle or this accessory be resold, always leave these instructions with it for the next owner.

1. INSTALLATION VIEW

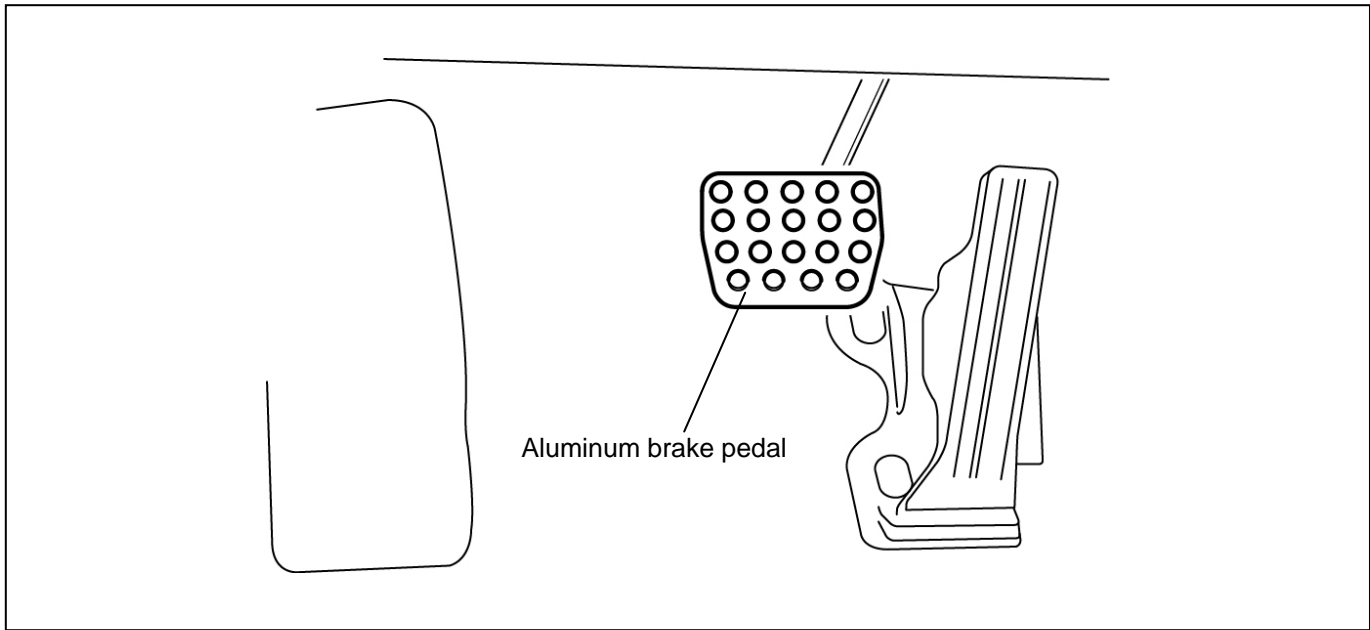

2. PARTS

- Before installation, verify that the kit includes all the following parts and that they are free of dirt, scratches, or damage.

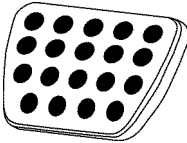Part	Part name	Qty	Part	Part name	Qty
	Aluminum brake pedal pad	1		Installation and user's instructions	1


3. BEFORE INSTALLATION

■ REQUIRED TOOLS

☆Flathead screwdriver ☆Trim removal tool ☆Mild detergent ☆Soft clean cloth


⚠ WARNING

Before performing any work, park the vehicle on level ground, apply the parking brake securely, and then block the wheels. If the vehicle moves while performing work, it could cause a serious accident.




⚠ CAUTION


Be sure to cover the vehicle body with protectors or mats to prevent stains, scratches and damage when removing/installing the vehicle parts

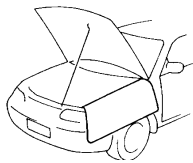

Wrap protective tape around screwdrivers and fastener remover tools to prevent scratching the vehicle.

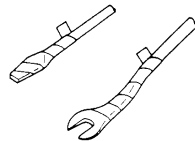

Put the removed parts and the parts in the kit on the protective sheet to prevent scratches.

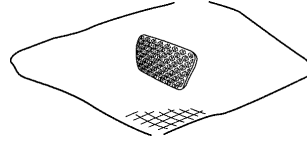


Note

Refer to the Workshop Manual for removal and installation of vehicle parts. Not following the procedures for removal/installation in the Workshop Manual could result in an accident or vehicle malfunction.




4. ALUMINUM BRAKE PEDAL INSTALLATION

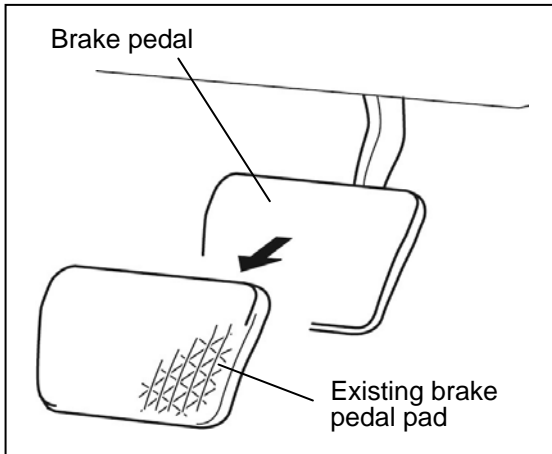

Existing brake pedal pad removal


1. Remove the brake pedal pad.

- The removed pads are not used for installation of this kit. Store the removed parts carefully in a safe place.

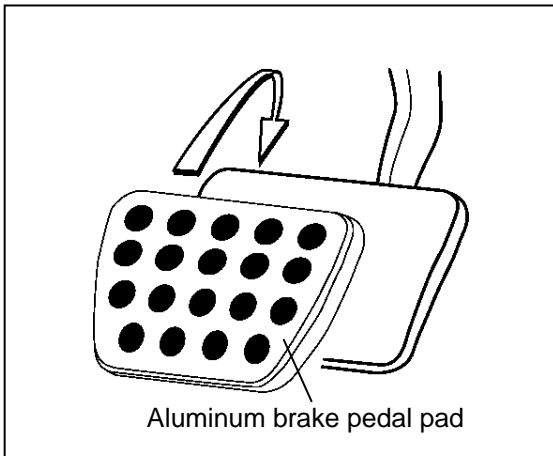

Aluminum brake pedal pad installation

1. Pour lukewarm water into a basin.
2. Add mild detergent to the lukewarm water to a 5 % solution.
3. Soak the pedal pad in the solution until the rubber rim of the pedal pad is softened sufficiently. Pull the pedal pad out of the basin, and wipe off its surface and back side using a soft, clean cloth.
4. Stretch the rubber rim of brake pedal pad over the top part of the brake pedal.

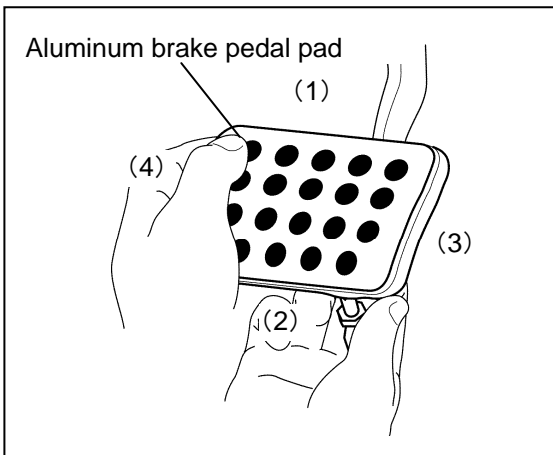

5. Insert a flathead screwdriver wrapped with Protective tape (stubby type) into the bottom underside gap between the brake pedal and the rubber rim of the brake pedal pad.
6. While stretching the rubber rim outward, install the brake pedal pad so that it covers the pedal completely in the order of (1), (2), (3), and (4) shown in the figure.

- Make sure that the brake pedal pad is securely installed to the brake pedal.

-TO THE CUSTOMER-

- Please check that there are no slack or vibration of screw. Periodical inspection is required.
- Please be careful of the following points for taking care of this product.
 1. Please do not use hard tools, such as brush when you wash this. It may damage the surface.
 2. Please wash the product with water after using thinned neutral detergent, when it is hard to clean off by washing without soap.