





How to Assemble a Pest Wizard® Mini Paper Delta Trap

INSTRUCTIONS:

- Overlap both ends of the trap to form a triangle.
- Use 2 round stickers (included) to hold the overlapped trap ends together.
- Insert the adhesive liner and pheromone lure.
- Place this fully assembled trap in an open area where air can drift across the pheromone lure.
- If the pests that this traps is designed to attract are present within 10 to 12 feet of the lure, they will land on the adhesive liner insert. Replace the liner as often as needed. Replace the lure every 90 days.

INSTRUCCIONES DE USO:

- Coloque un extremo de la trampa sobre el otro extremo.
- Utilice 2 pegatinas redondas para unir los extremos de la trampa.
- Inserte el revestimiento adhesivo y el señuelo de feromonas.
- Coloque esta trampa completamente ensamblada en un área abierta donde el aire pueda atravesar el señuelo de feromonas.
- Coloque la trampa en un area abierta para atraer y matar estan presentes dentro de 10 a 12 pies de la carnada, aterrizará en el revestimiento adhesivo. Vuelva a colocar el revestimiento adhesivo tantas veces como fuera necesario. Los señuelos de feromonas seguira atrayendo estas plagas por 90 dias.

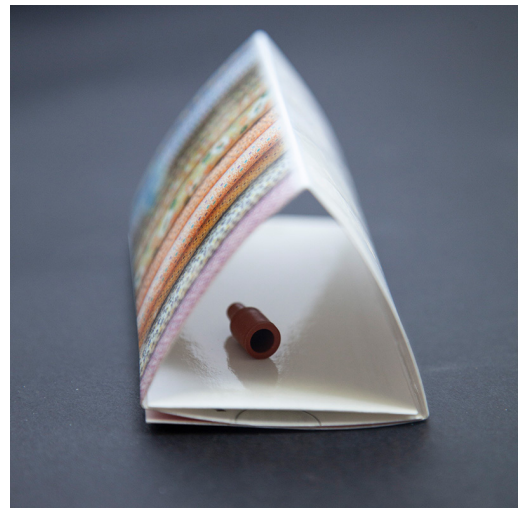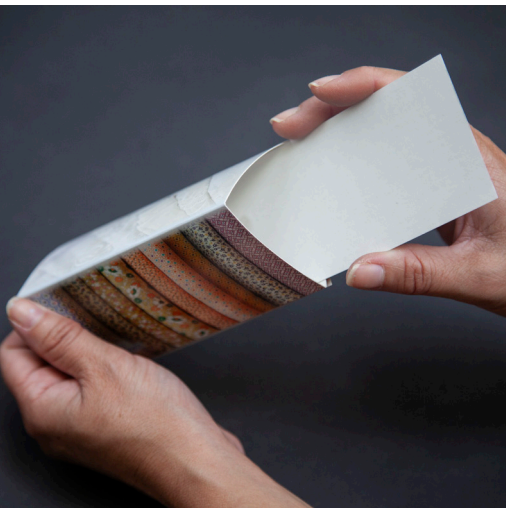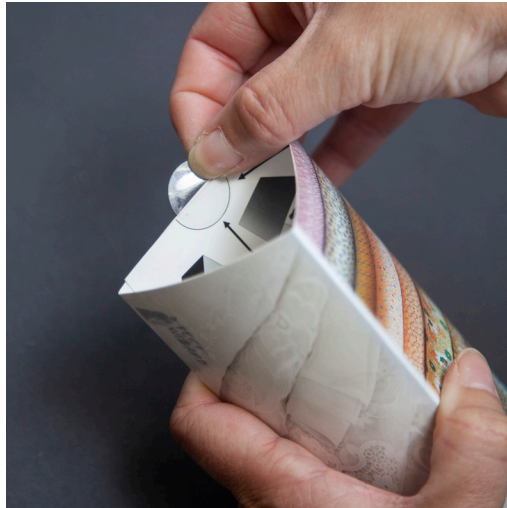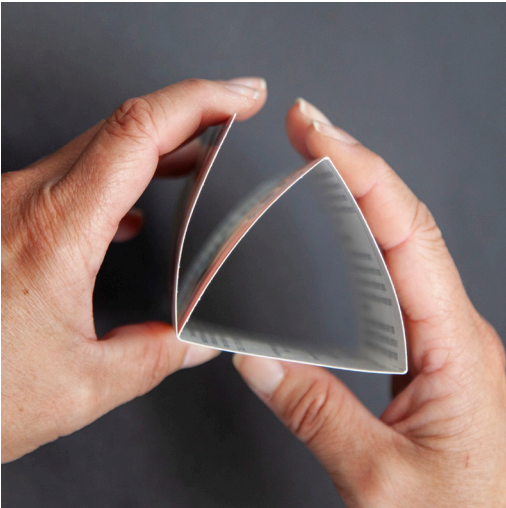

For more information and to find a retailer near you, visit www.pestwizard.com