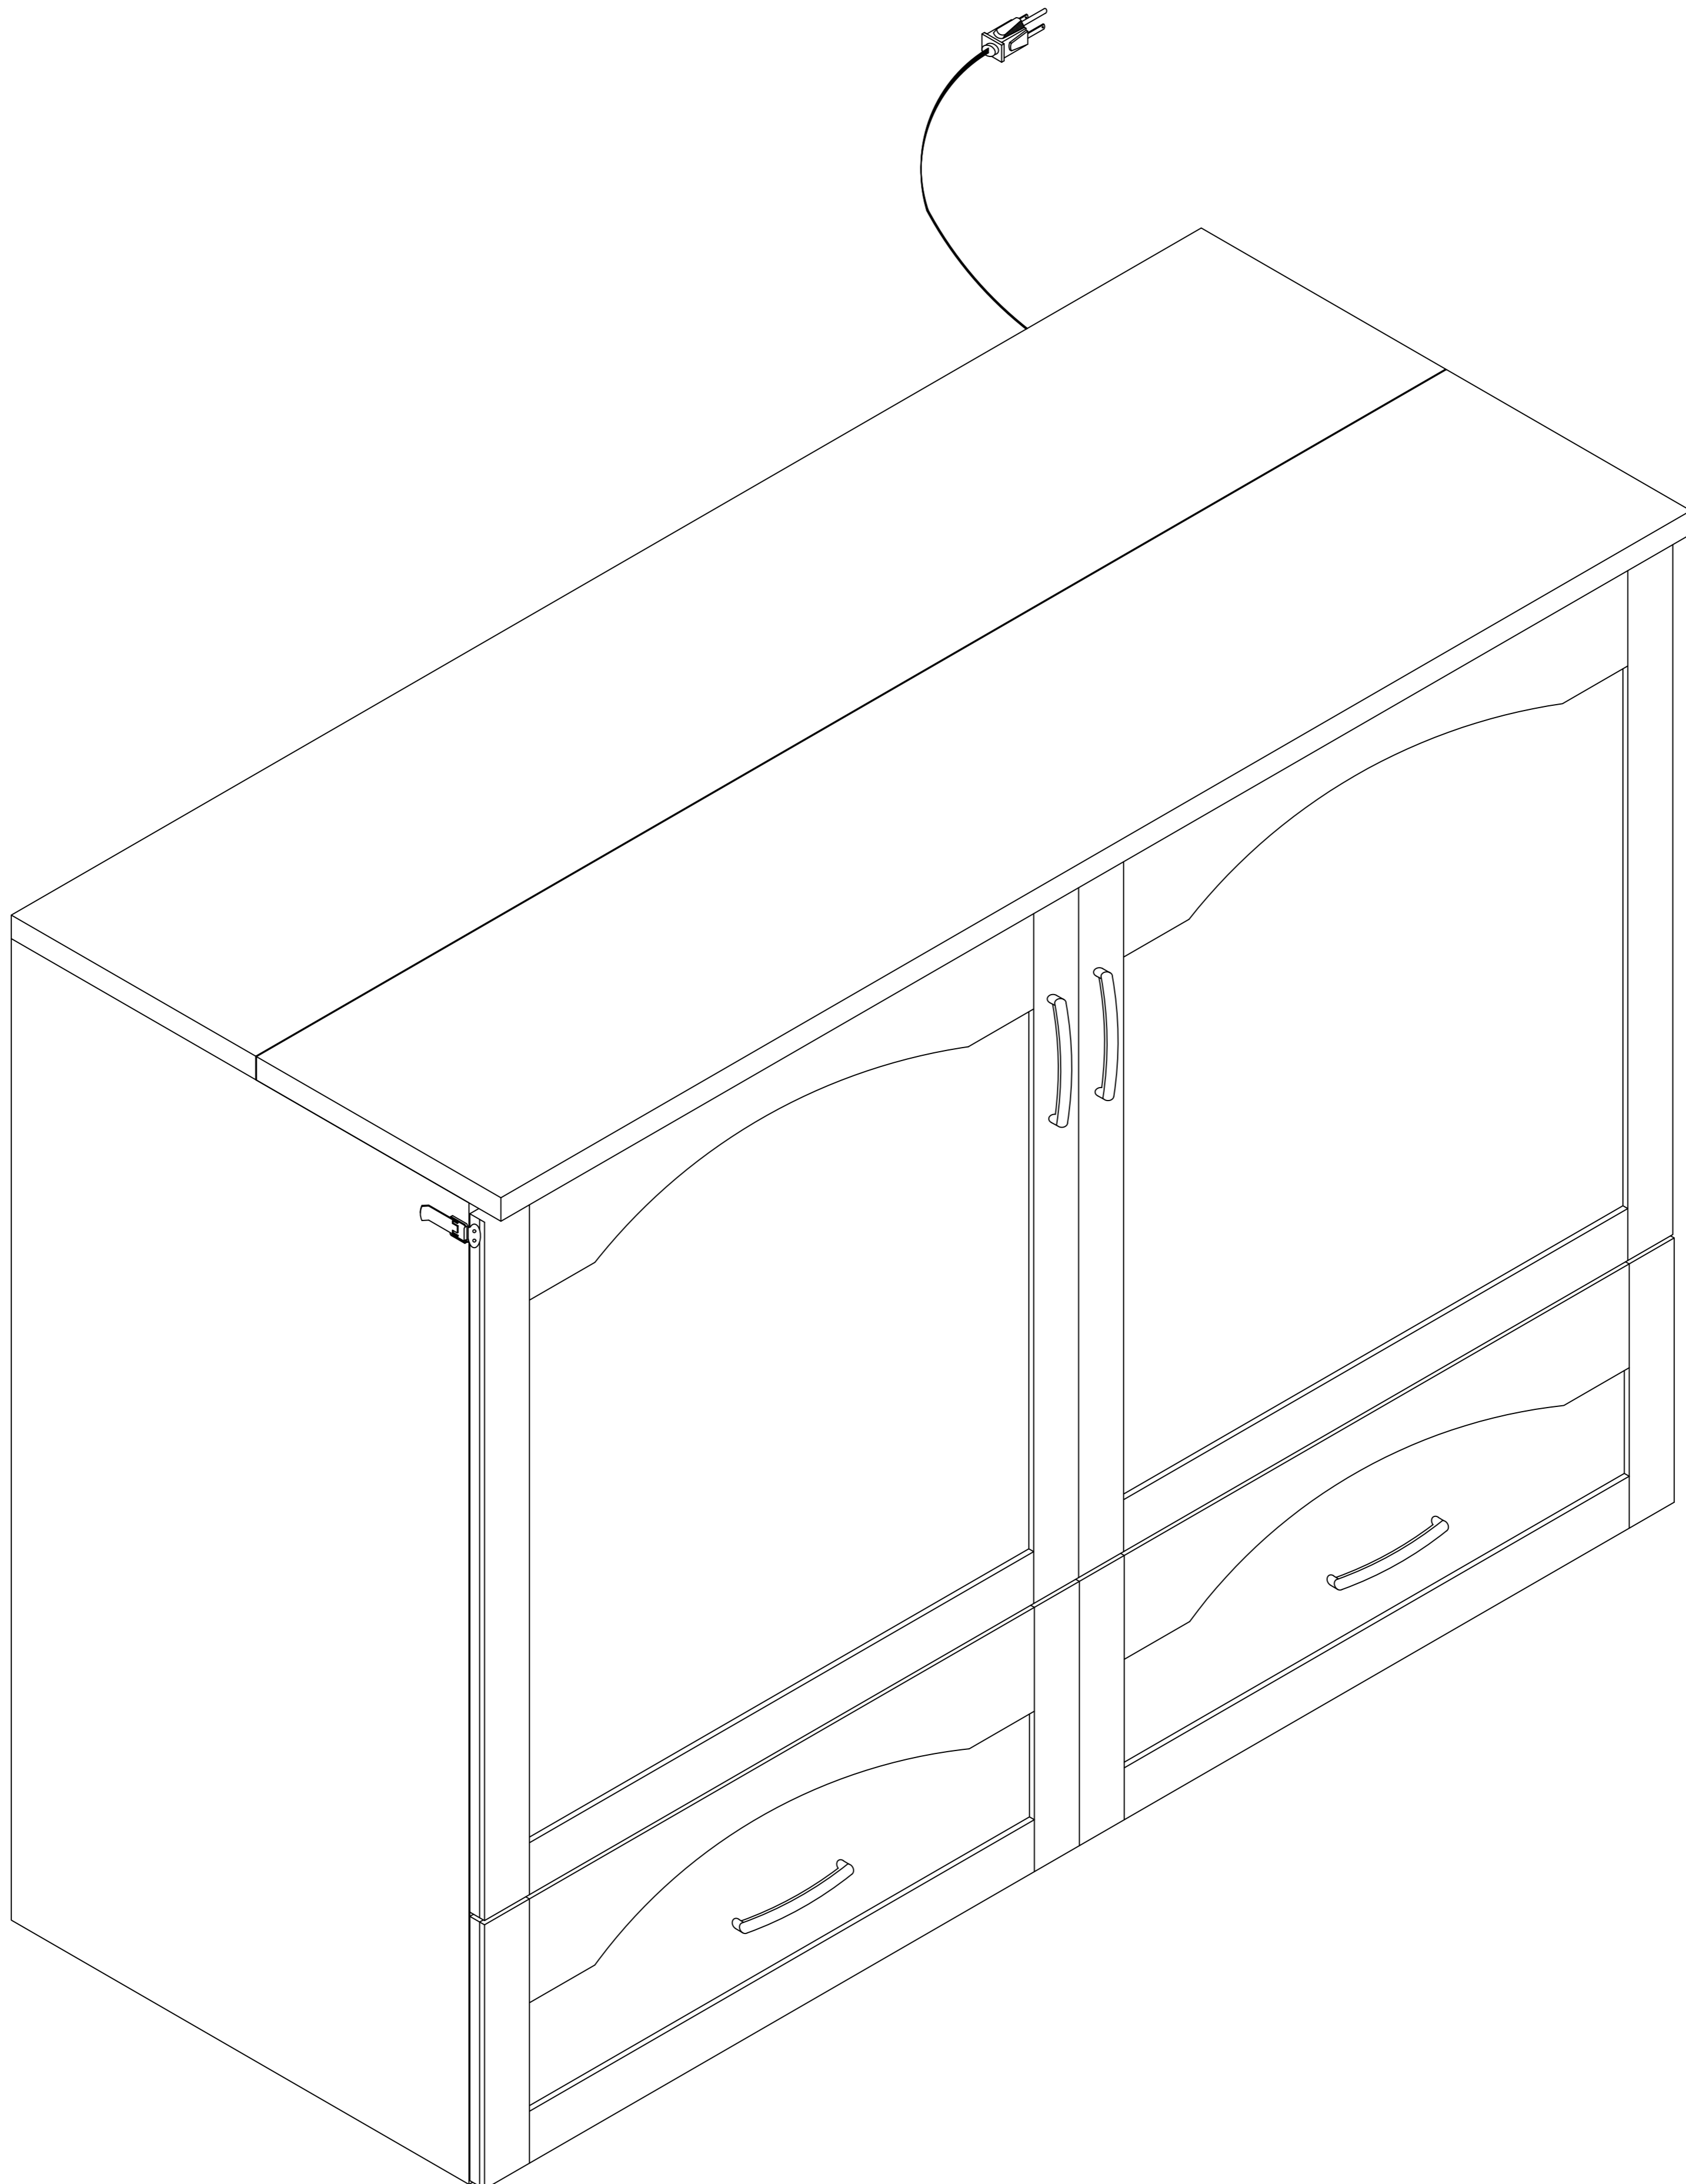


ASSEMBLY INSTRUCTIONS
Item No : WF310398 + WF310401 + WF310402
Description : Murphy Full Bed

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

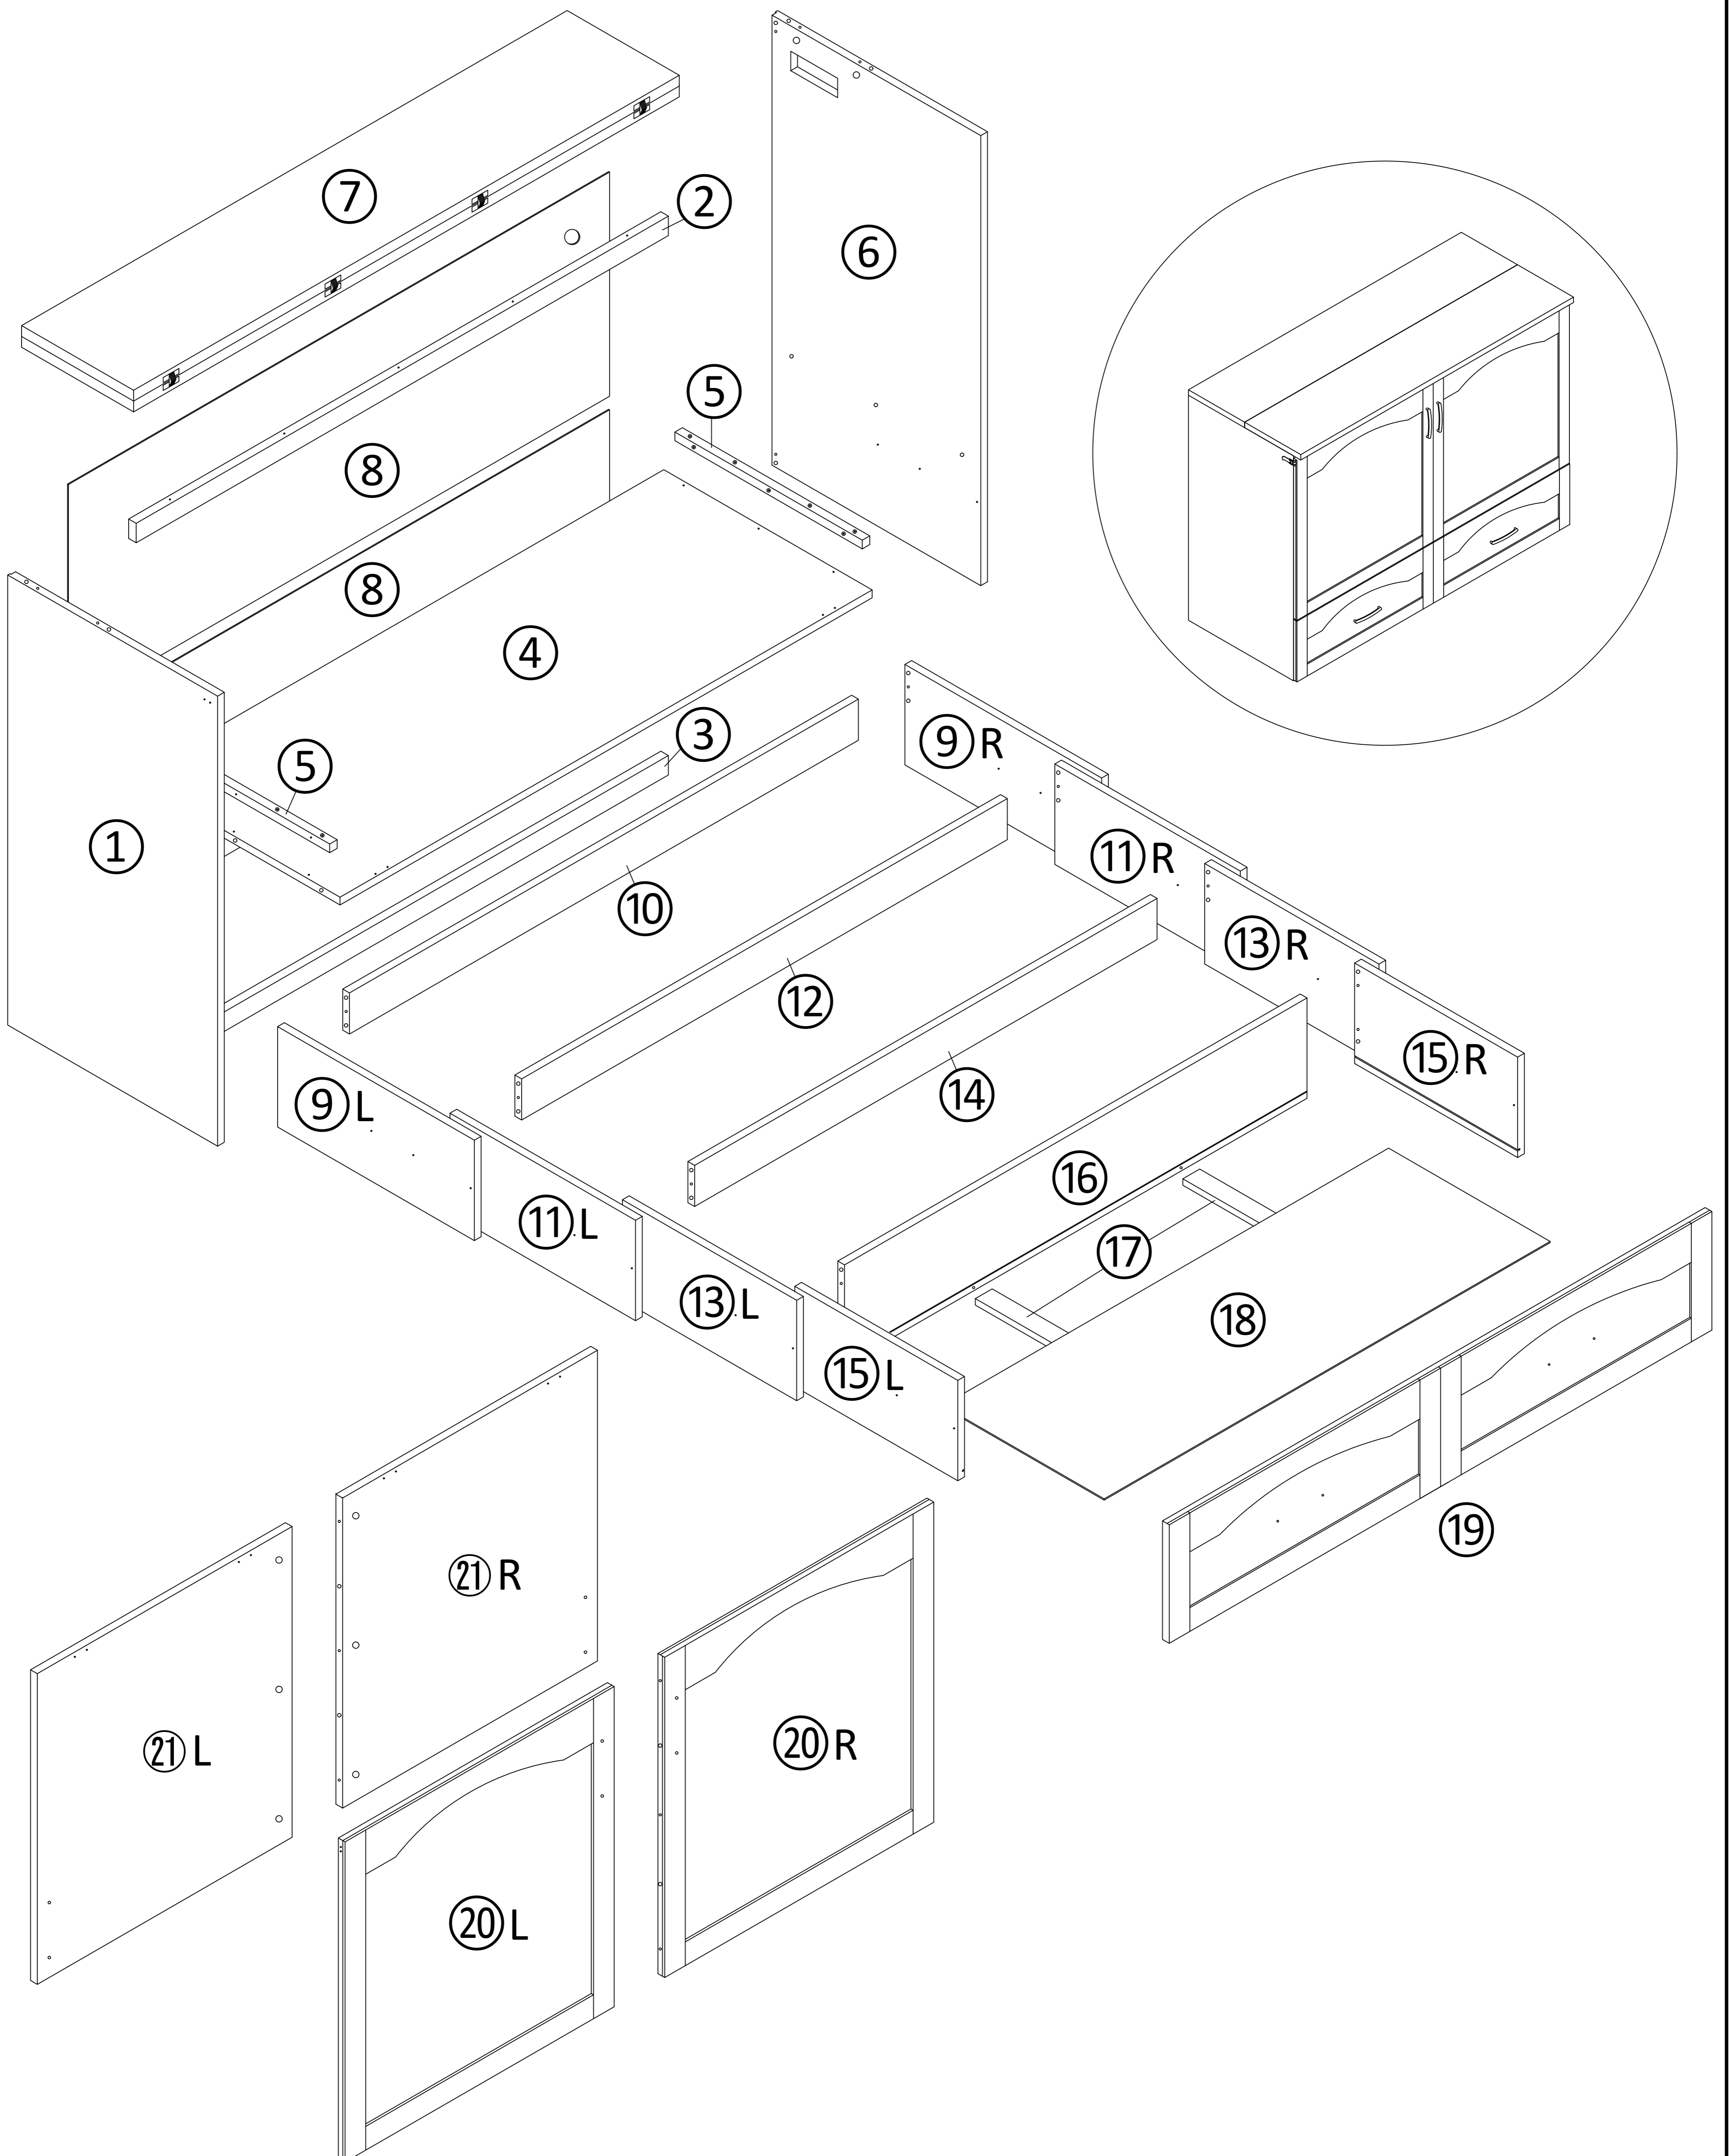
Applicable Folding Mattress Size: +- 54" x 25" x 18"
(Unfolded Size +- 54"x 75" x 6")










WF310398 + WF310401 + WF310402

ASSEMBLY INSTRUCTIONS
Item No : WF310398 + WF310401 + WF310402
Description : Murphy Full Bed









Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



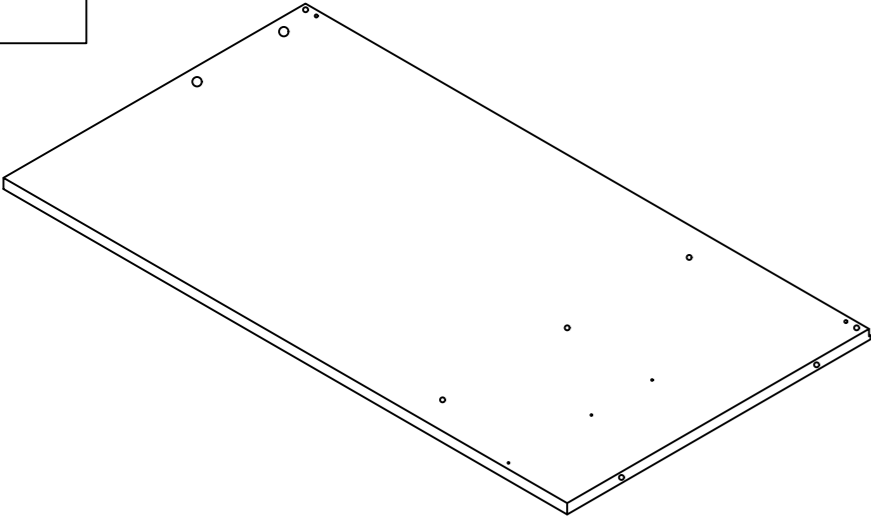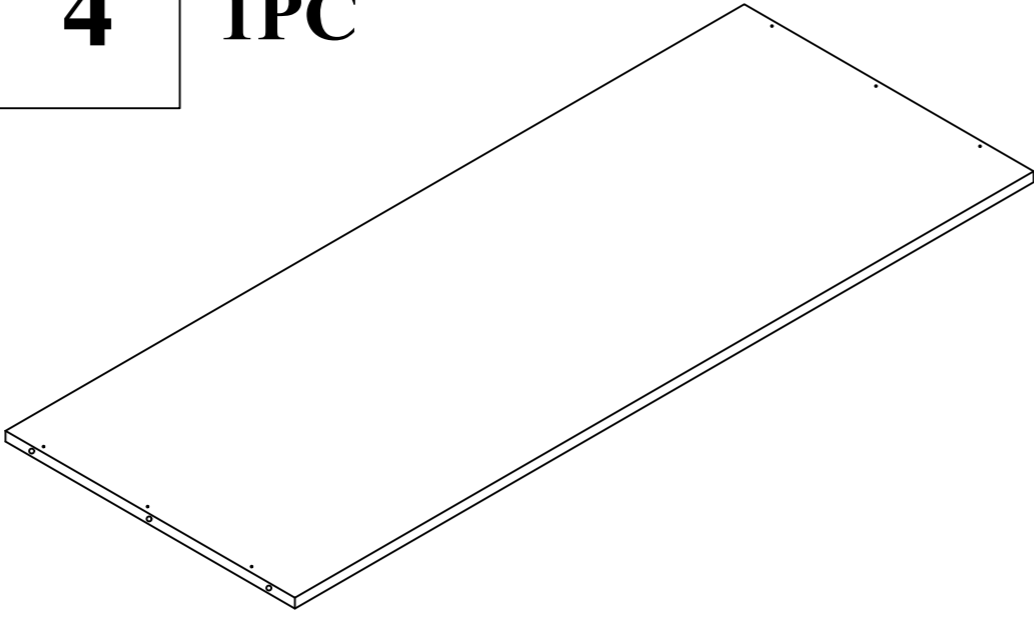
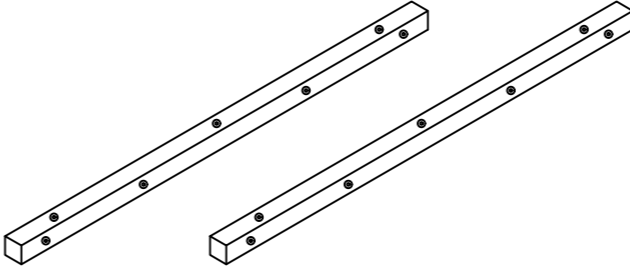
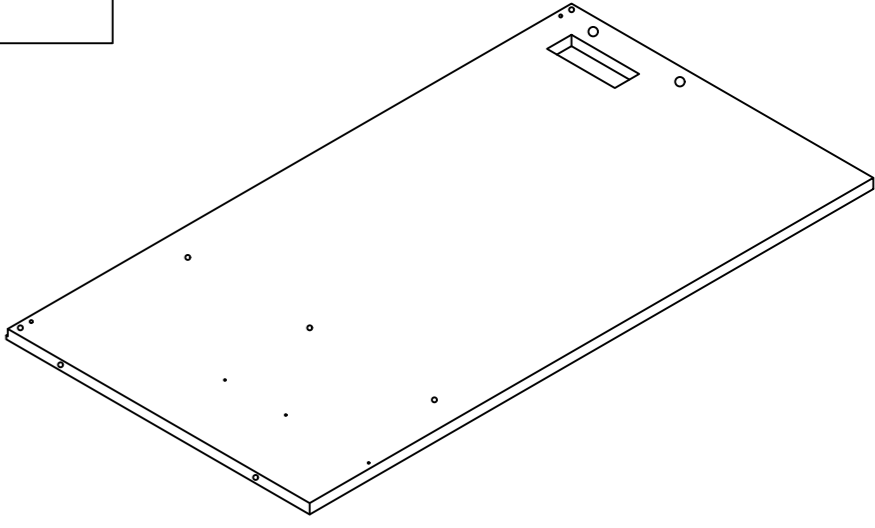
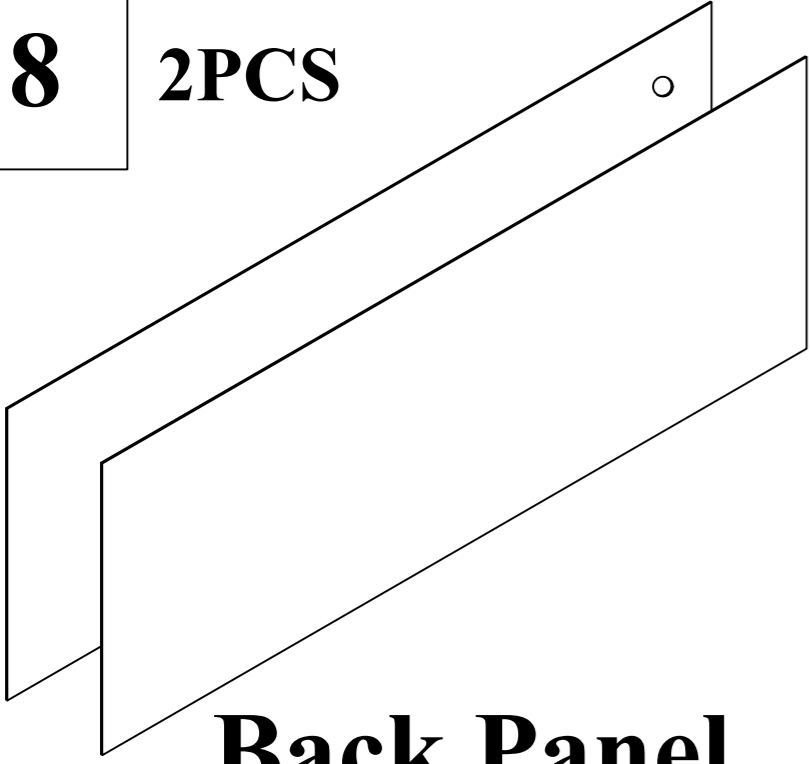
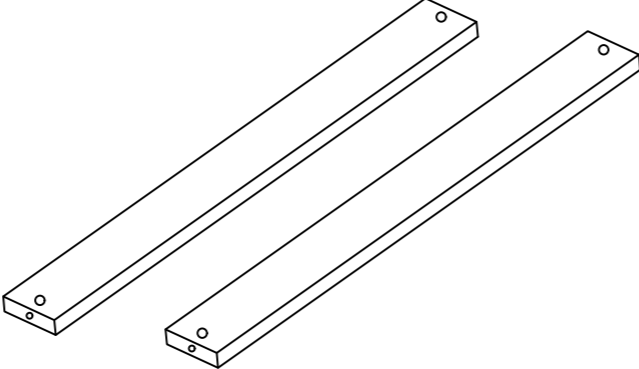
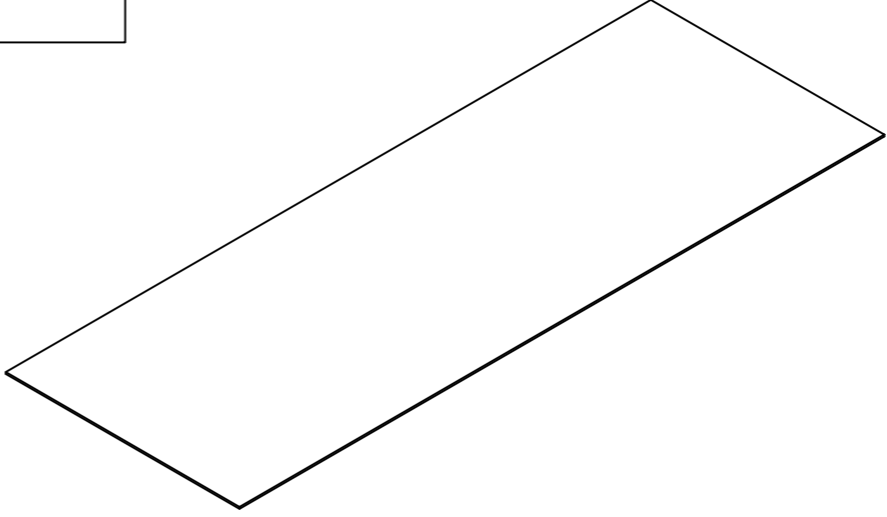
PART LIST & HARDWARE LIST (BOX 1 : WF310398)

11PC 	41PC 	52PCS 	61PC 
Left Panel	Bottom Panel	Connection Rail	Right Panel
82PCS 	172PCS 	181PC 	
Back Panel	Drawer Base Support	Drawer Base	

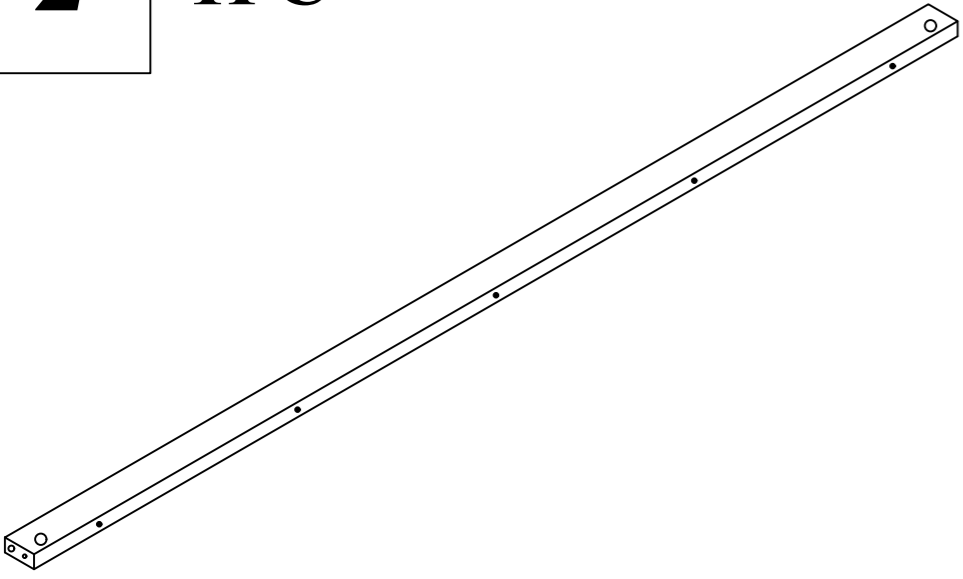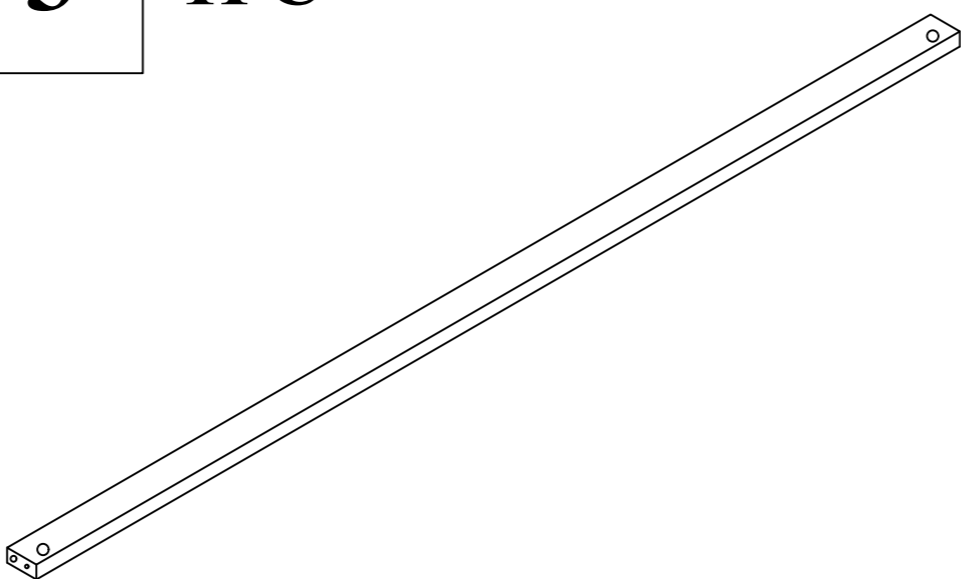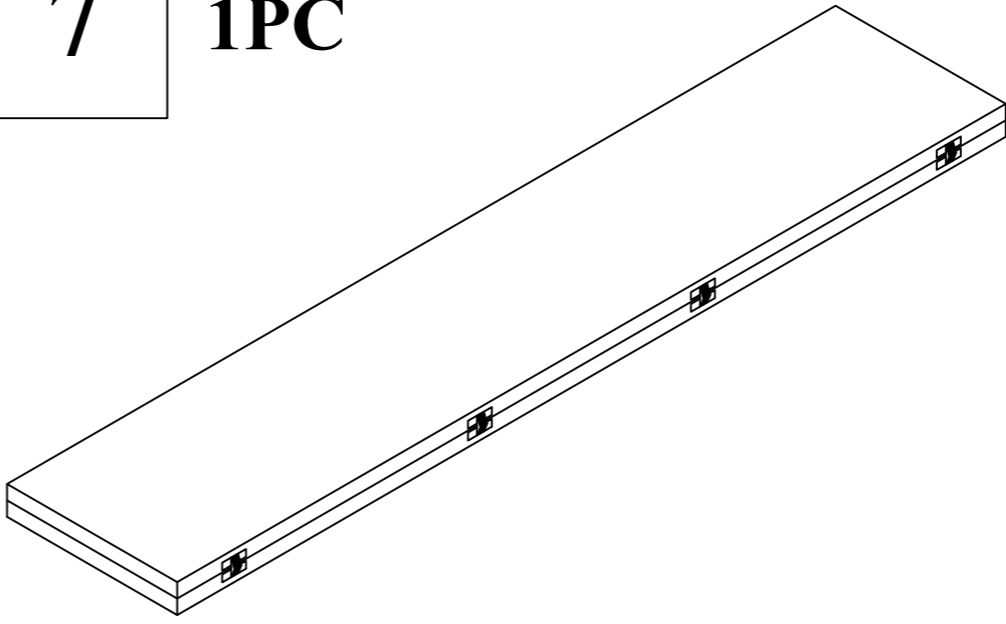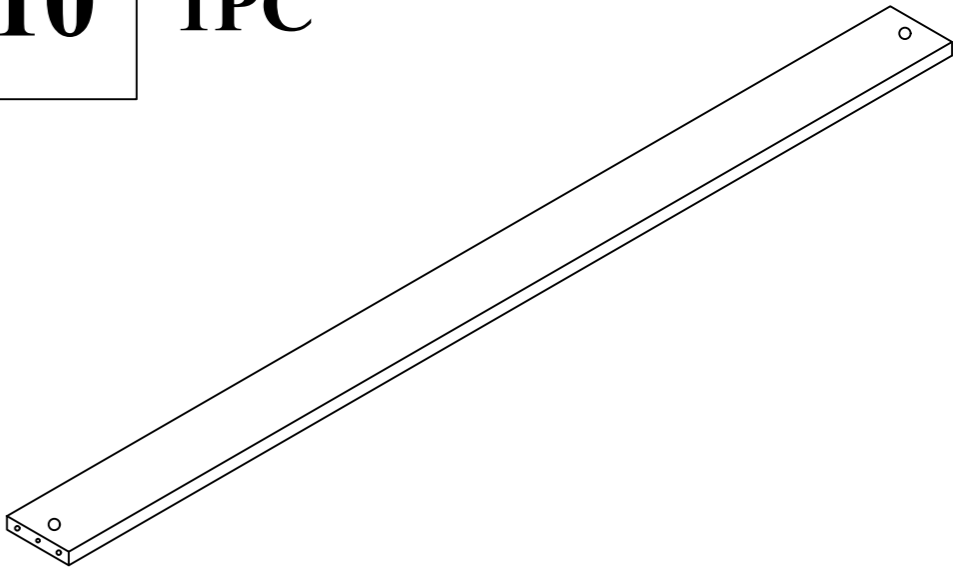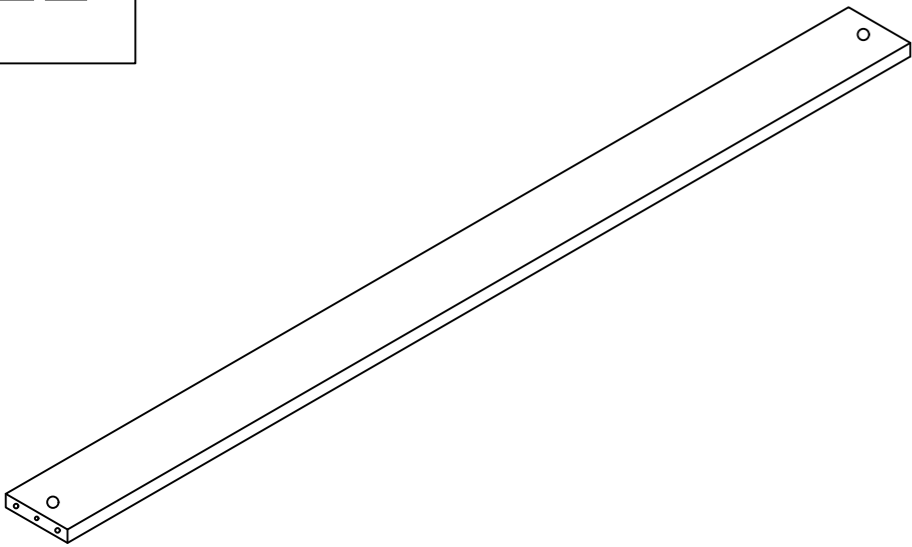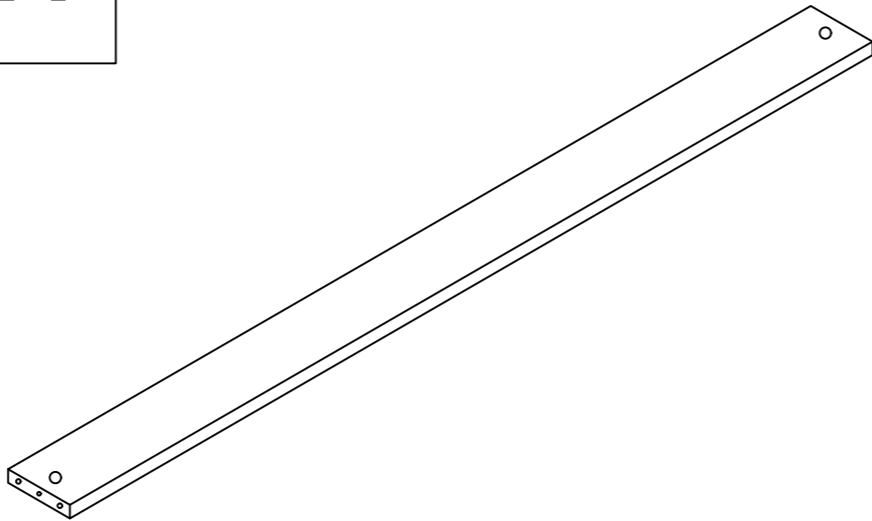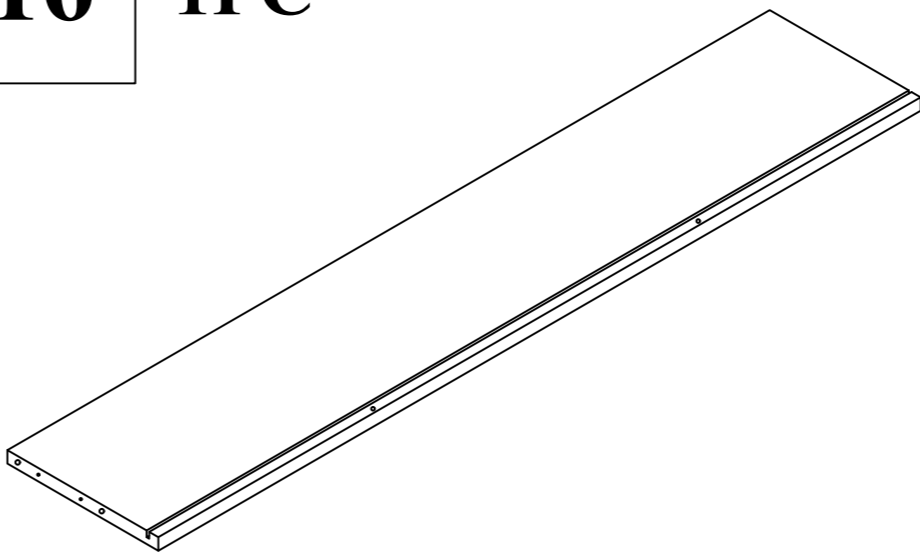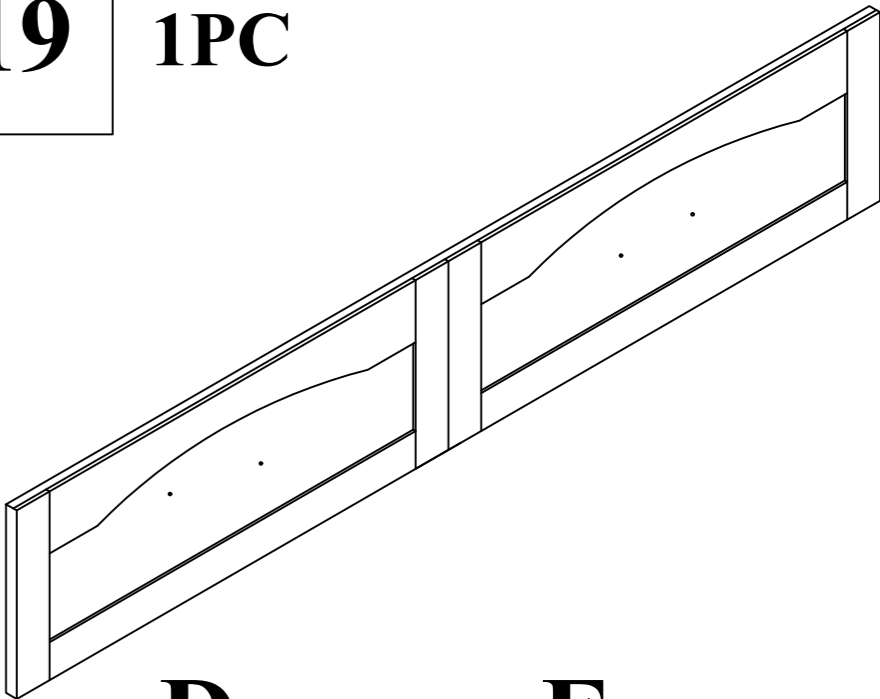PART LIST& HARDWARE LIST (BOX 2 : WF310401)
















21PC 	31PC 	71PC 	101PC 
Top Rail	Bottom Rail	Top Panel	Extension Back 1
121PC 	141PC 	161PC 	191PC 
Extension Back 2	Extension Back 3	Drawer Back	Drawer Face

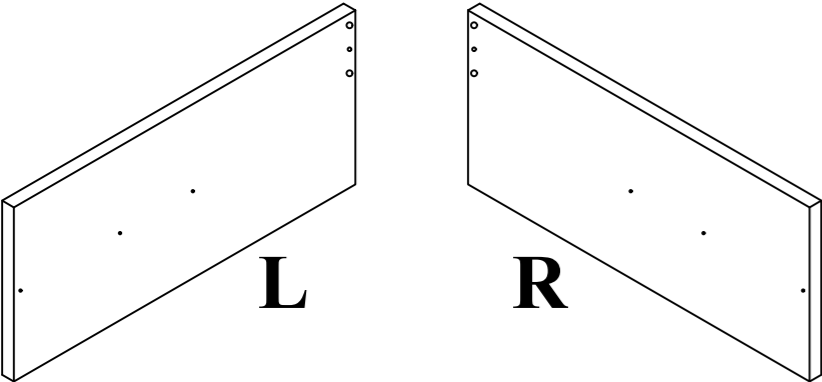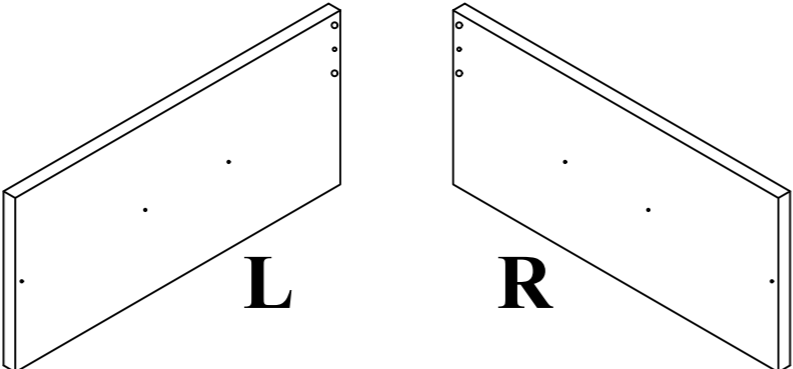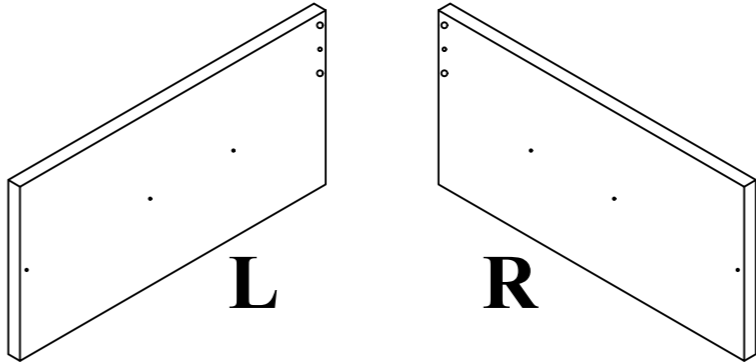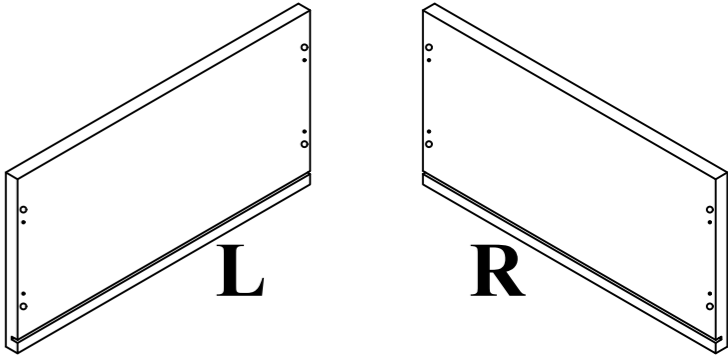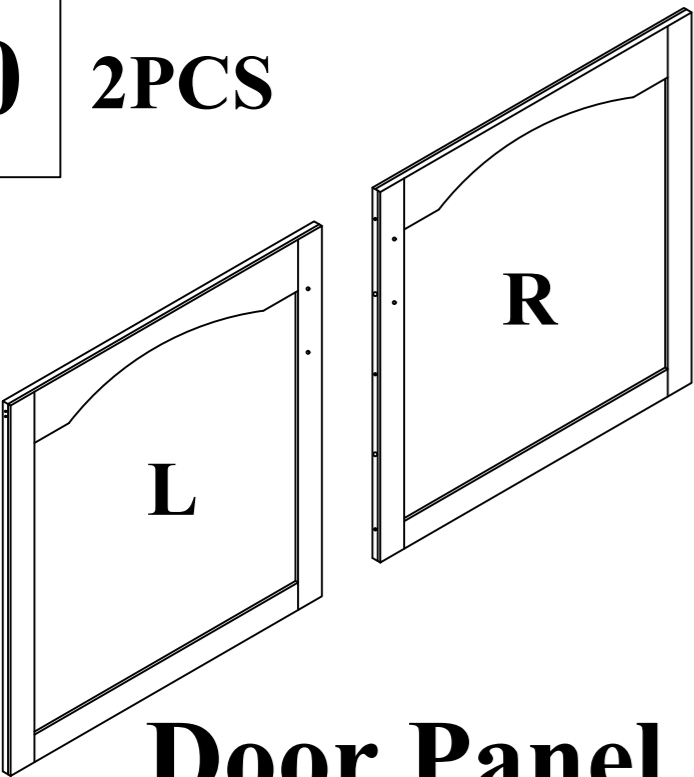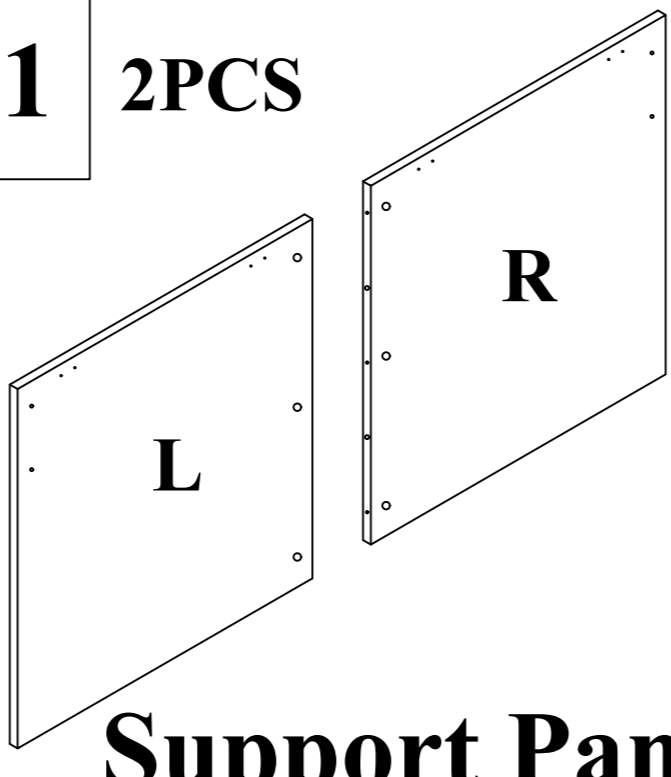PART LIST (BOX 3 : WF310402)



92PCS 	112PCS 	132PCS 	152PCS 
Extension Side 1	Extension Side 2	Extension Side 3	Drawer Side
202PCS 	212PCS 		
Door Panel	Support Panel		


Hardware list as below. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment. Apply a battery screw machine for better assembly experience. You are encouraged to get help from at least one person to assembly. This assembly will take around 60minutes.

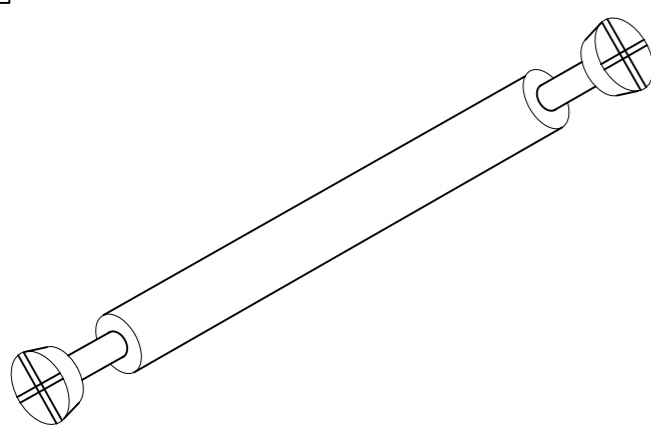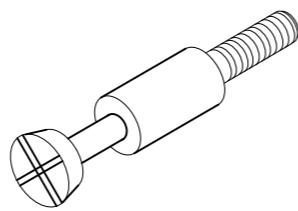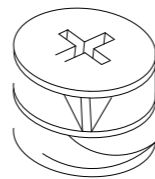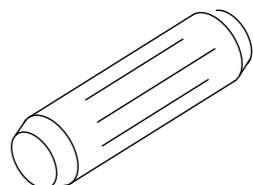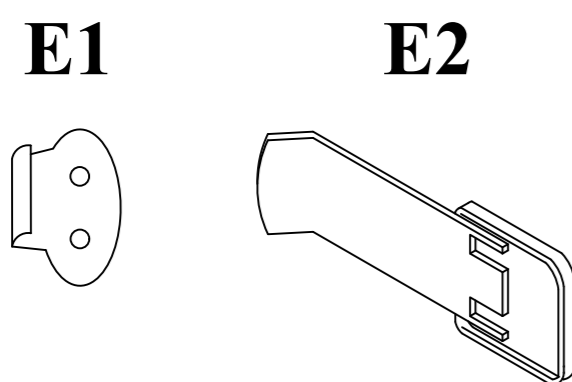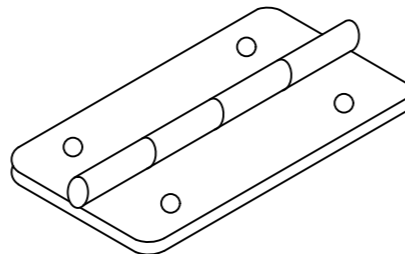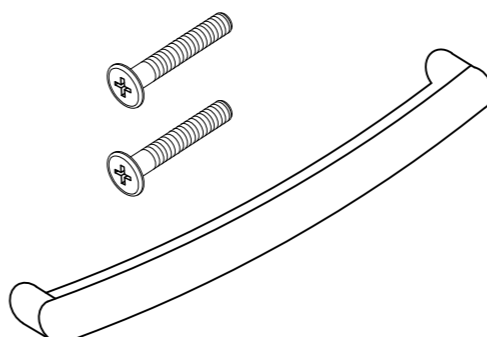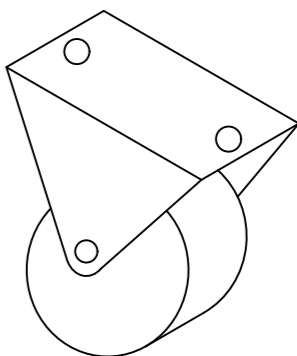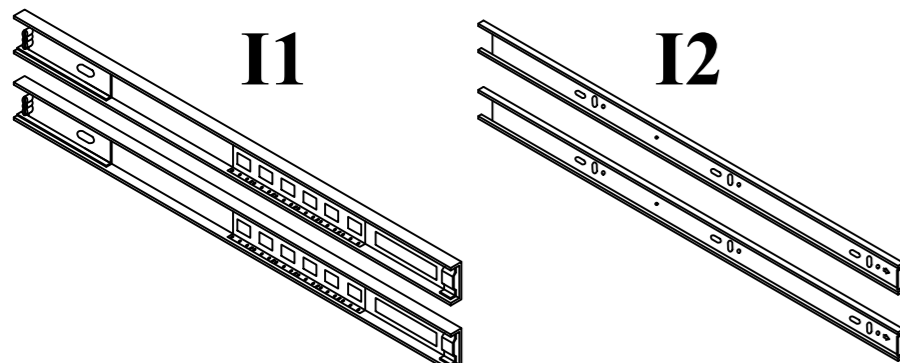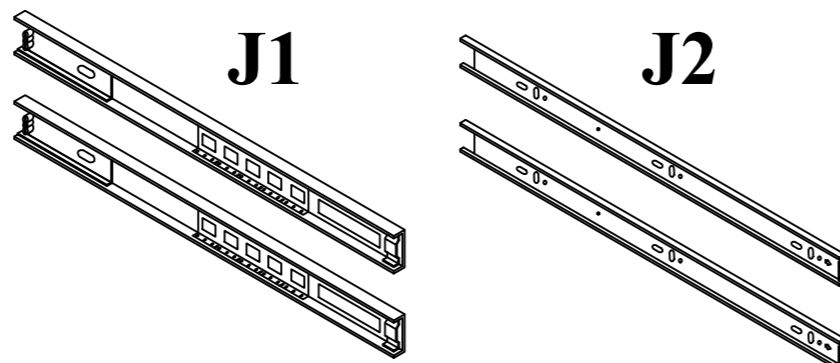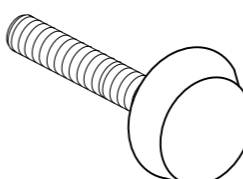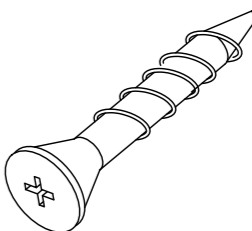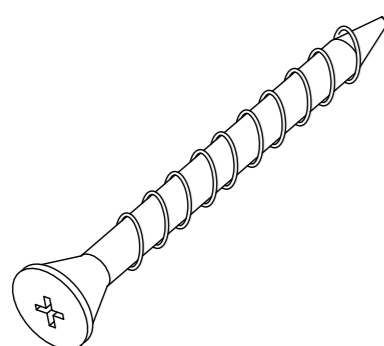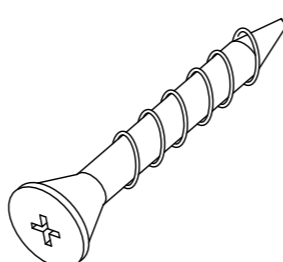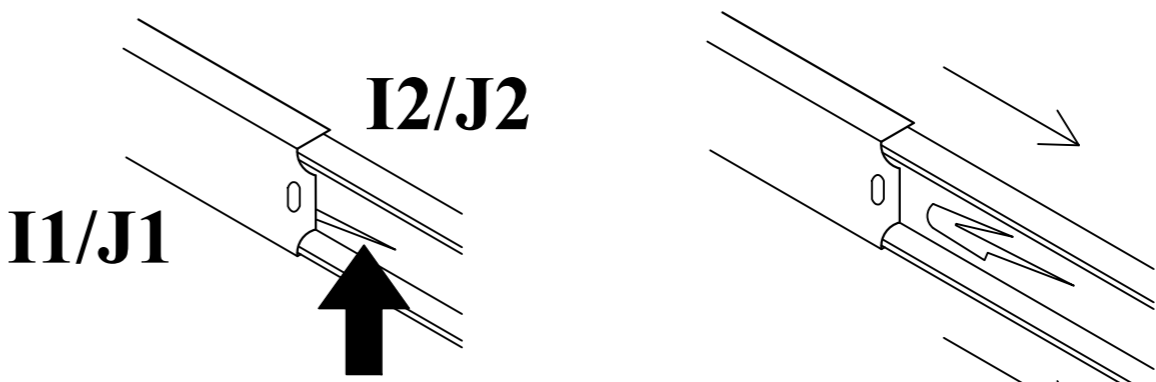HARDWARE LIST (BOX 1 : WF310398)


A	6PCS		B	18PCS		C	30PCS		D	38PCS	
Double End Bolt			Minifix			Minifix Cap			Wood Dowel M8x30MM		
E	2SETS		F	8PCS		G	6SETS		H	12PCS	
Cam Lock			2" Hinges			Handle with Screw 20mm			Caster		
I	2SETS		J	2SETS		K	4PCS		L	140PCS	
Full Extension Drawer Slide 16"			Full Extension Drawer Slide 14"			Adjustor			Screw M3.5 x 16MM		
M	27PCS		N	24PCS							
Screw M4 x 32MM			Screw M4 x 20MM			Disconnect Levers Drawer Slides arrived connected (I1 to I2 and J1 to J2). To disconnect the slides for assembly, pull out the slides and find the plastic lever (white color) on I2/J2, push upward with finger and gently pull out the slide					

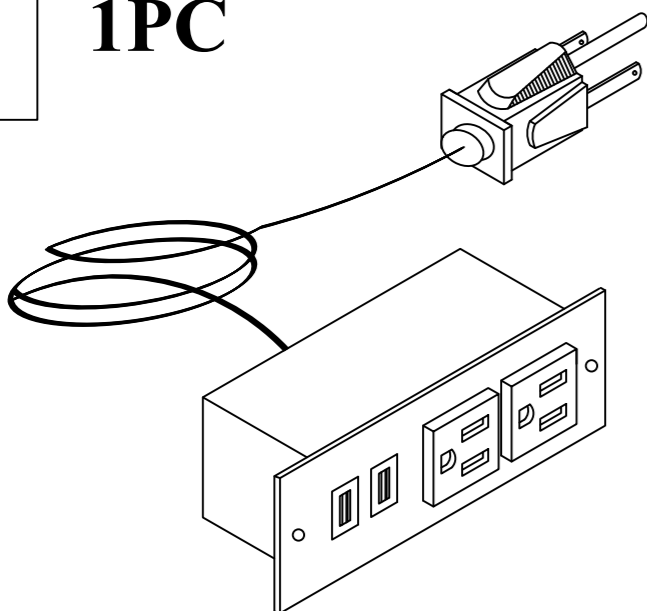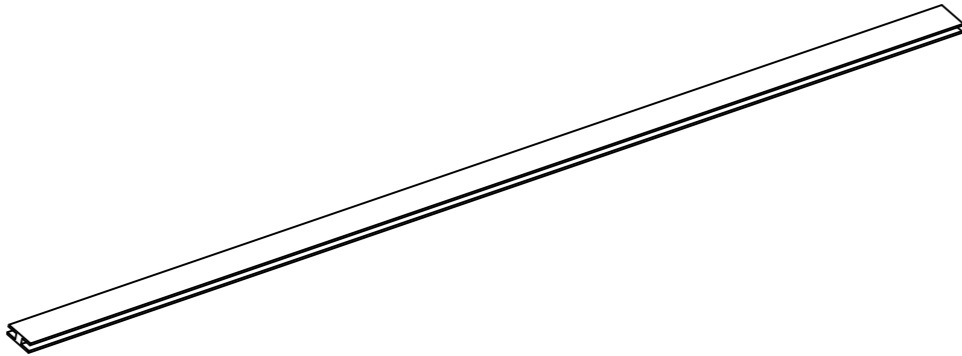HARDWARE LIST (BOX 2 : WF310401)


O	1PC		P	1PC	
USB Port			H - Connector 1418MM		






TOOLS REQUIRED (Provided)  Screwdriver

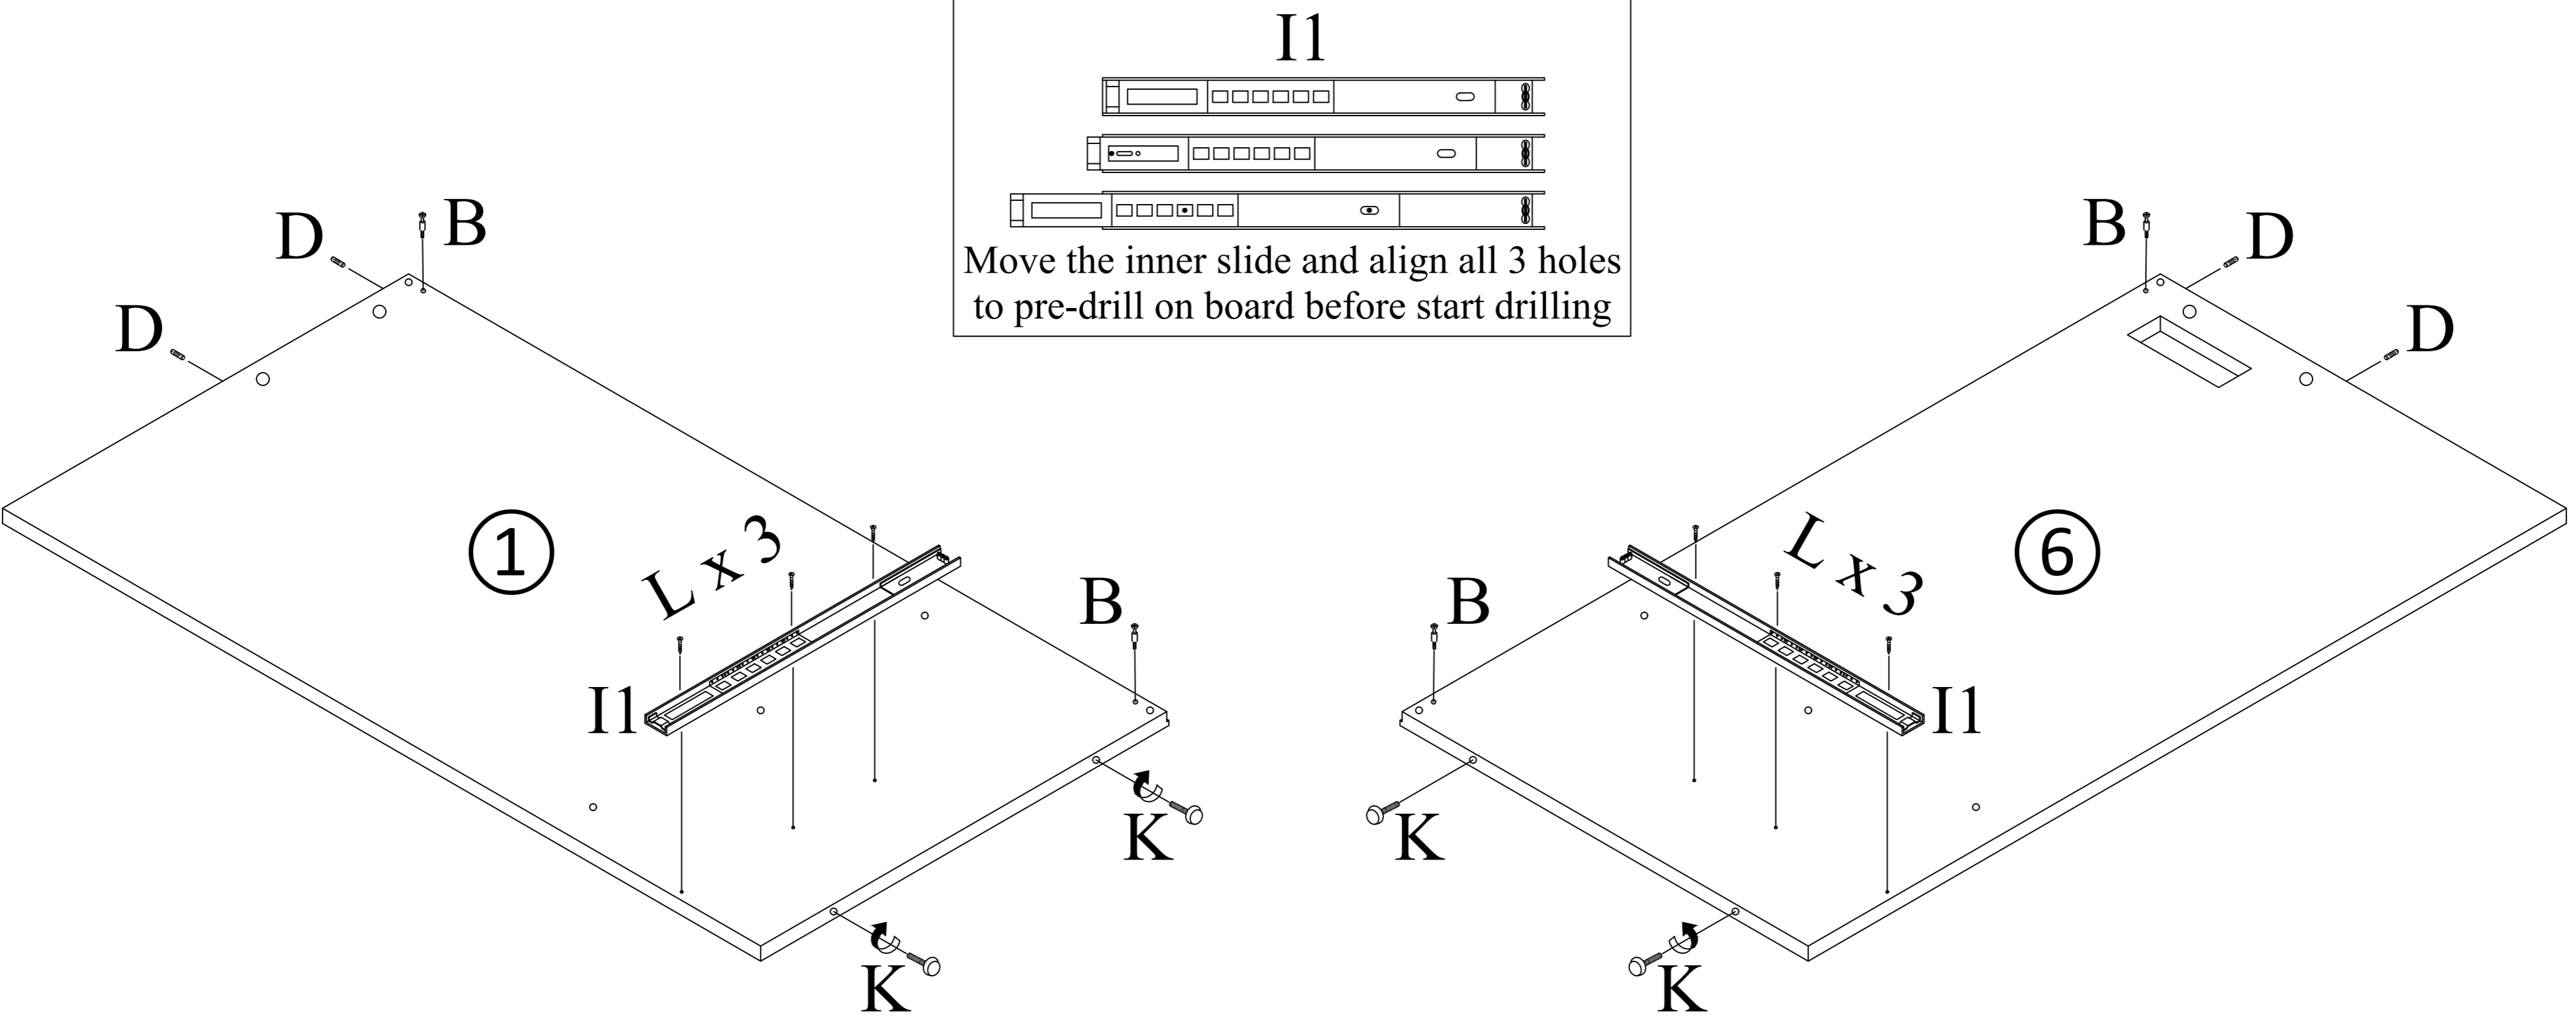Step 1
Attach Minifix (B), Dowel (D) and Adjustor (K) to Side Panel (1,6) accordingly.
Attach Drawer Slide 16" (I1) with screw (L).
















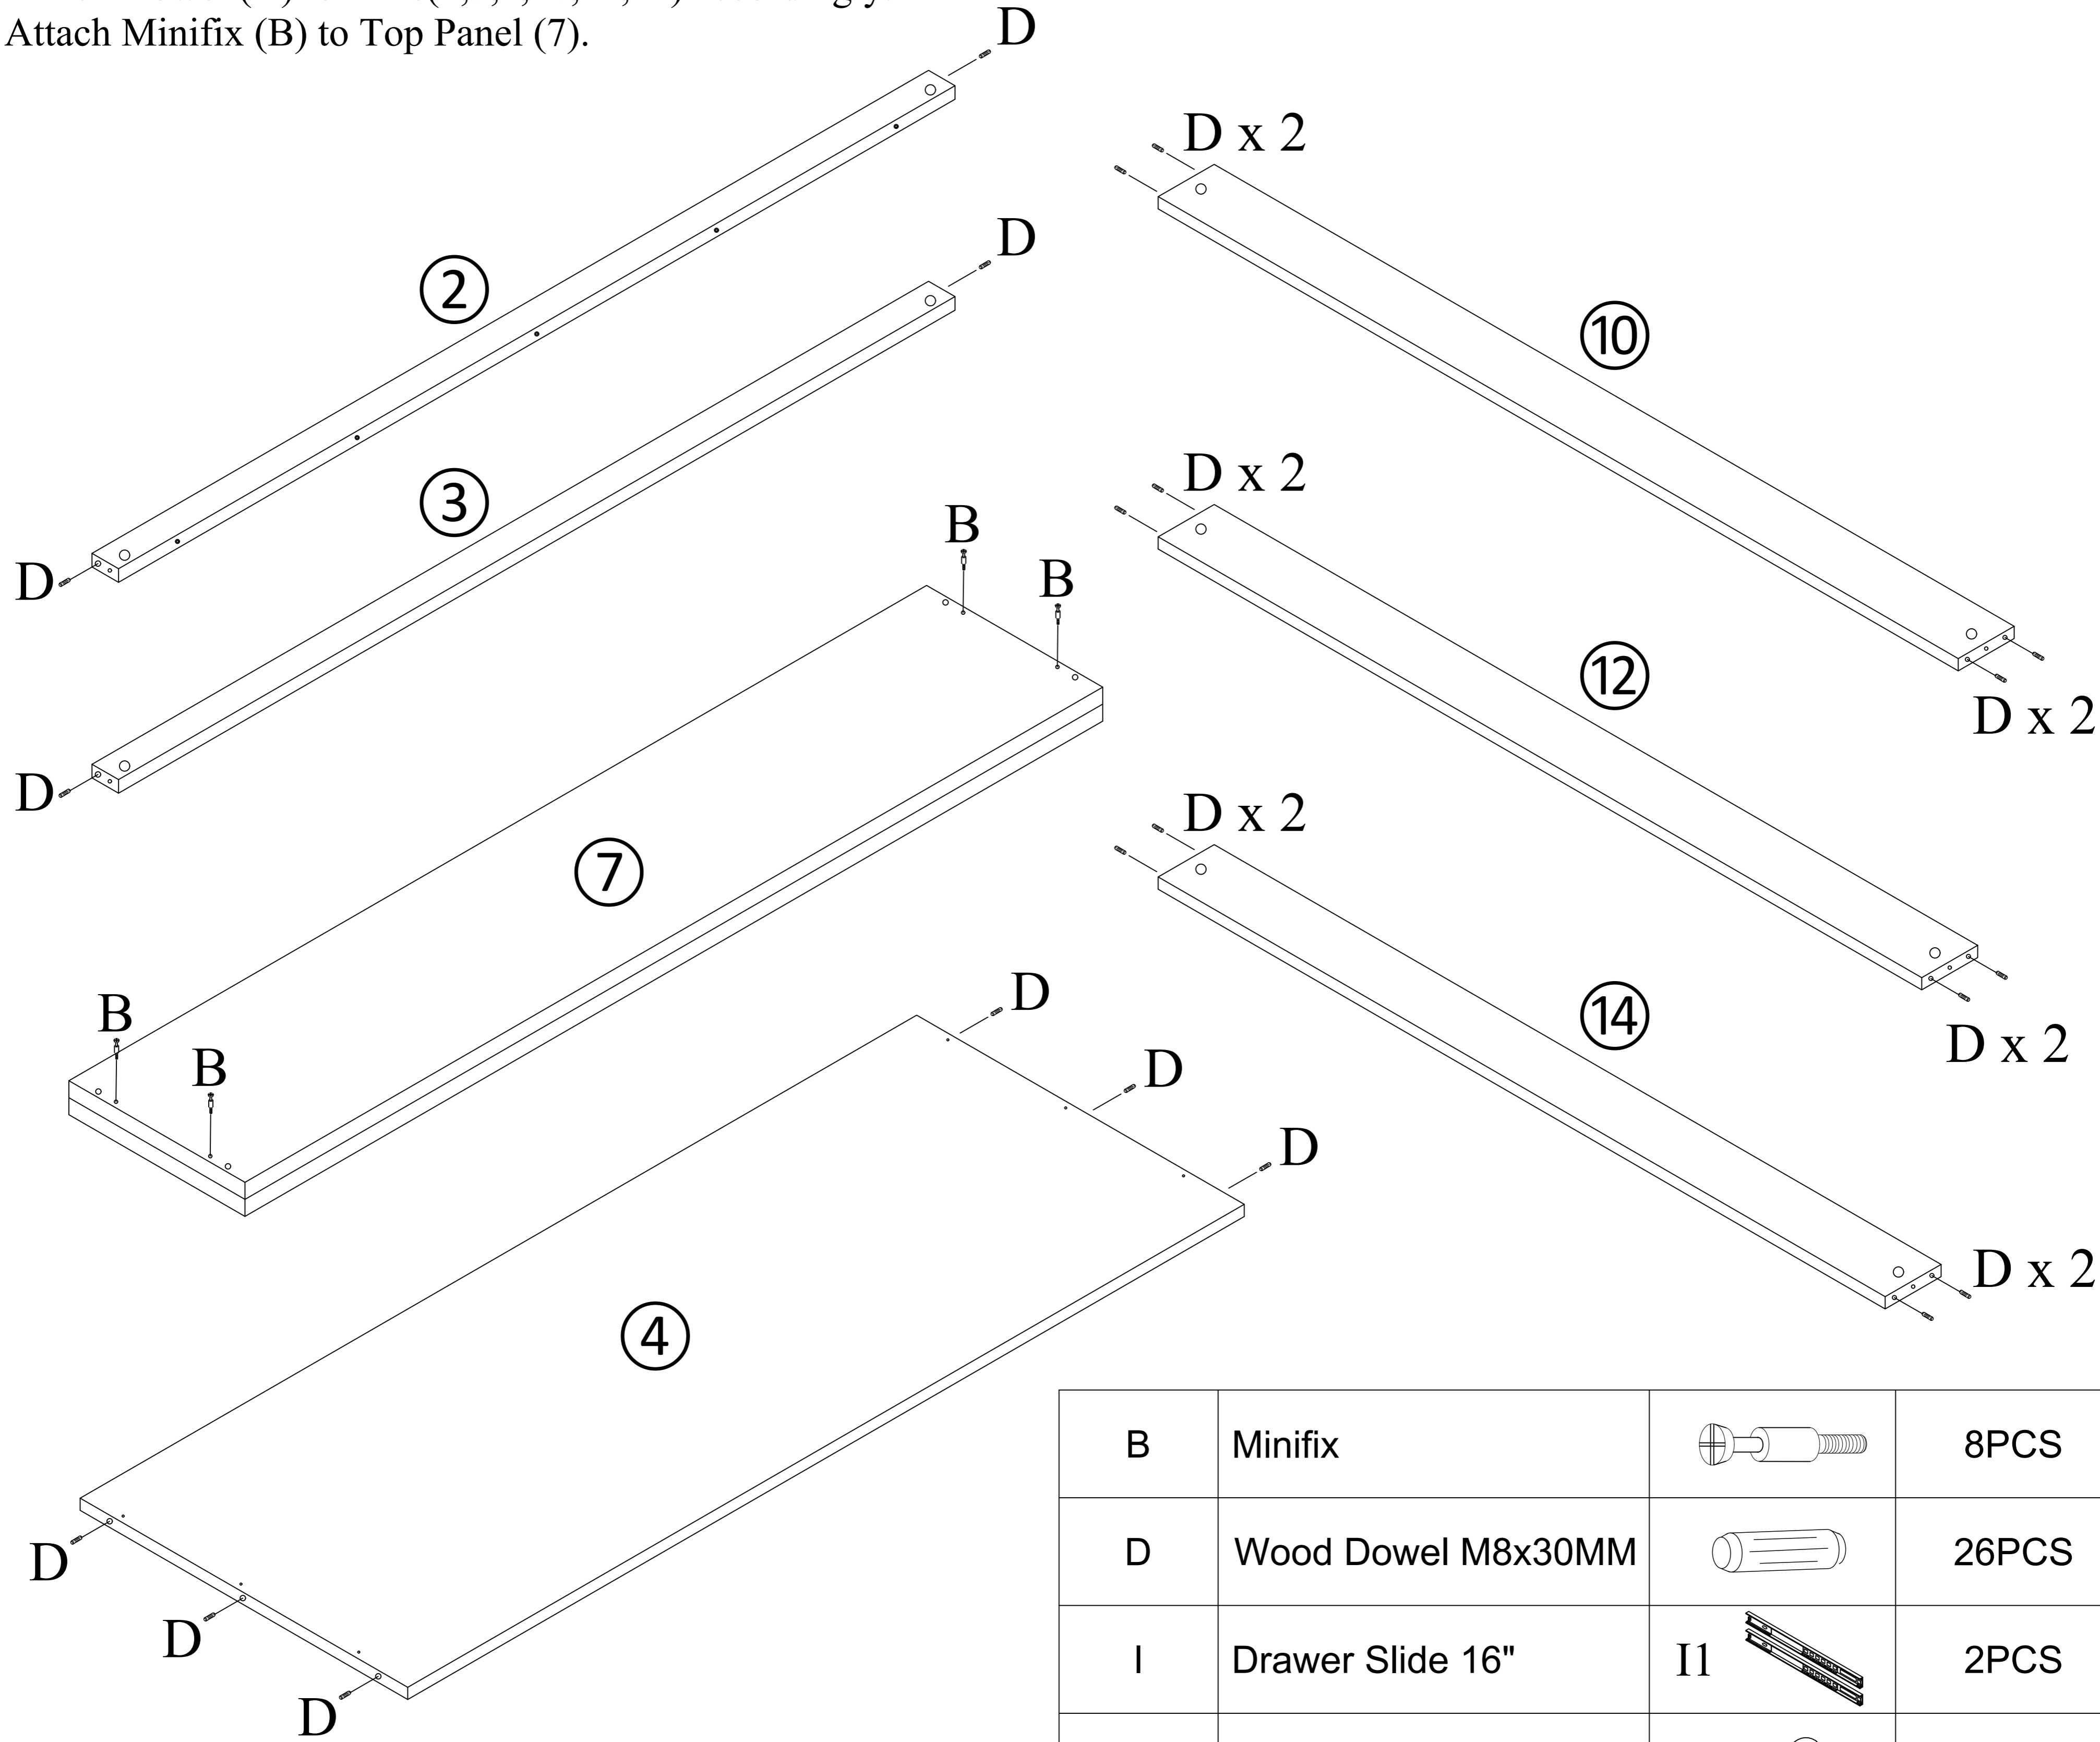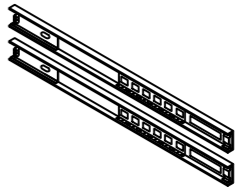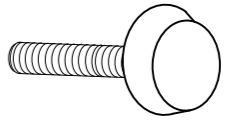Attach Dowel (D) to Parts(2,3,4,10,12,14) accordingly.
Attach Minifix (B) to Top Panel (7).




B	Minifix		8PCS
D	Wood Dowel M8x30MM		26PCS
I	Drawer Slide 16"	I1 	2PCS
K	Adjustor		4PCS
L	Screw M3.5 x 16MM		6PCS

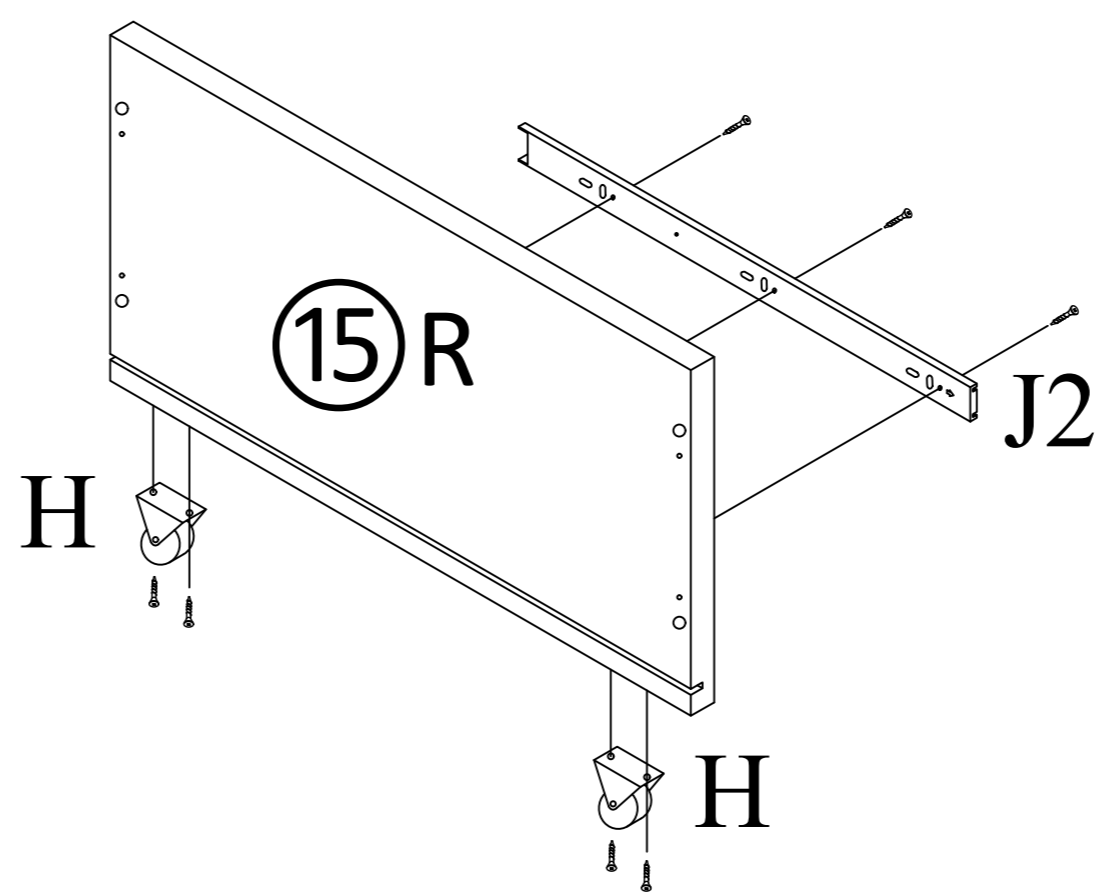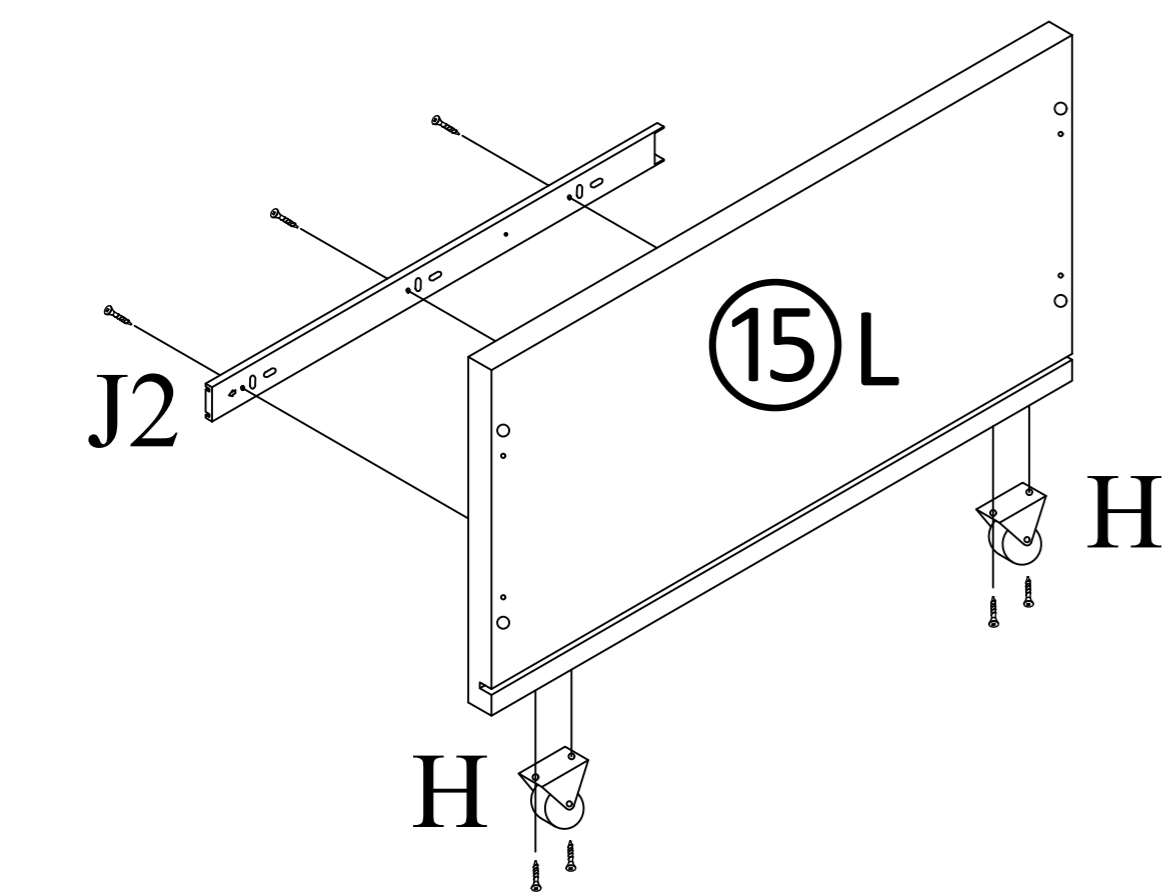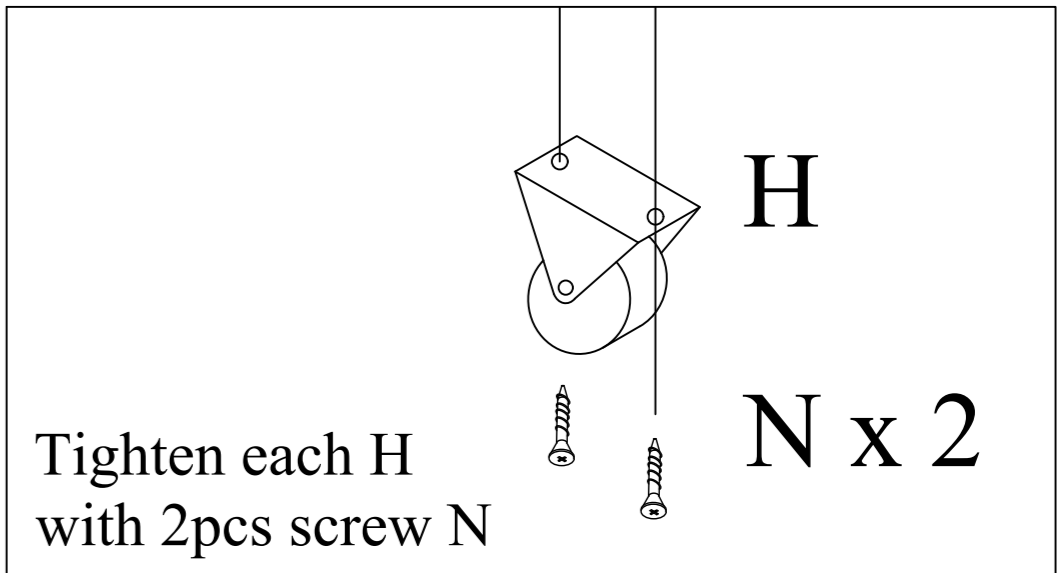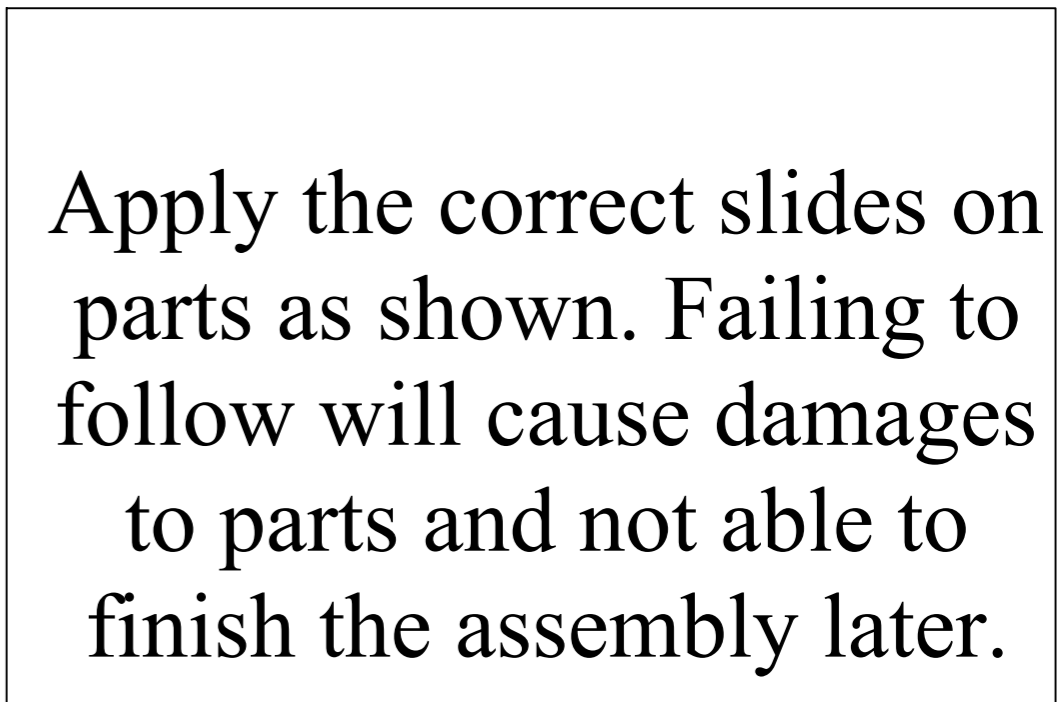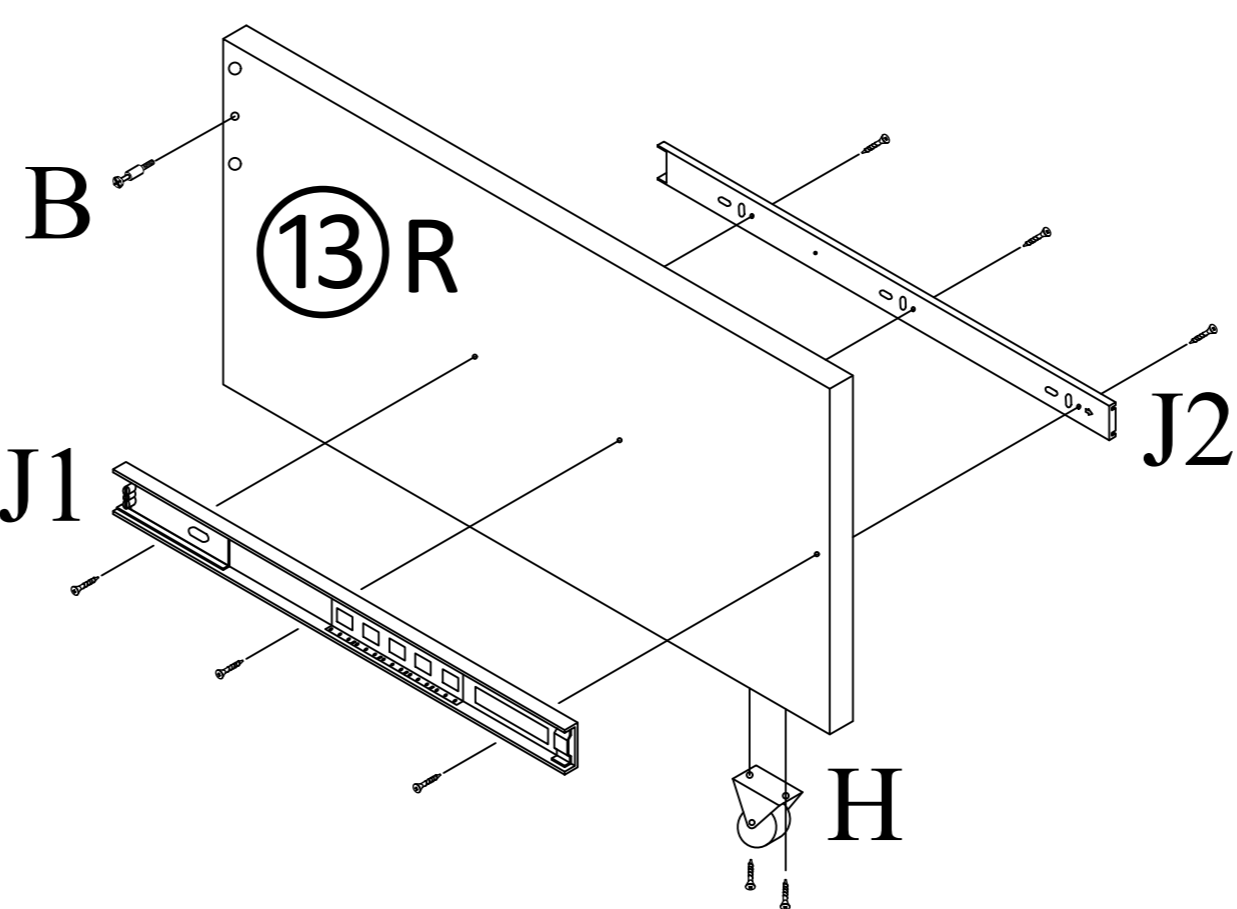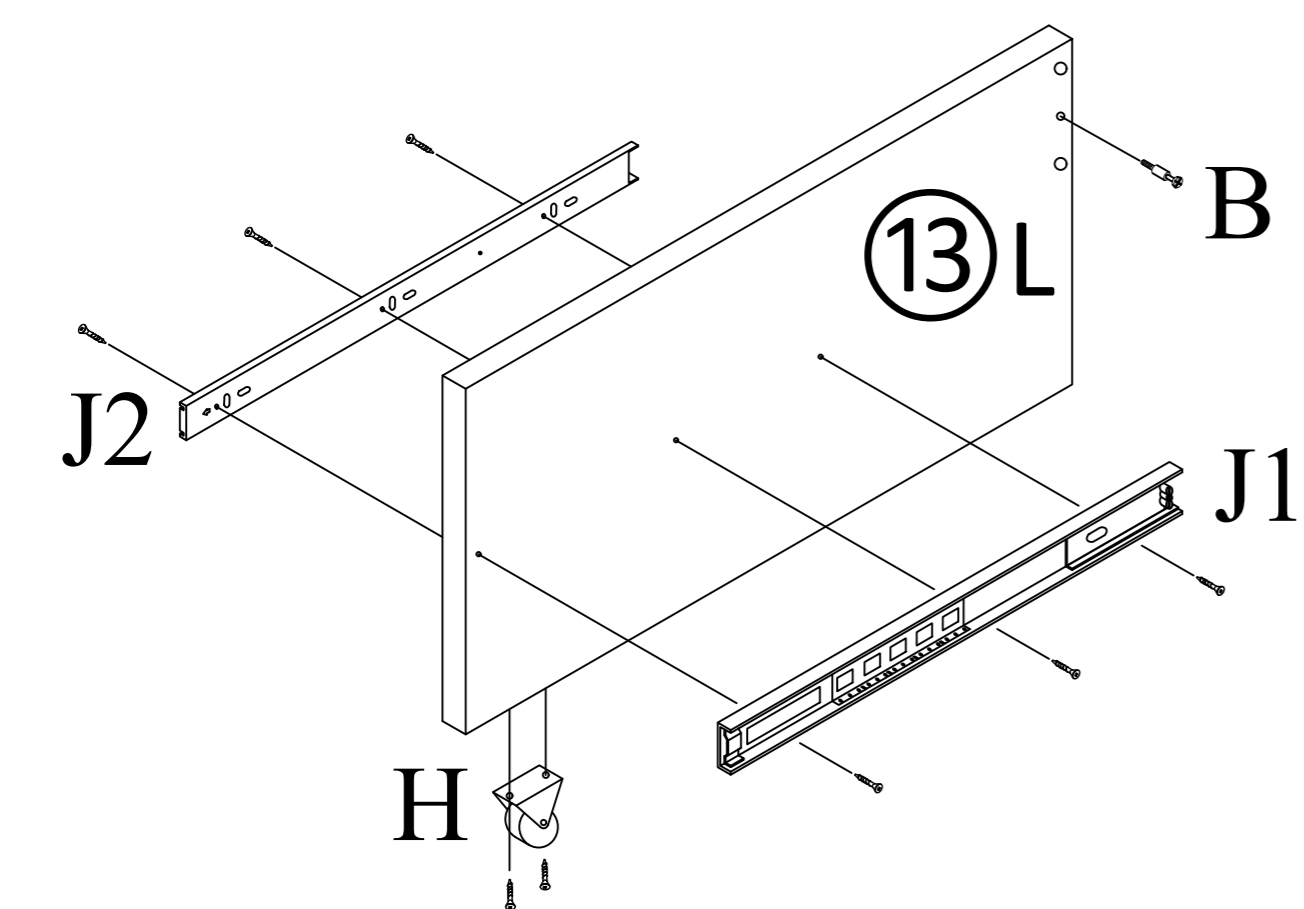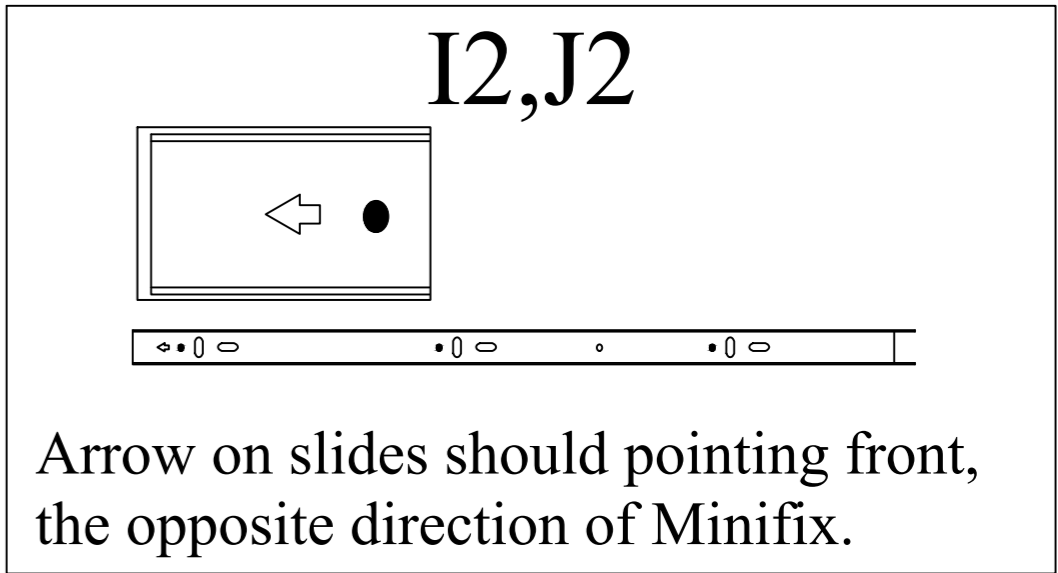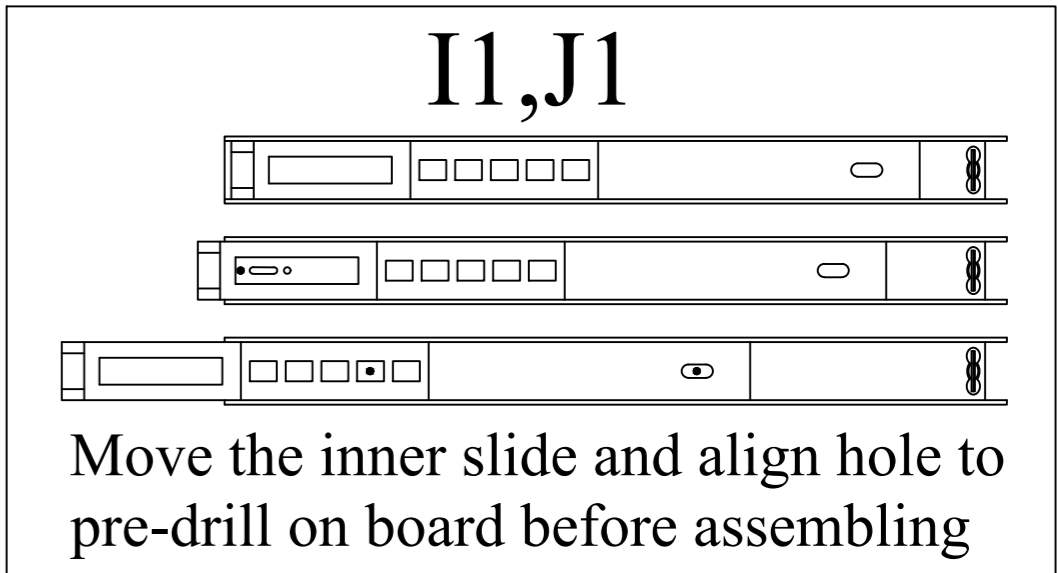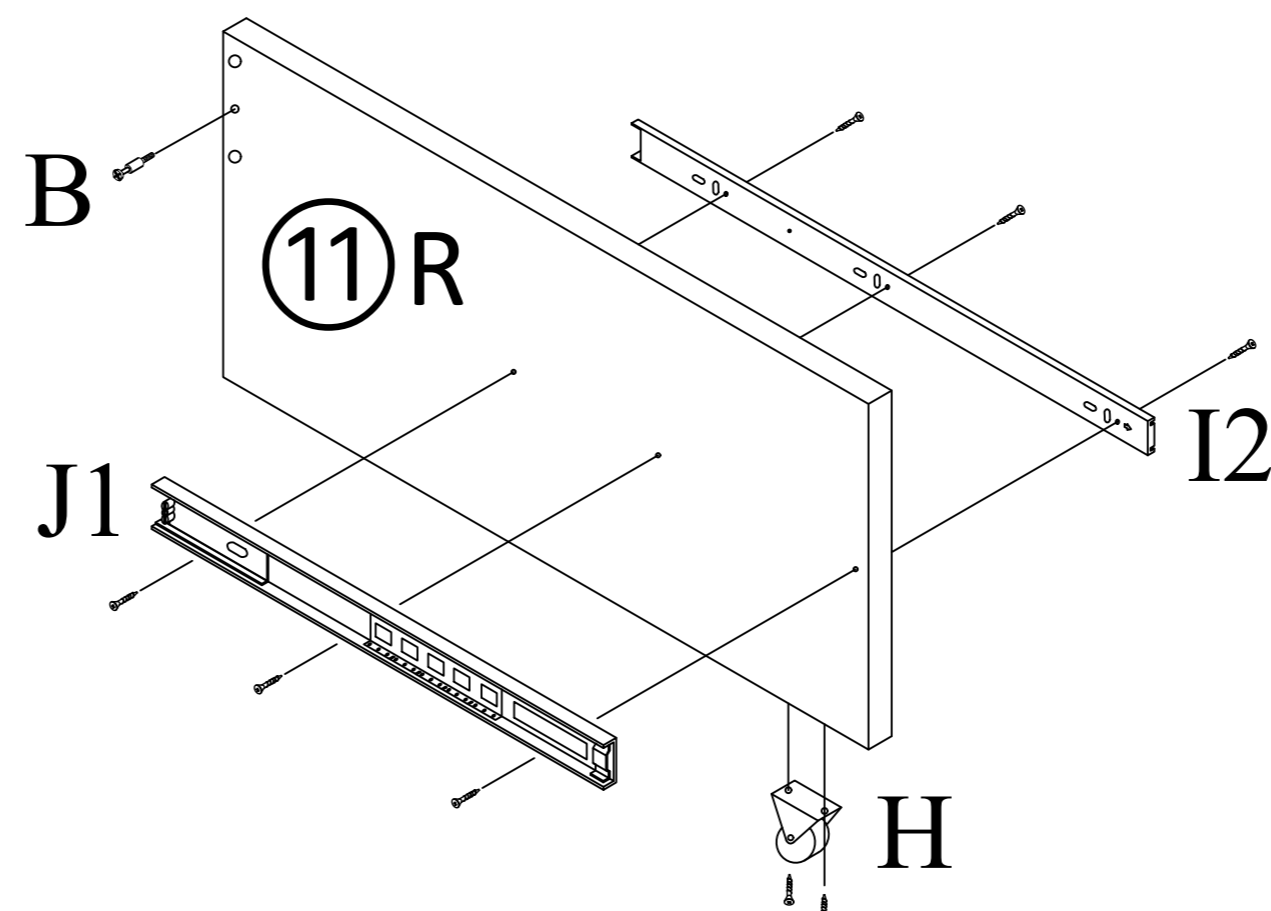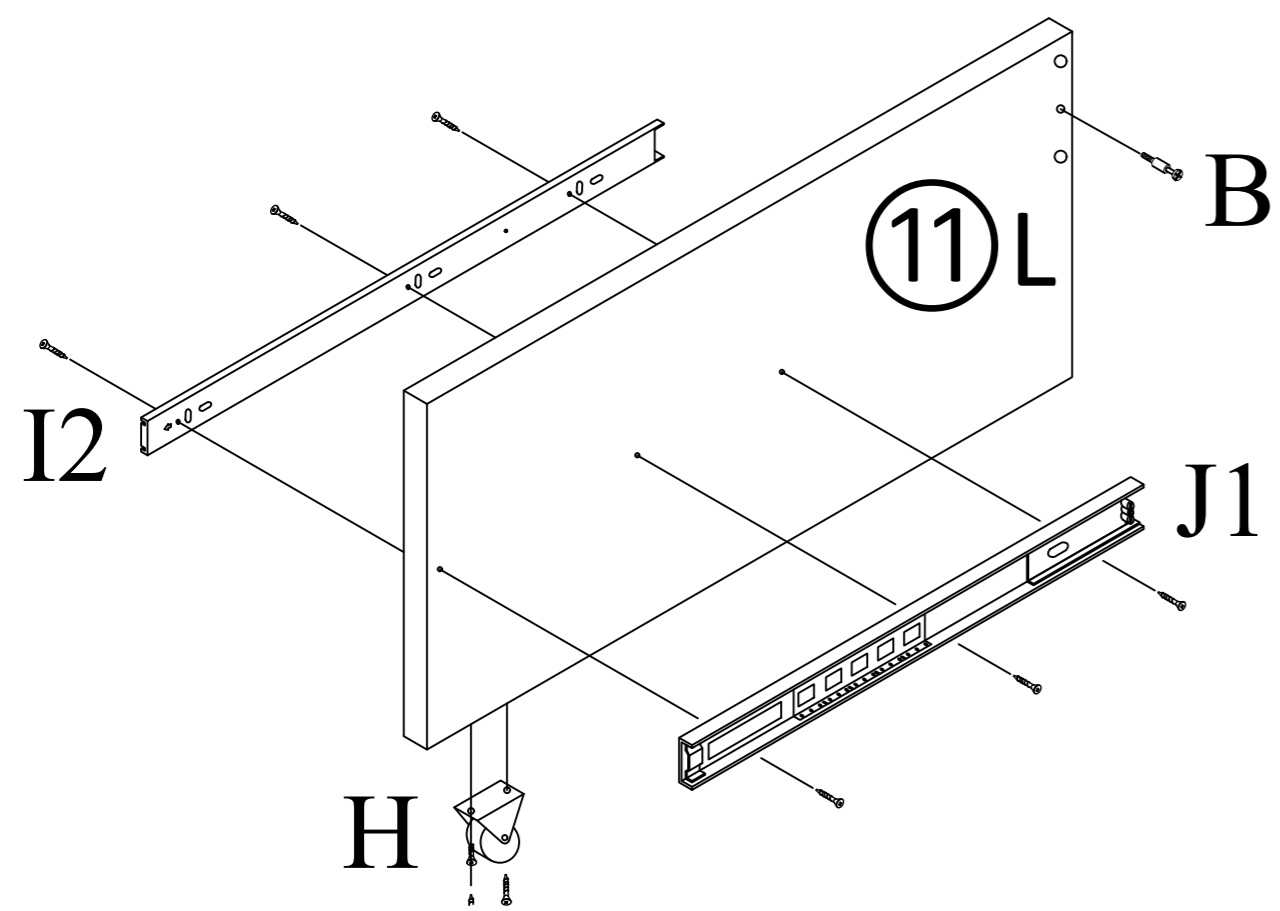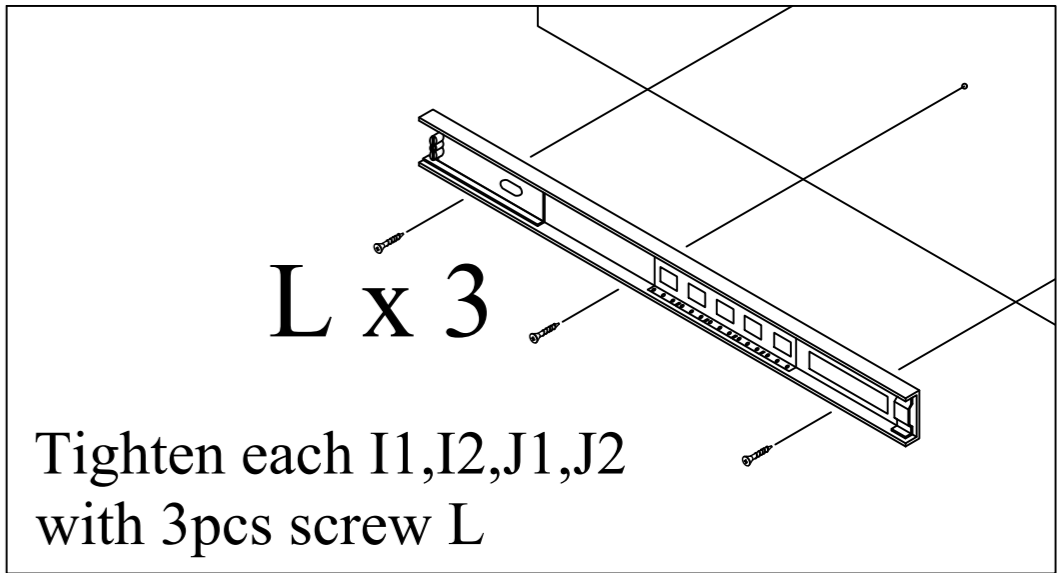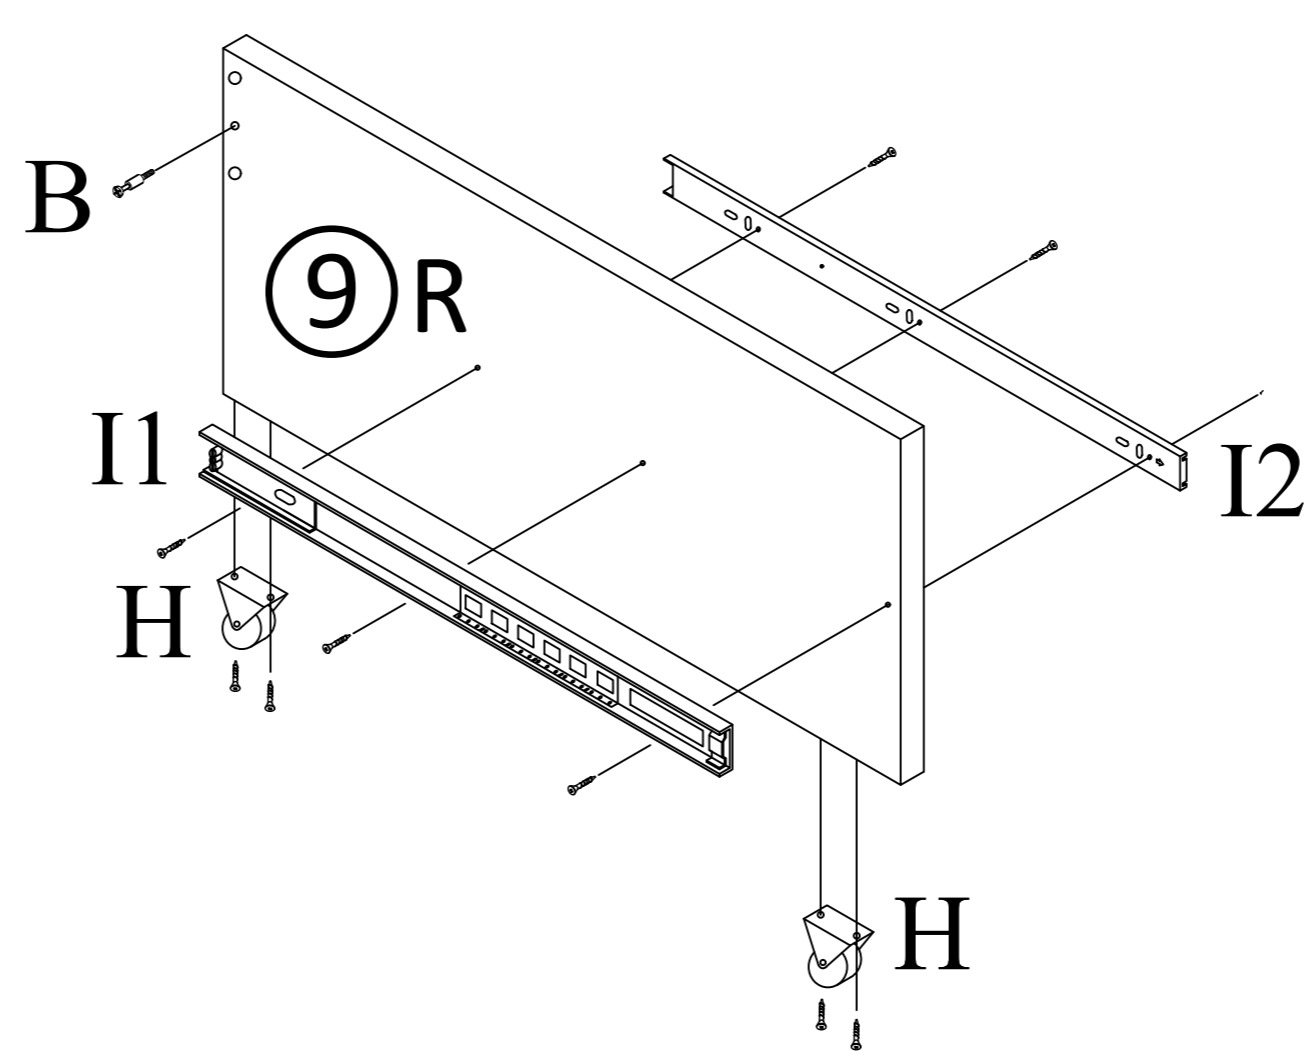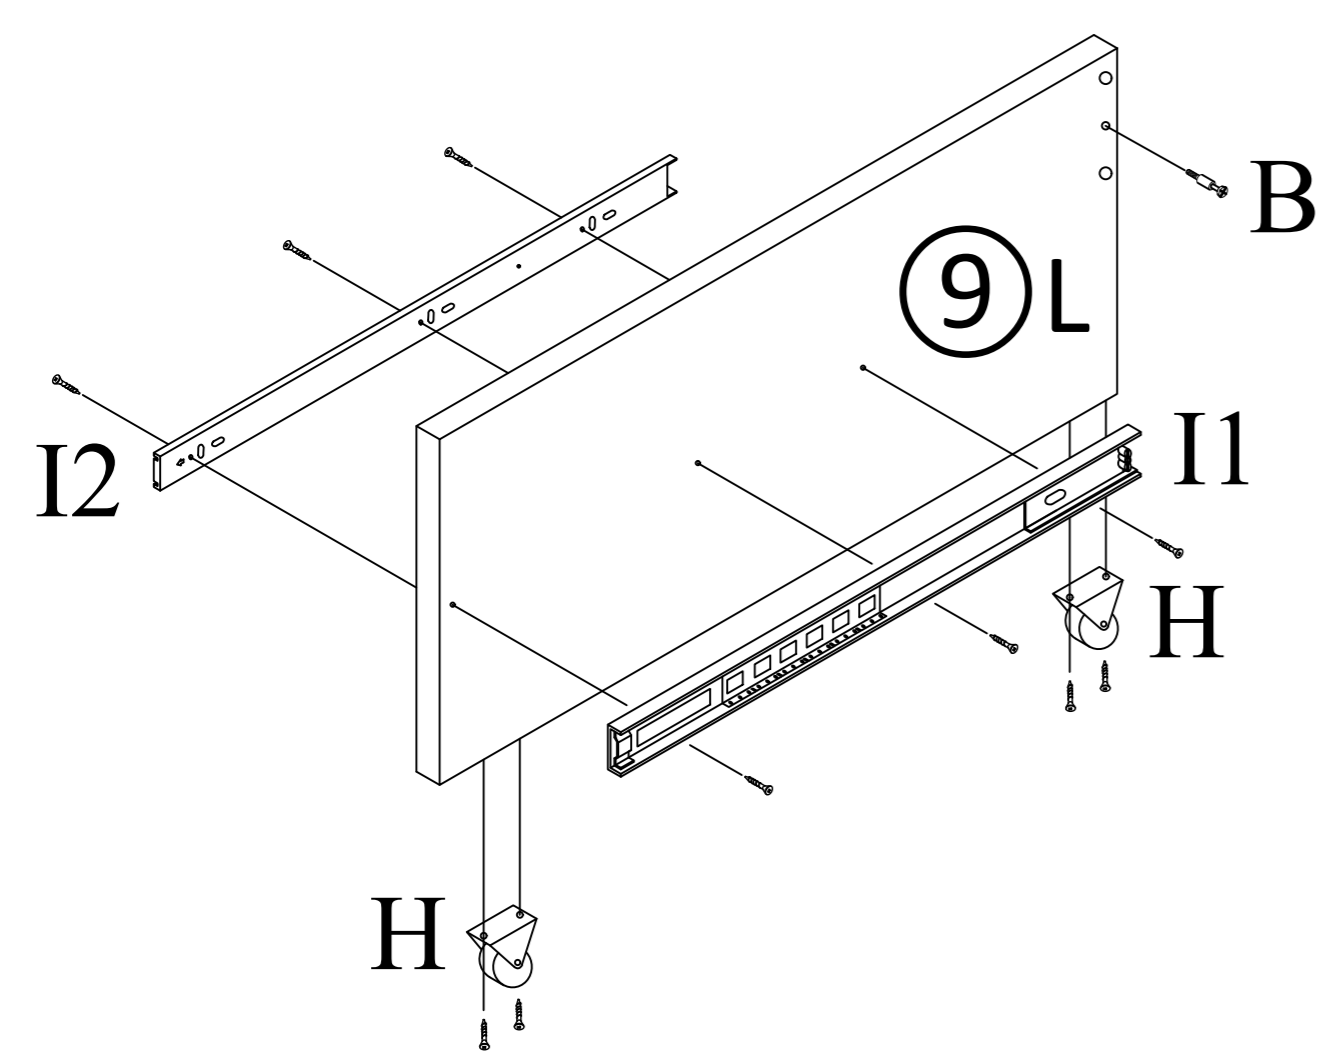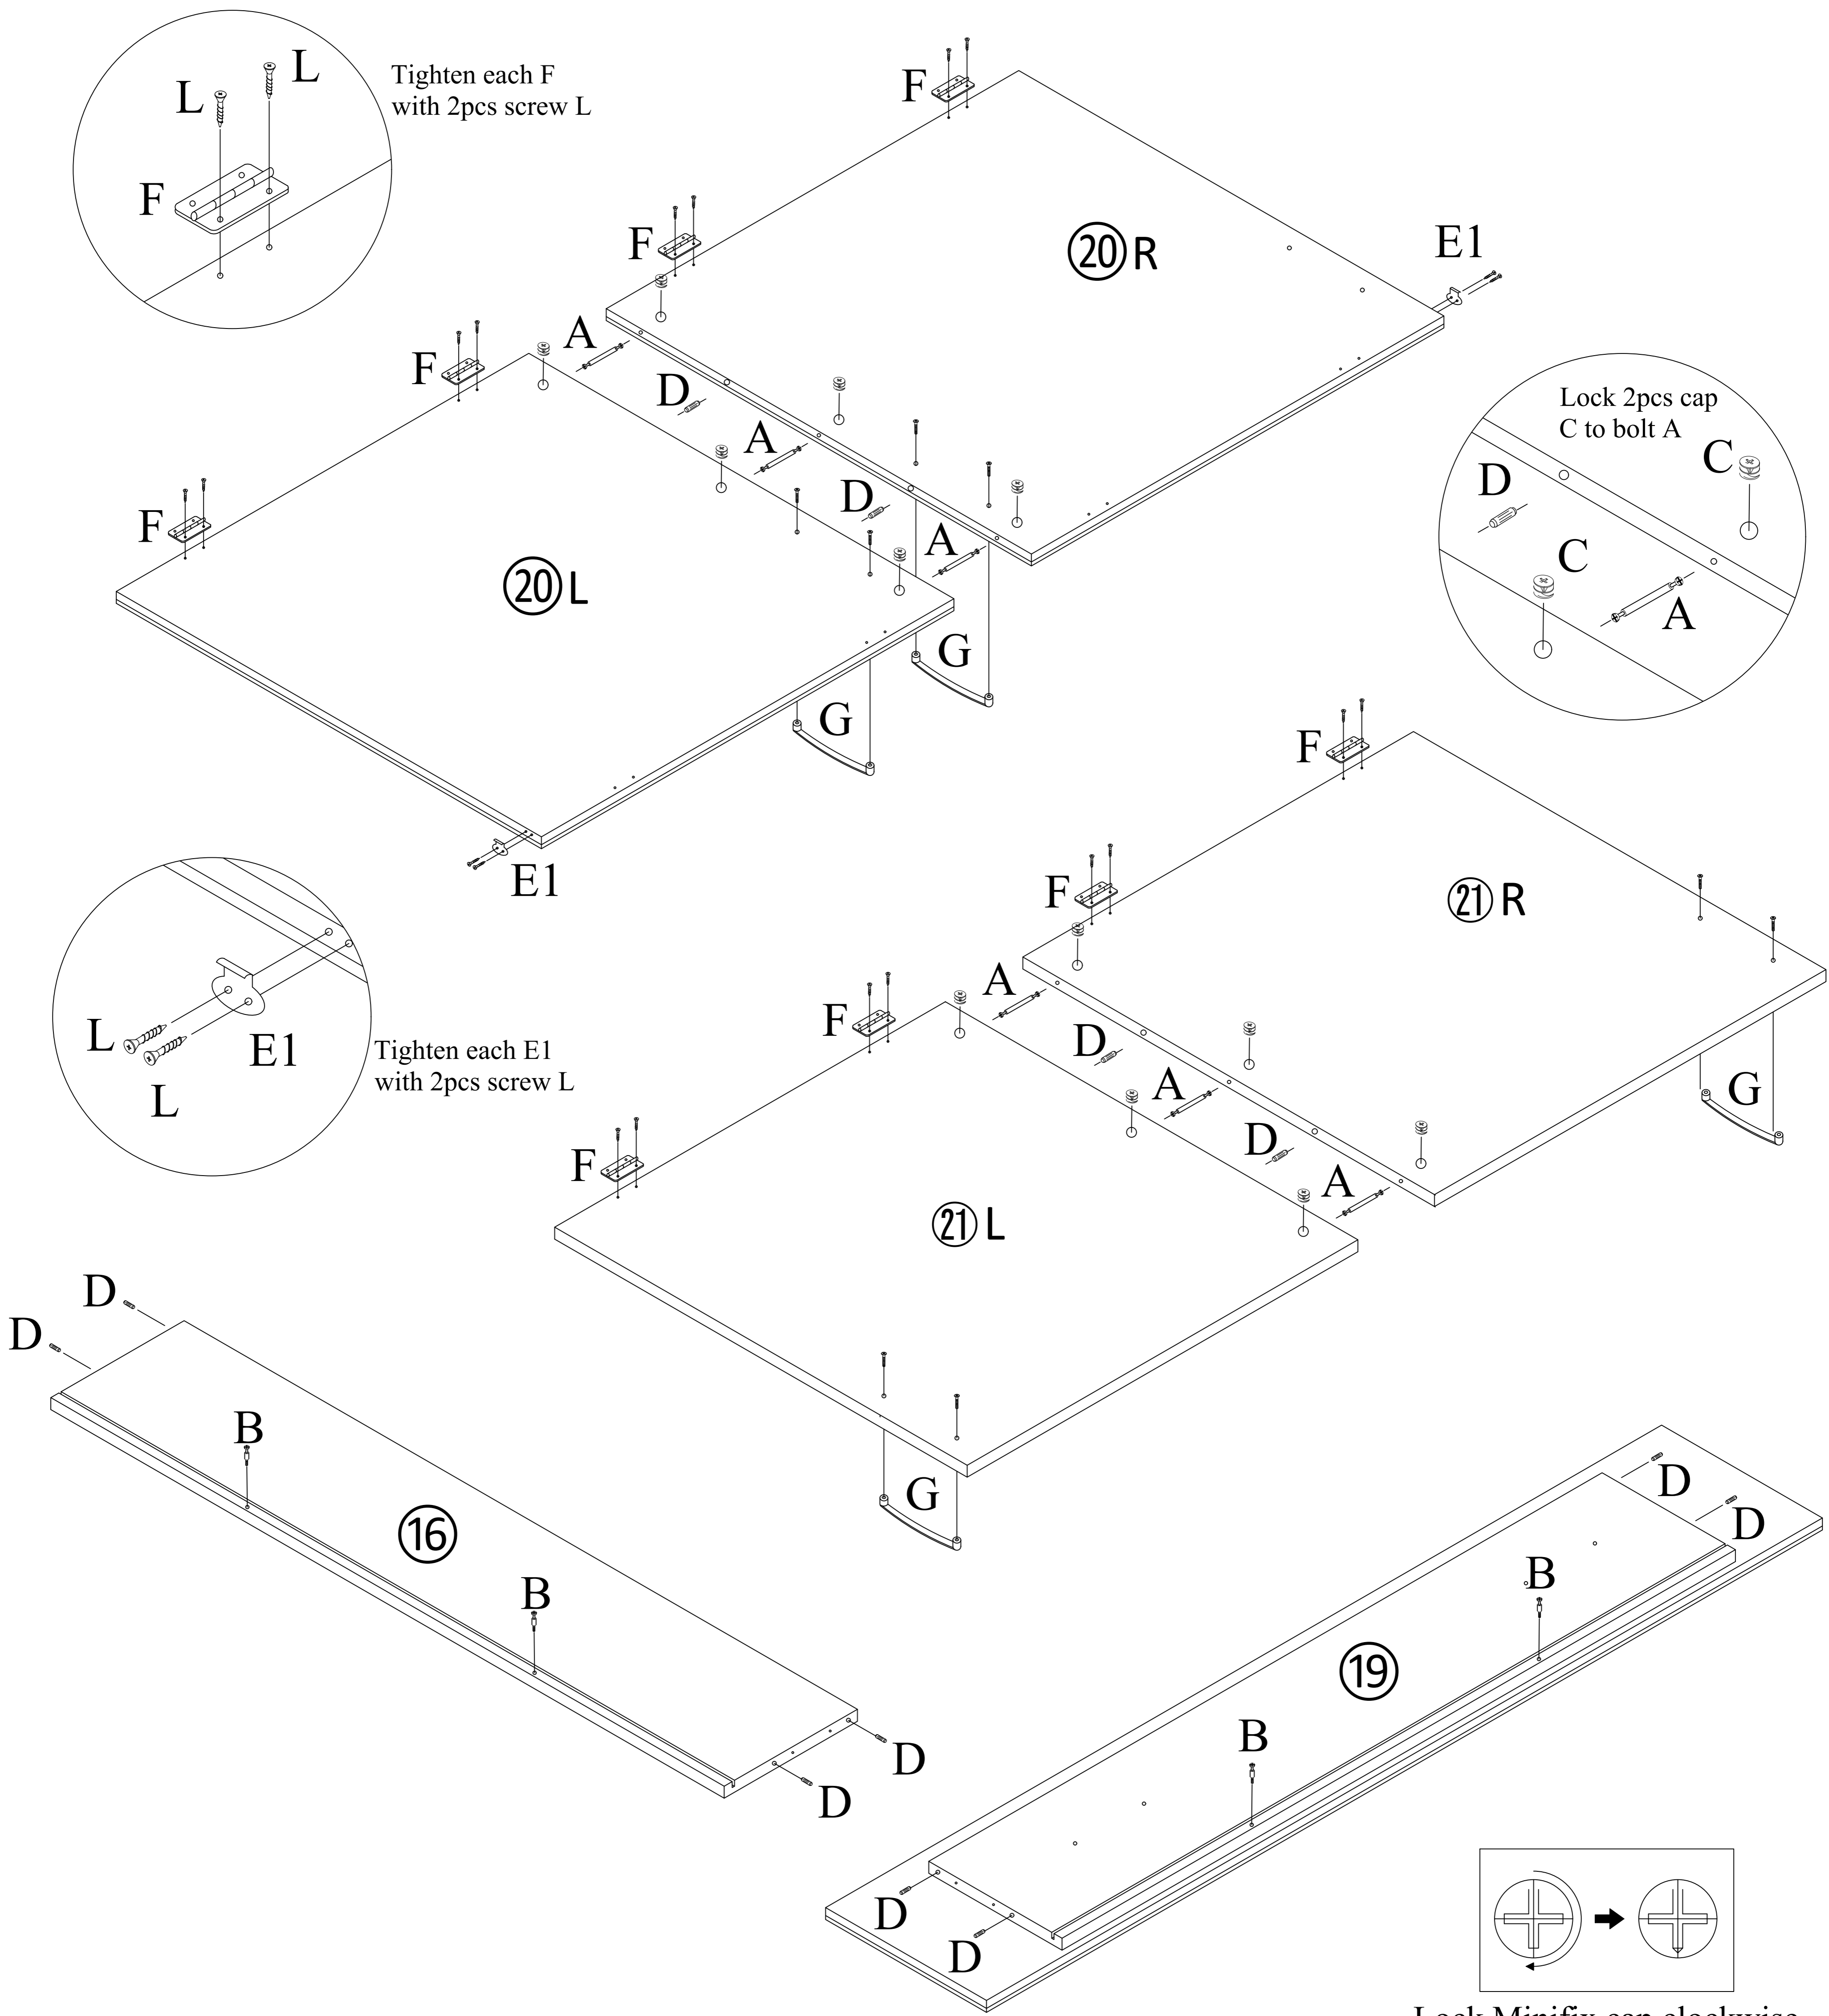
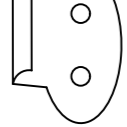


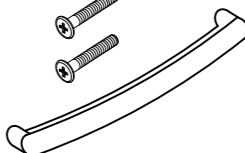


Attach Minifix (B) onto parts (9,11,13). Attach Drawer Slides (I,J) and Caster (H) onto Parts (9,11,13,15) accordingly using screw (L, N).




B	Minifix		6PCS	J	Drawer Slide 14"		2SETS
H	Caster		12PCS	L	Screw M3.5 x 16MM		42PCS
I	Drawer Slide 16"		2SETS	N	Screw M4 x 20MM		24PCS

Attach Minifix (B) and Dowel (D) to Parts (16,19) accordingly.
Attach Cam Lock (E1) to Doors (20) using screw (L).
Attach Hinges (F) to Parts (20,21) using screw (L). Attach Handle (G) to Parts (20,21).
Connect 20L to 20R and 21L to 21R with Dowel (D) and Bolt (A), and lock with Cap (C).




A	Double End Bolt		6PCS	E	Cam Lock		2PCS
B	Minifix		4PCS	F	2" Hinges		8PCS
C	Minifix Cap		12PCS	G	Handle with Screw		4SETS
D	Wood Dowel M8x30MM		12PCS	L	Screw M3.5 x 16MM		20PCS

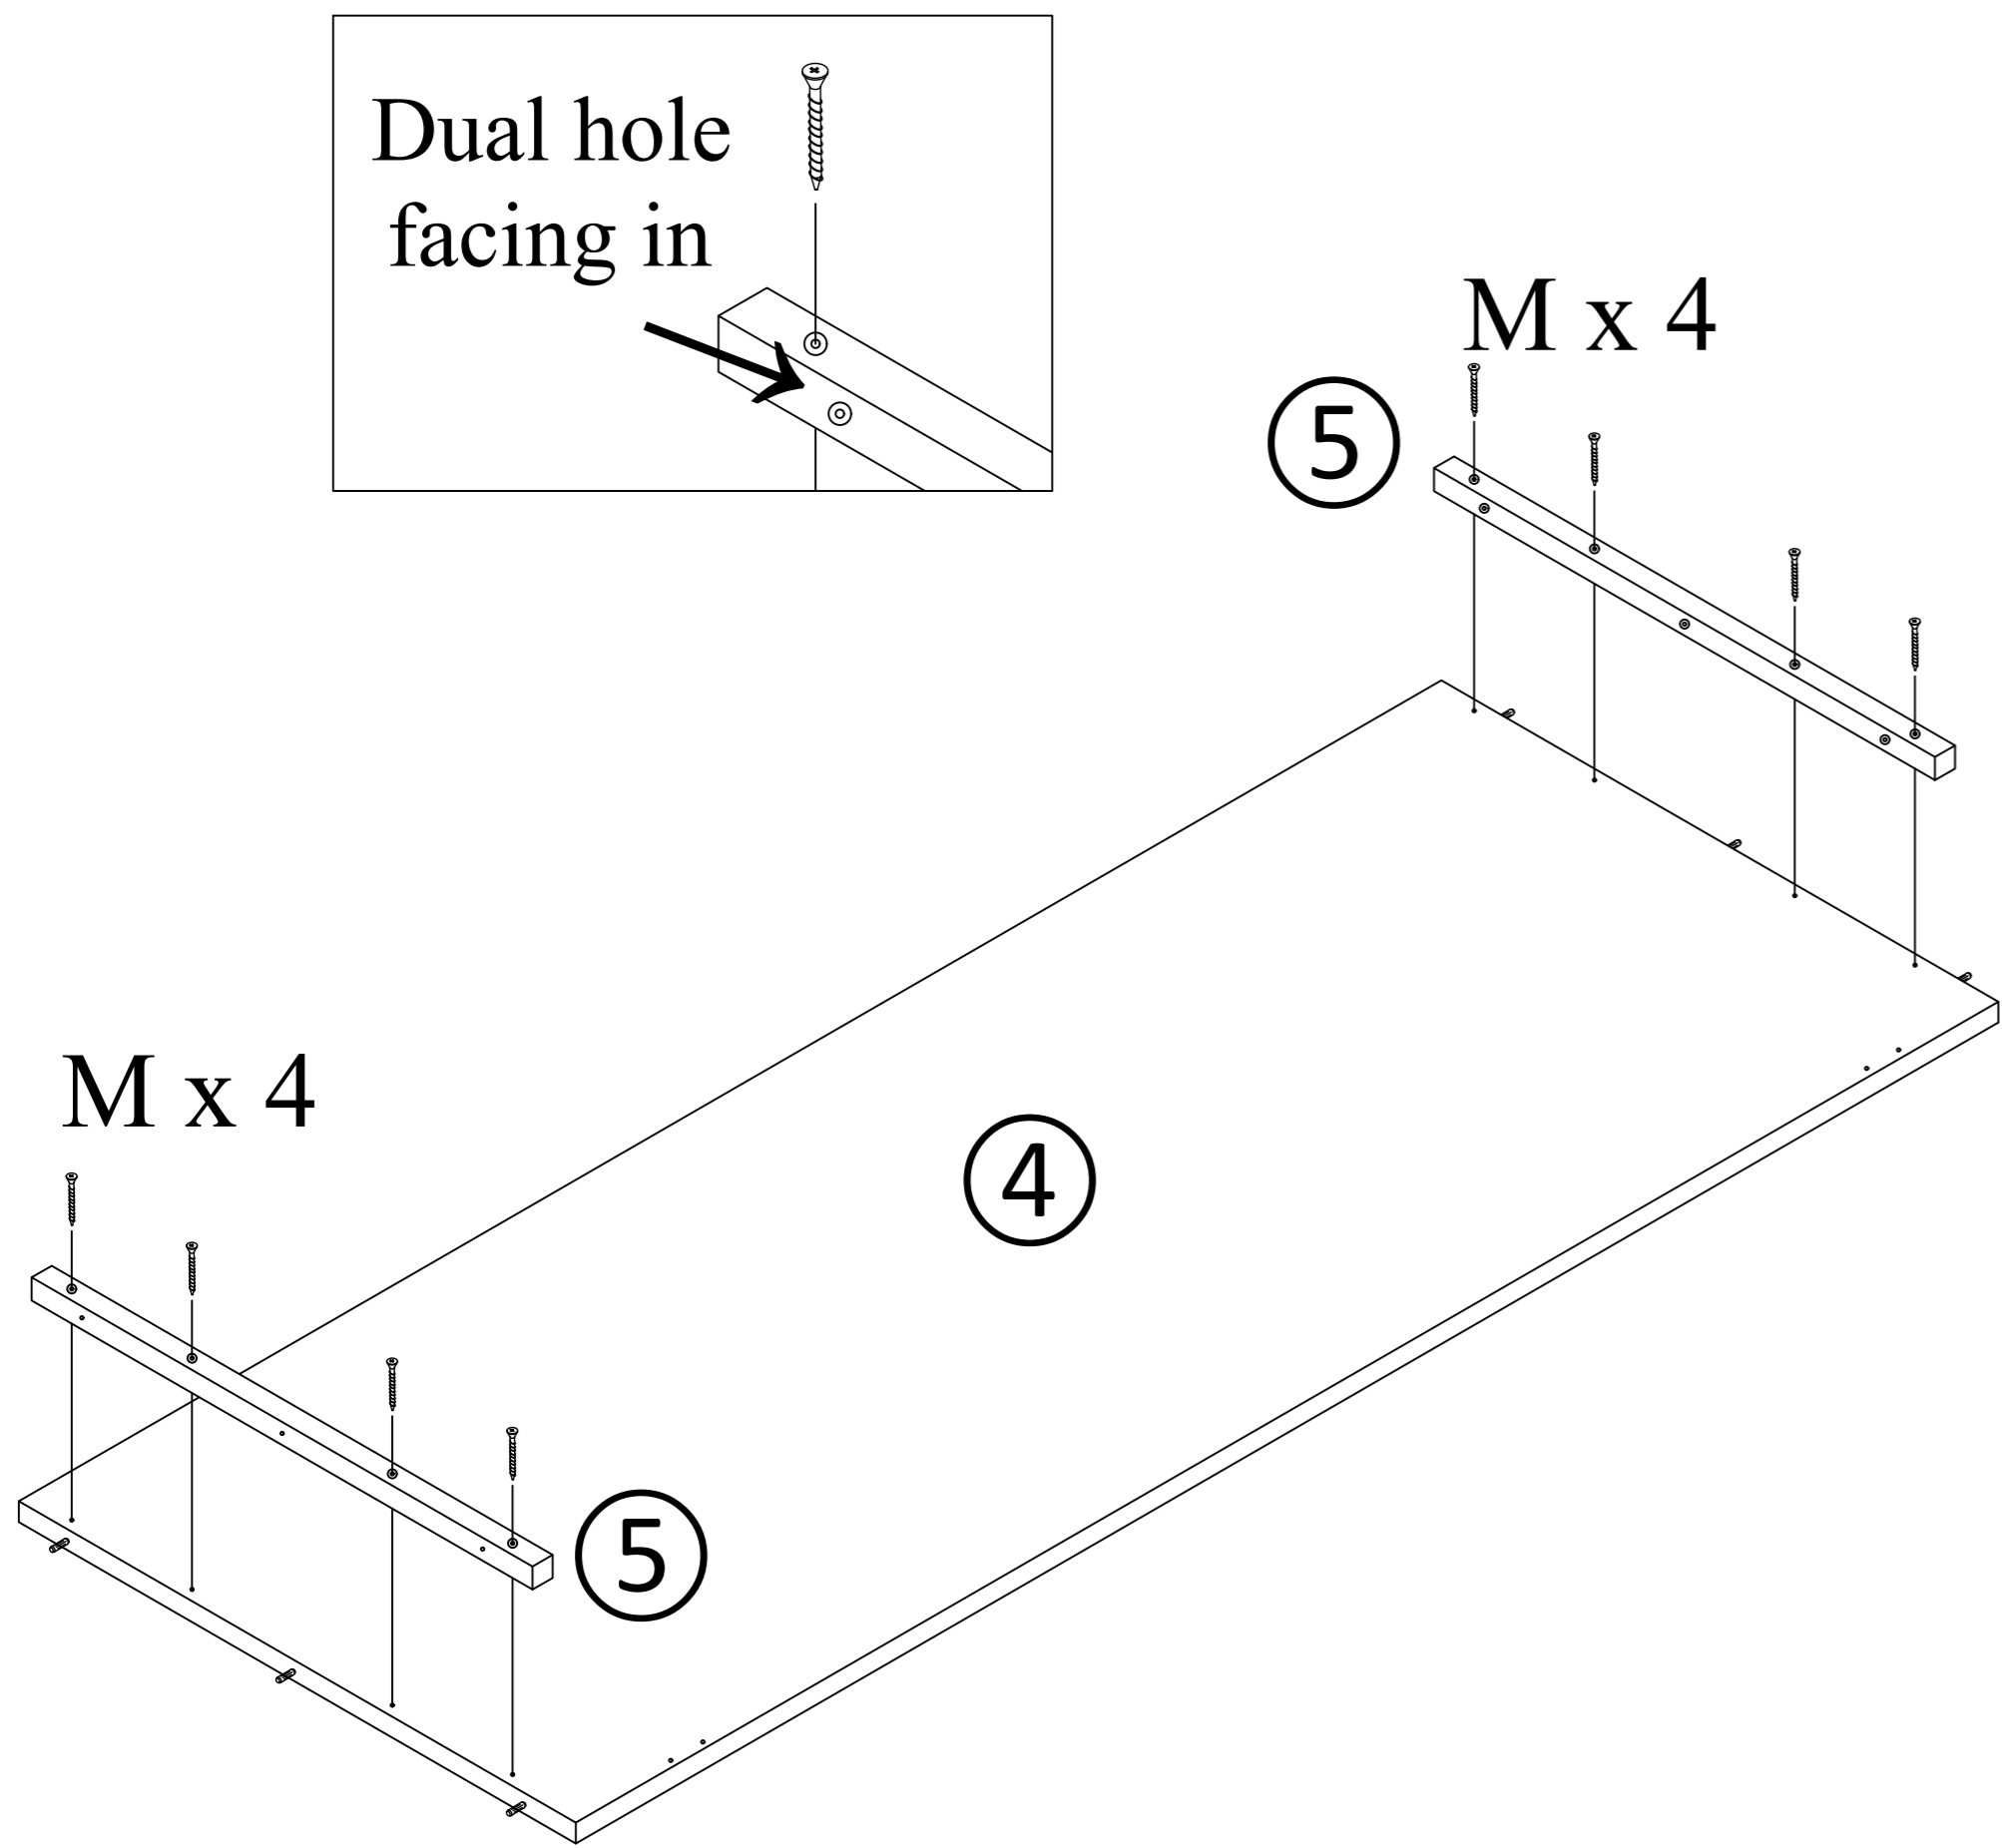
Step 2 : Attach Connection Rail (5) to Bottom Panel (4) using screw (M).



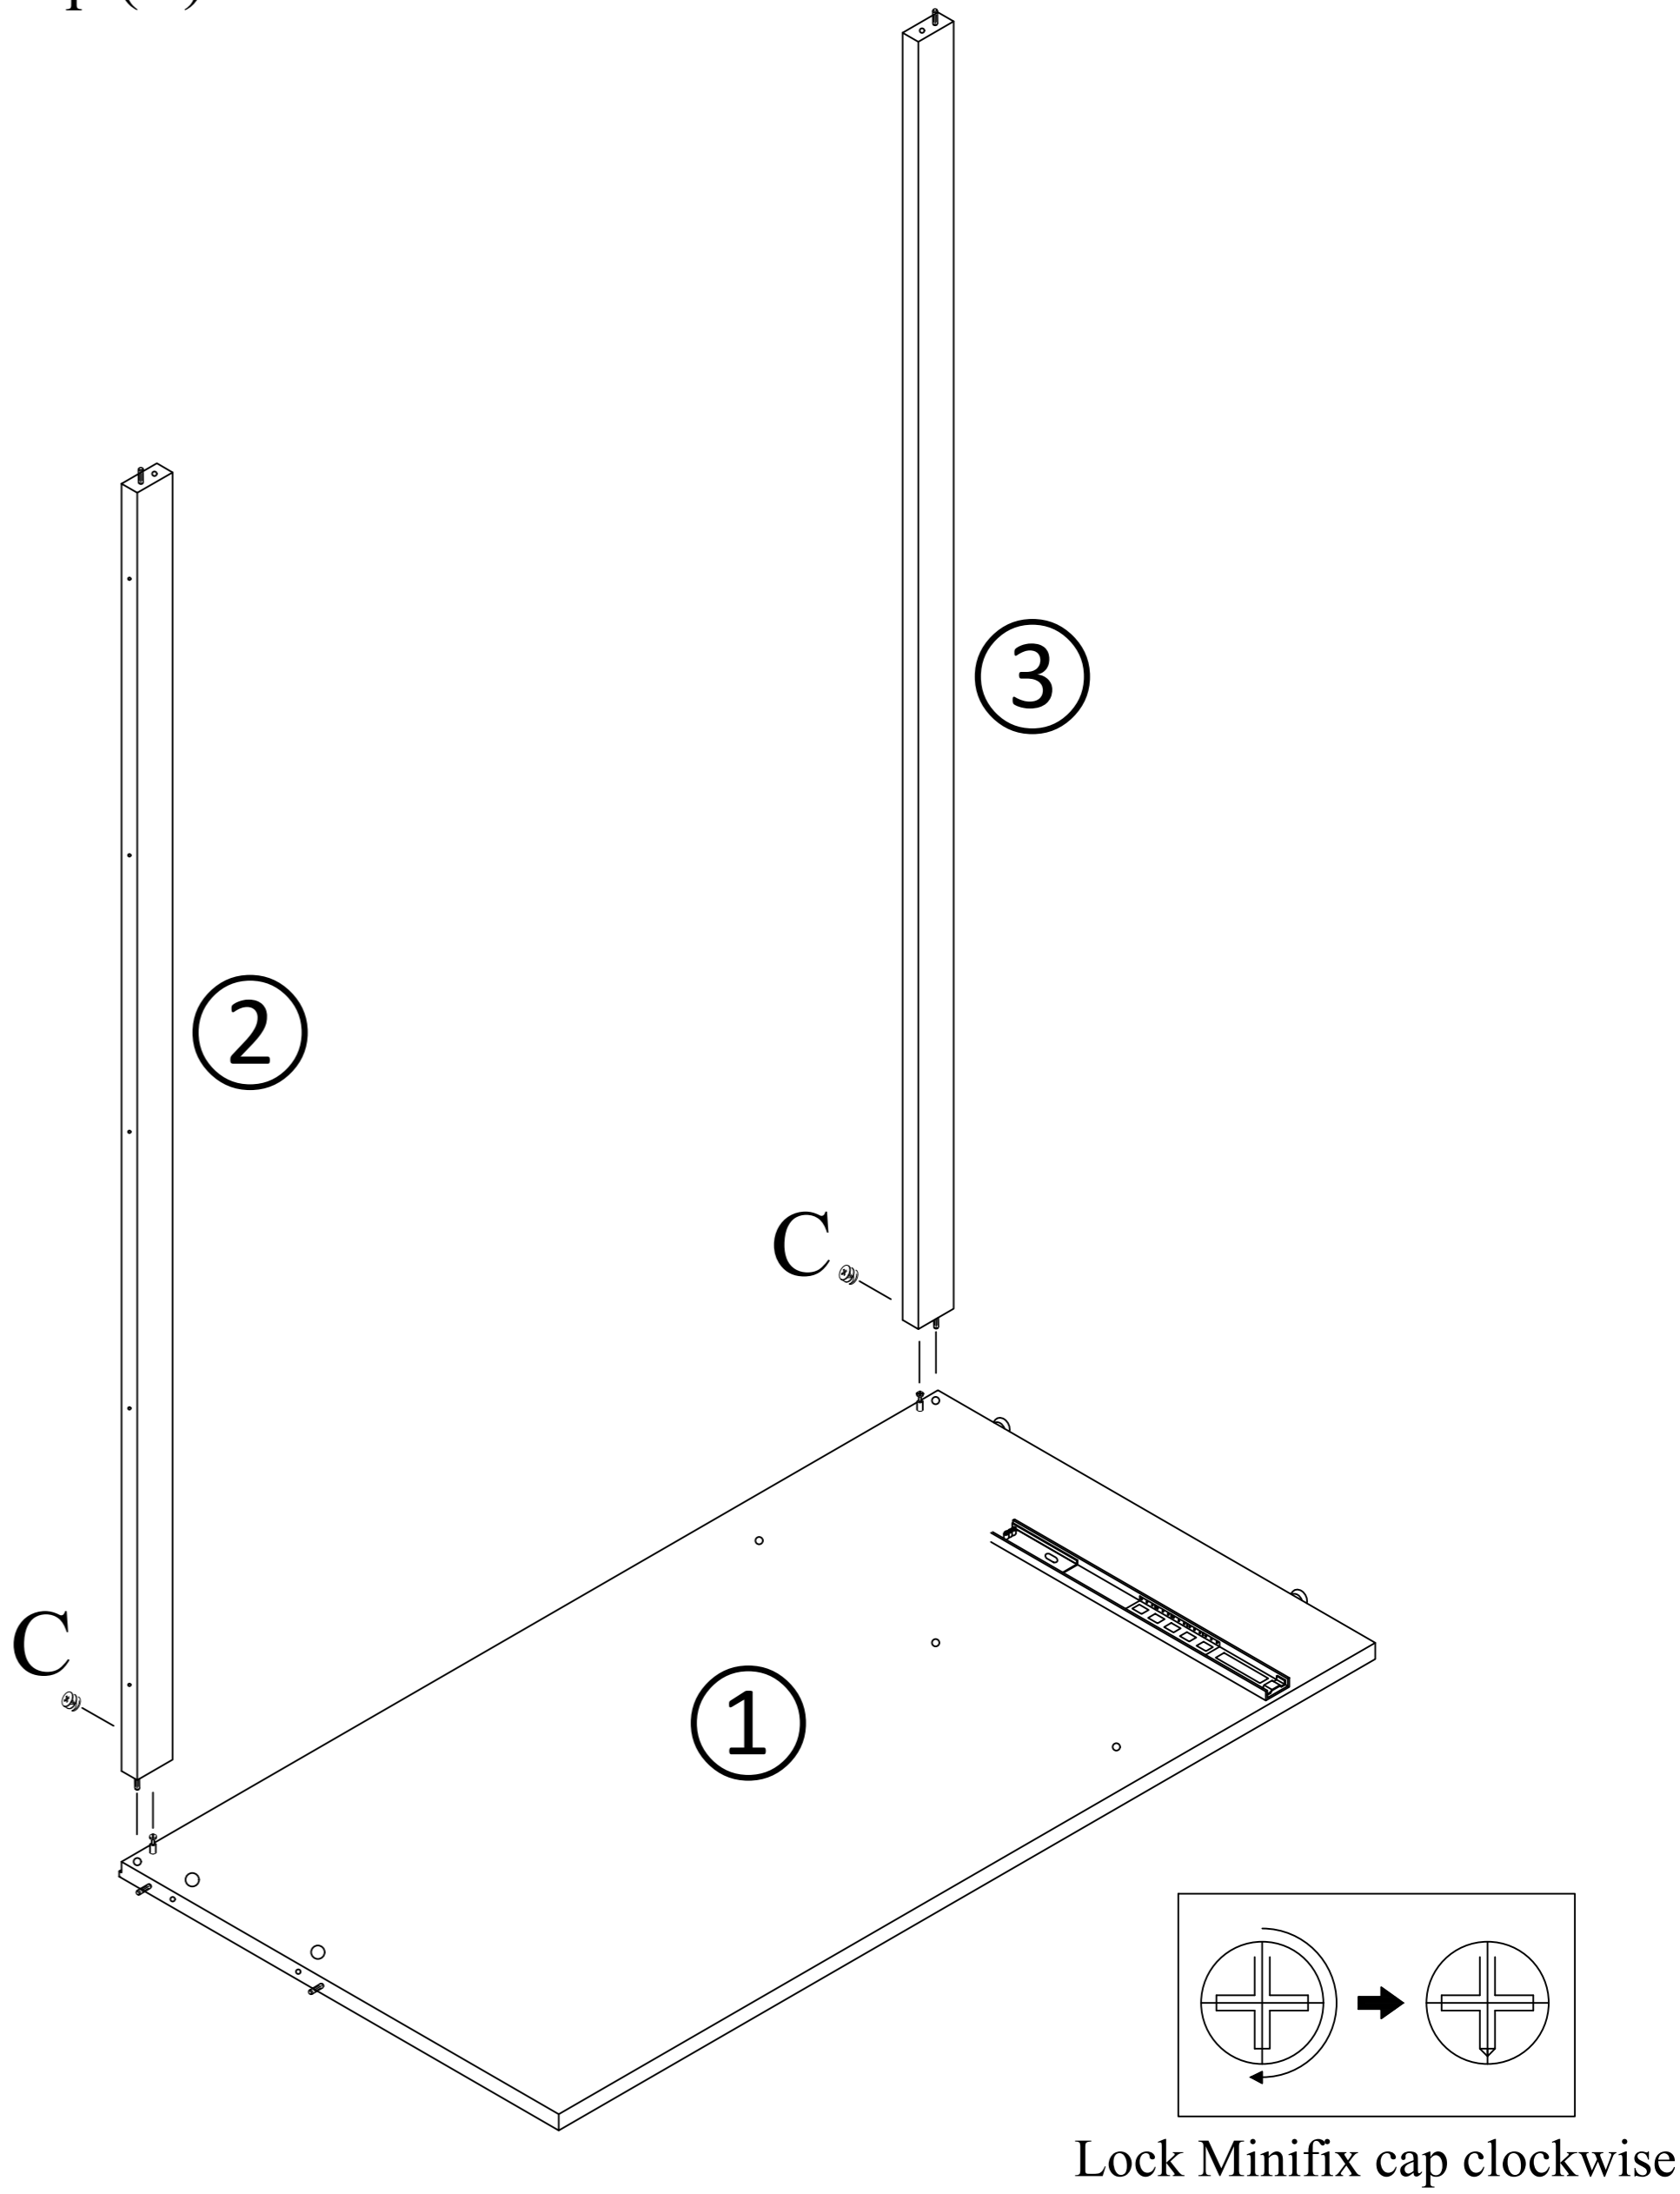
Step 3 : Attach Rails (2,3) onto Left Panel (1) and lock with Cap (C).




M	Screw M4 x 32MM		8PCS
---	-----------------	-------------------------------------------------------------------------------------	------

C	Minifix Cap		2PCS
---	-------------	---------------------------------------------------------------------------------------	------


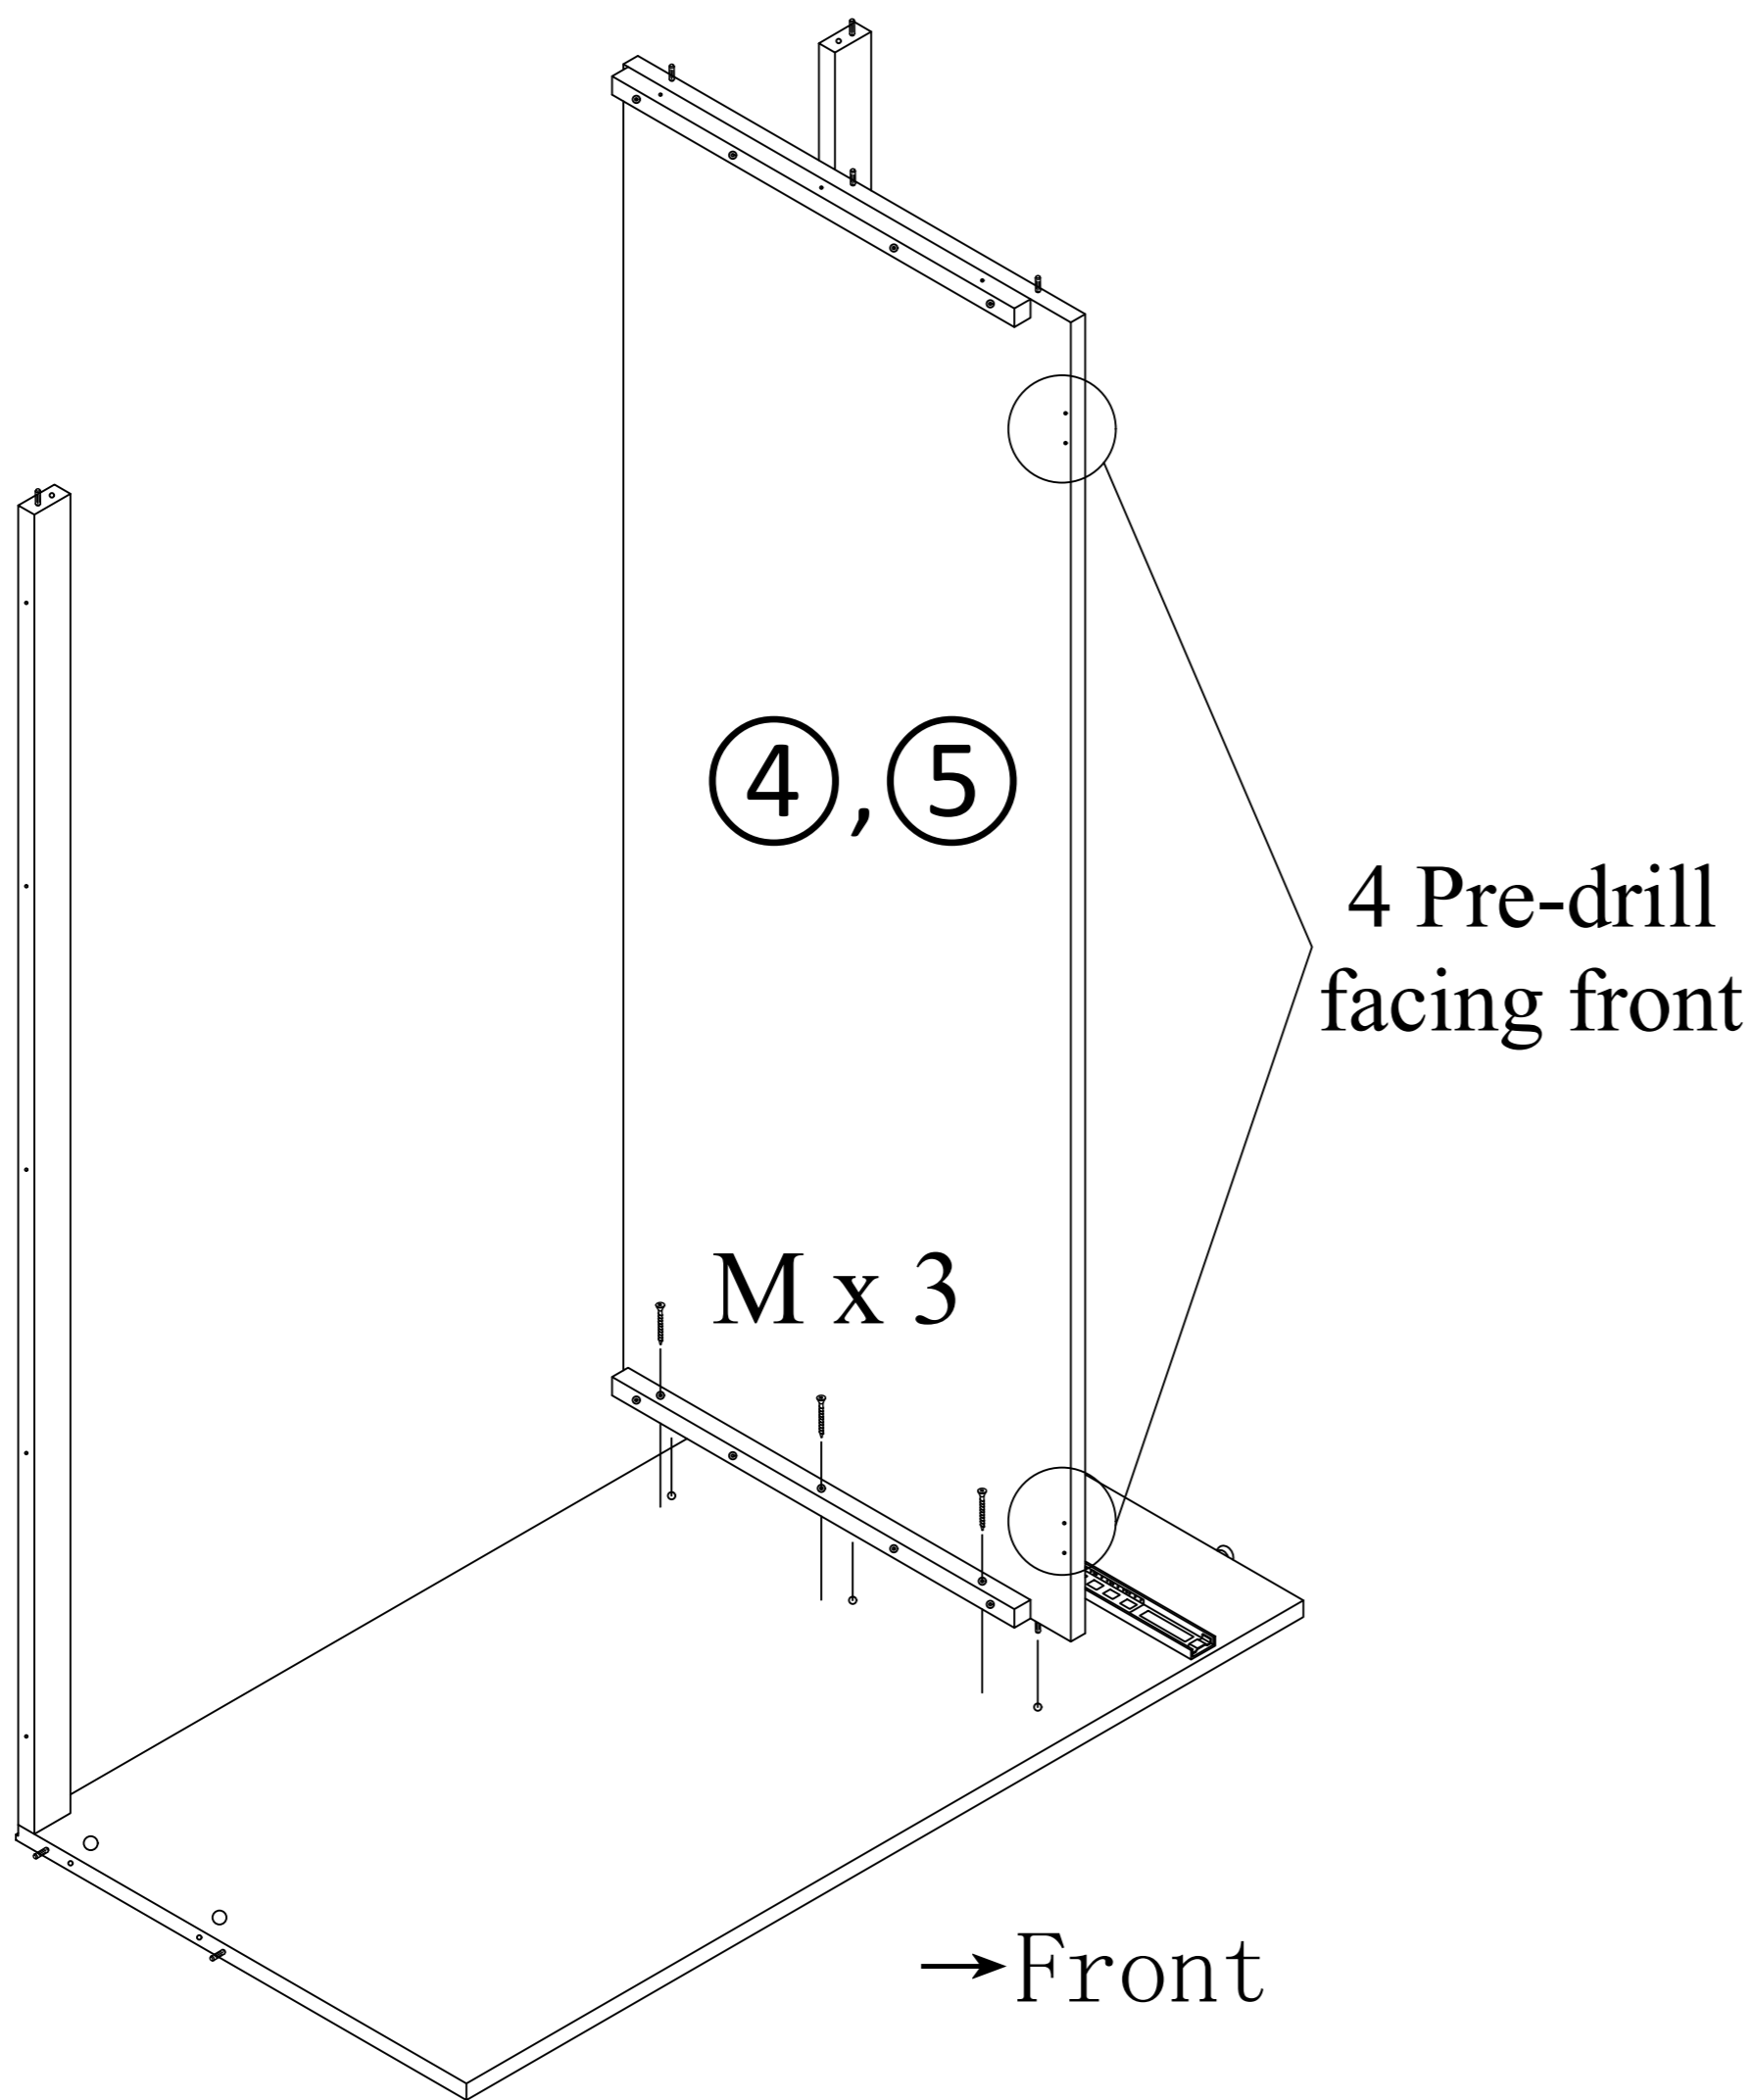
Step 4 : Attach Bottom Panel (4,5) with screw (M).




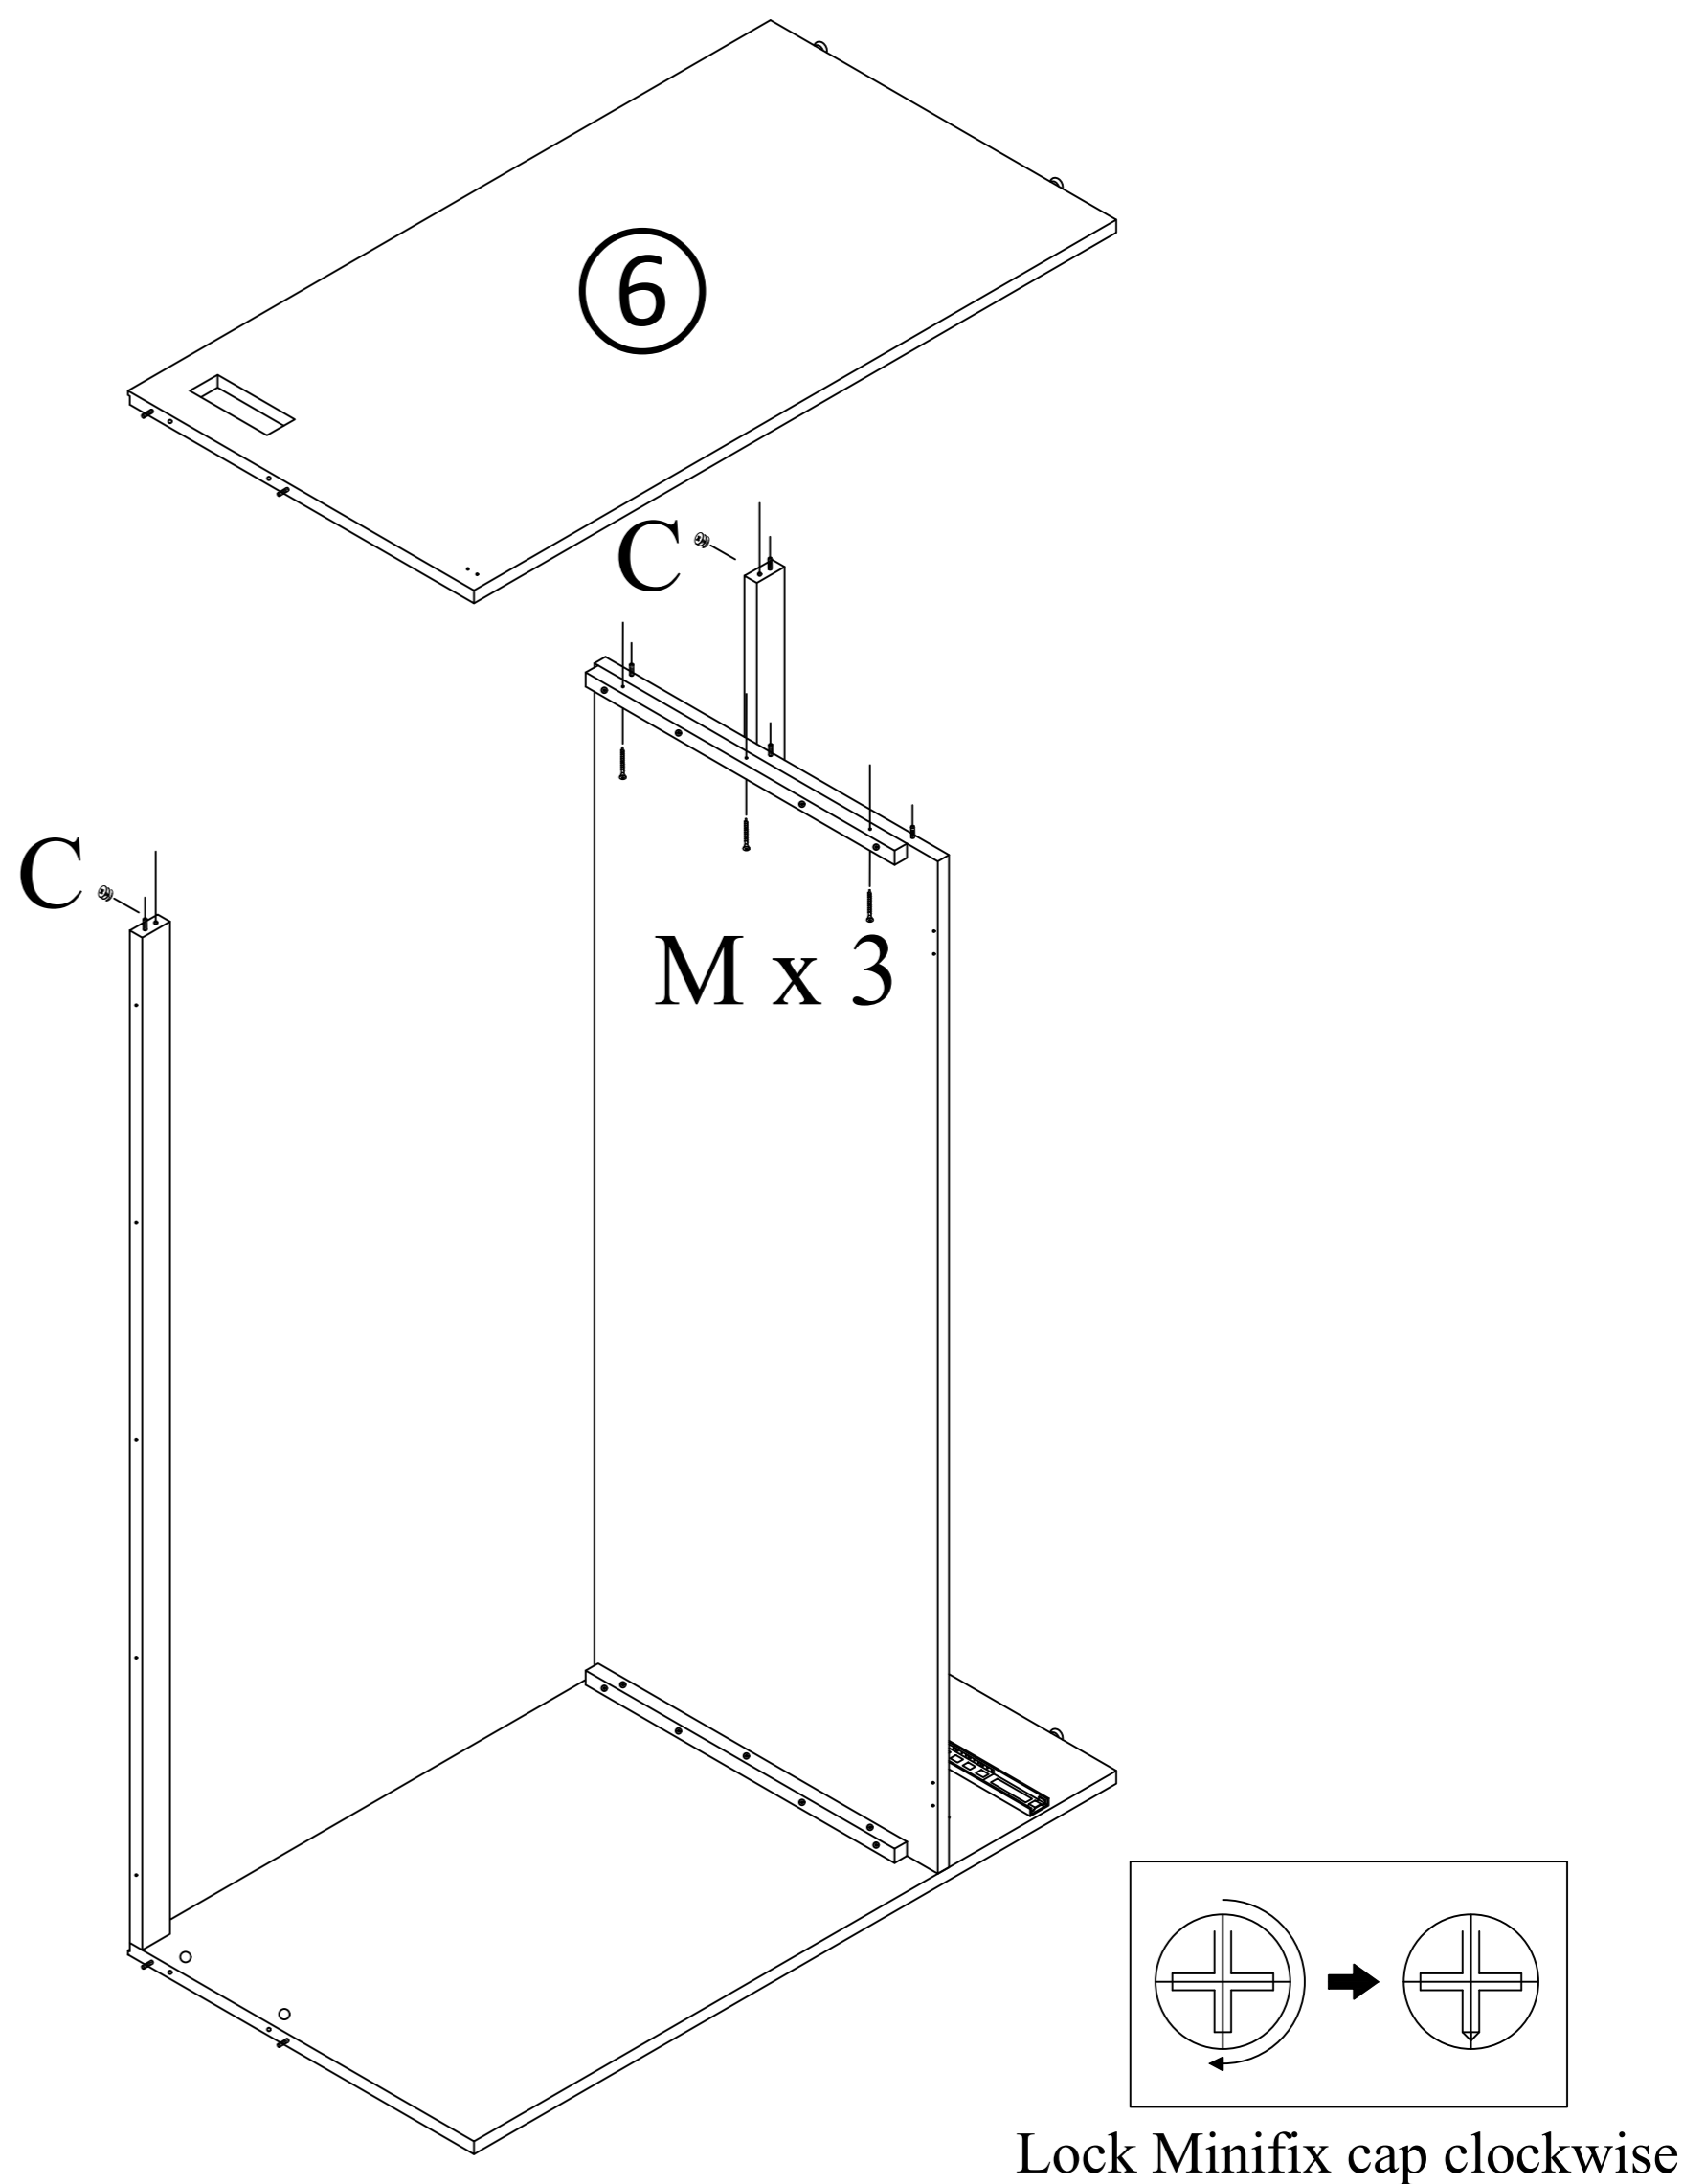
Step 5 : Attach Right Panel (6) and lock Cap (C). Tighten the connection with screw (M).



M	Screw M4 x 32MM		3PCS
---	-----------------	-------------------------------------------------------------------------------------	------

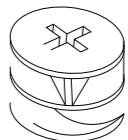
C	Minifix Cap		2PCS
M	Screw M4 x 32MM		3PCS

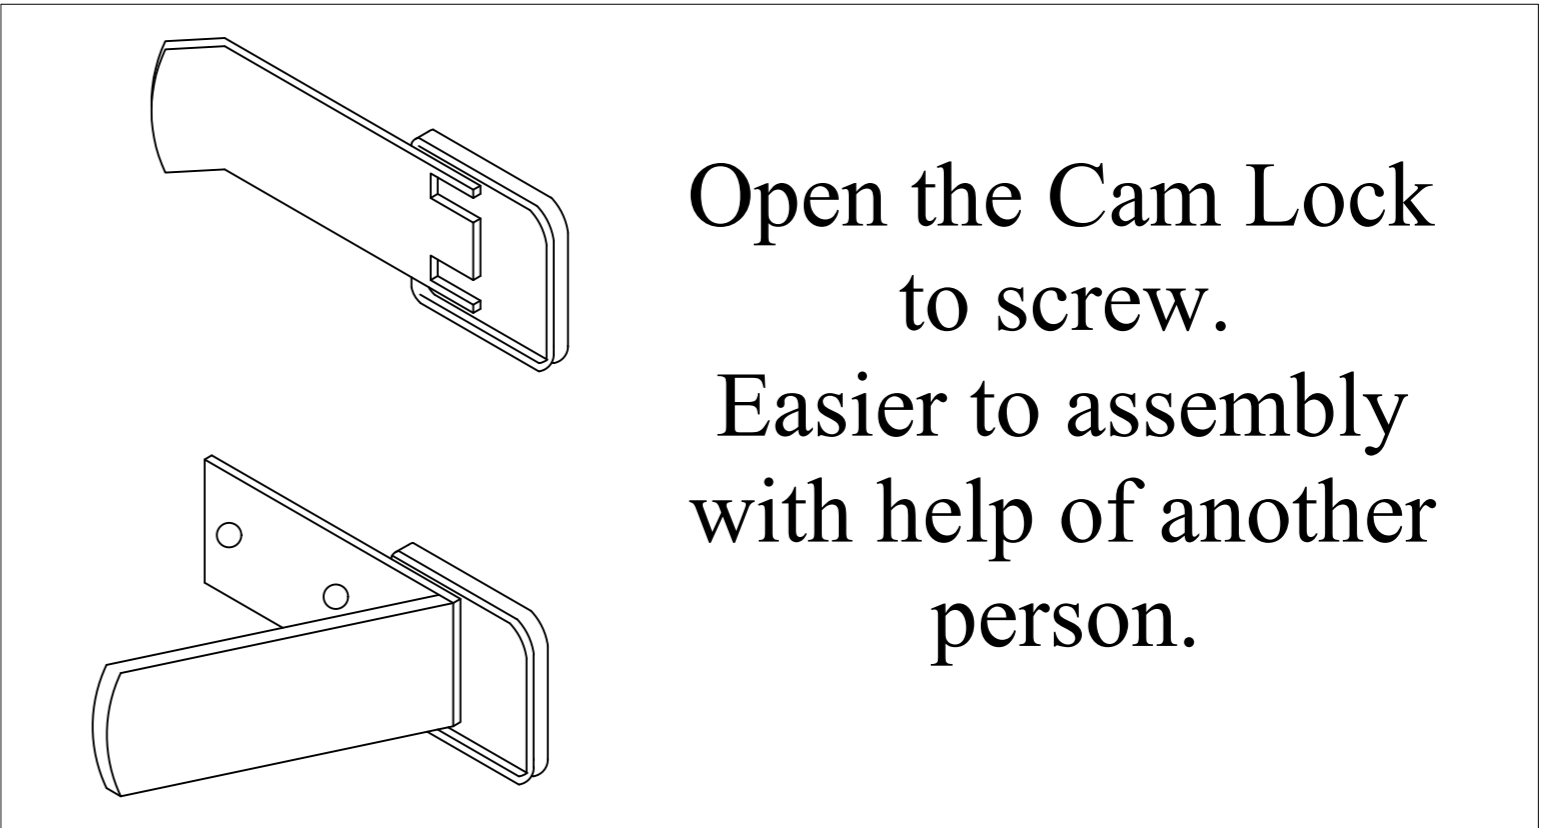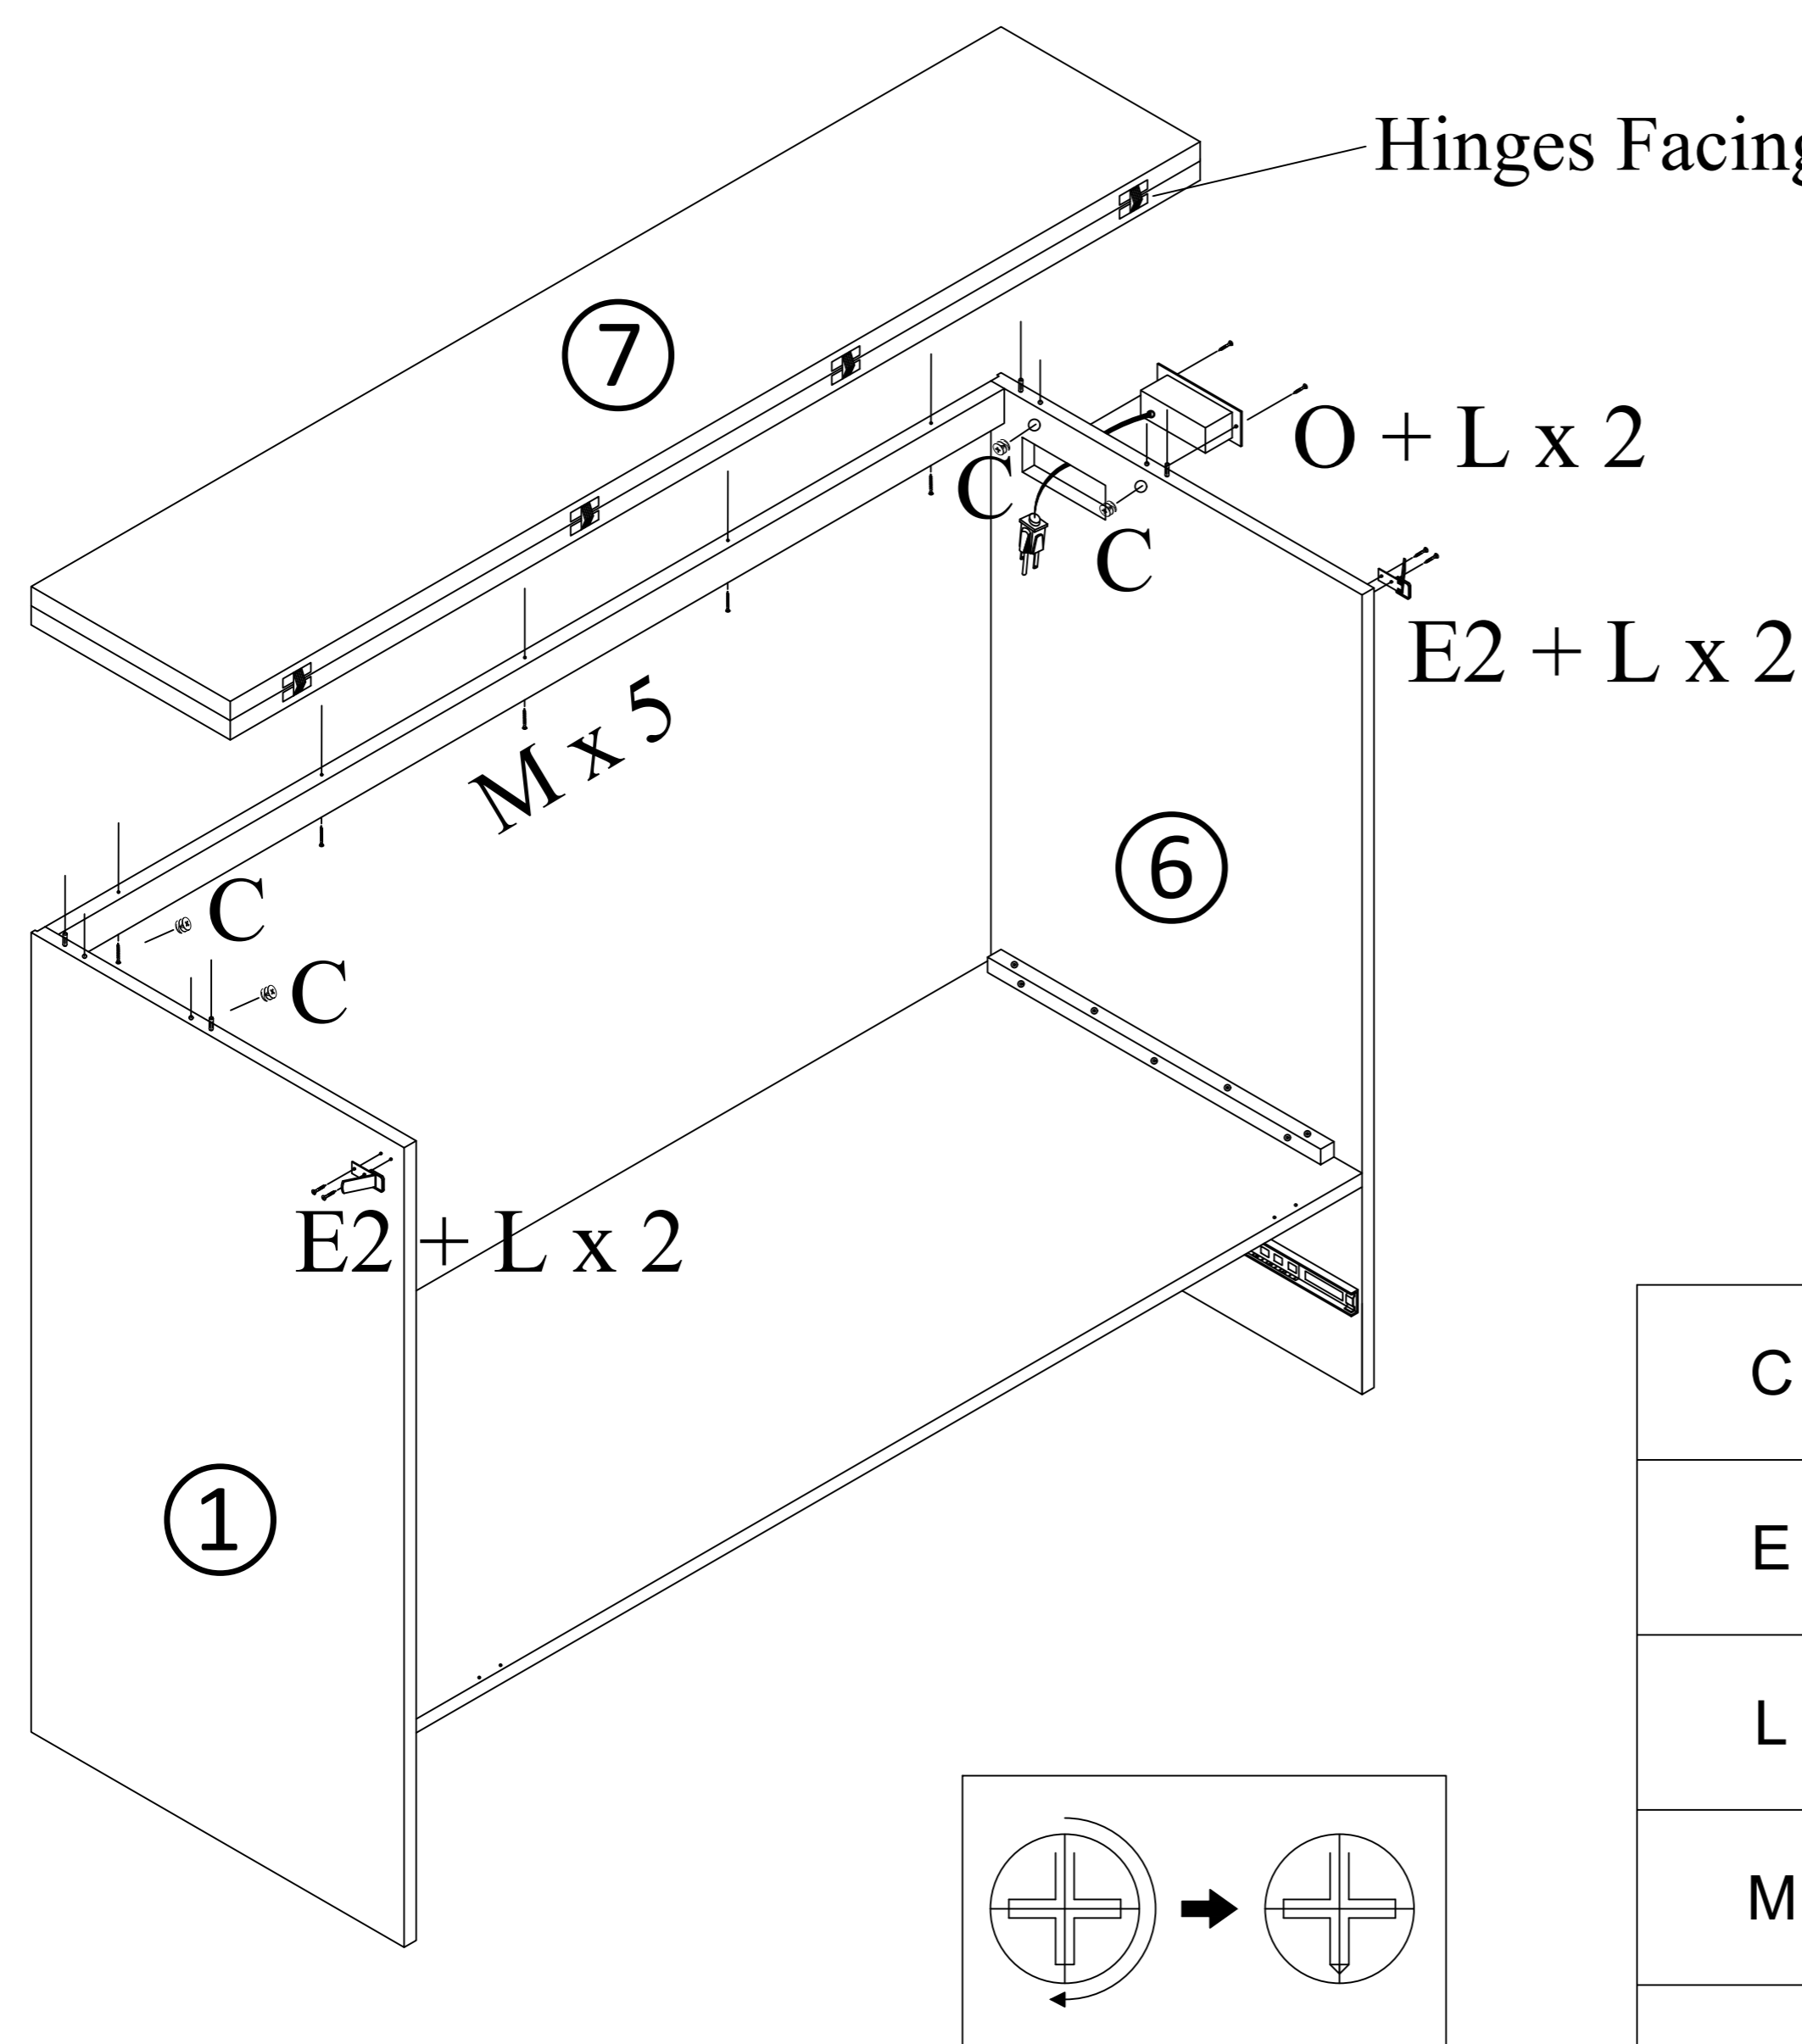Step 6 : Turn the assembled parts up. Attach Top Panel (7) and lock Cap (C), tighten the connection with screw (M). Slot the USB port (O) through Right Panel (6) and lock with screw (L). Attach Locker (E1) to Side Panel (1,6) with screw (L).




C	Minifix Cap		4PCS
E	Locker	E2	2PCS
L	Screw M3.5 x 16MM		6PCS
M	Screw M4 x 32MM		5PCS
O	USB Port		1PC

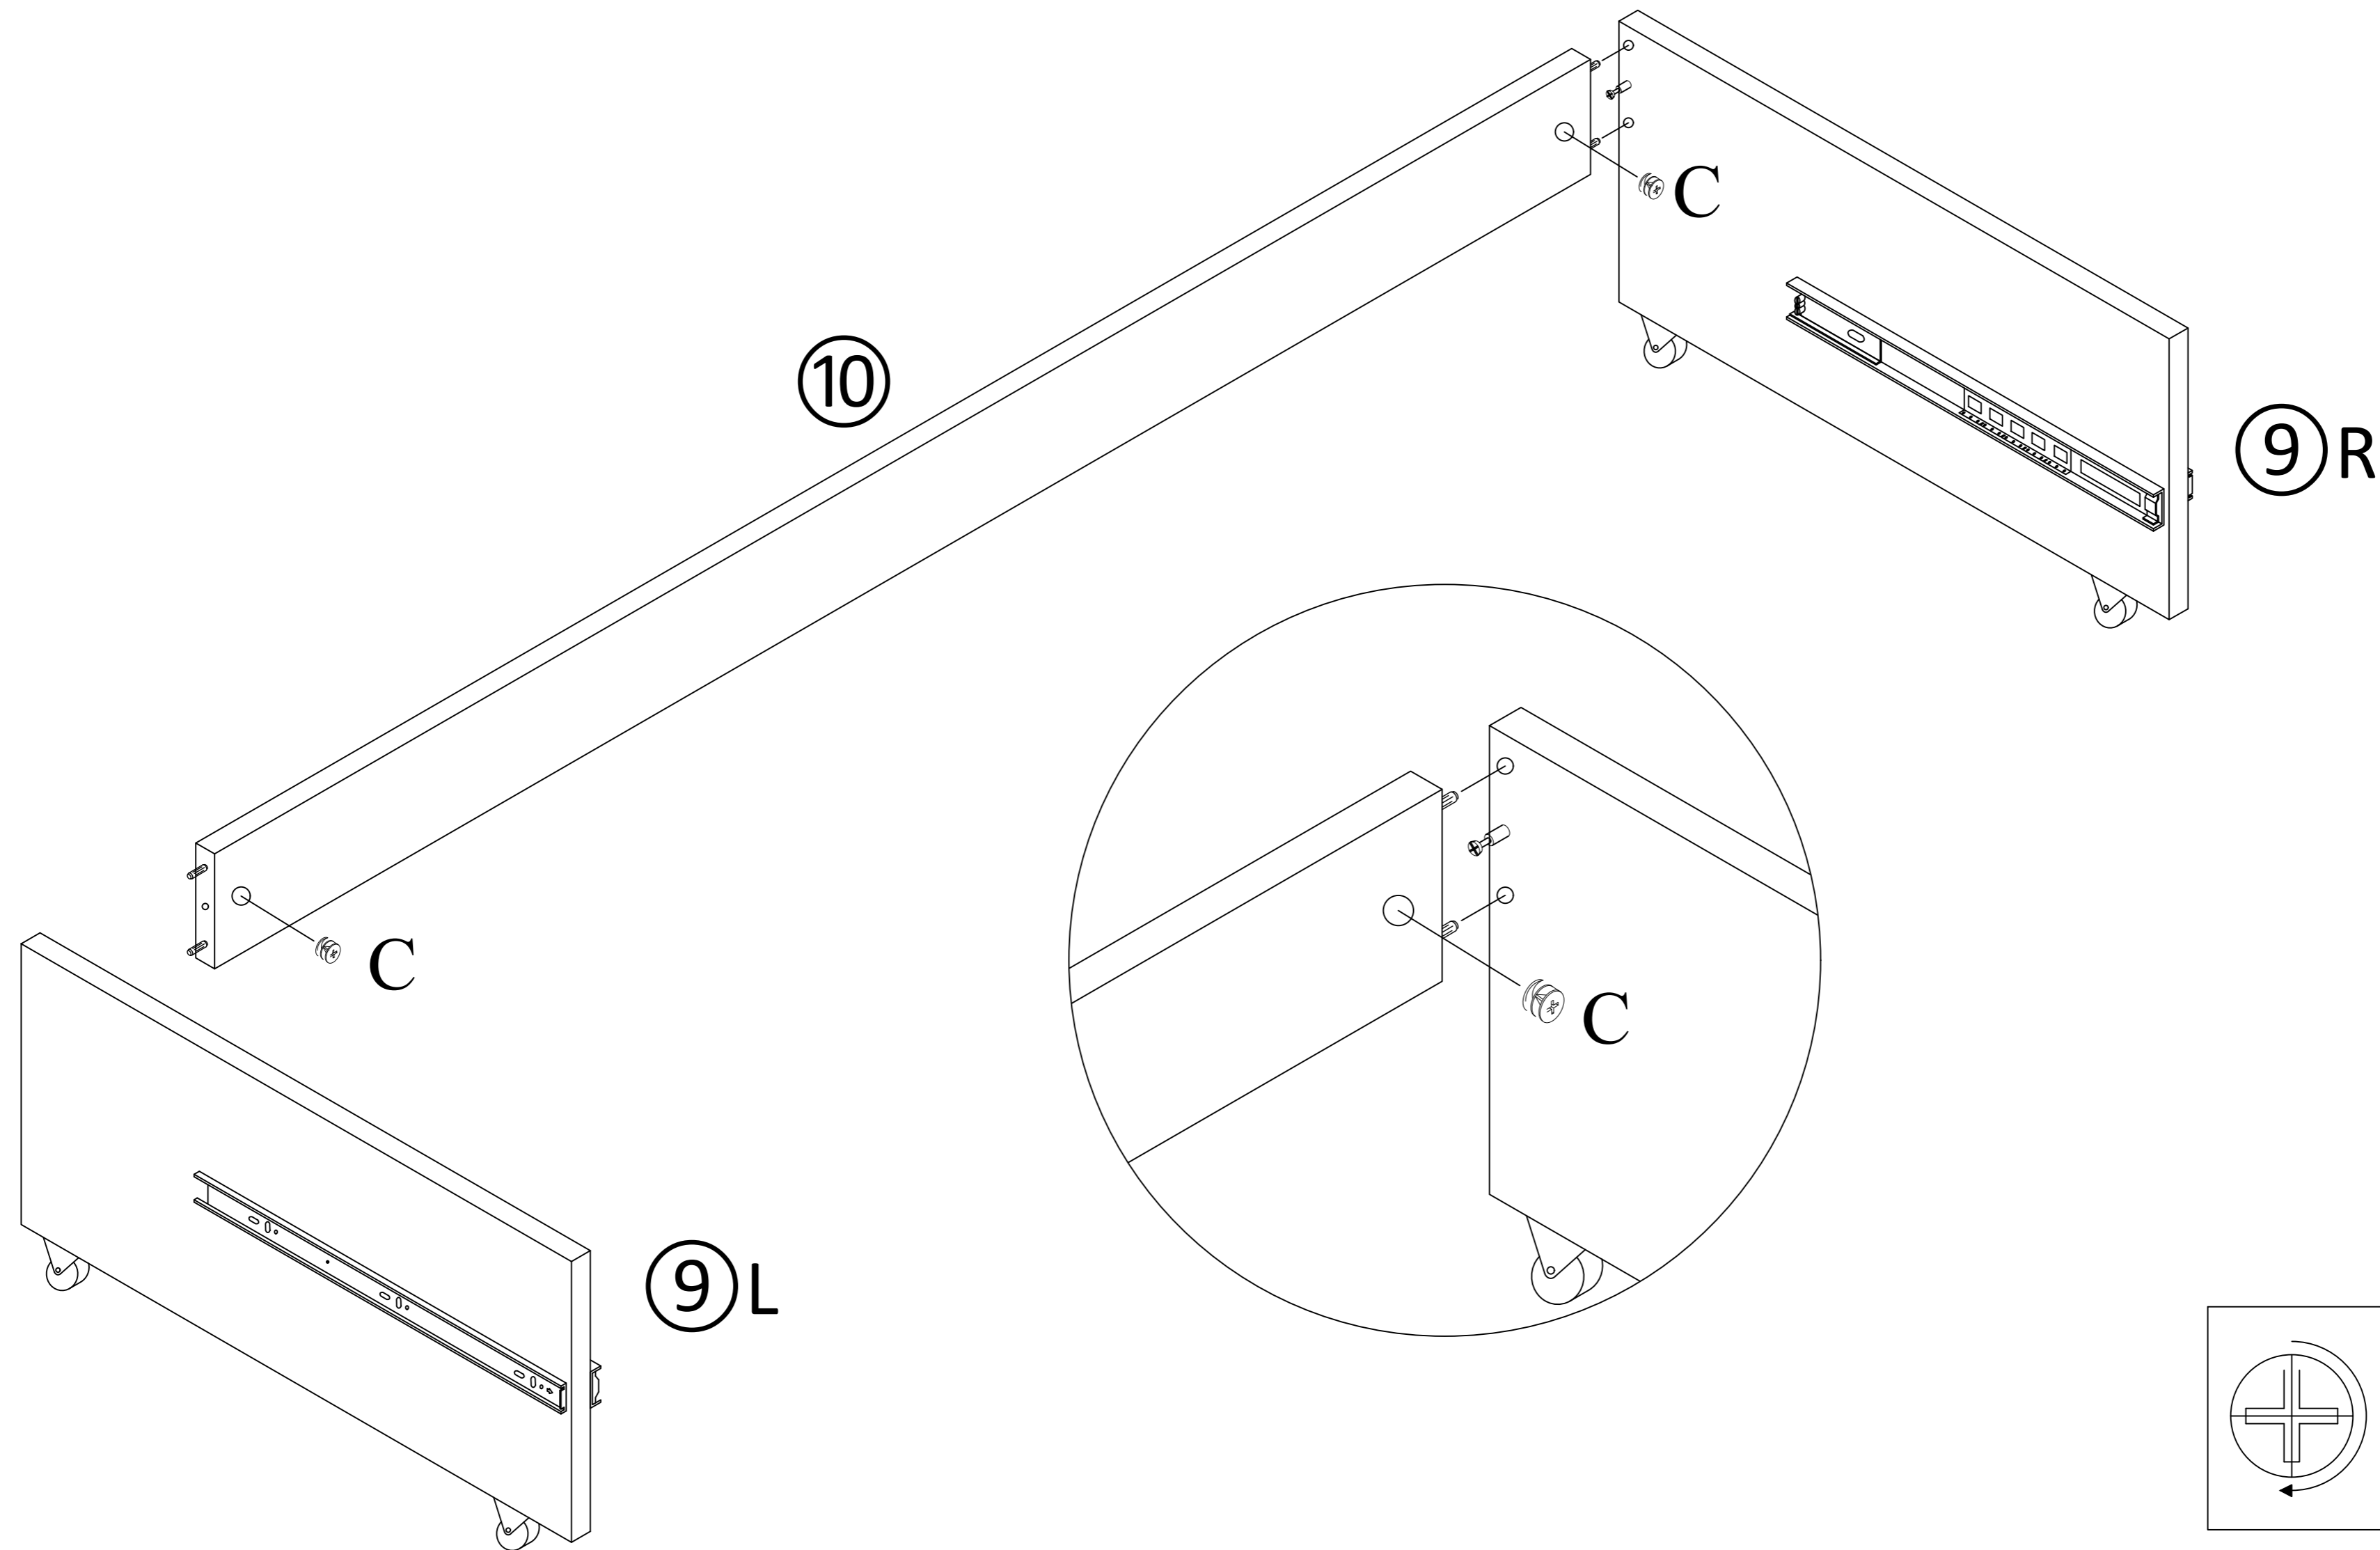Step 7 : Connect Extension Back 1 (10) to Extension Sides 1 (9) and lock with Cap (C).




C	Minifix Cap		2PCS
---	-------------	--	------

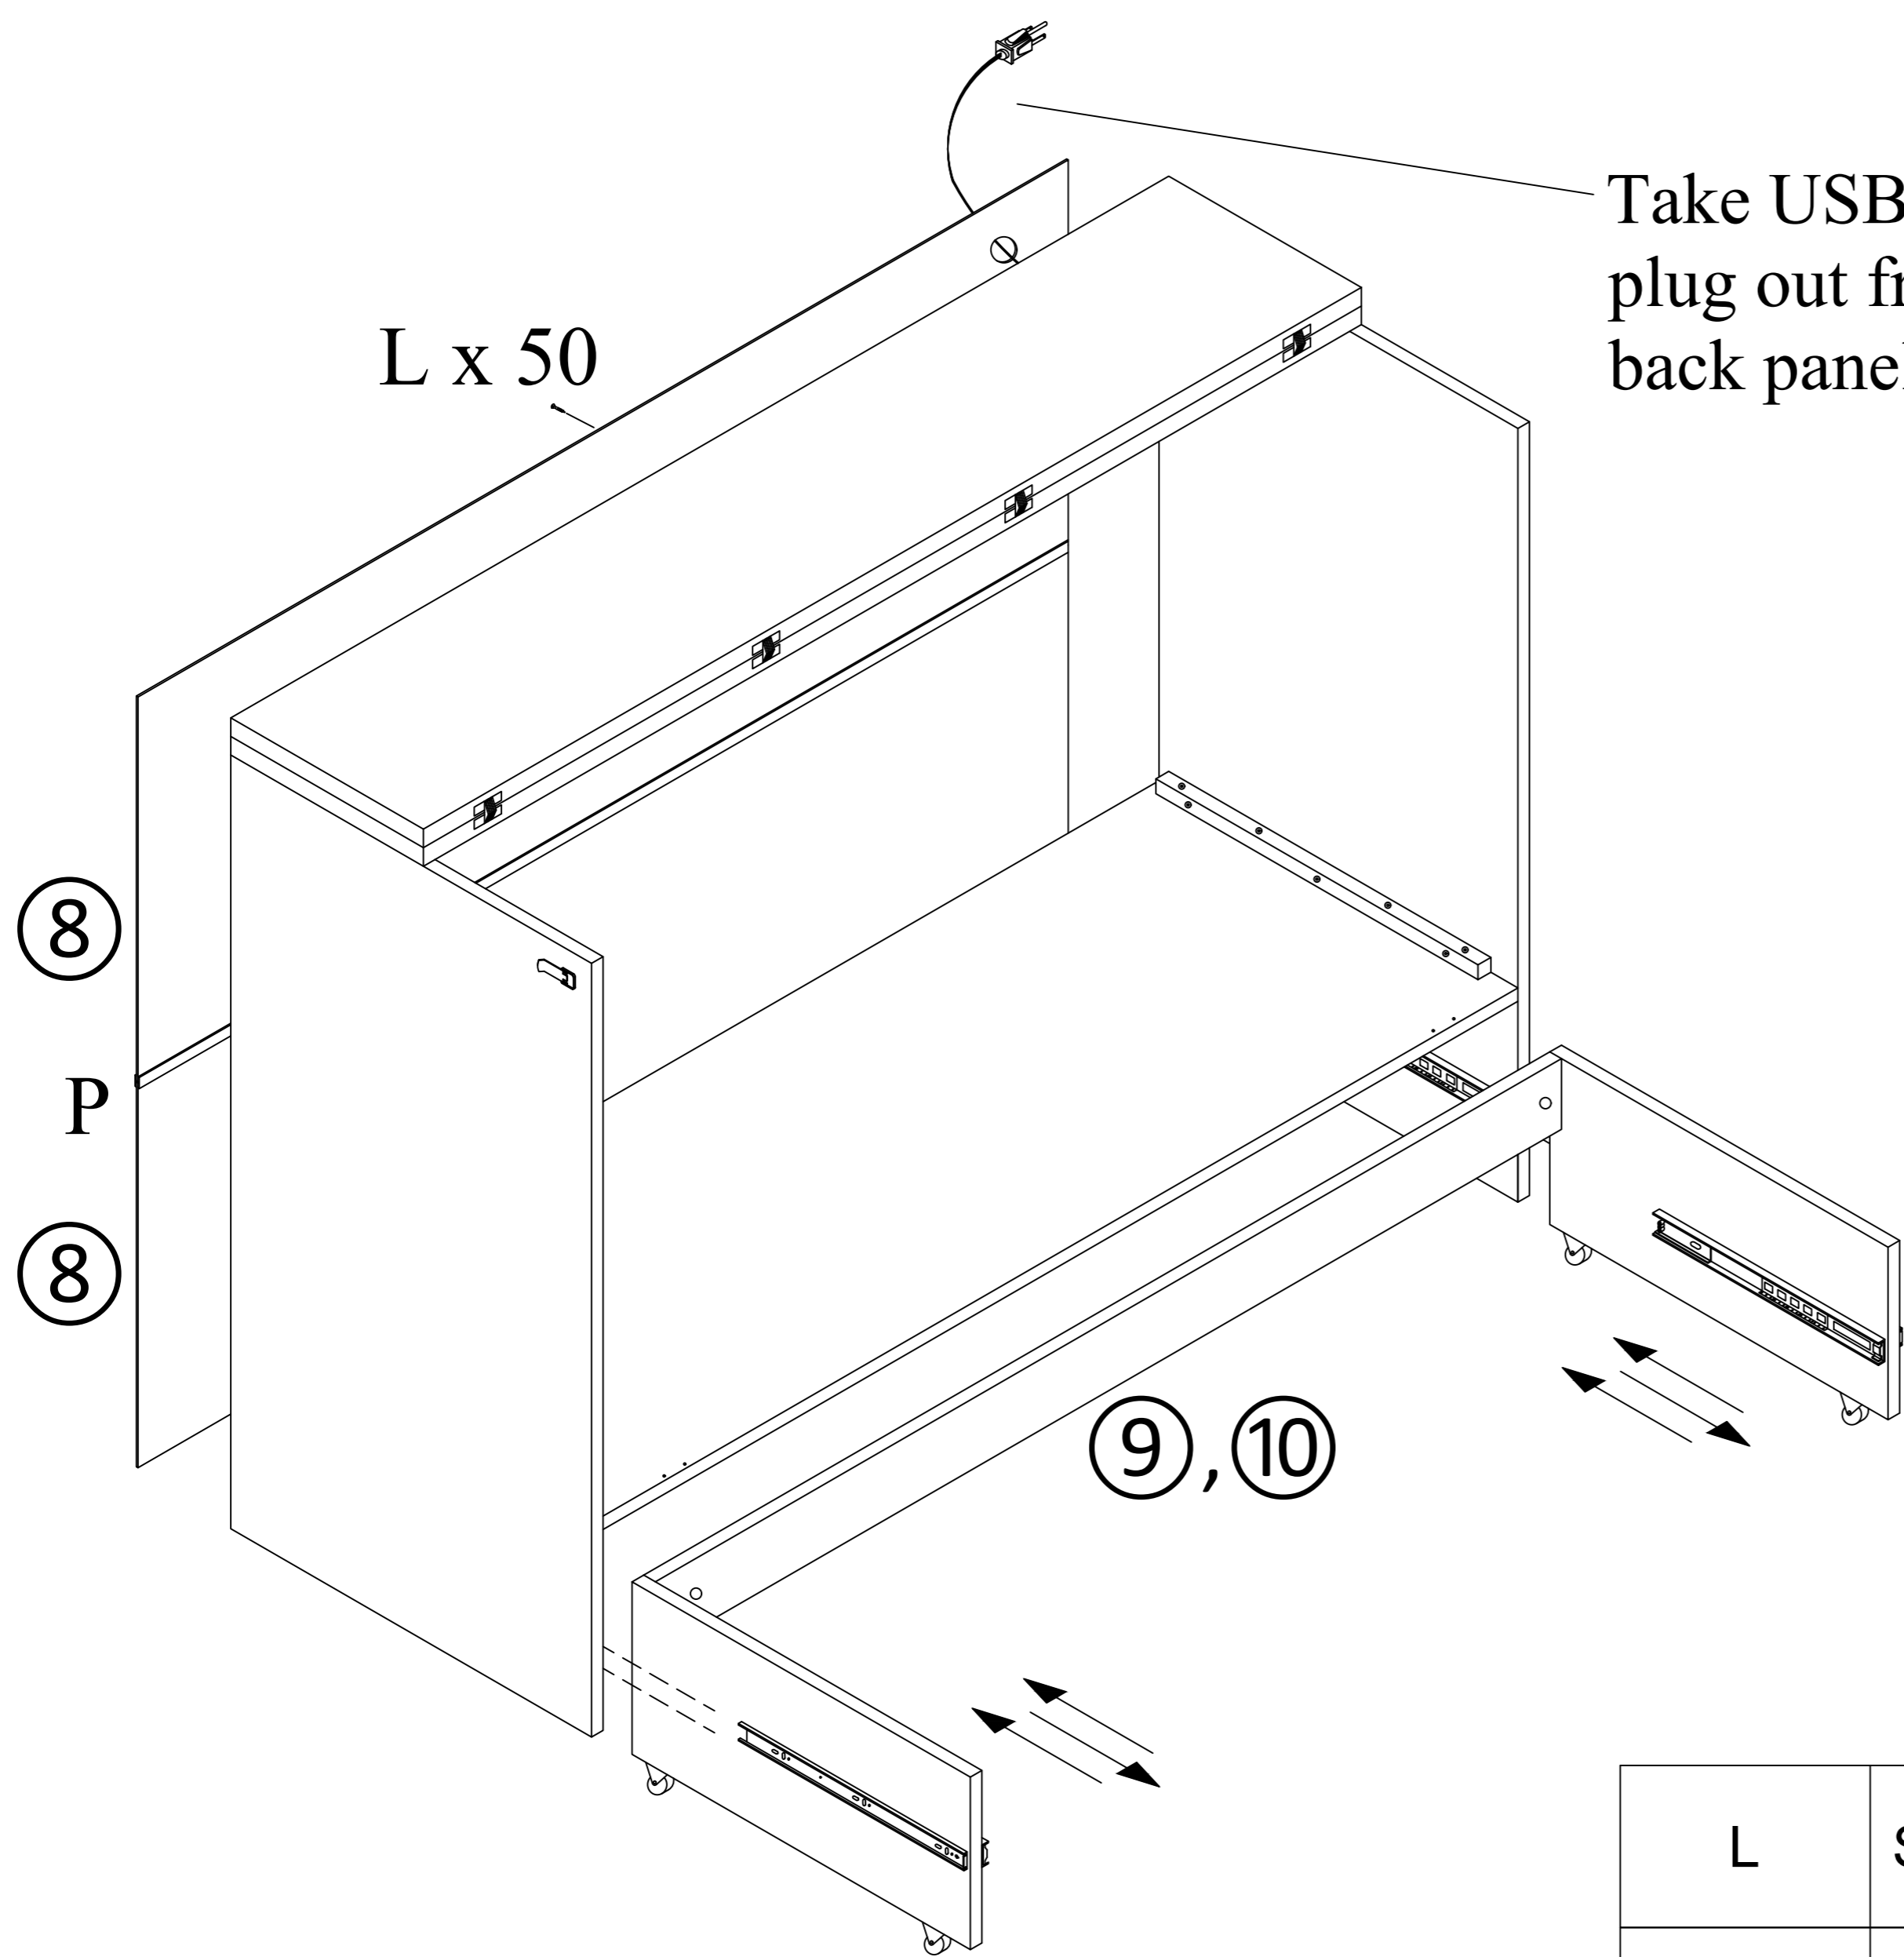Step 8 : Slot Back Panels (8) into H-Connector (P) and attach it with screw (L). Slot Extension 1 (9L,9R,10) to Side Panel (1,6).



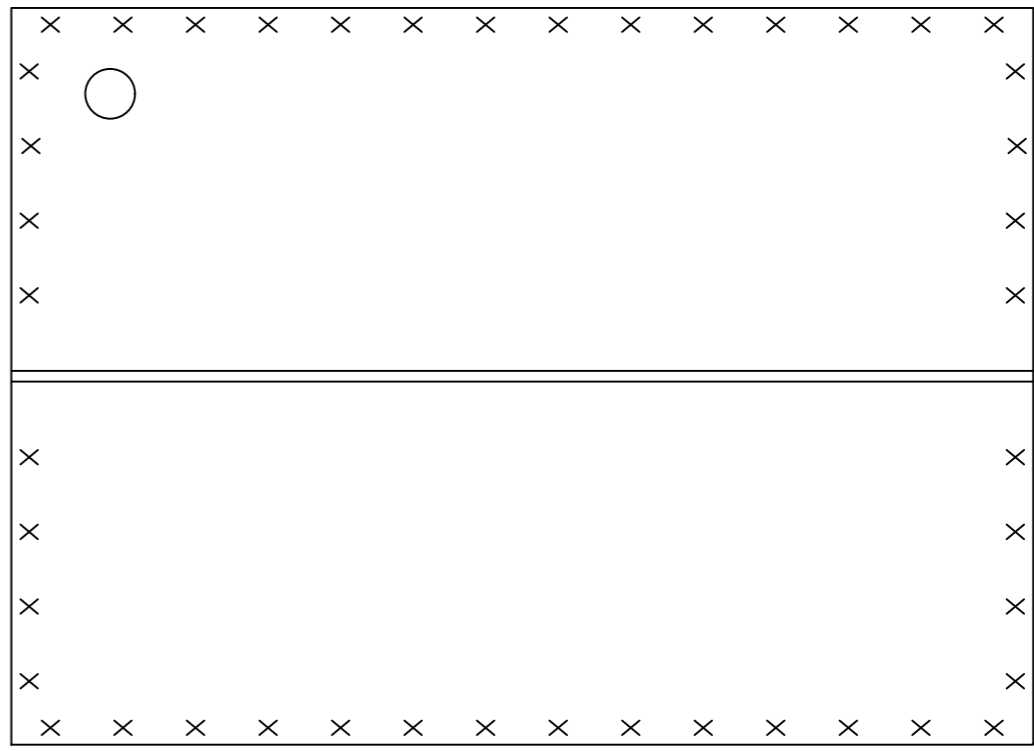Take USB Port's
plug out from
back panel.





Screw Array Guidance.
(Back View)

I2/J2I1/J1

Gently slot I2/J2 into I1/J1, move
fort and backward until extension
side can be easily kept within.

L	Screw M3.5 x 16MM		50PCS
P	H - Connector		1PC

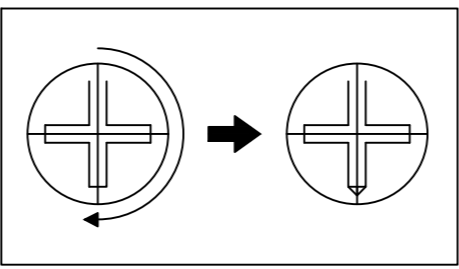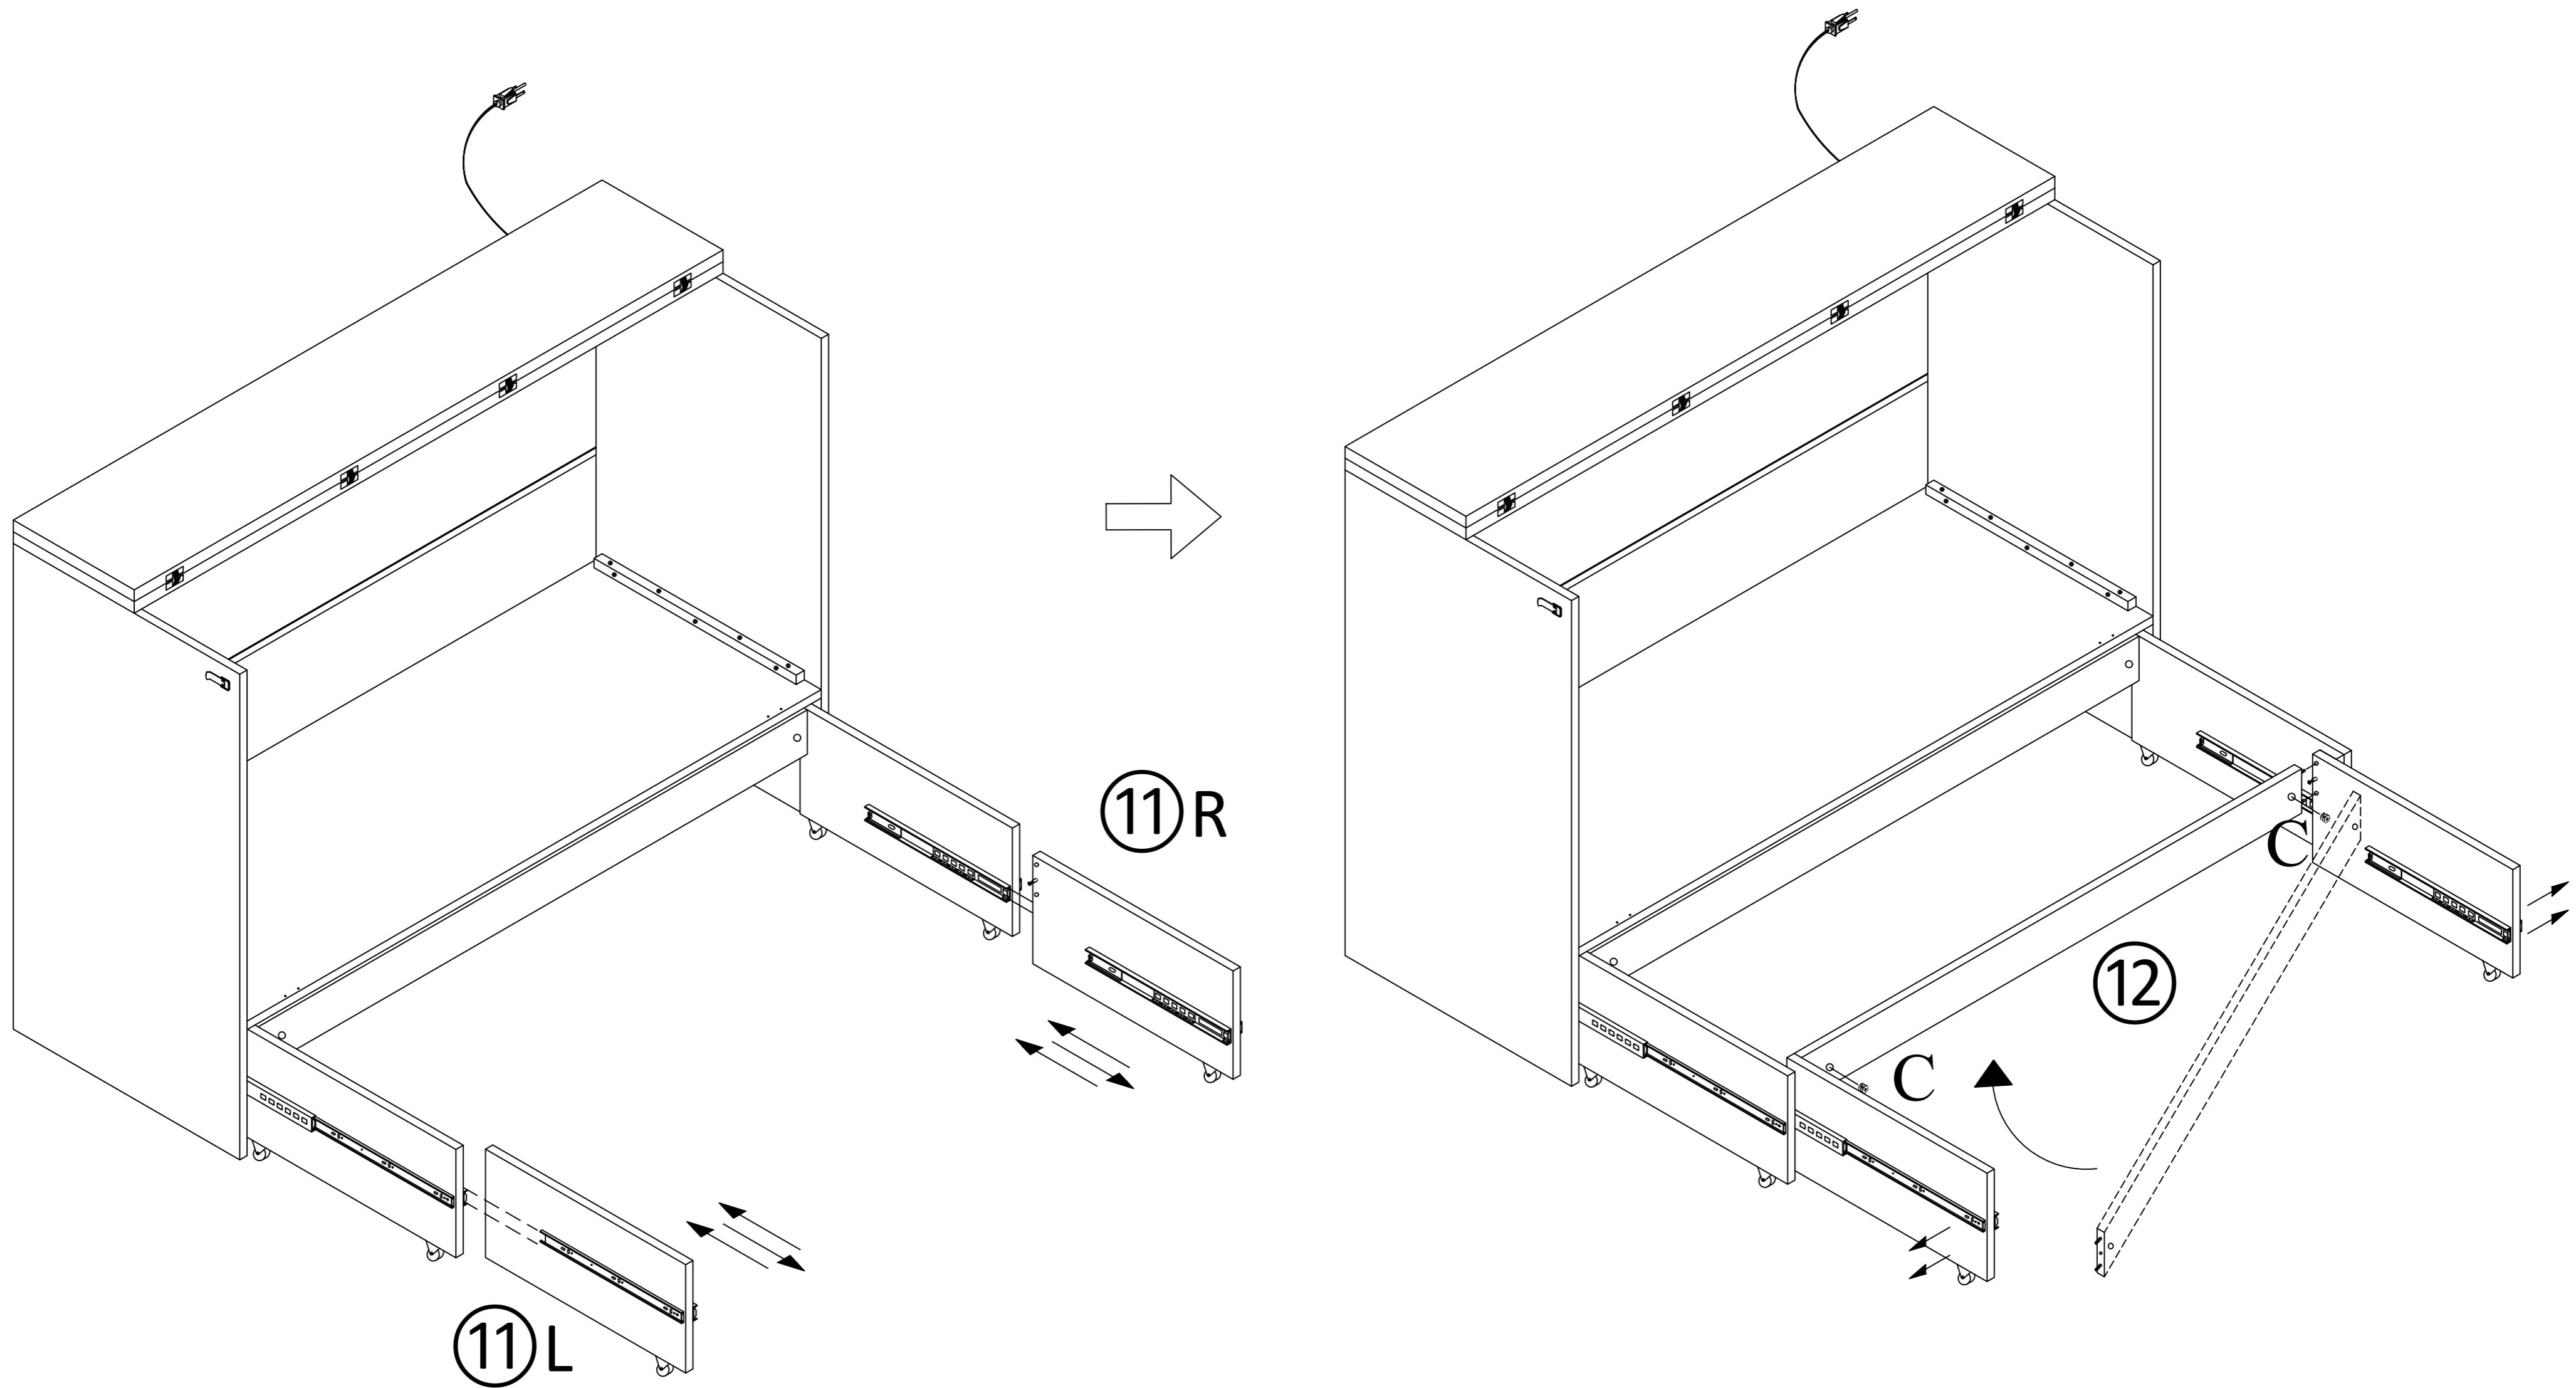
Step 9 : Attach Extension Side 2 (11) as earlier. Put Extension Back 2 (12) in between sides (11). Use Dowel and Minifix installed earlier to position one side first. The other side can be slotted in easier when extension side (11) is moved outward with small force. Lock Cap (C) after slotted in.



Lock Minifix cap clockwise


C	Minifix Cap		2PCS
---	-------------	--	------

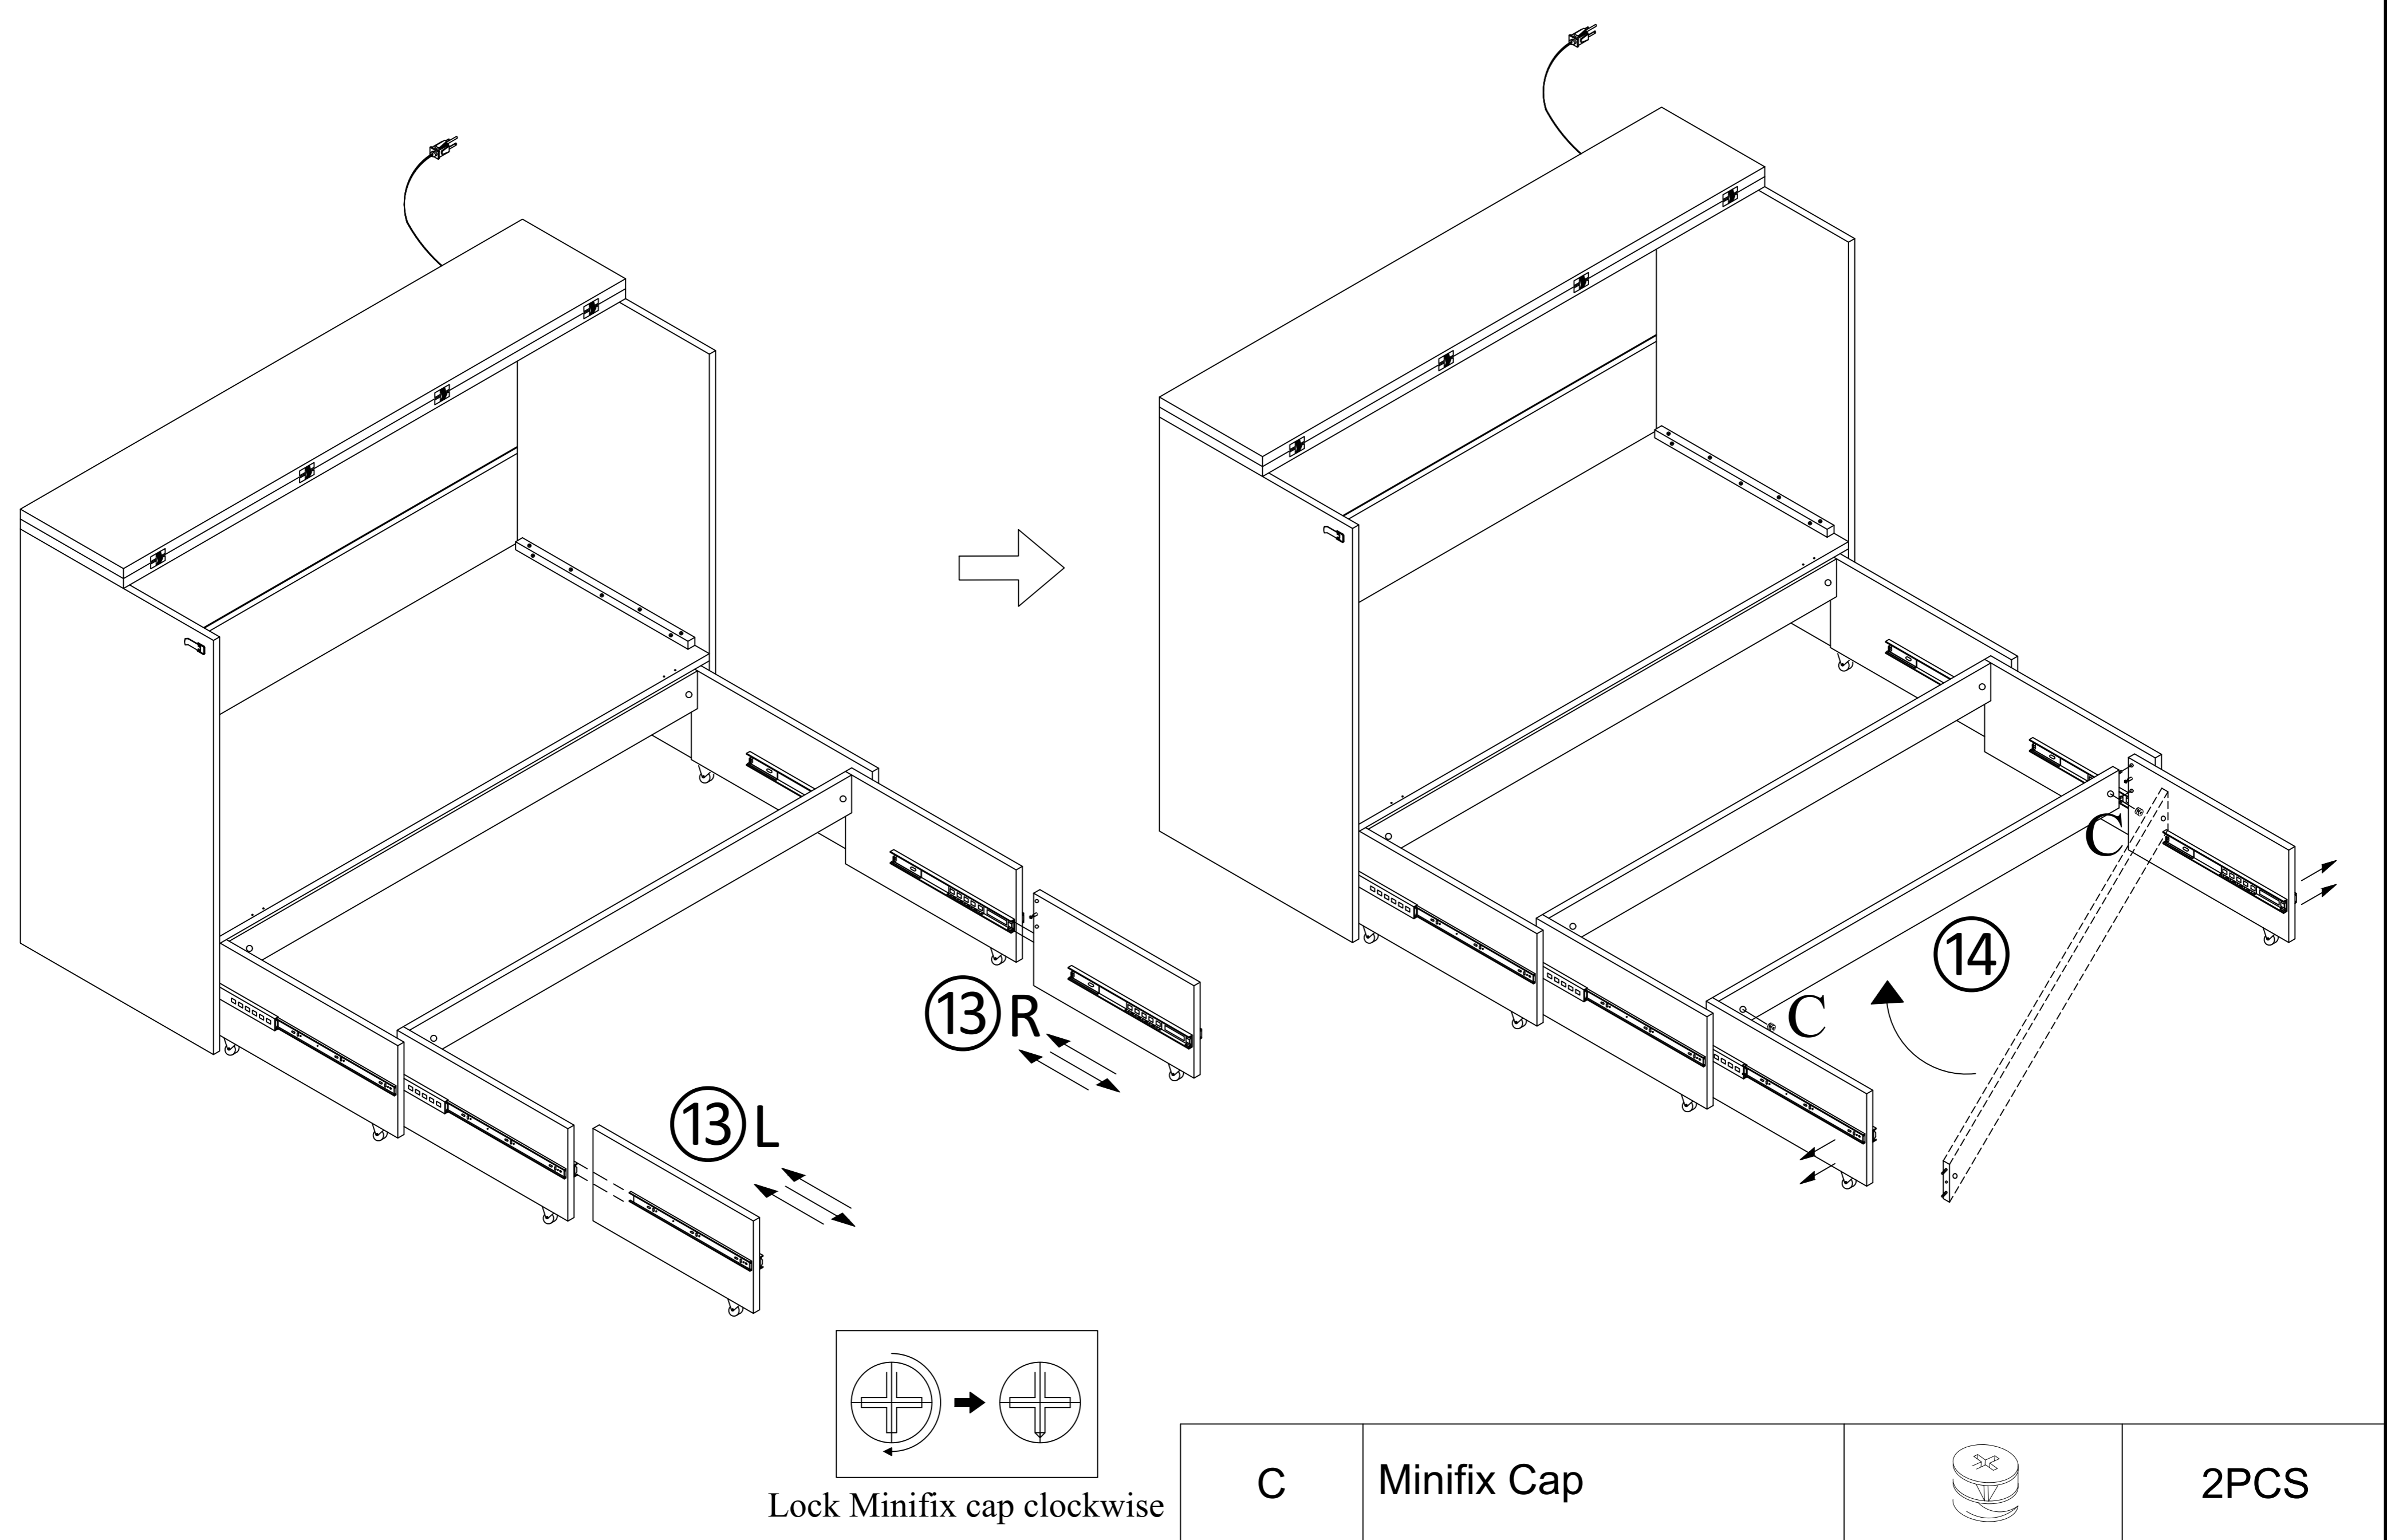Step 10 : Attach Extension Side and Back 3 (13,14) as of the way to install Extension 2.




Step 11 : Drawer assembly.

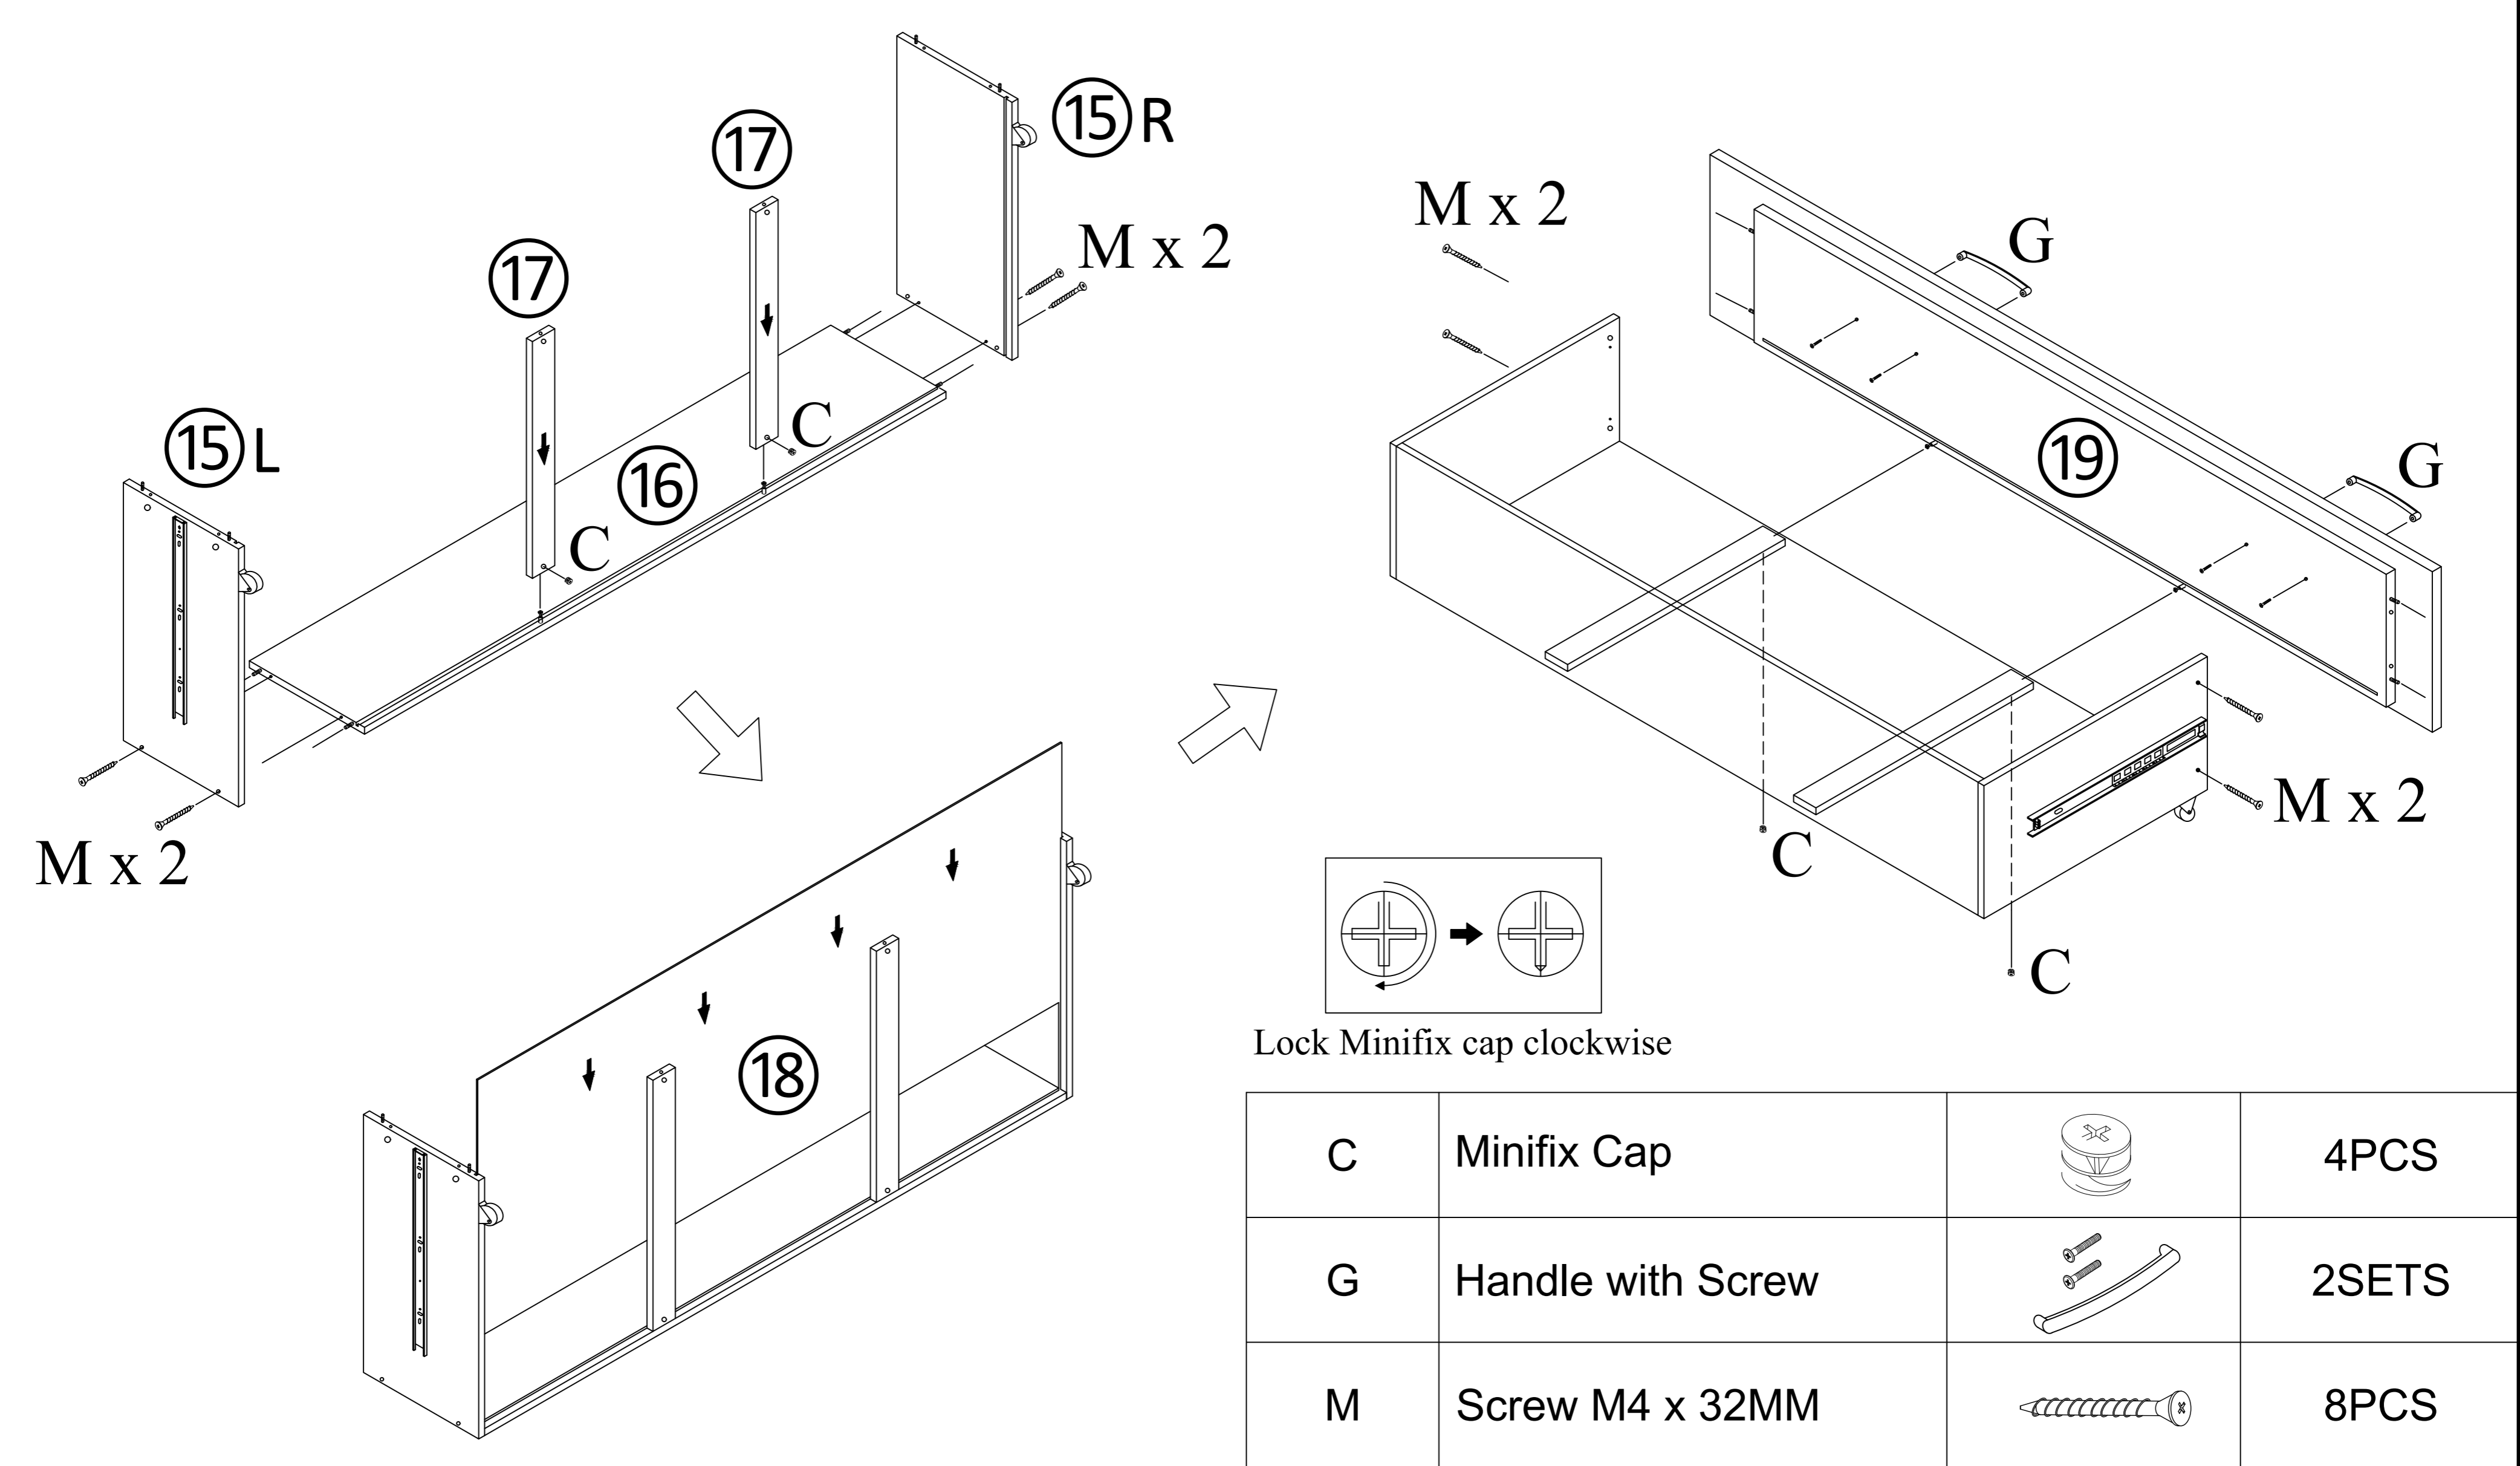
First connect Drawer Back (16) to Drawer Side (15) with Screw (M). Slot the Drawer Base Support (17) into Drawer Back (16) and lock with cap (C). Next, slot in the Drawer Base (18). Then, install the Handle with Screw (G) onto Drawer Front (19). Attach the Drawer Front (19) to the drawer box and lock with cap (C) and screw (M).




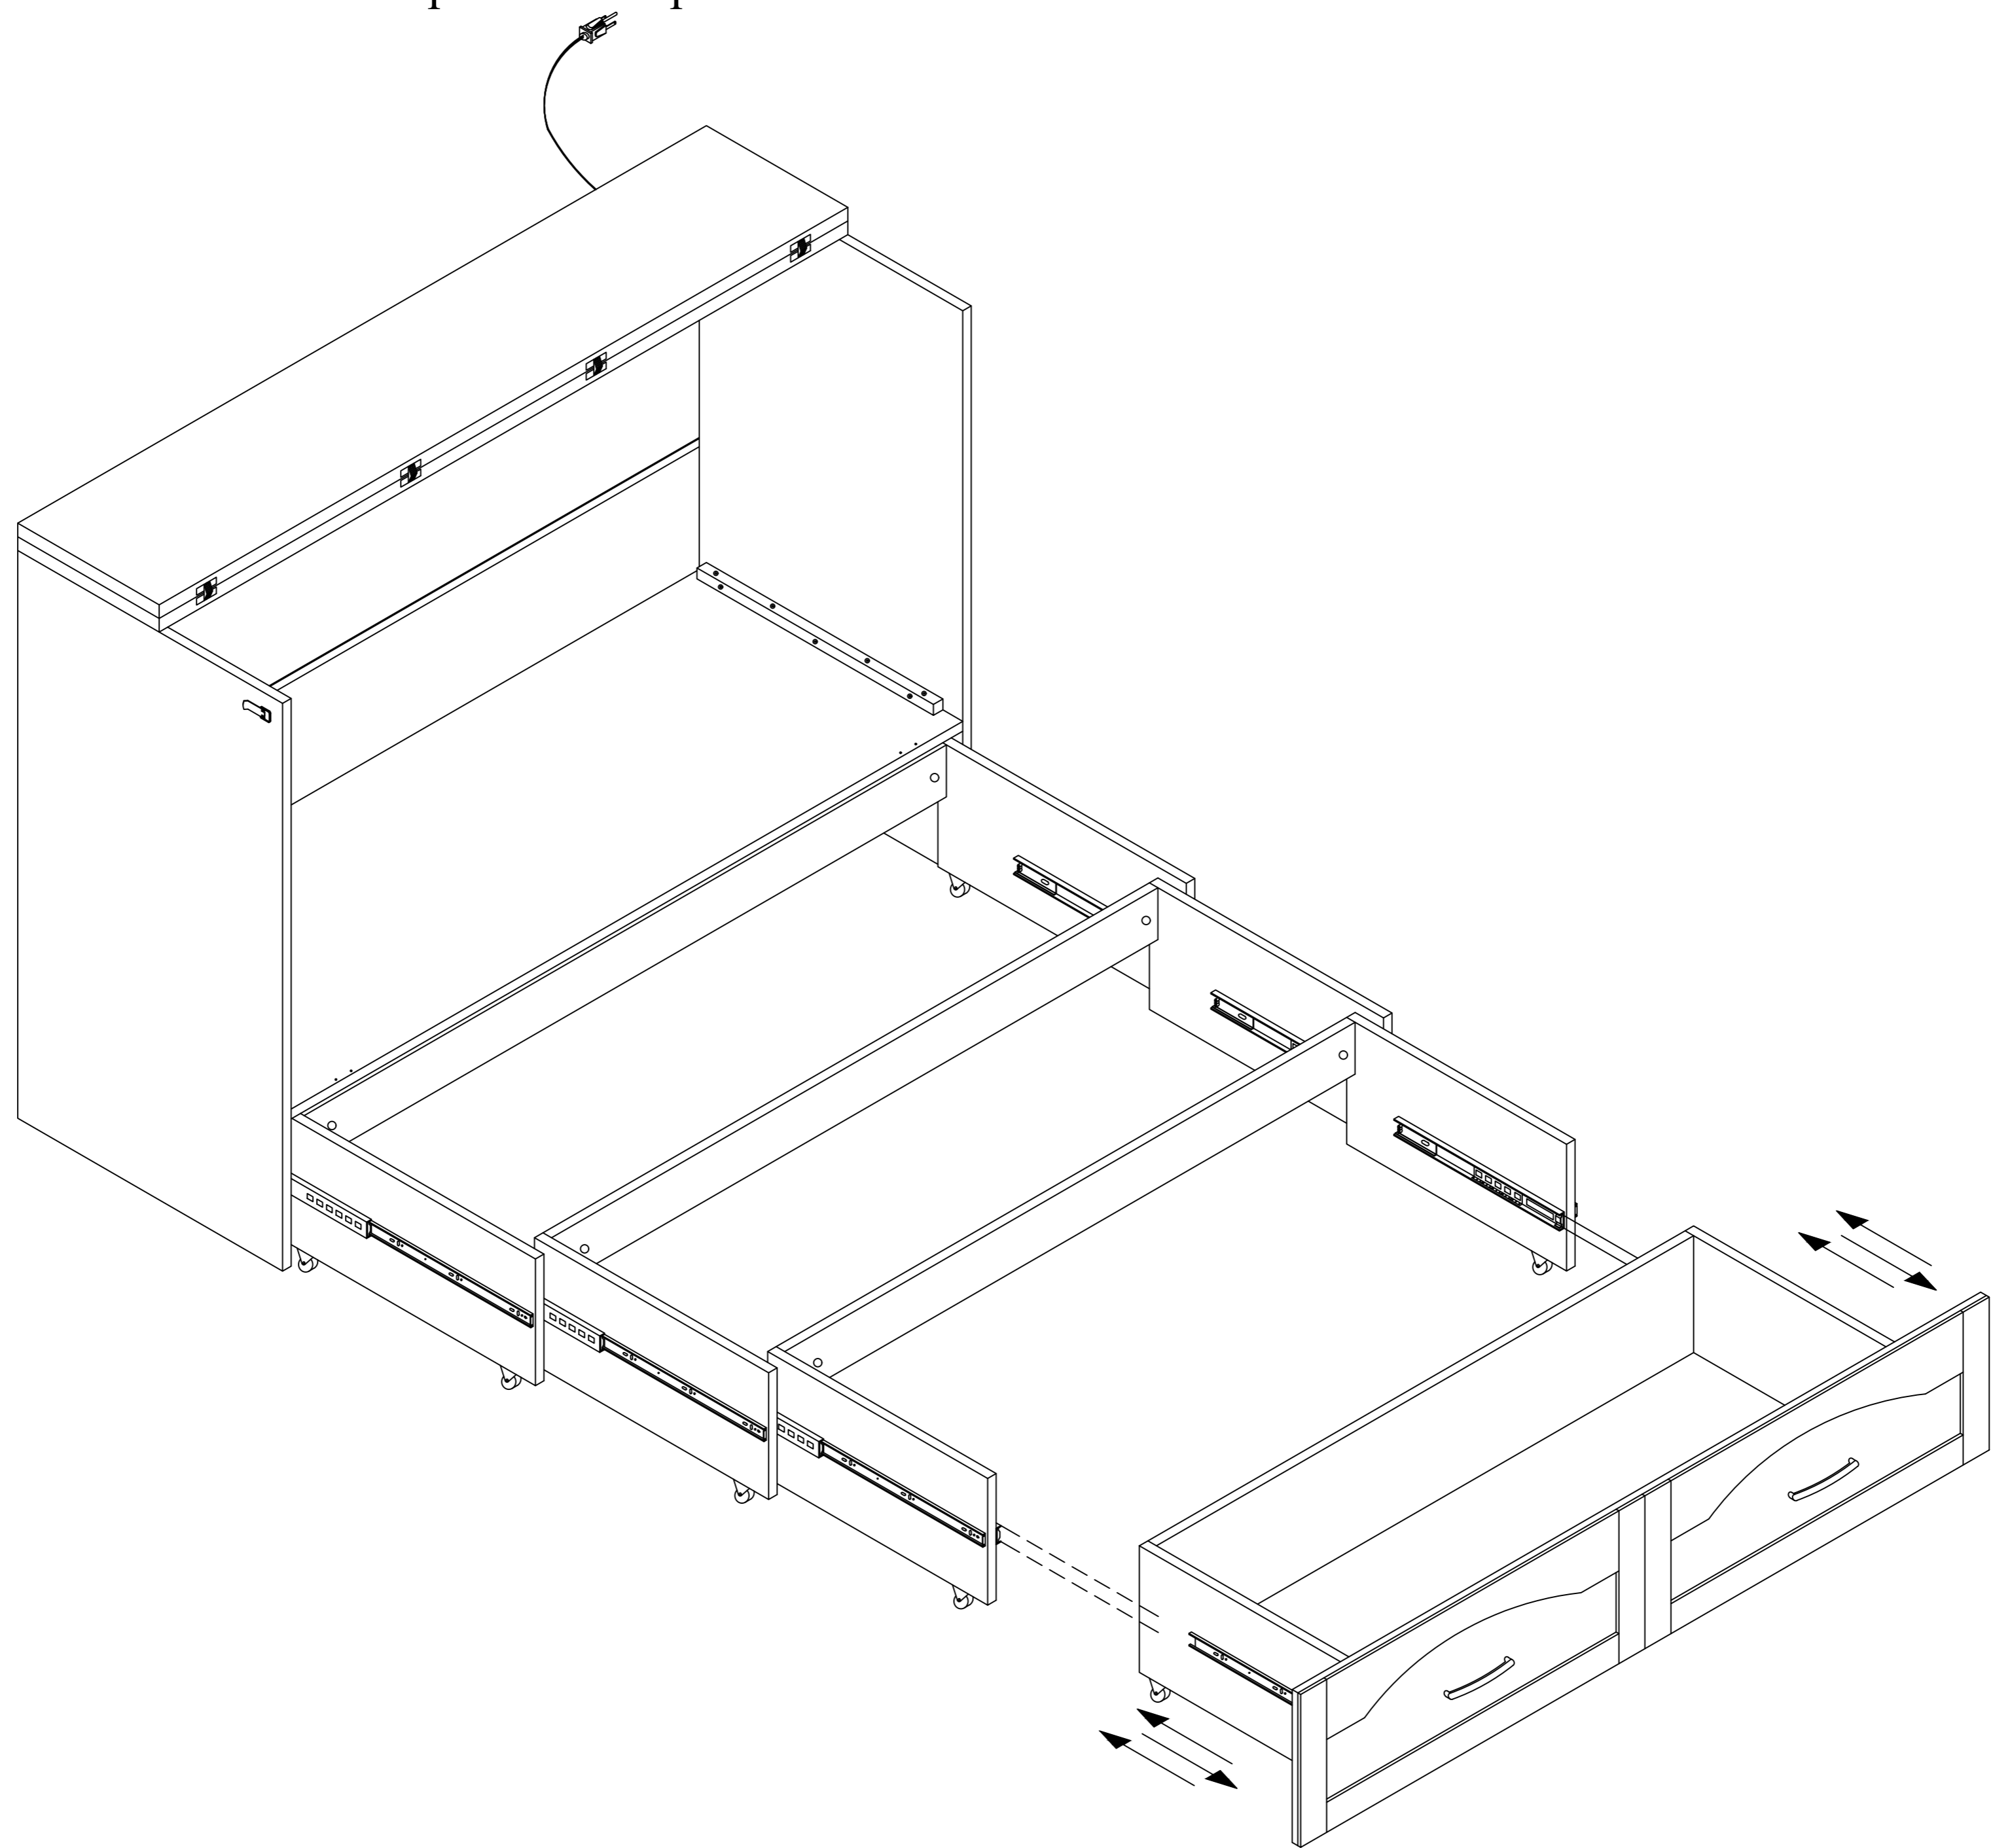Step 12 : Install Drawer Box as of previous steps.




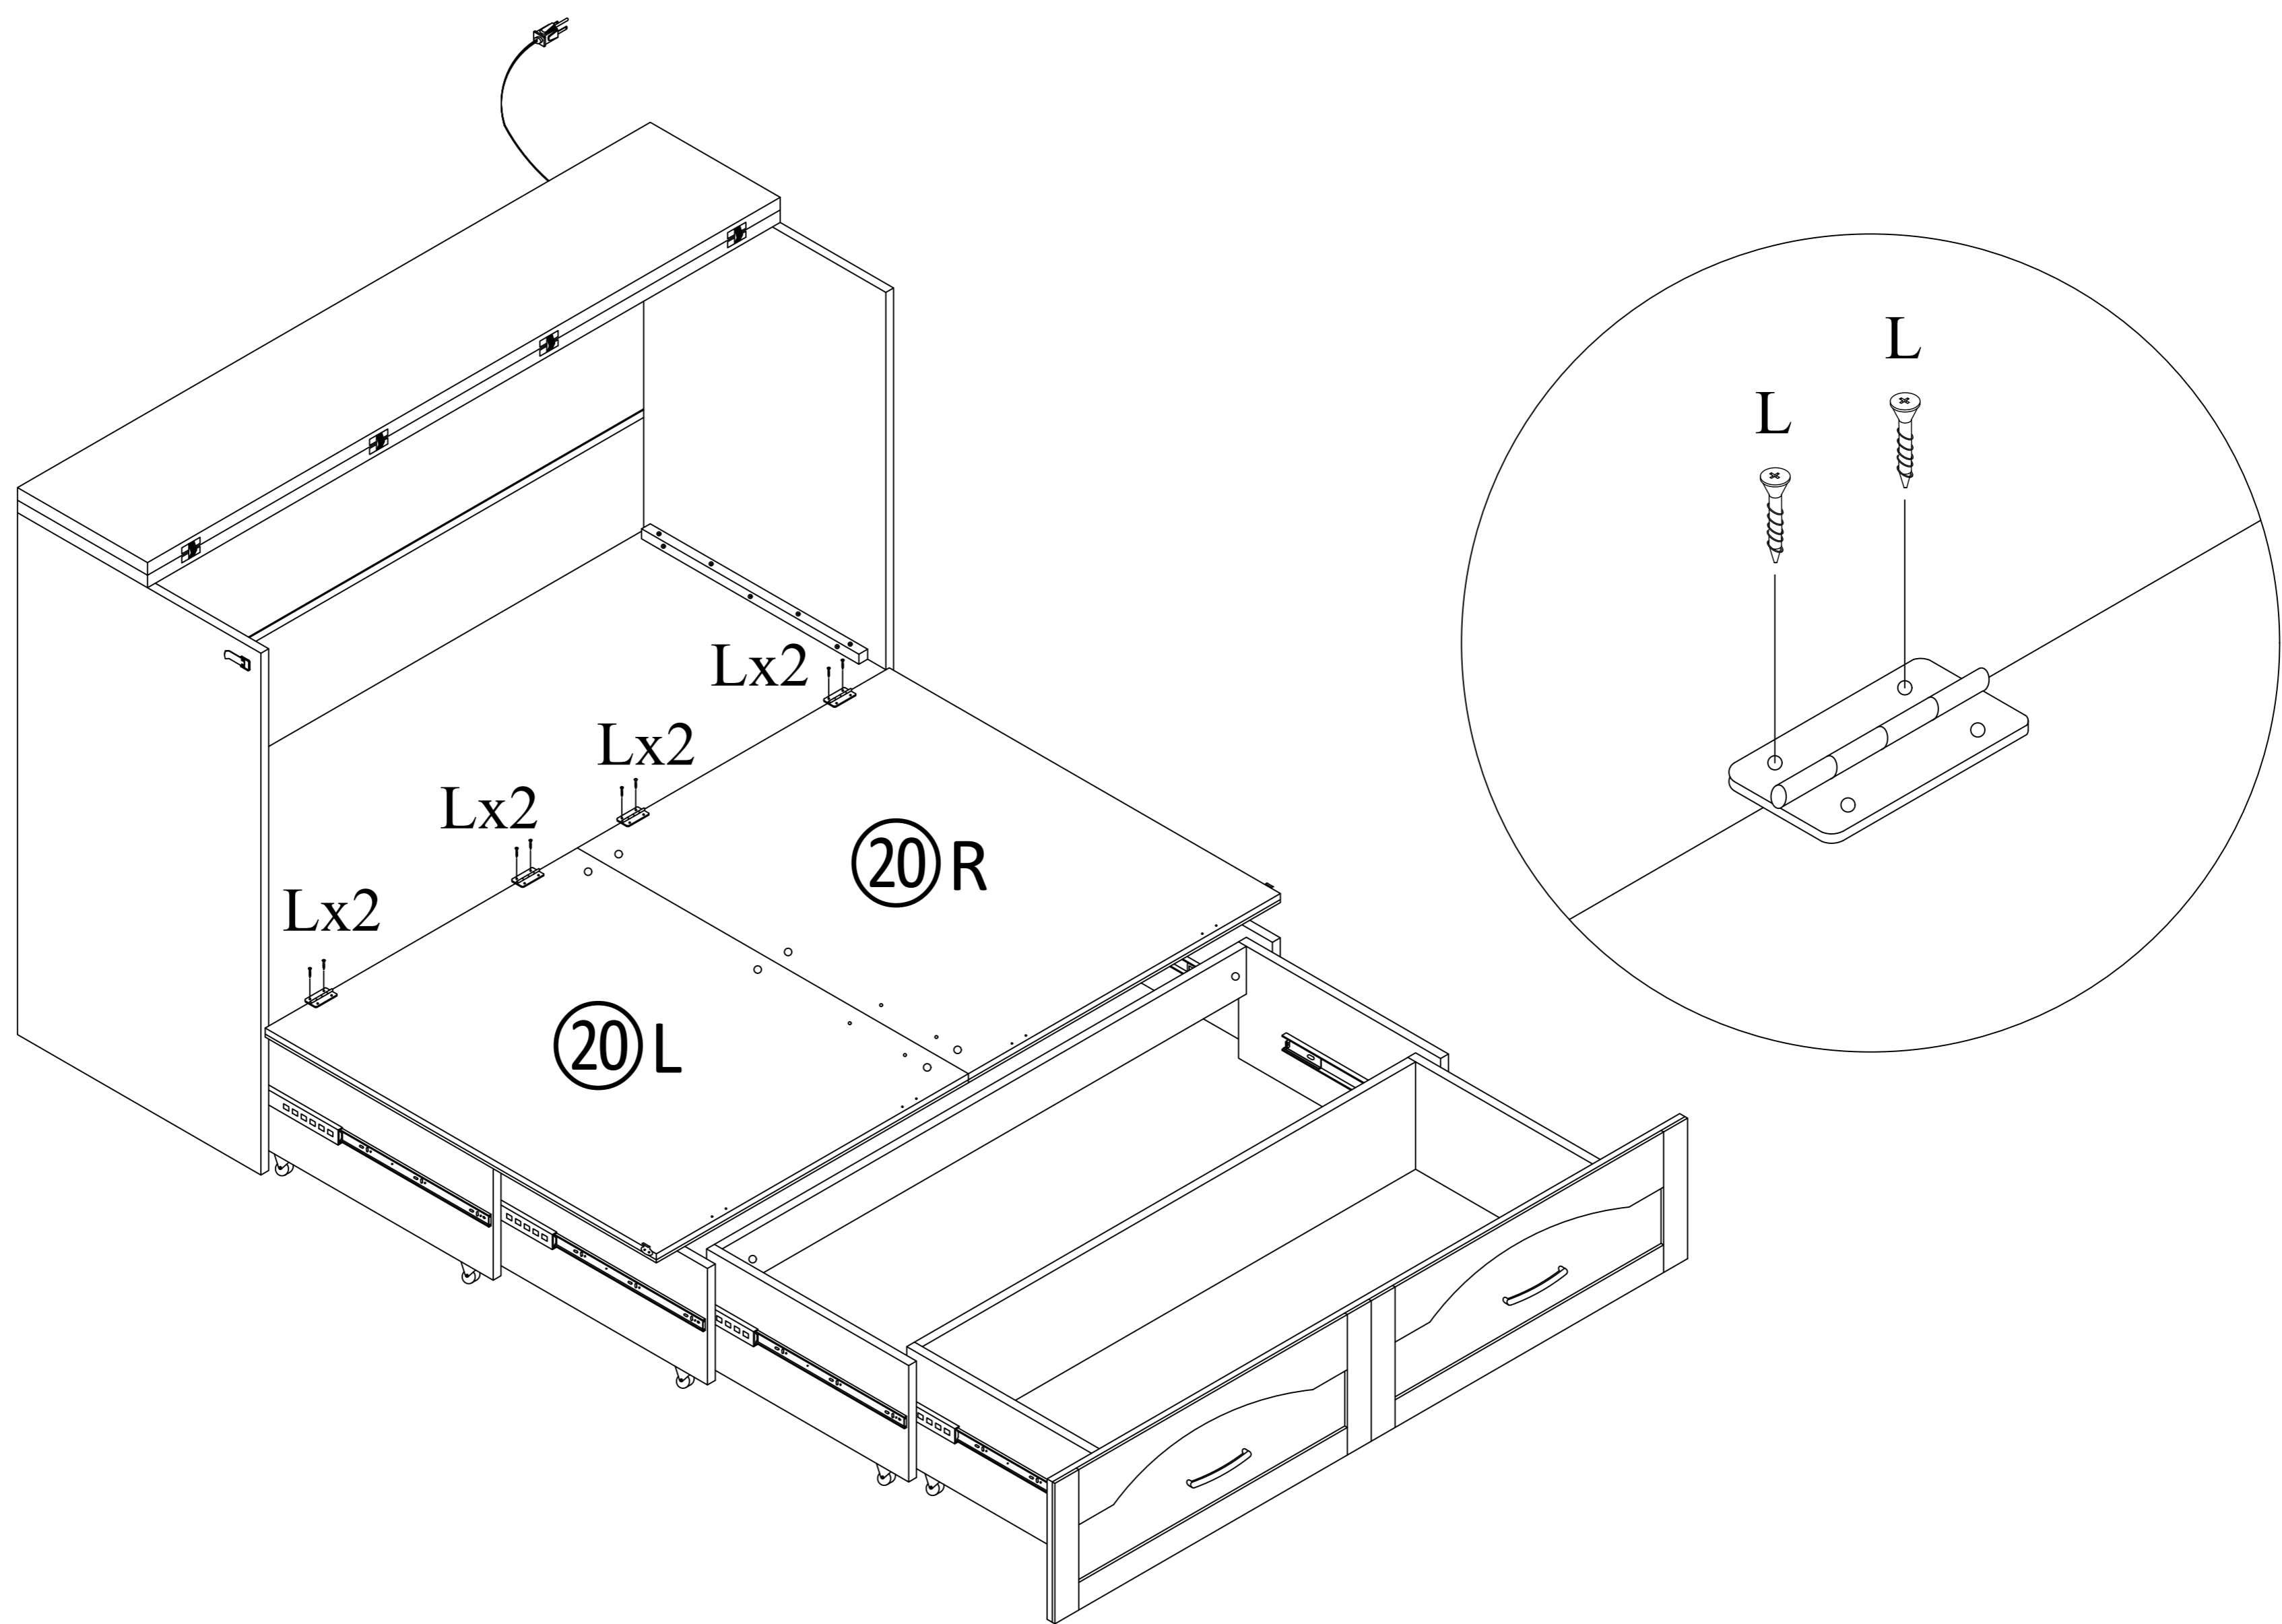Step 13 : Attach the connected Doors (20) with screw (L).





L	Screw M3.5 x 16MM		8PCS
---	-------------------	---------------------------------------------------------------------------------------	------

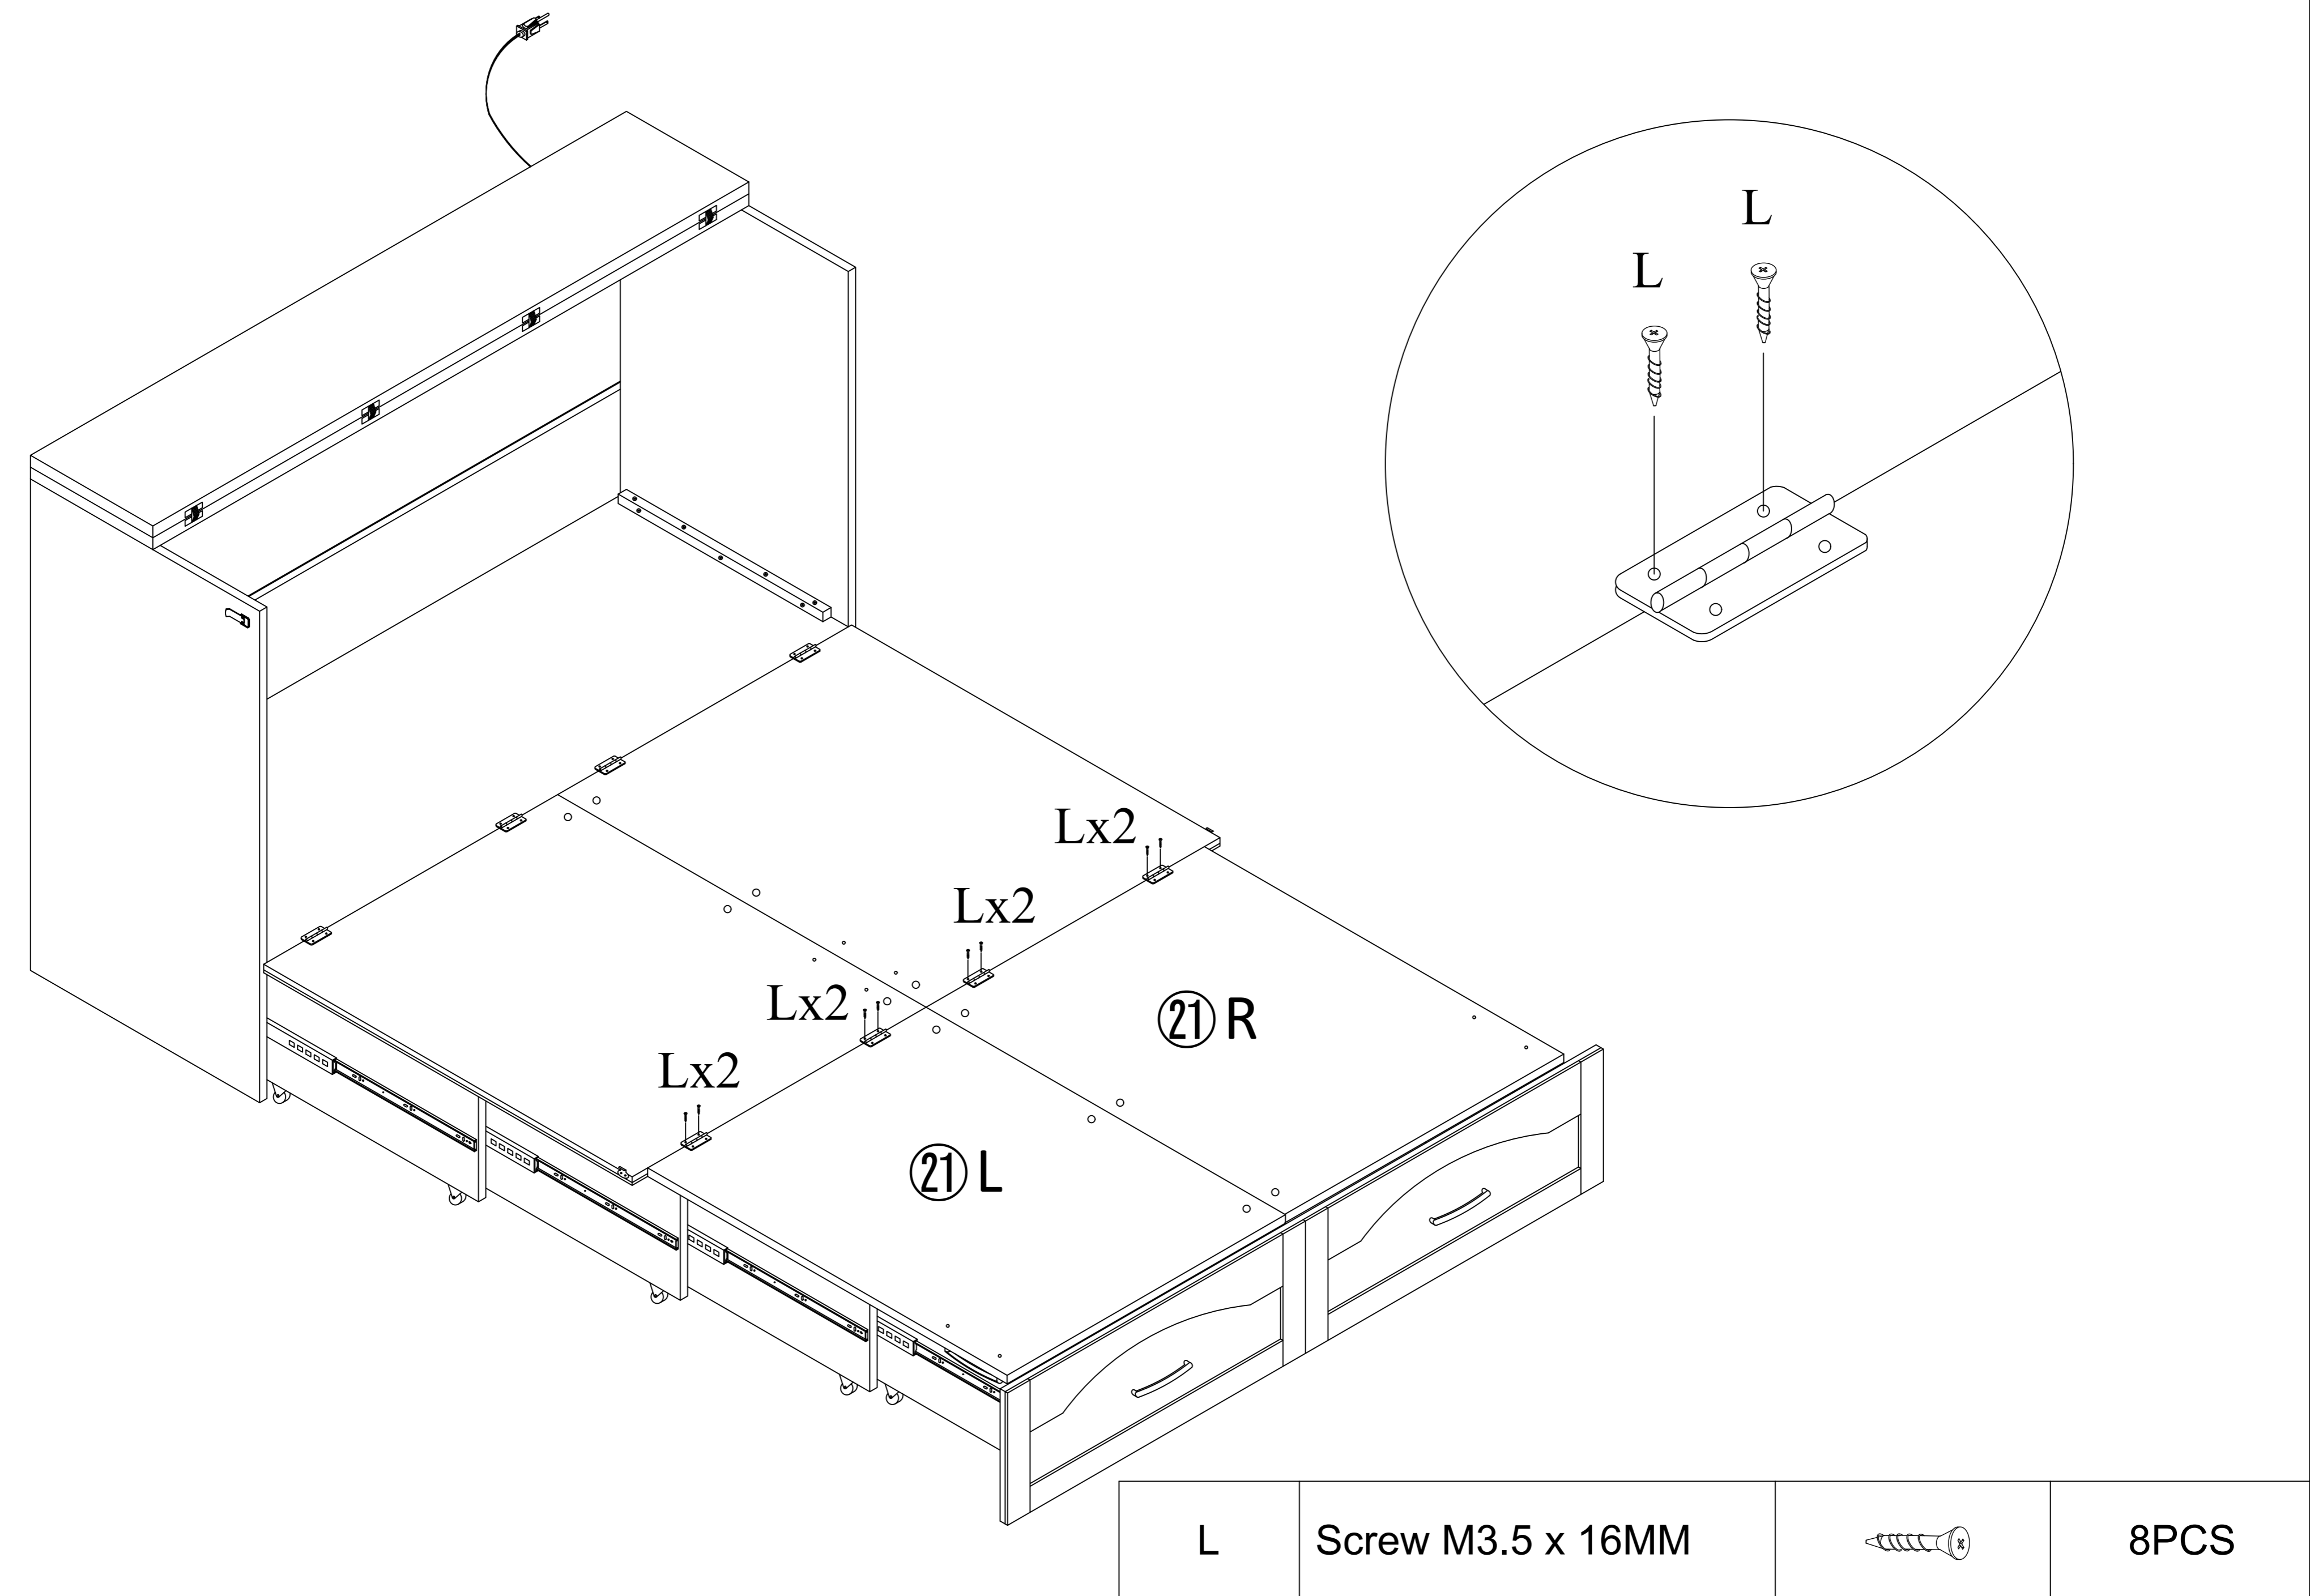Step 13 : Attach the connected Support Panels (21) with screw (L).



Completed Assembly.

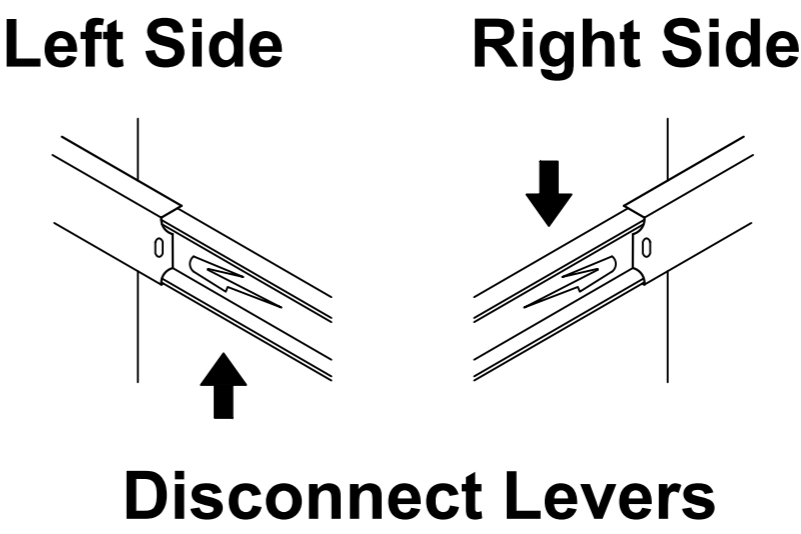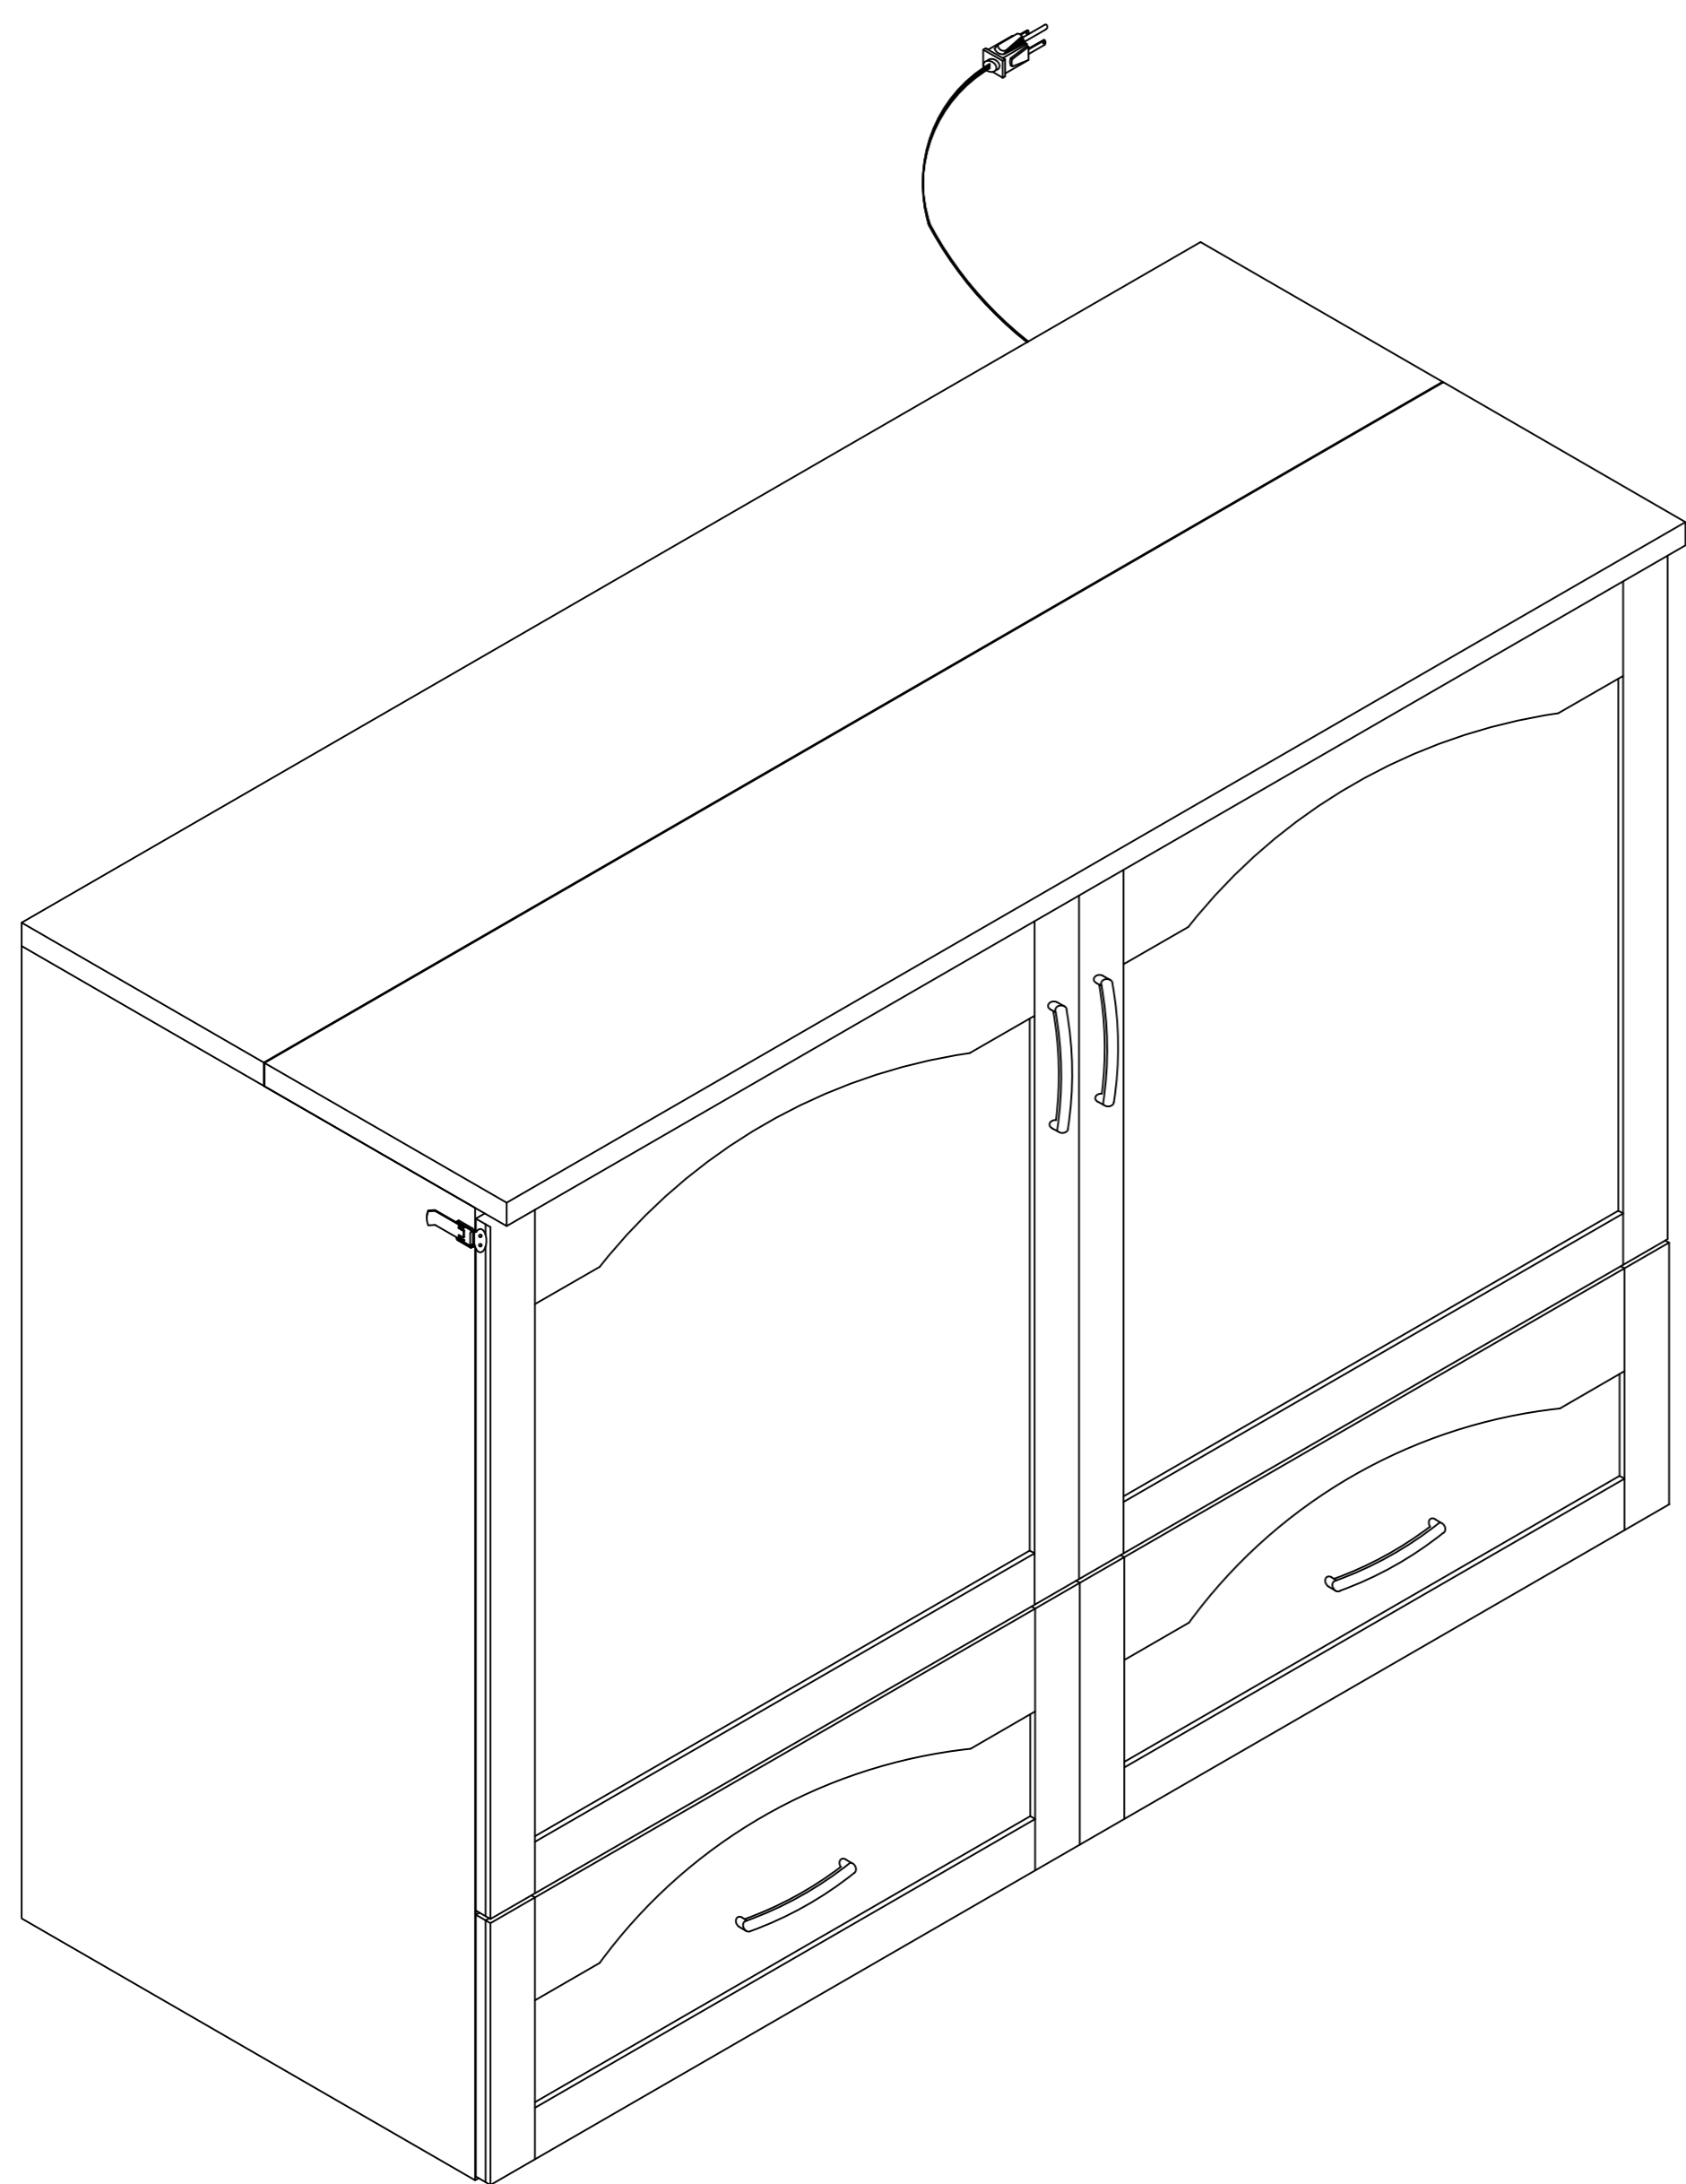


- To Remove Drawer, If Needed
- Pull the drawer fully open so levers are visible.
 - Push UP on left side lever and DOWN on right side lever.
 - Holding levers in place, pull drawer toward you.

REFER TO NEXT PAGE FOR
WAY TO OPEN & CLOSE
THIS MURPHY BED.



! IMPORTANT !
**ALWAYS PULL THE
DRAWER OUT FIRST
BEFORE OPEN THIS
CHEST**

To keep the Murphy bed at it's minimal size, follow the steps below.

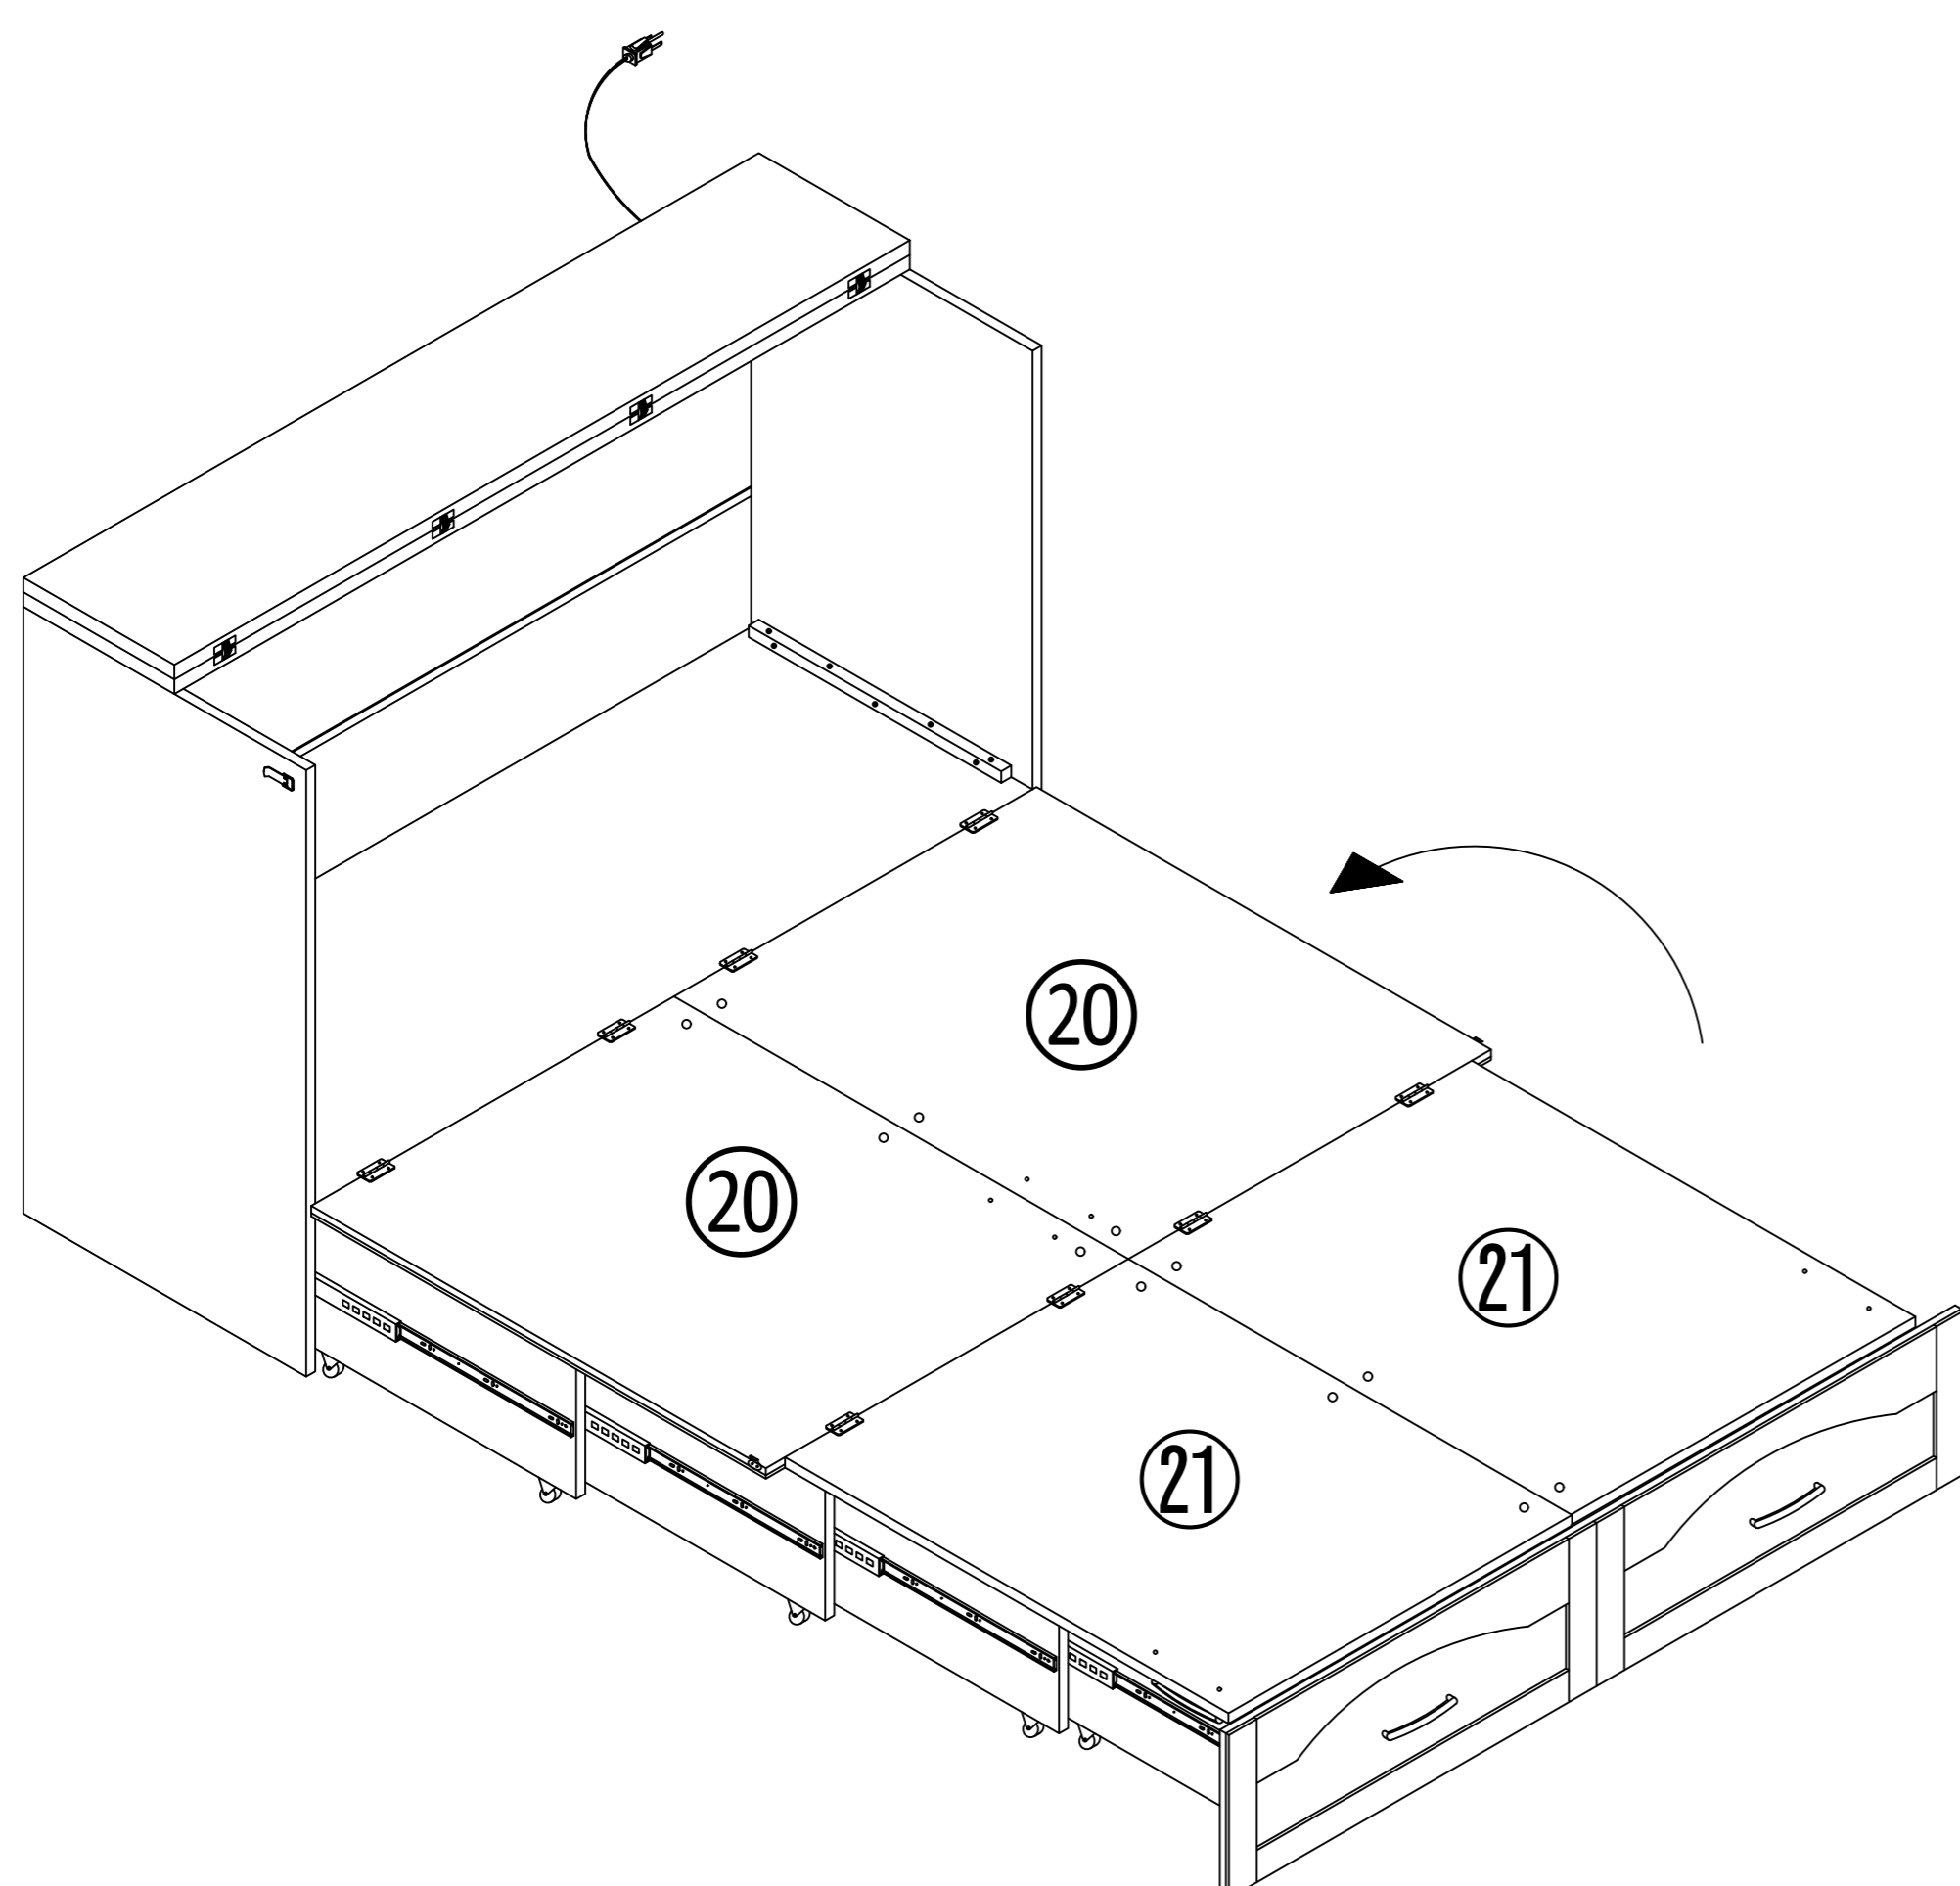
1. Fold up Support Panels (21)



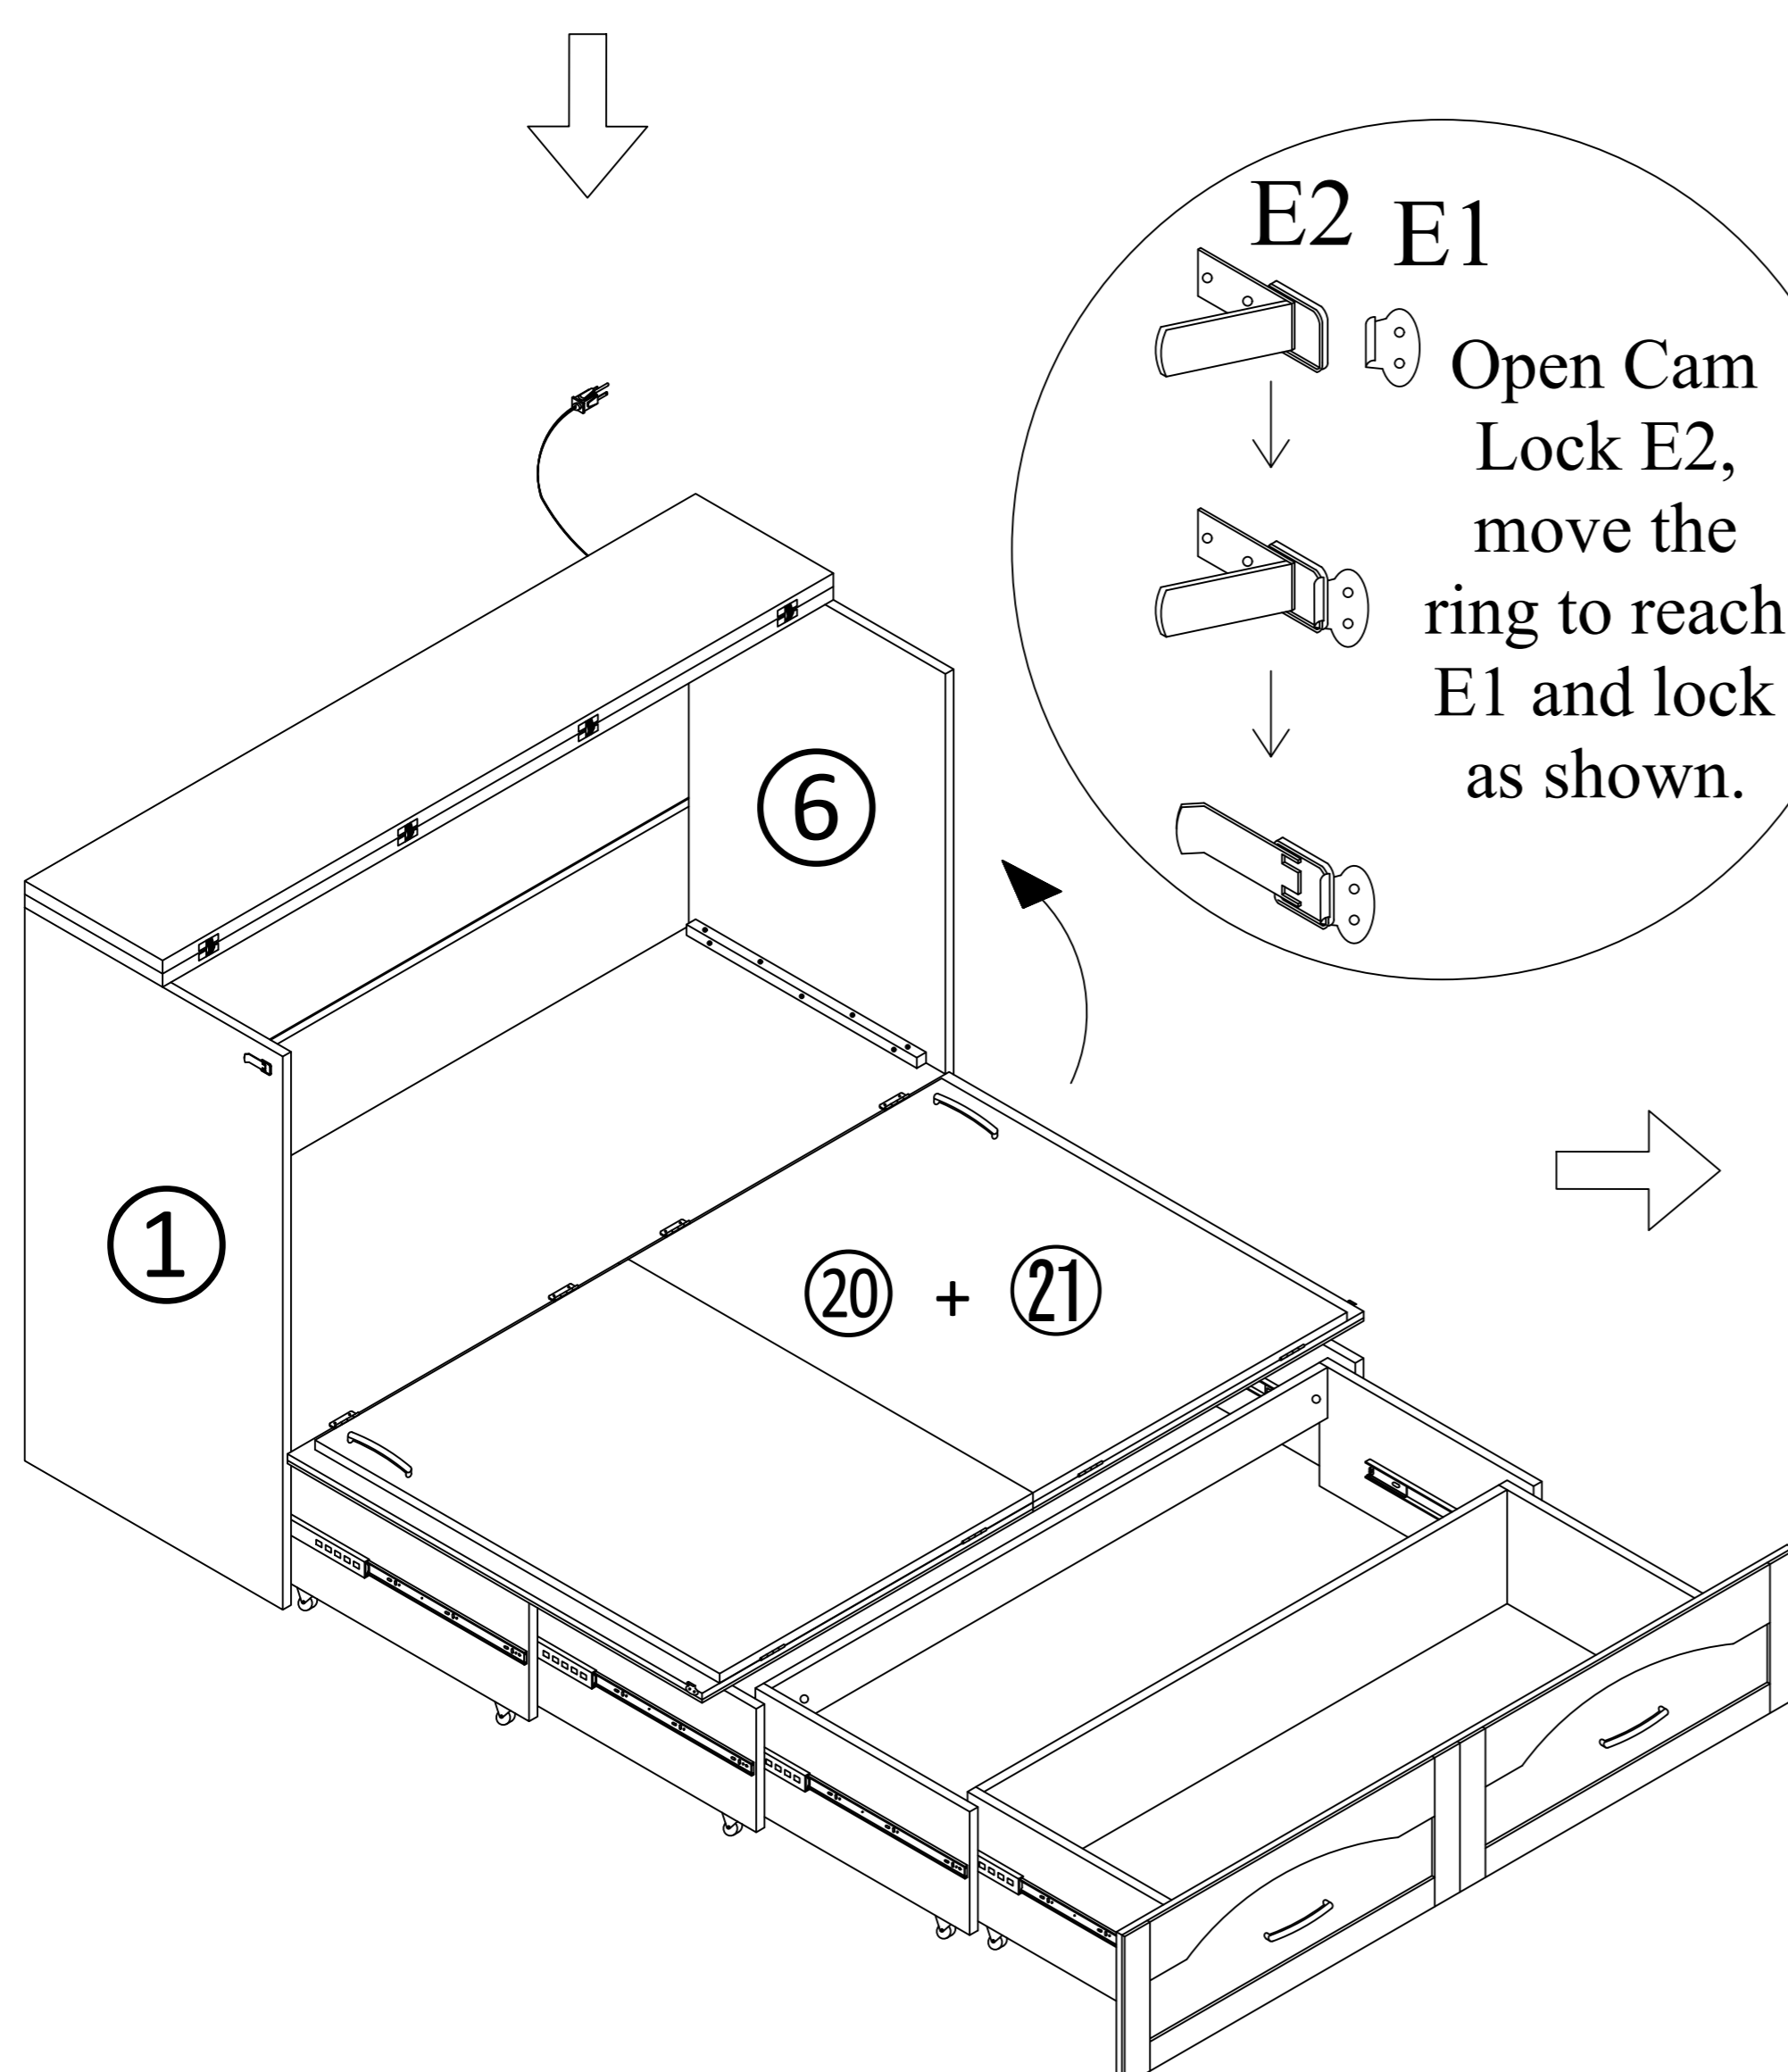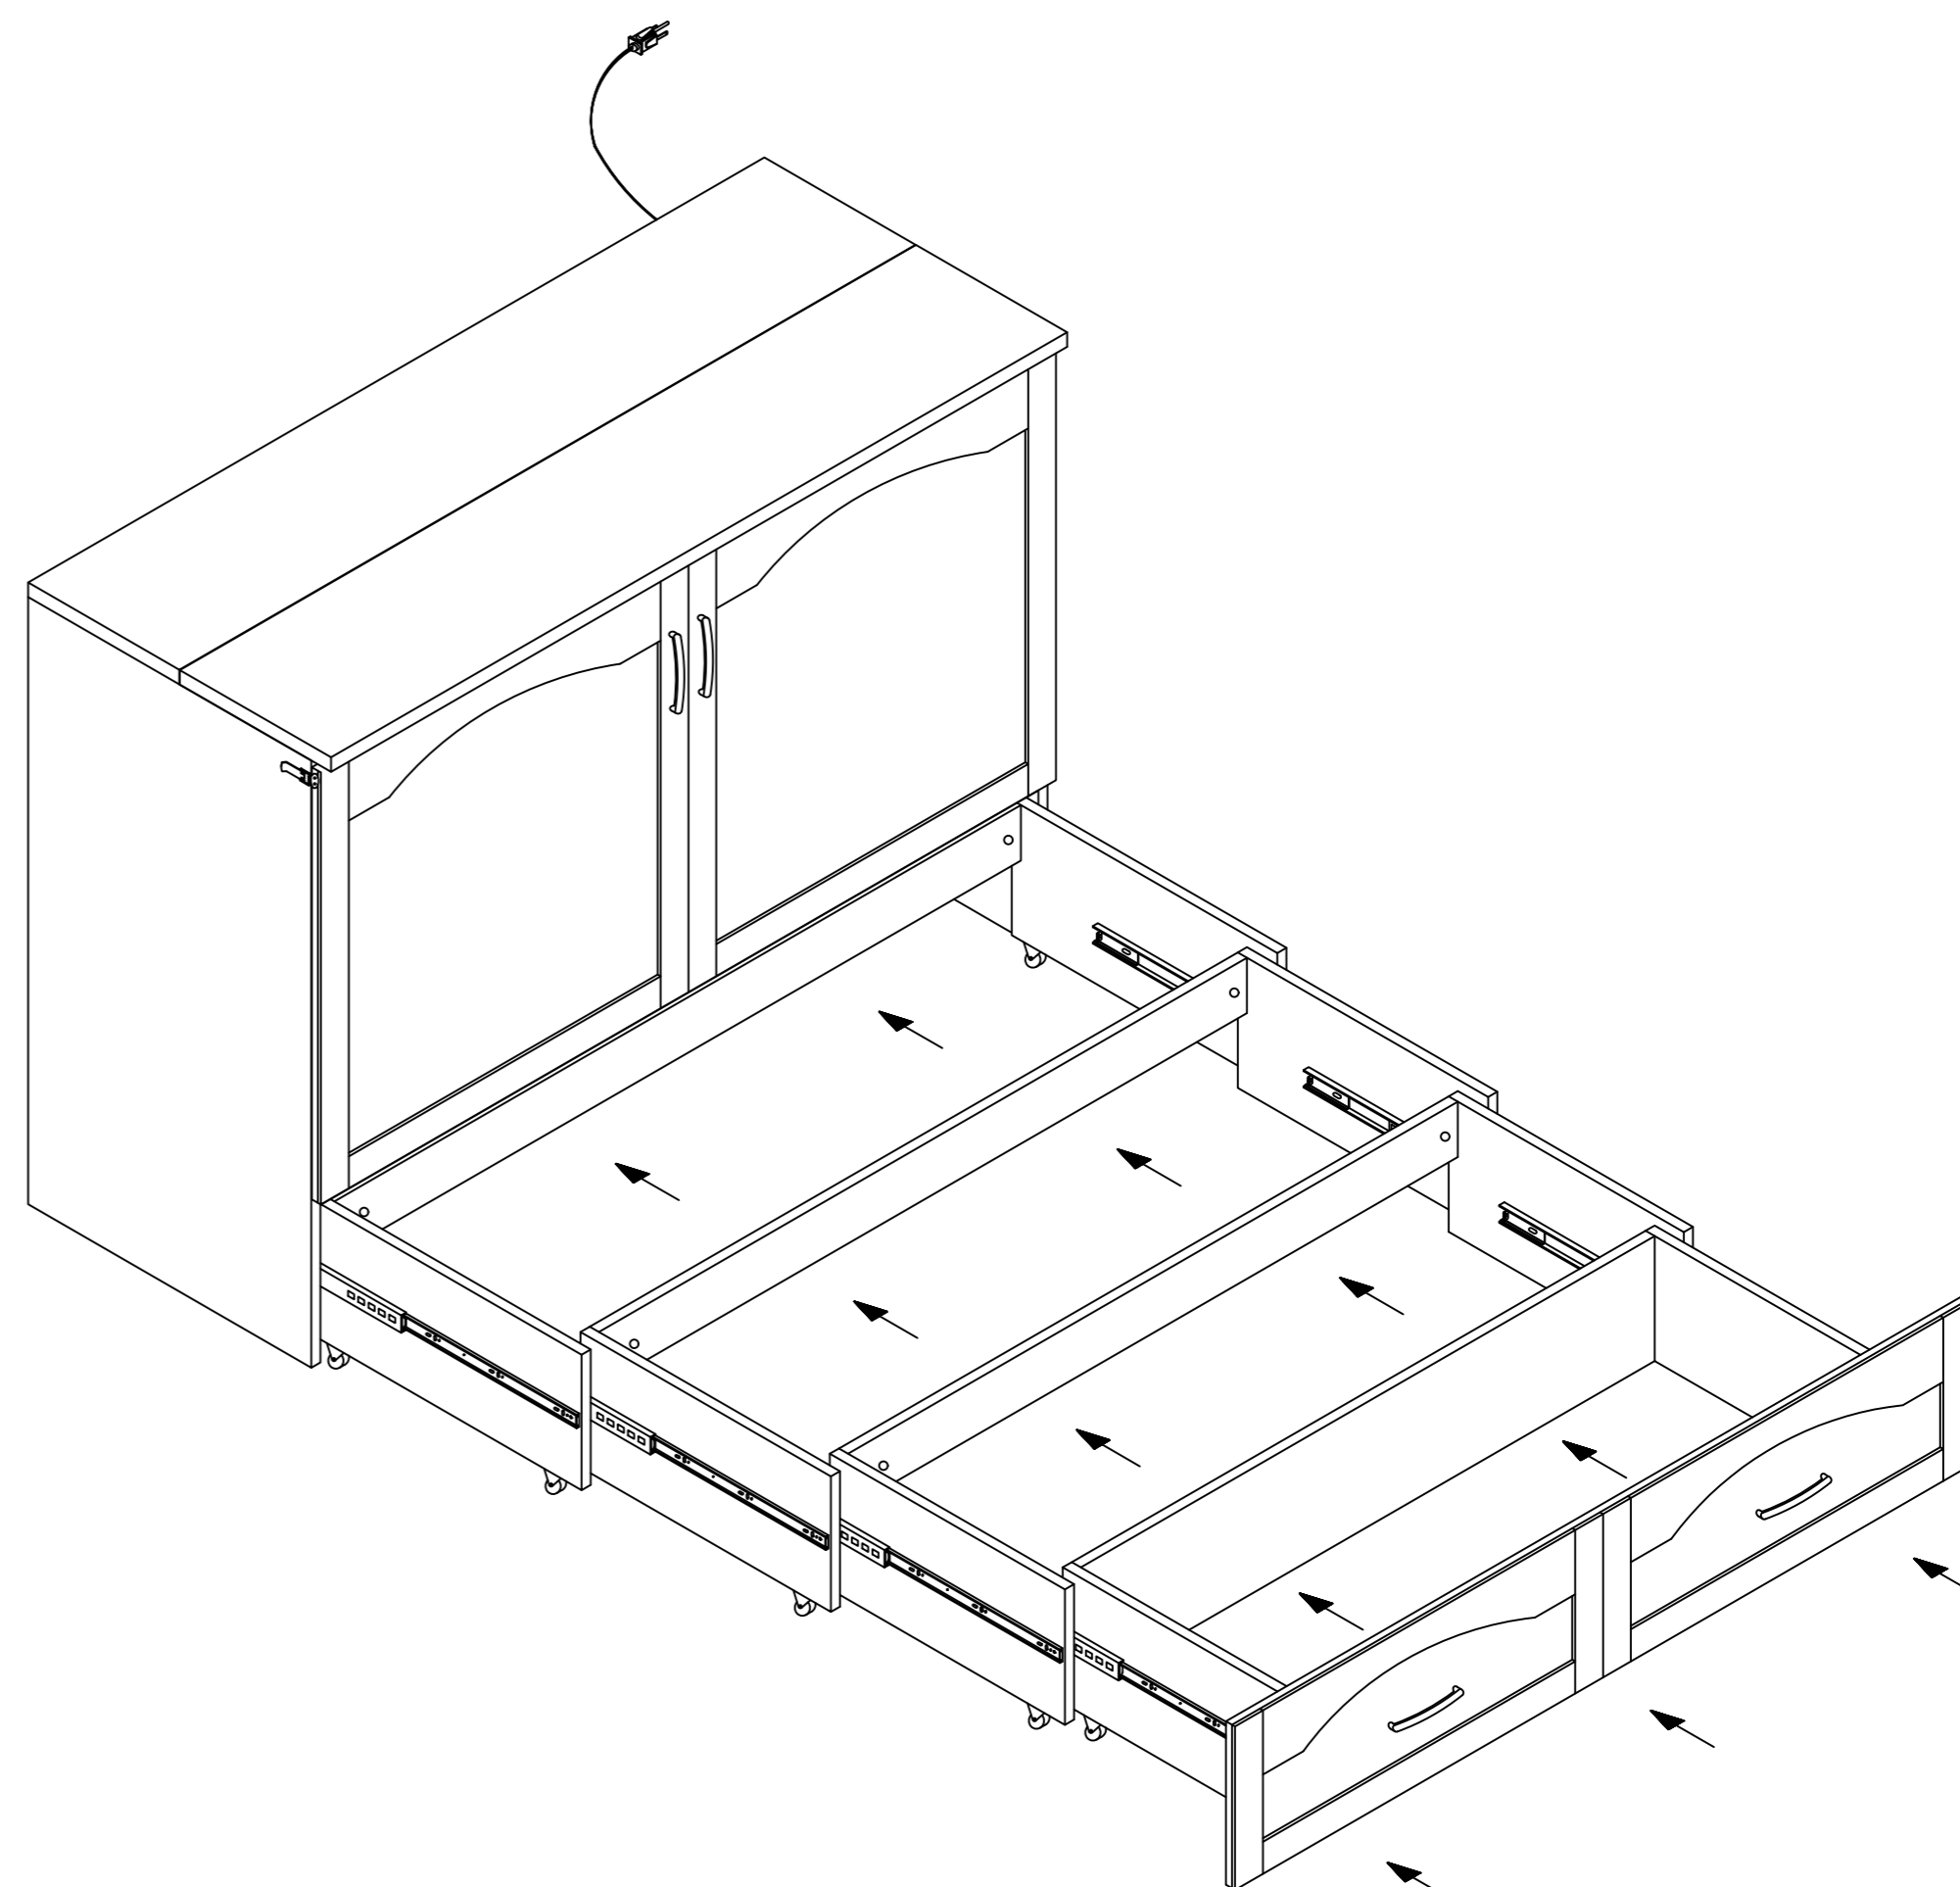4. Push Drawer and Extension Sides in.



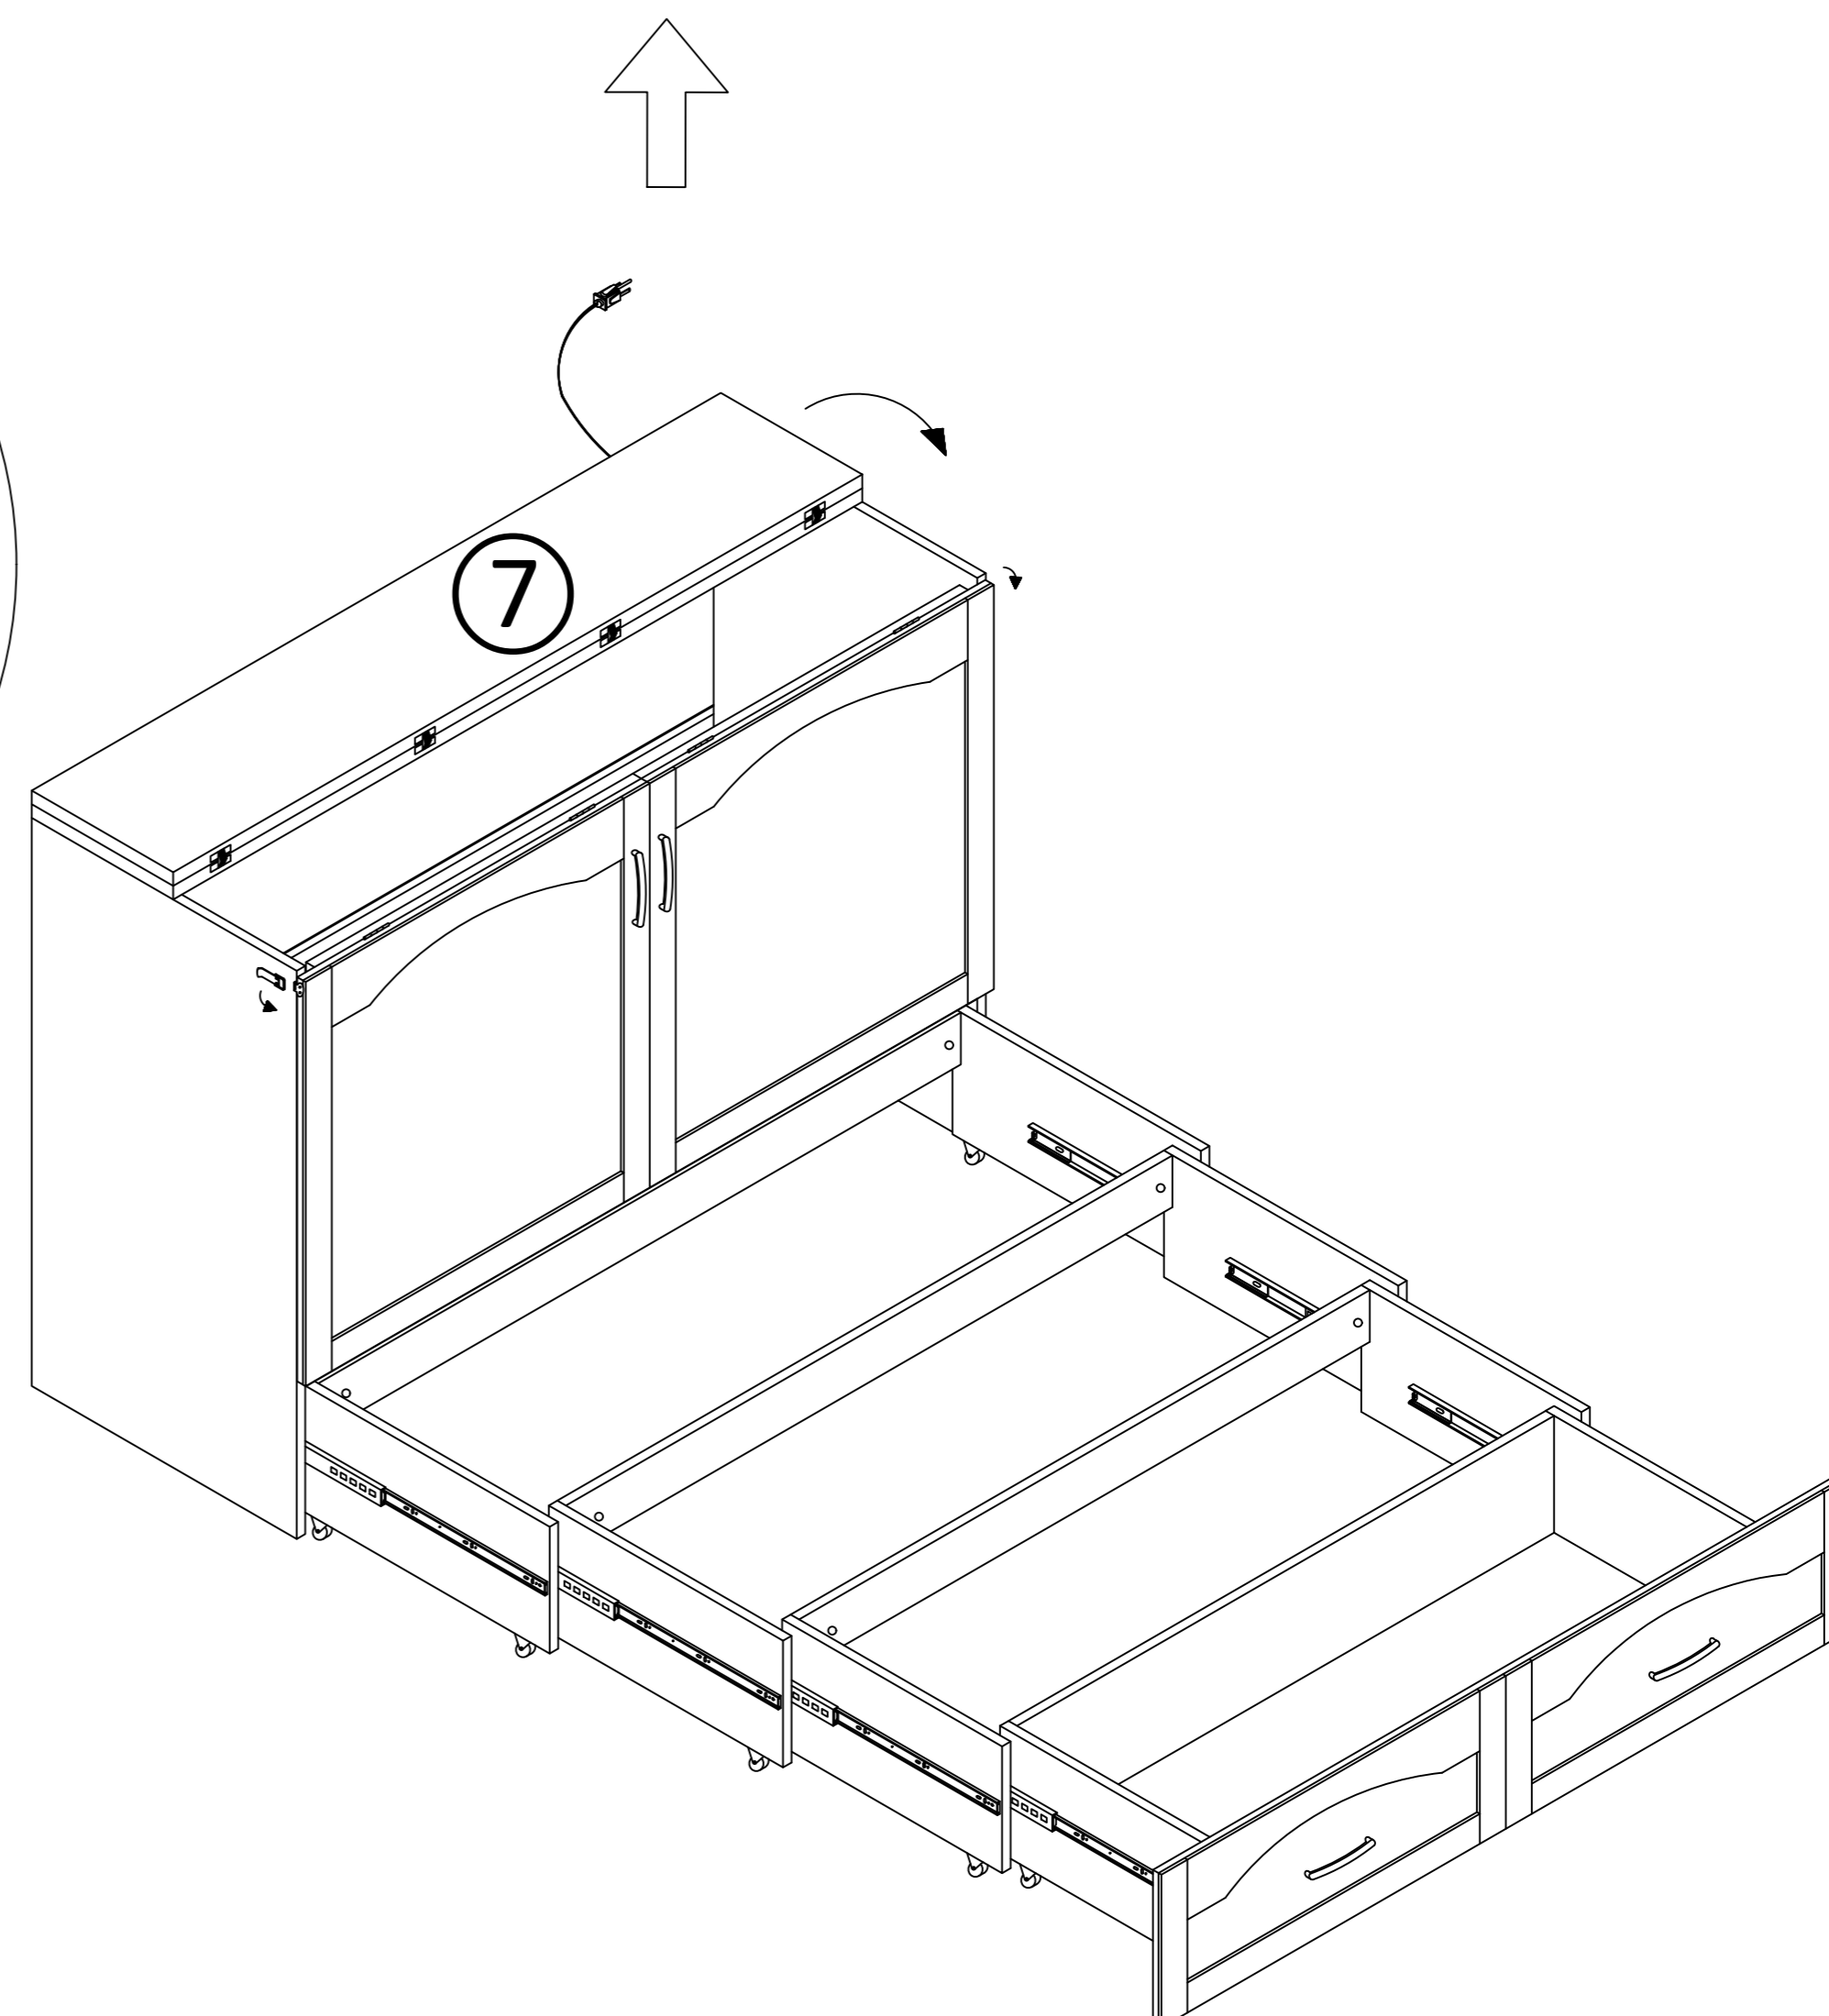2. Fold up Doors (20) and support panels (21) and lock cam lock on Side Panels (1,6).



3. Fold Top Panel(7)

To use the Murphy bed, PULL THE DRAWER OUT BEFORE PUTTING DOORS/PANELS DOWN. Failing to do so will cause damages to the furniture.