


ASSEMBLY INSTRUCTIONS

FULL BED WITH 1 NIGHTSTAND WITH DRAWER


























DN33745



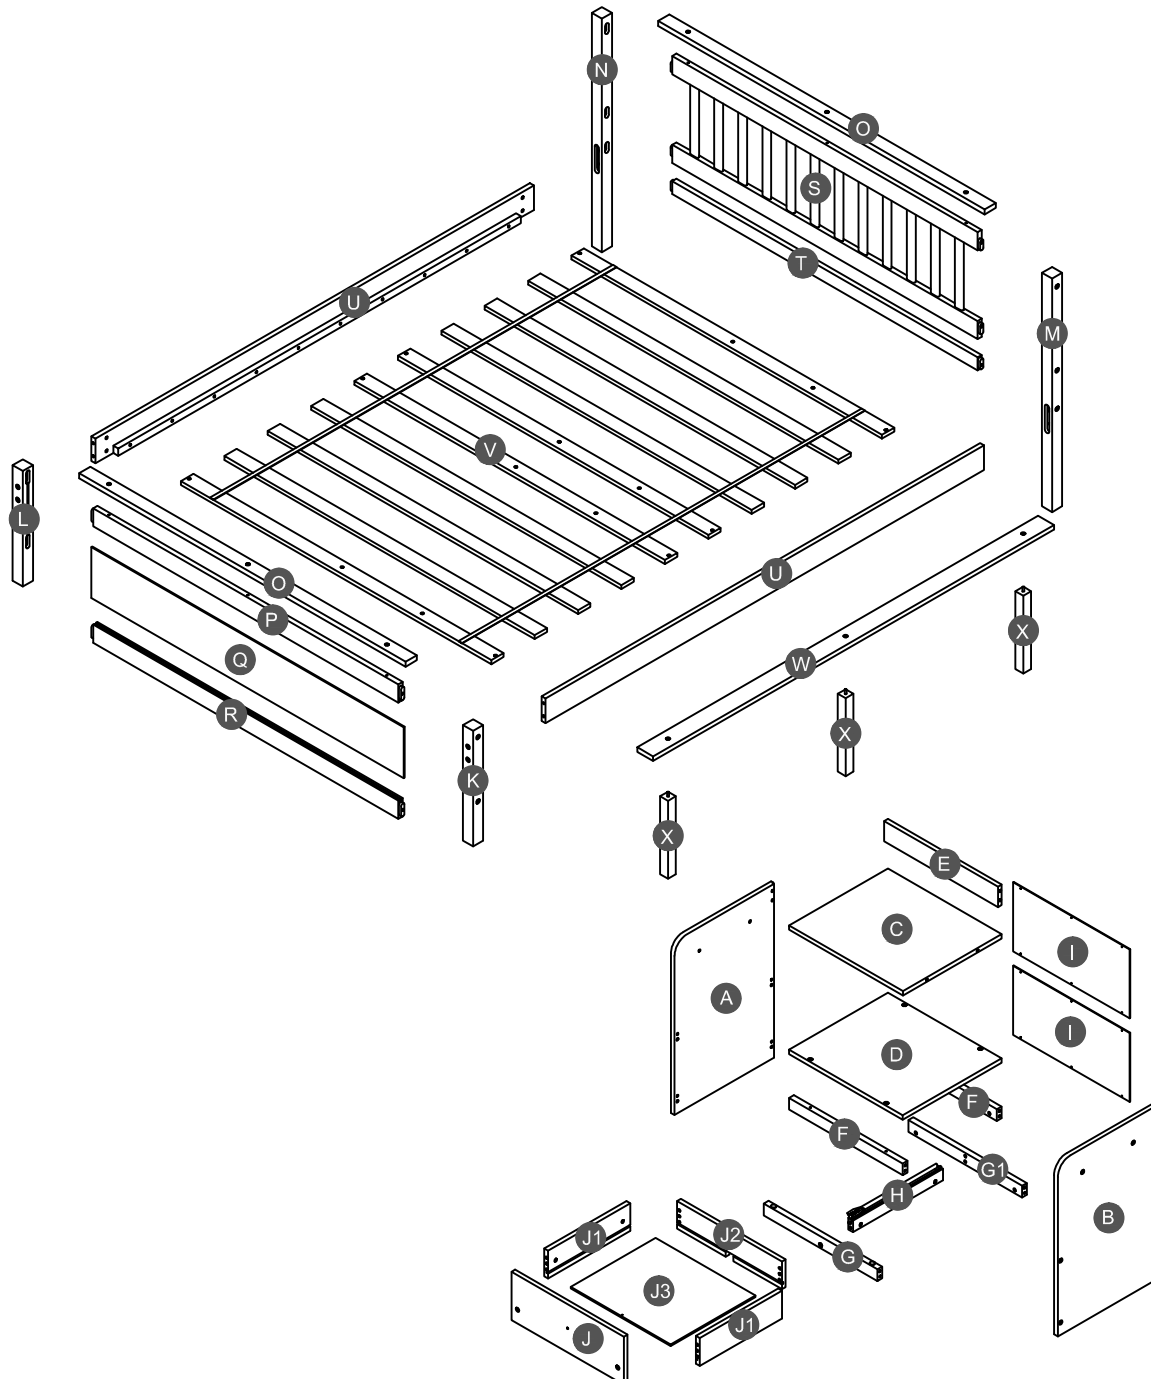
Detail View




Part List

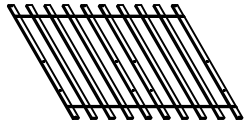A  Side panel (Left) - 1pc	B  Side panel (Right) - 1pc	C  Top panel - 1pc
D  Shelf panel - 1pc	E  Upper horizontal bar - 1pc	F  Divider horizontal bar - 2pcs
G  Lower horizontal bar (Front) - 1pc	G1  Lower horizontal bar (Back) - 1pc	H  Support drawer - 1pc
I  Back panel - 2pcs	J  Drawer front - 1pc	J1  Drawer (left/right) - 2pcs
J2  Drawer back - 1pc	J3  Drawer bottom - 1pc	K  Leg (Left Front) - 1pc
L  Leg (Left Back) - 1pc	M  Leg (Right Front) - 1pc	N  Leg (Right Back) - 1pc
O  Cap for lower HB & FB - 2pcs	P  Horizontal bar FB - 1pc	Q  Side panel FB - 1pc
R  Horizontal bar FB - 1pc	S  Frame HB - 1pc	T  Horizontal bar HB - 1pc
U  Side rail - 2pcs	V  Slat (1Set = 10pcs)	W  Lower support slat - 1pc
X  Leg support - 3pcs		

Hardware List


1  Ø8*30mm Wood dowel (18pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)
4  (Ø15)1/4"*60mm Hex-Head bolts (20pcs)	5  (Ø12)1/4"*40mm Hex-Head bolts (10pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(38pcs)
7  Ø4*30mm Wood screws (12pcs)	8  Ø38*31mm Pine Knob (1pc)	9  3/16"*30mm Ph zinc(Knob) (1pc)
10  340*30mm Upper slider drawer (1pc)	11  Ø3.5*15mm Wood screws (3pcs)	12  (1/4")4.5*58mm Allen key (1pc)
13  Ø3.5*15mm Wood screws (12pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

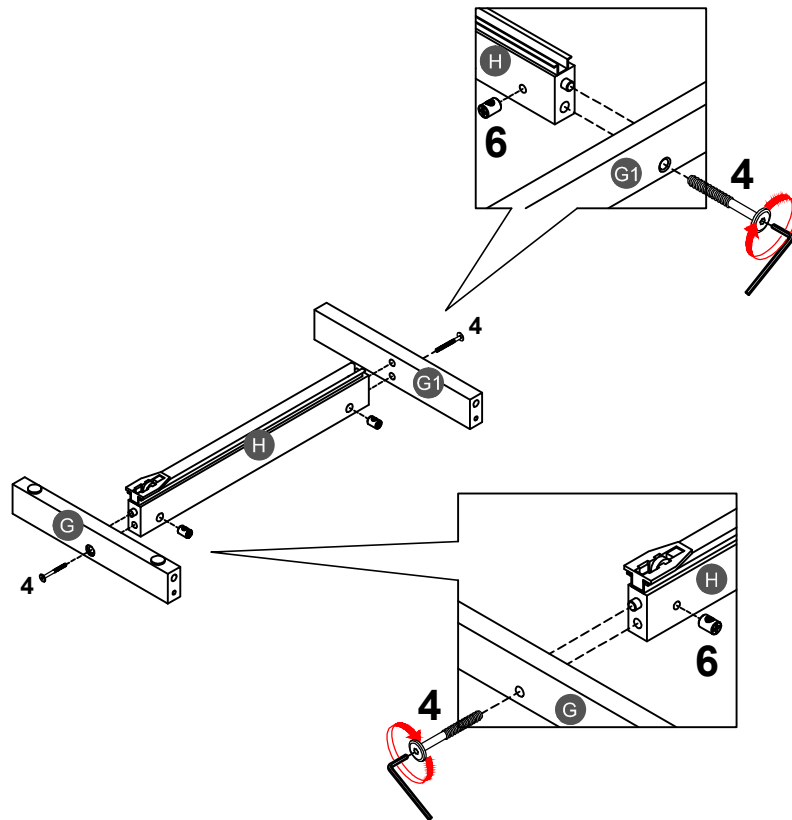STEP 1:




4		6	
2PCS		2PCS	

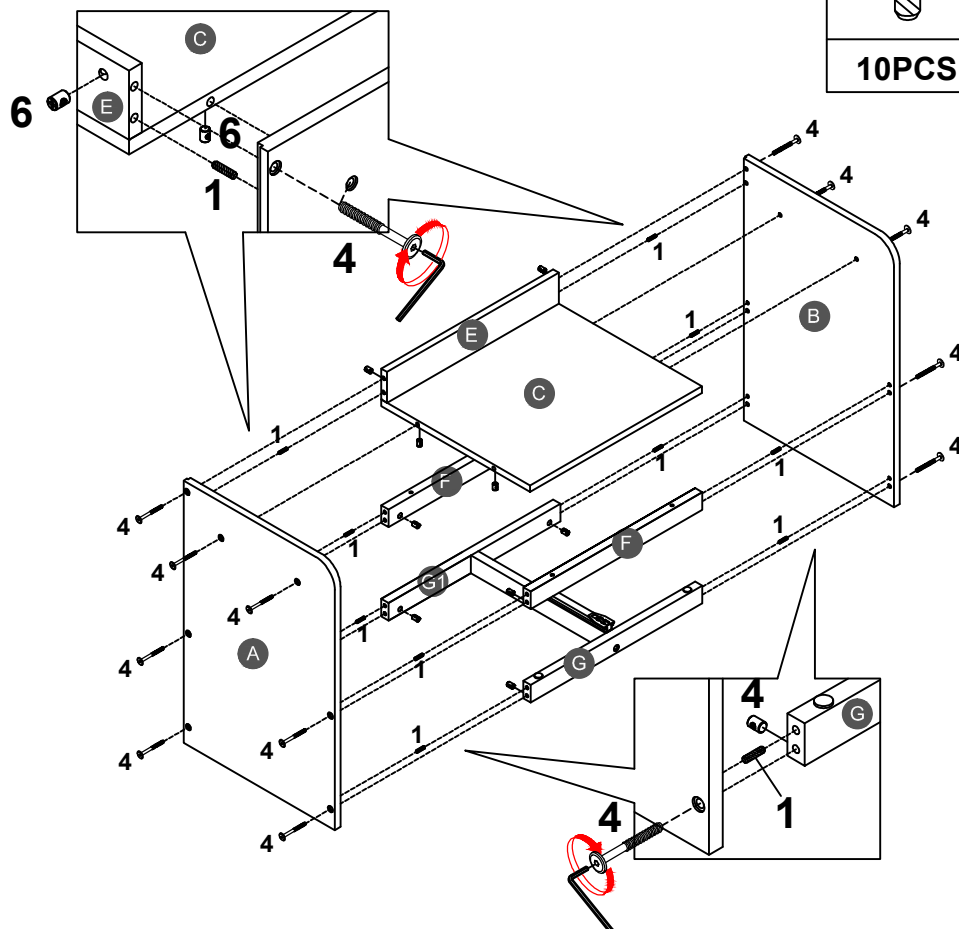STEP 2:



1		4		6	
10PCS		14PCS		14PCS	

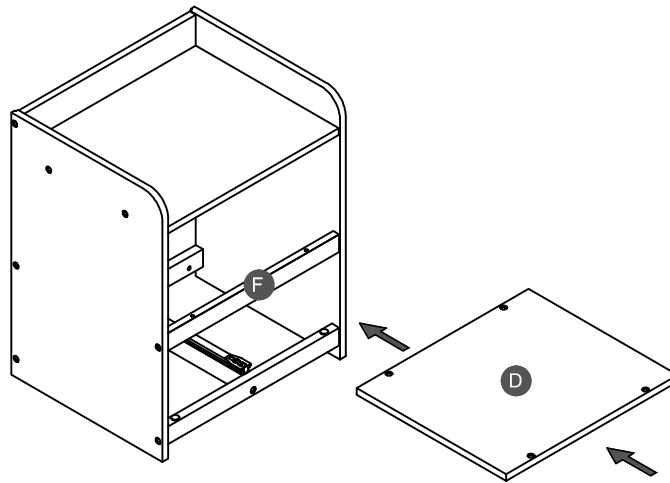STEP 3:




STEP 4:

5



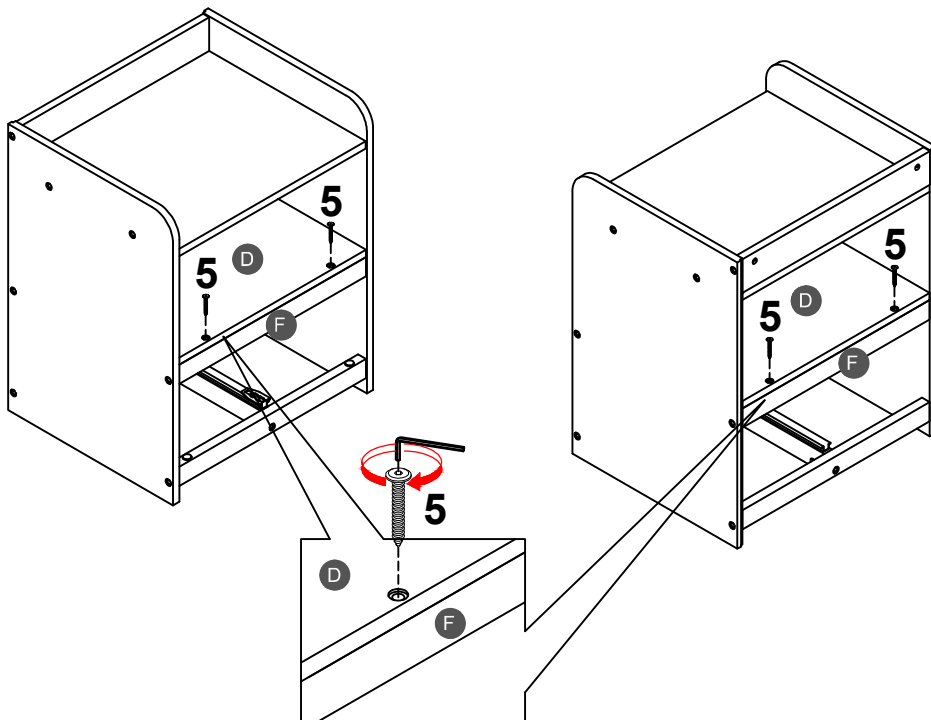4PCS




STEP 5:

13



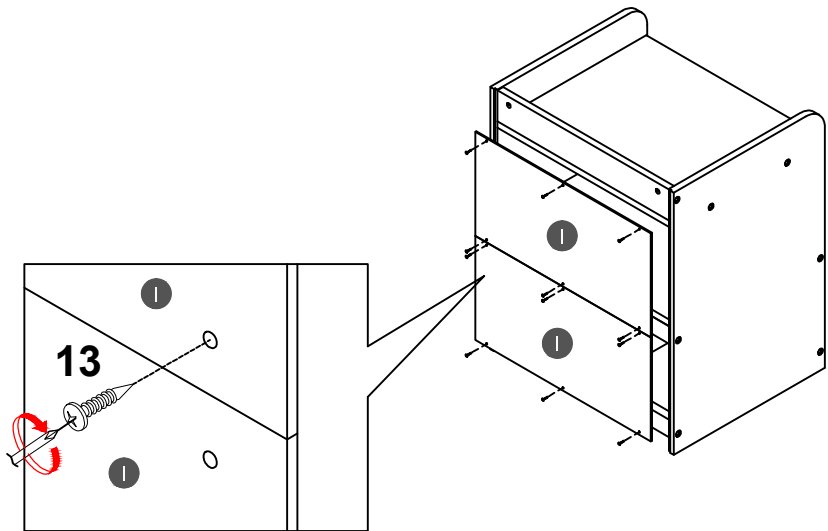12PCS



STEP 6:

1



4PCS

4

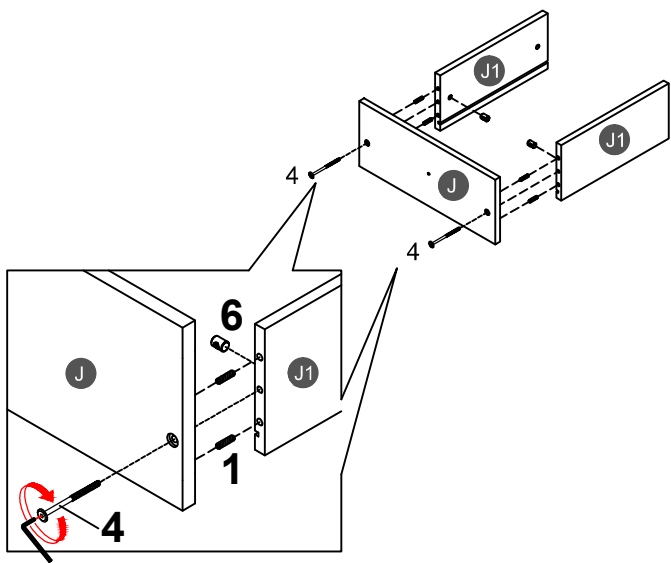


2PCS


6



2PCS




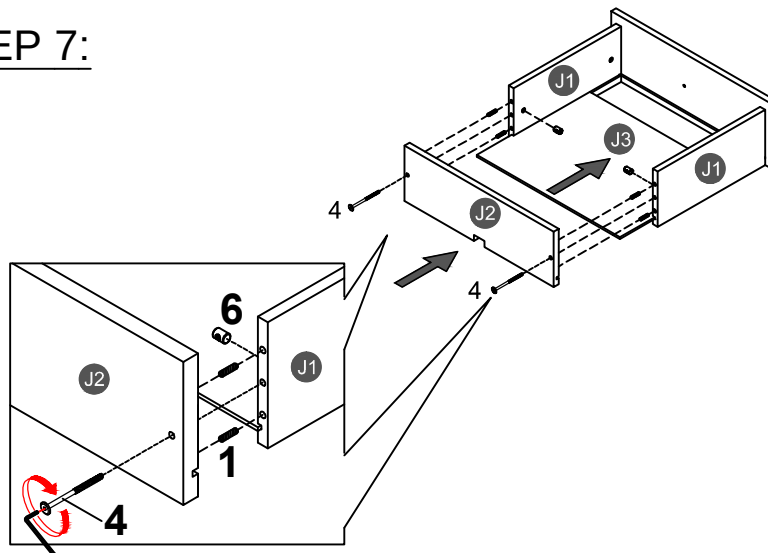STEP 7:




1		4	
4PCS		2PCS	
		6	
		2PCS	

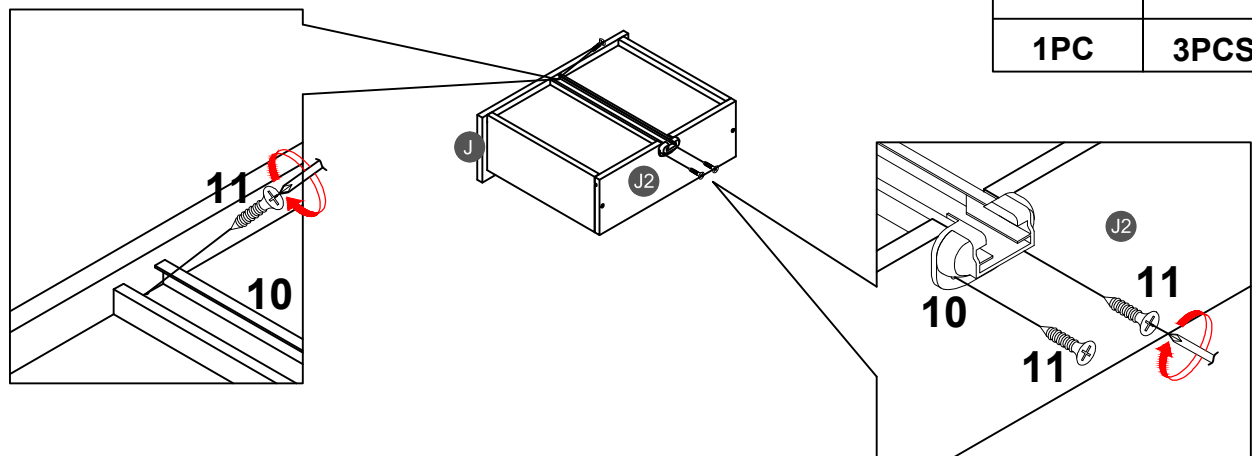
STEP 8:





10		11	
1PC		3PCS	

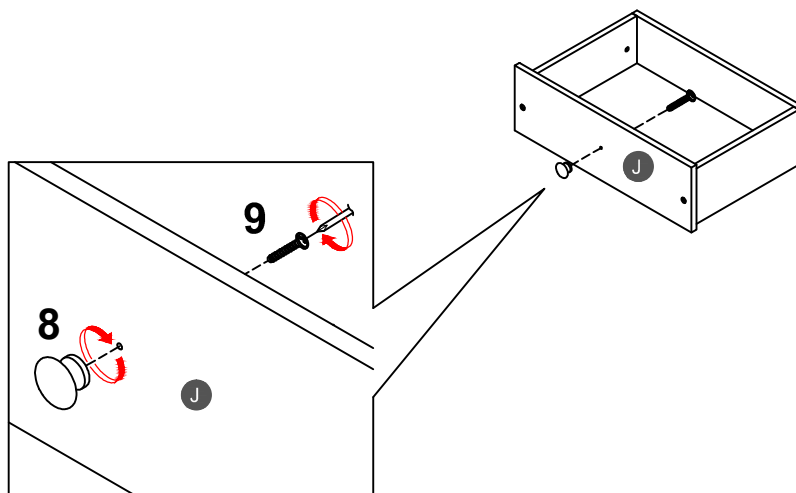STEP 9:




8		9	
3PCS		3PCS	

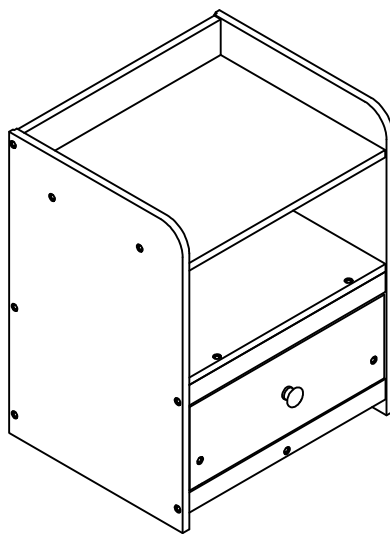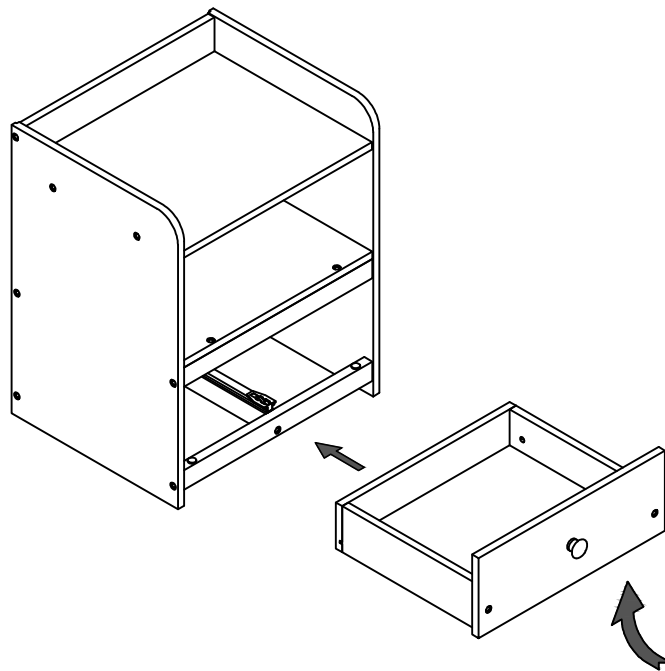
STEP 10:



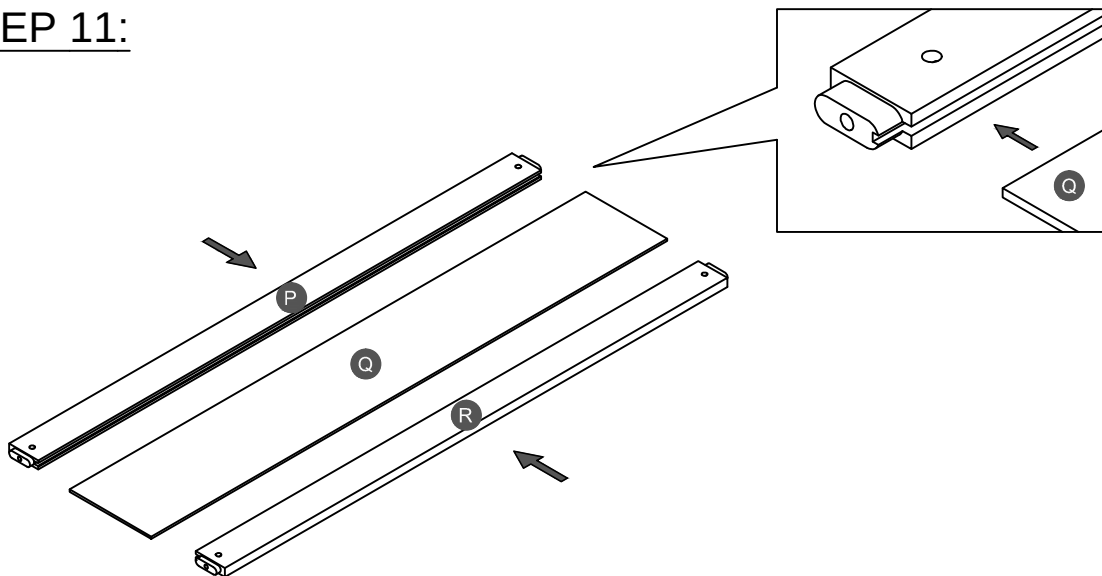
STEP 11:



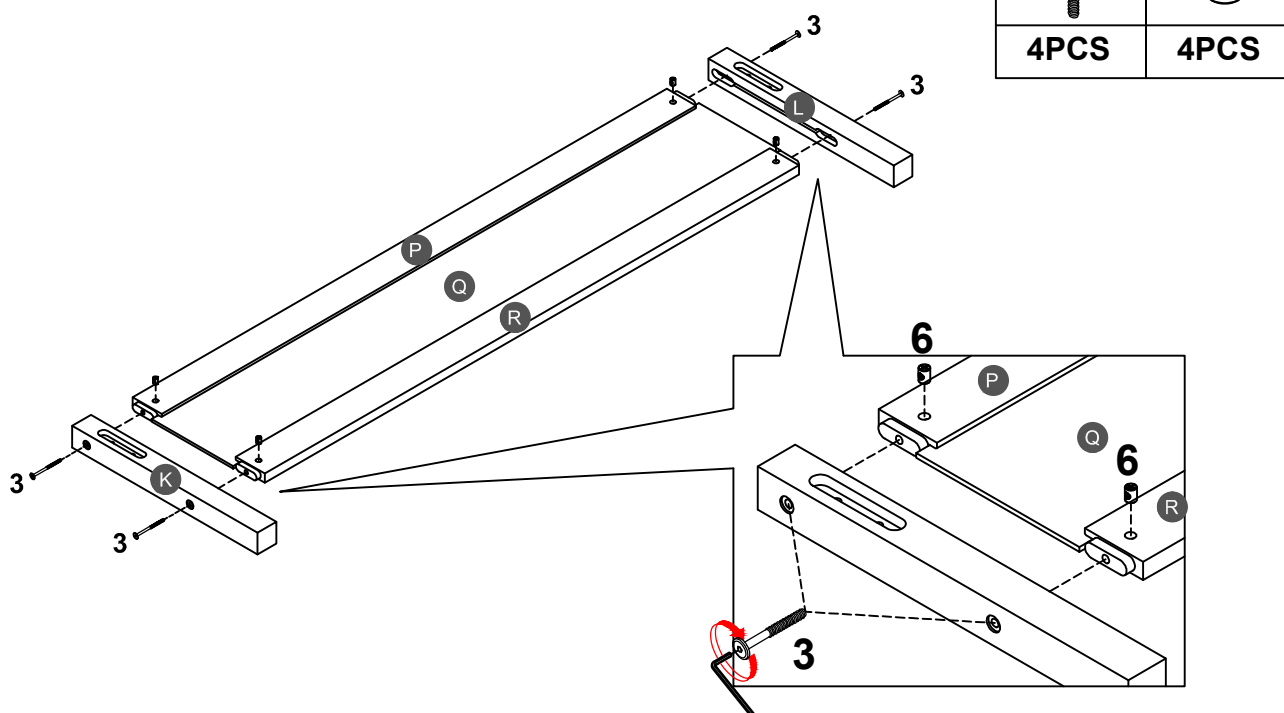
STEP 12:



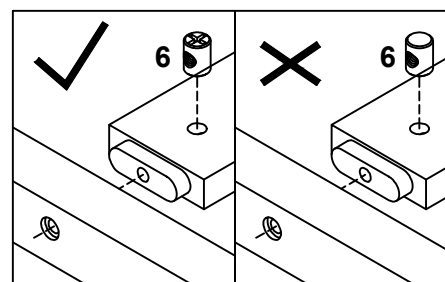
Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened



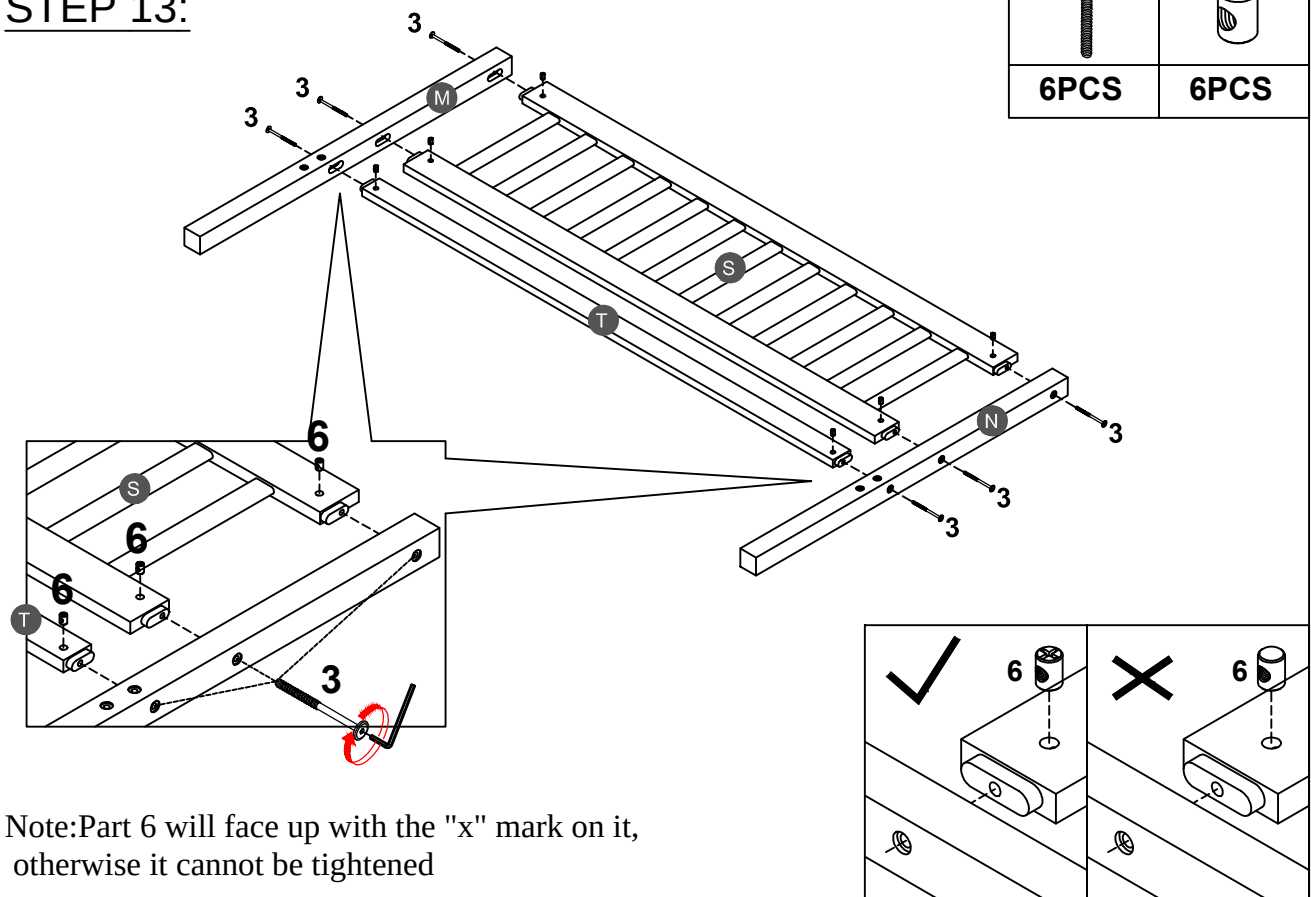
STEP 13:



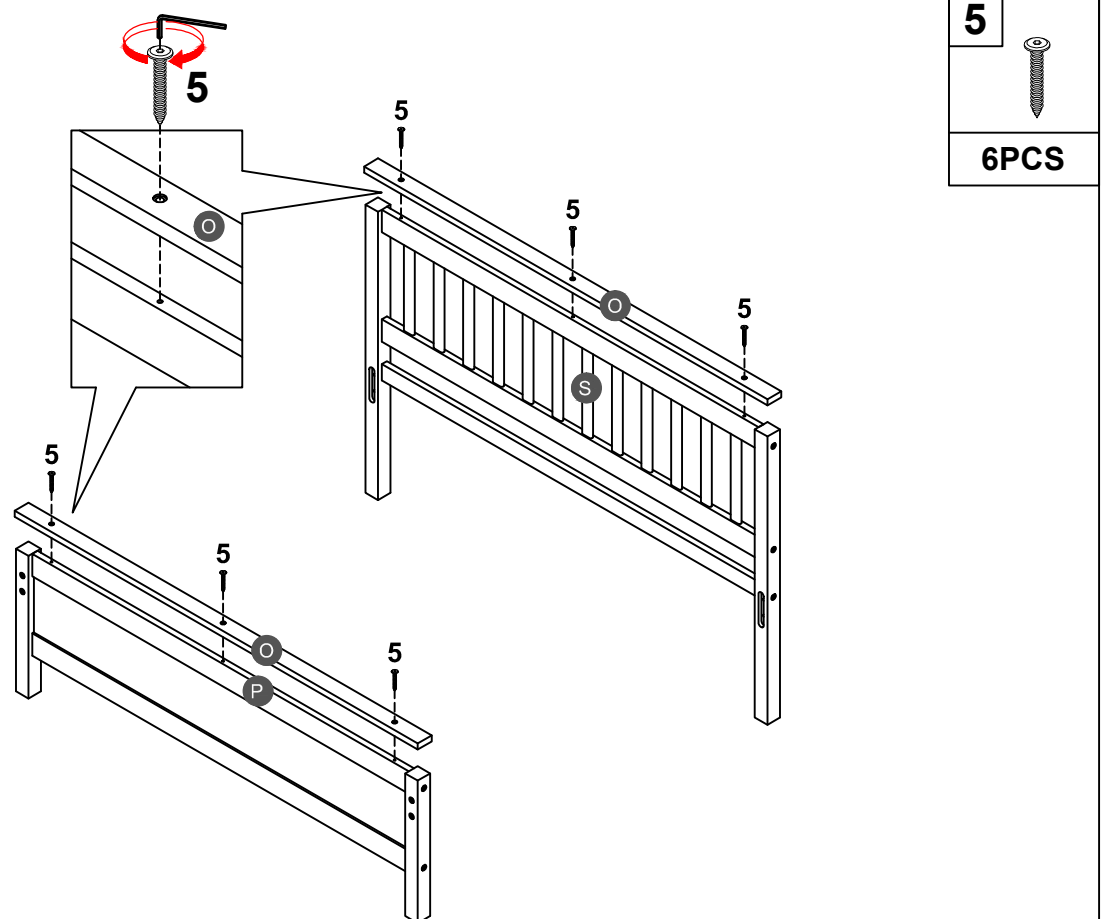STEP 14:




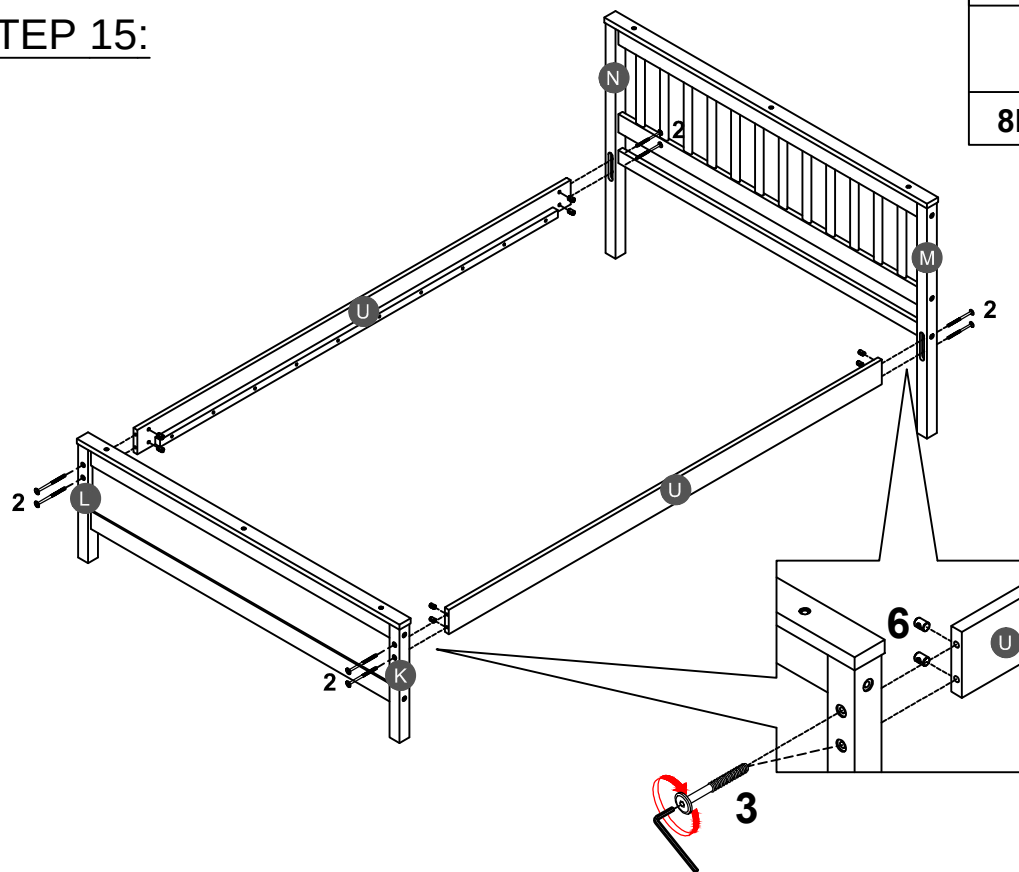STEP 15:



2		6	
8PCS		8PCS	

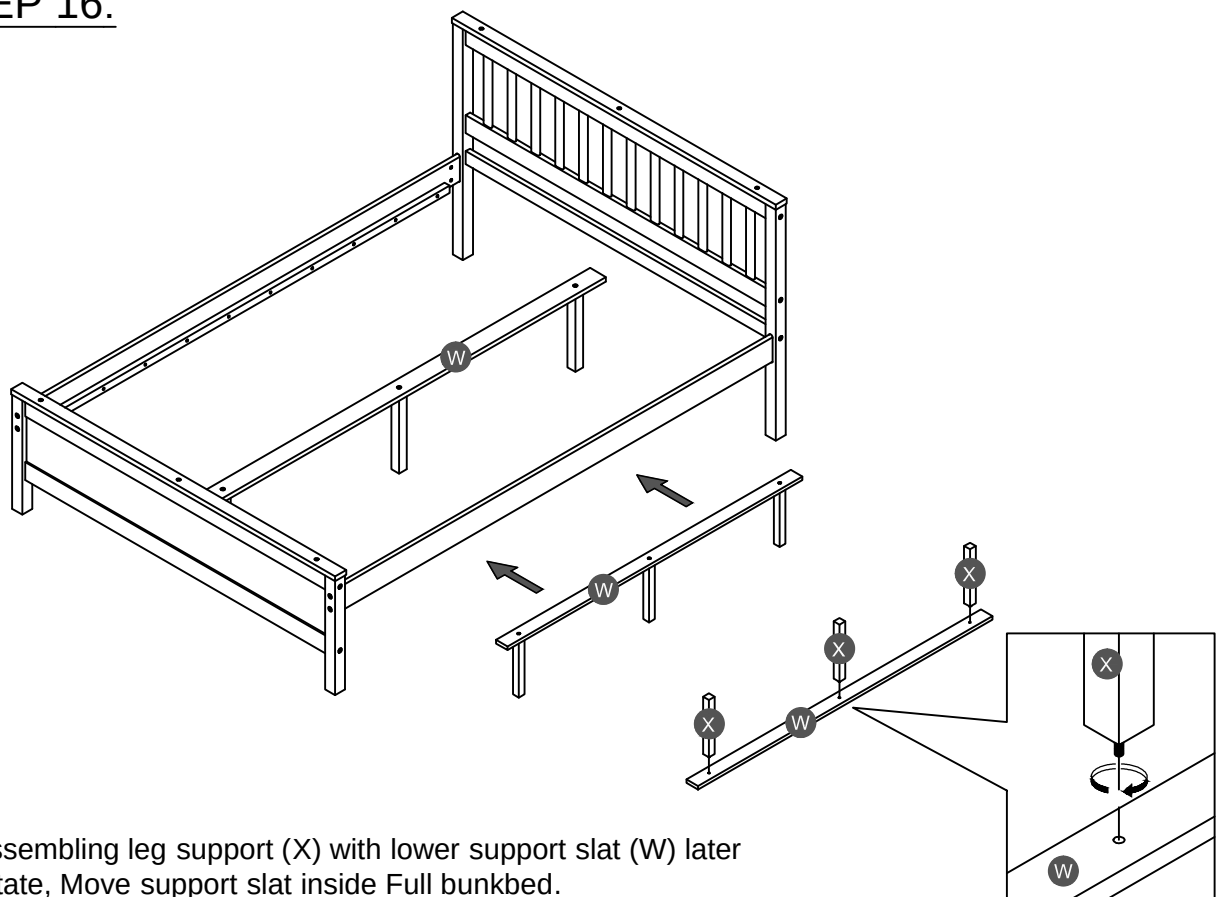STEP 16:







Assembling leg support (X) with lower support slat (W) later rotate, Move support slat inside Full bunkbed.

STEP 17:

7



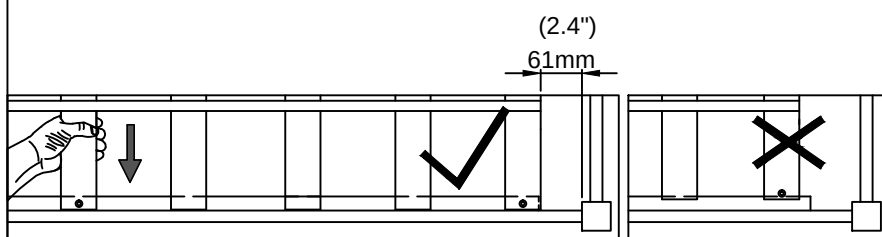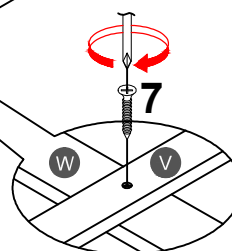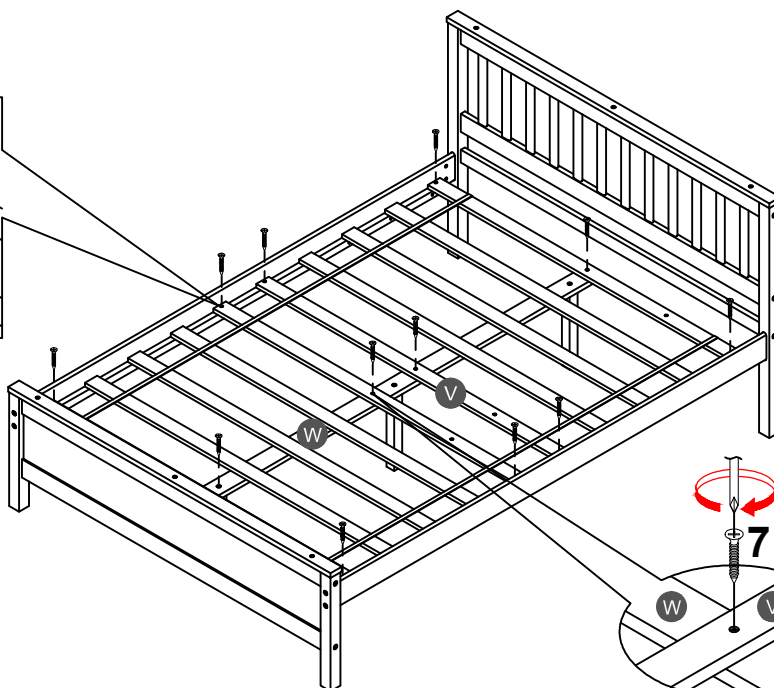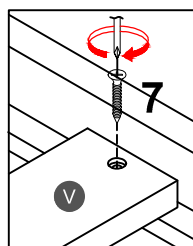12PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

