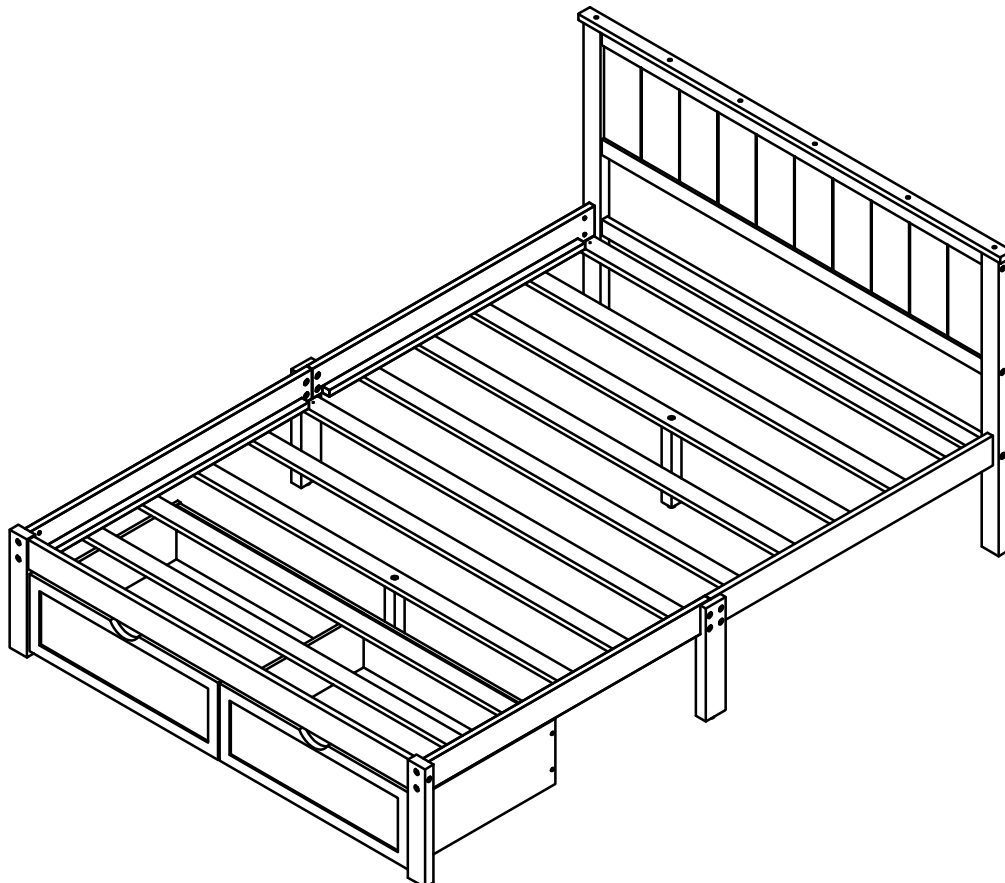


ASSEMBLY INSTRUCTION

SKU CODE: (WF196530)



SAFETY WARNINGS

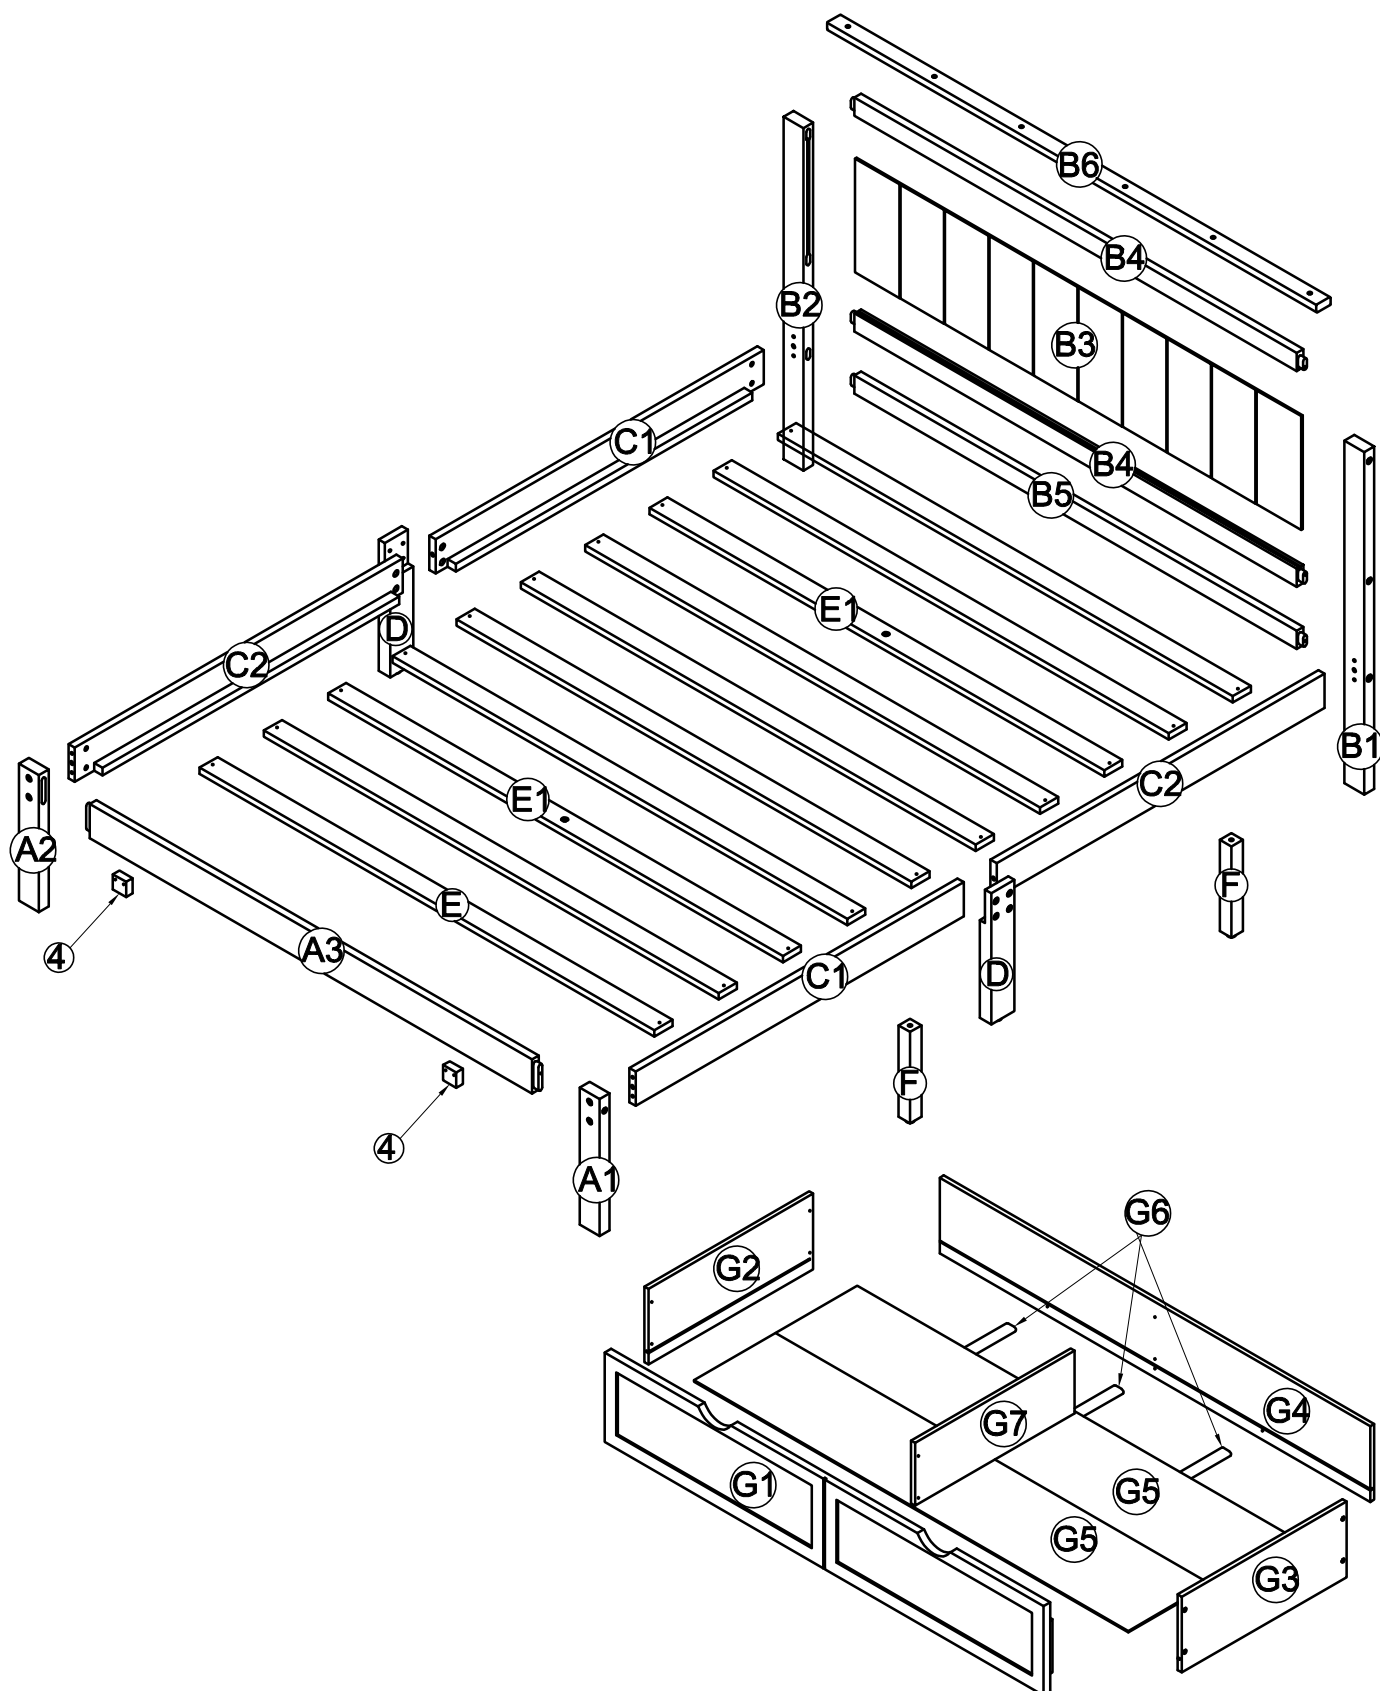
1. Follow the information on the warning label appearing on the upper bunk end structure and on the carton... Do not remove warning label from bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 inches below the upper edge of guard rails.
4. Do not allow children under 6 years to use the upper bunk.
5. Prohibit more than one person on upper bunk.
6. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
7. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
8. Always use the ladder for entering and leaving upper bunk.
9. Do not use substitute part. Contact the manufacturer or dealer for replacement part.
10. Use of night light may provide added safety precaution for a child using the upper bunk.
11. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
12. Always use guardrail on both long sides of the upper bunk.
13. The use of water or sleep flotation mattresses is prohibited.
14. Keep these instruction for future reference.
15. Strangulation Hazard - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to hooks, belts and jump rores.
16. Trundle : Only use for mattress 6 inch.

PLEASE DO NOT RETURN PRODUCT TO THE STORE












if you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.







ASSEMBLY INSTRUCTION








Part List(WF196530)

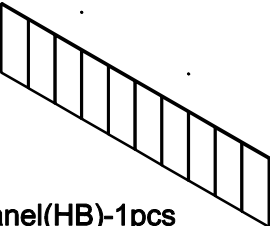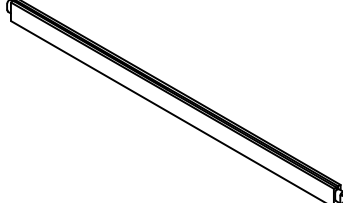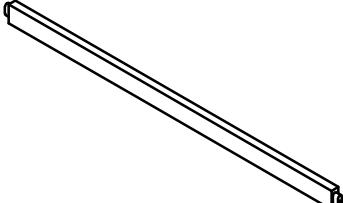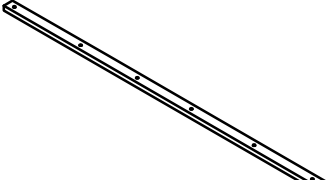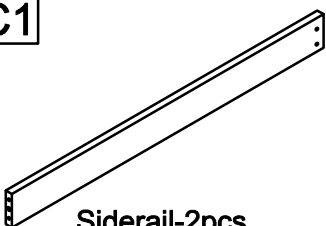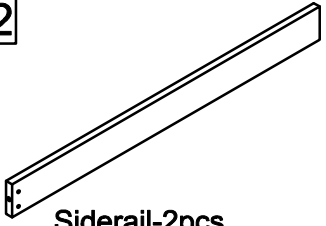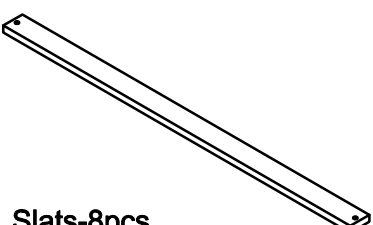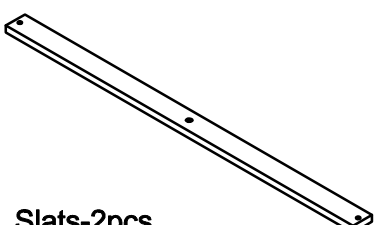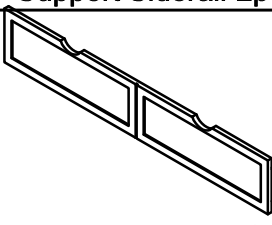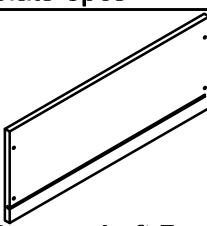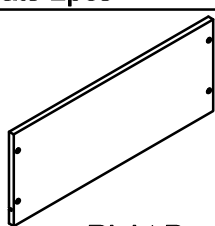
A1  Leg(FB-Front)-1pcs	A2  Leg(FB-Back)-1pcs	A3  Horizontal Bar(FB)-1pcs
B1  Leg(HB-Front)-1pcs	B2  Leg(HB-Back)-1pcs	B3  Panel(HB)-1pcs
B4  Horizontal Bar(HB)-2pcs	B5  Horizontal Bar(HB)-1pcs	B6  Horizontal Bar(HB)-1pcs
C1  Siderail-2pcs	C2  Siderail-2pcs	D  Support Siderail-2pcs
E  Slats-8pcs	E1  Slats-2pcs	G1  Drawer- Front Panel-1pcs
G2  Drawer- Left Panel-1pcs	G3  Drawer -Right Panel-1pcs	

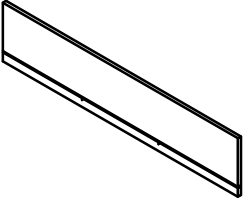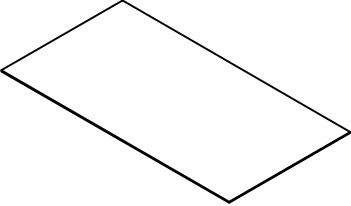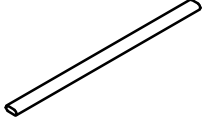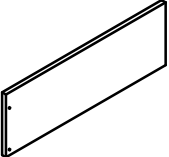Part List(WF196530)

G4  Drawer- Back Panel-1pcs	G5  Drawer- Bottom Panel-2pcs	G6  Drawer- Support Bottom -3pcs
F  Support Slats-2pcs	G7  Drawer- Center Panel -1pcs	

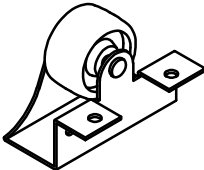Hardware List

1	 Ø10 x 40 mm Wood dowel 6pcs	2	 Screws 1/4" x80 8pcs	3	 M4 x 30 mm Wood Screws 45pcs
4	 Stop Drawer 2pcs	5	 Ø1/4" x 25 mm Hex-Head bolts 8pcs	6	 Ø1/4" x 15 mm Canopy head though -8pcs
7	 Ø1/4" x 80 mm Hex-Head bolts 8pcs	8	 Ø1/4" x 13 mm Horizontal-Hole bolts 8pcs	9	 Allen Key 1pc
10	 M3.5x 12 mm Wood Screws 12pcs	11	 Wheels 4pcs	12	 Ø1/4" x 35 mm Hex-Head bolts 2pcs




Assembly Tools Required (Not Included)

STEP 1:

Following below illustration Assembly Headboard.Using hardware #2,#3
to complete Headboard .Look at detail view for more detail


3		2	
6pcs		6pcs	

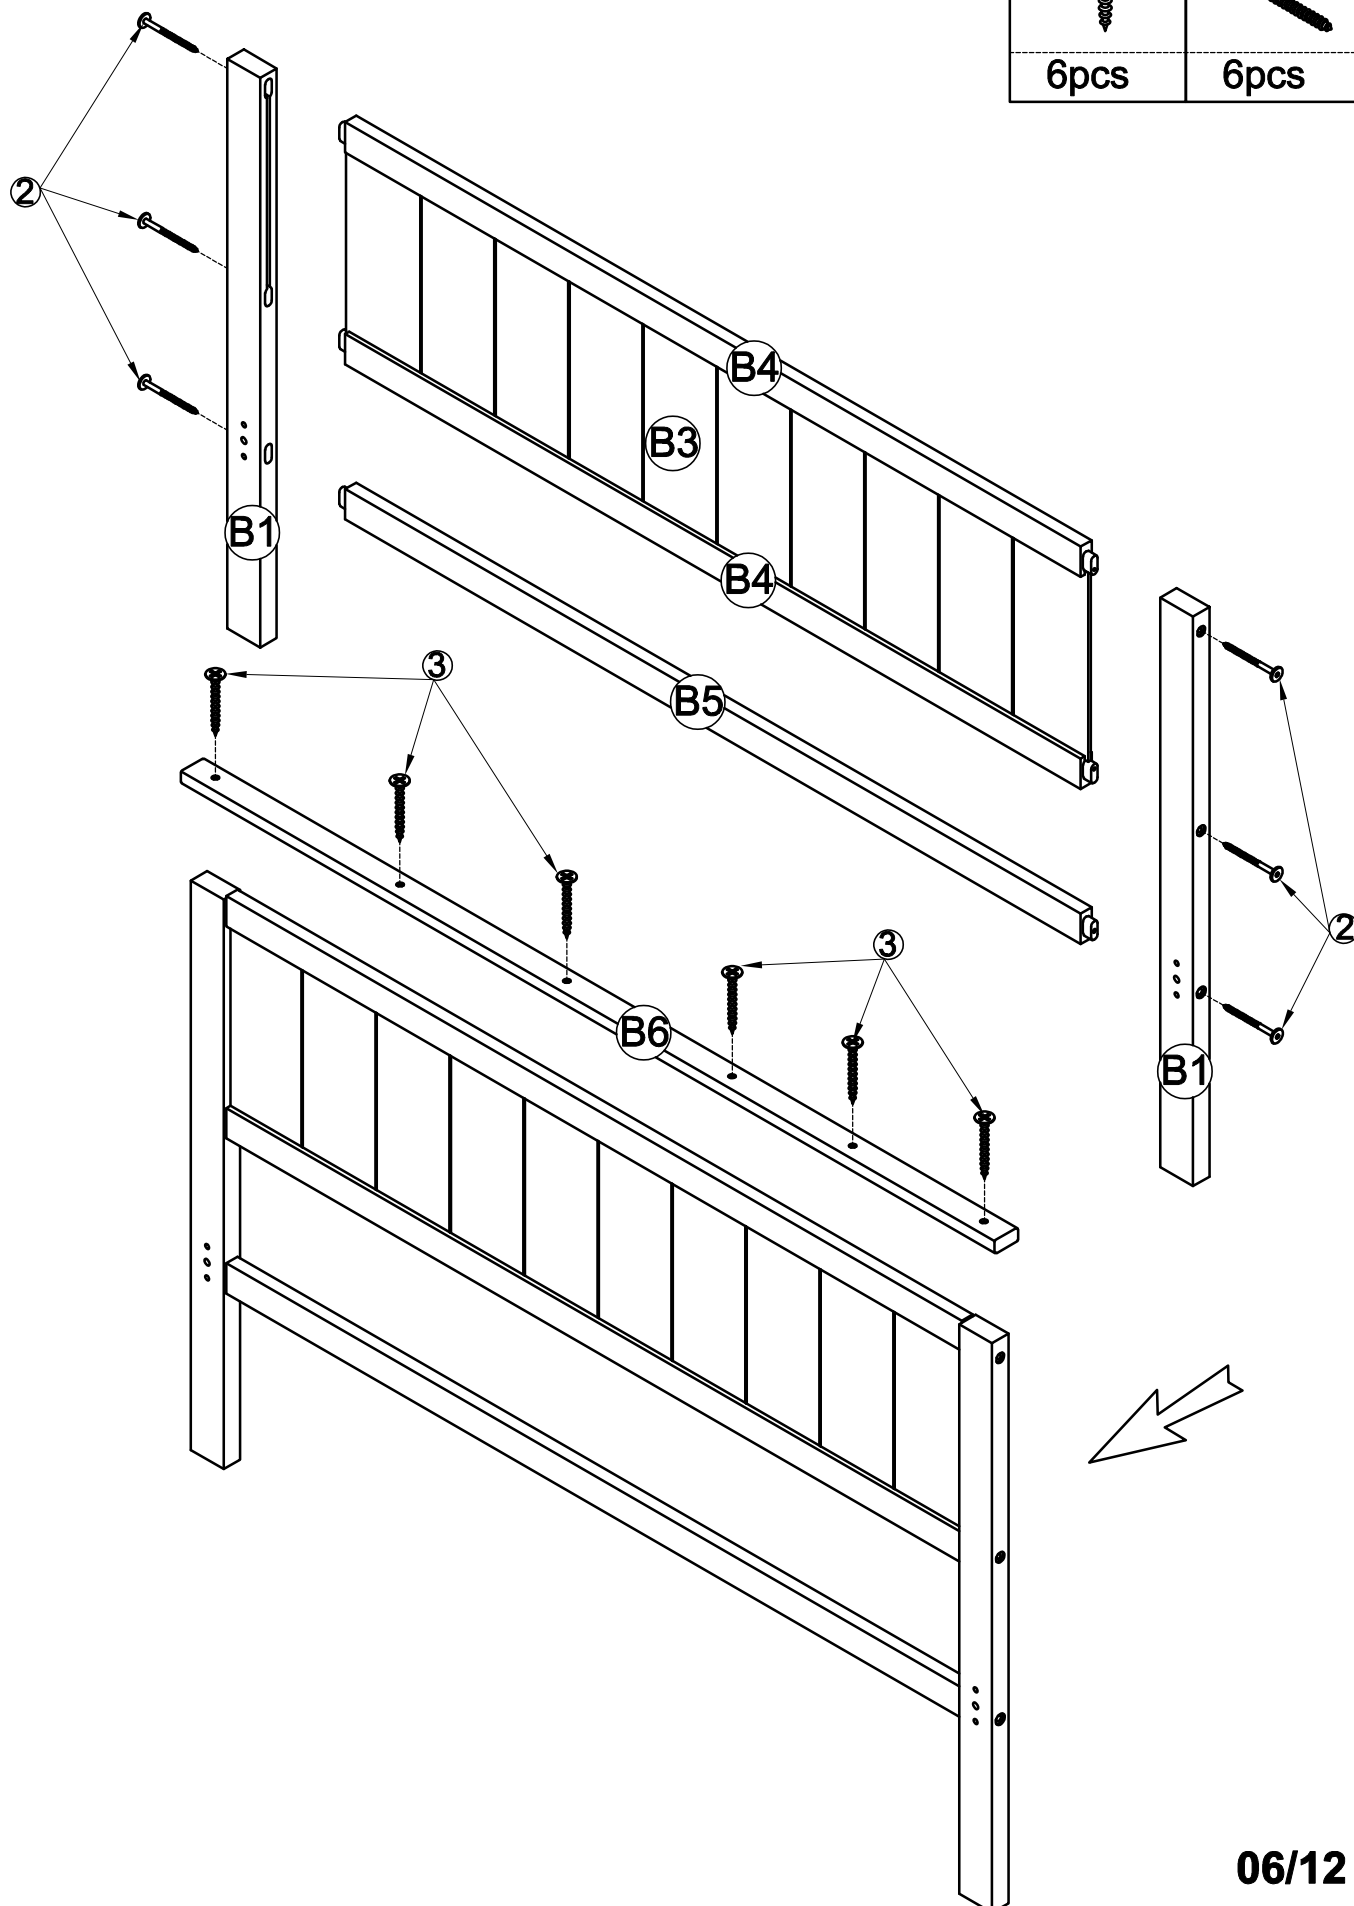

STEP 2:

Following below illustration Assembly Footboard . Using hardware #2,#3,#4 to complete Footboard .Look at detail view for more detail




4	3	2
		
2pcs	4pcs	2pcs

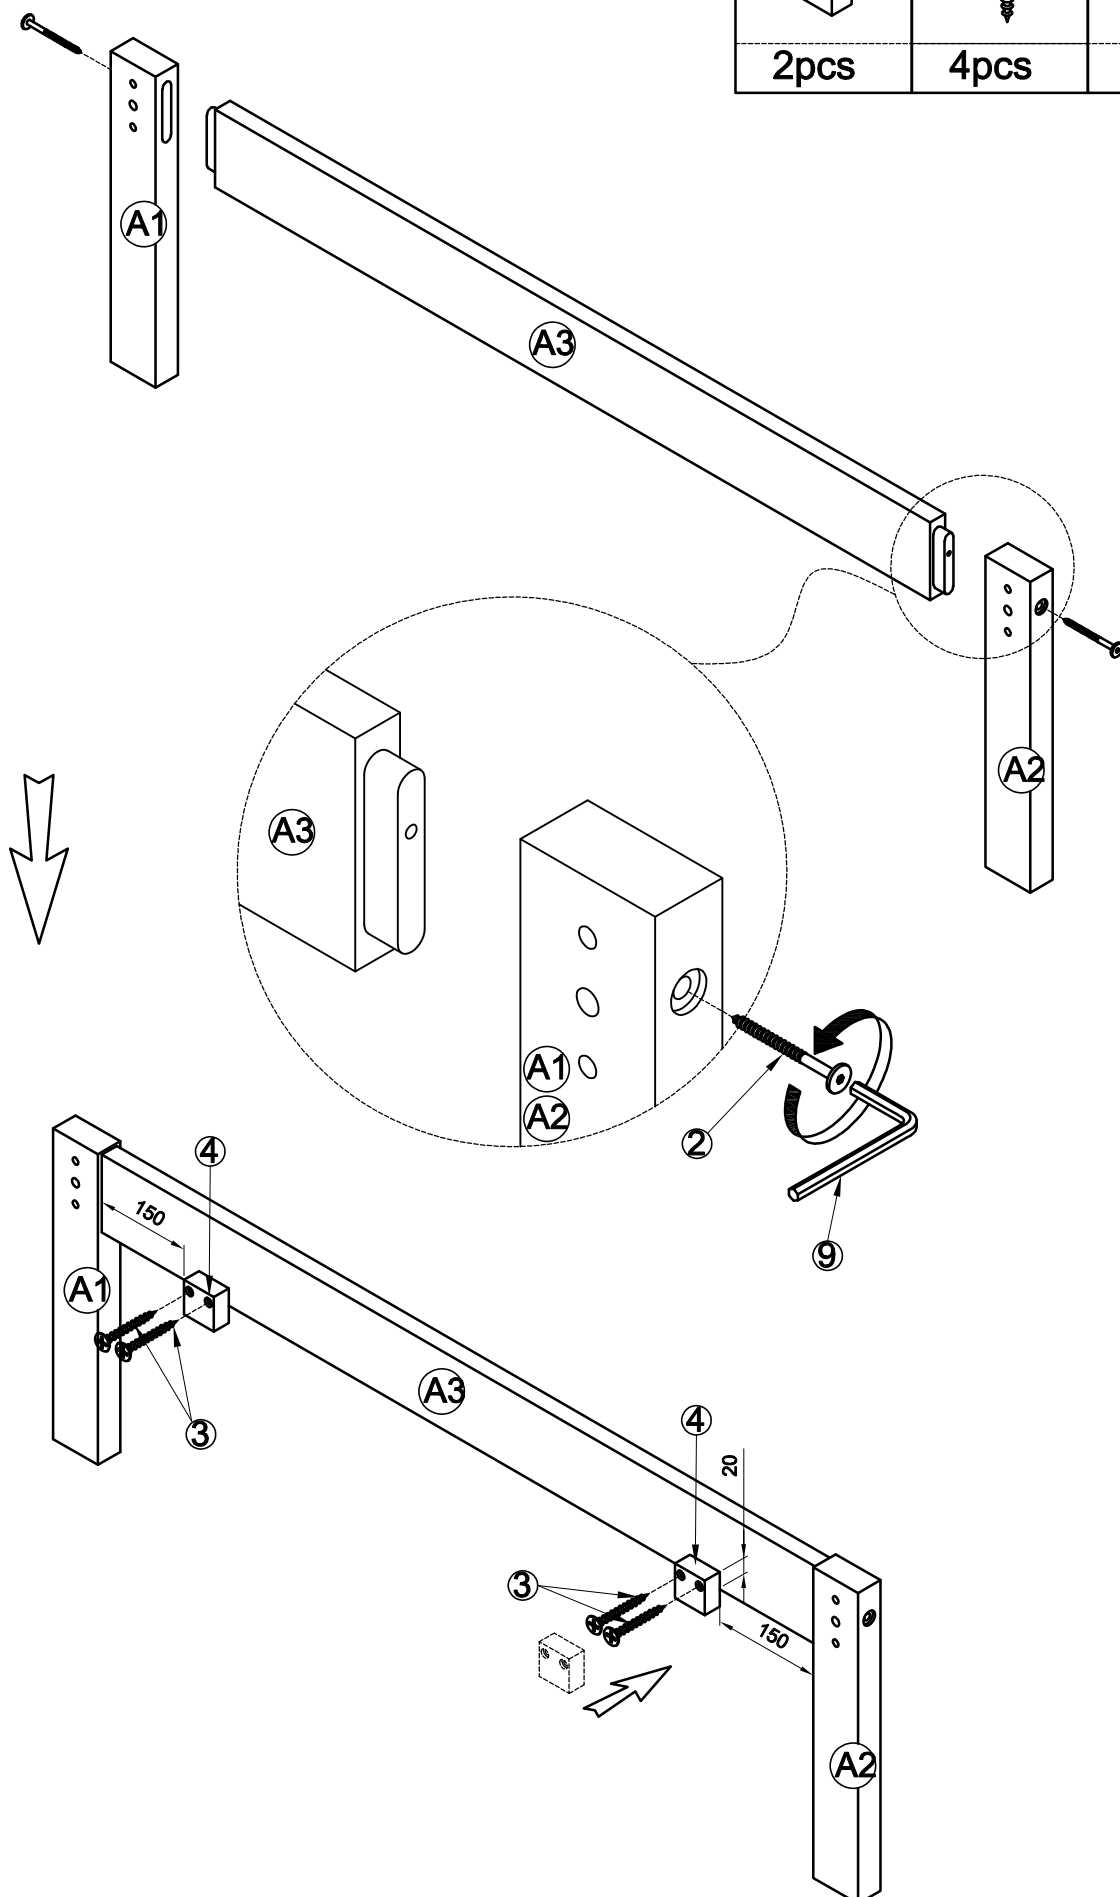

STEP 3:


Following below illustration .Using hardware #5,#6 and dowel #1 connect Siderail C1(2),Siderail C2(2) with Support Siderail D(2)


5		1	
8pcs		2pcs	
		6	
		8pcs	

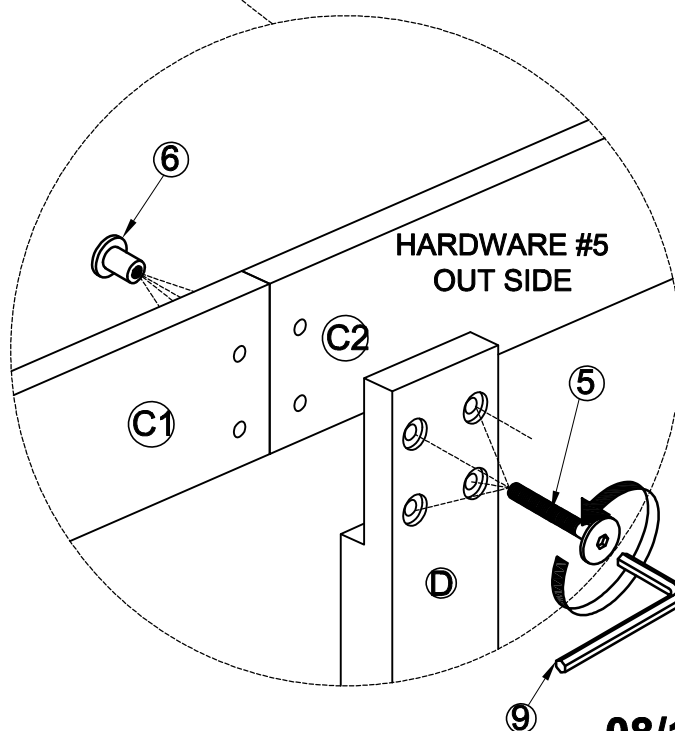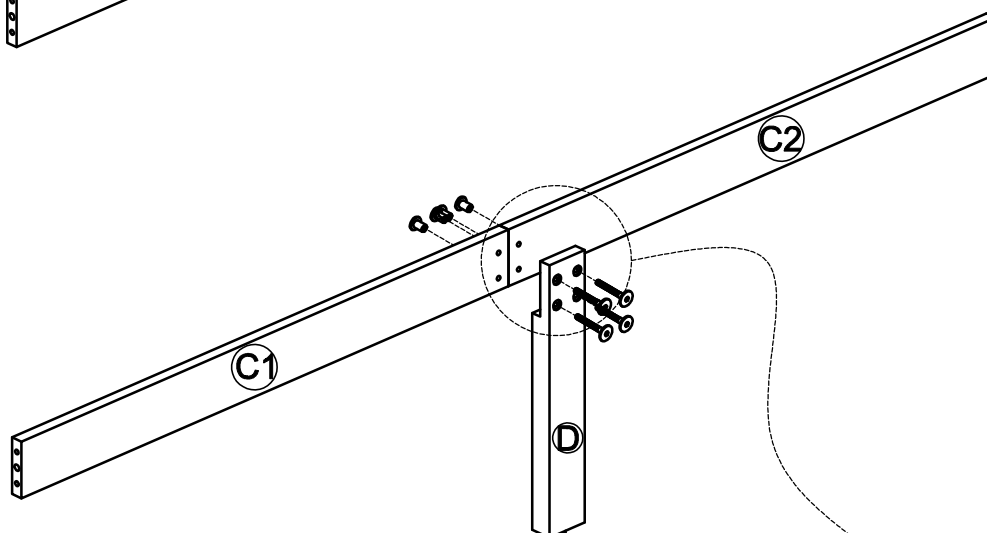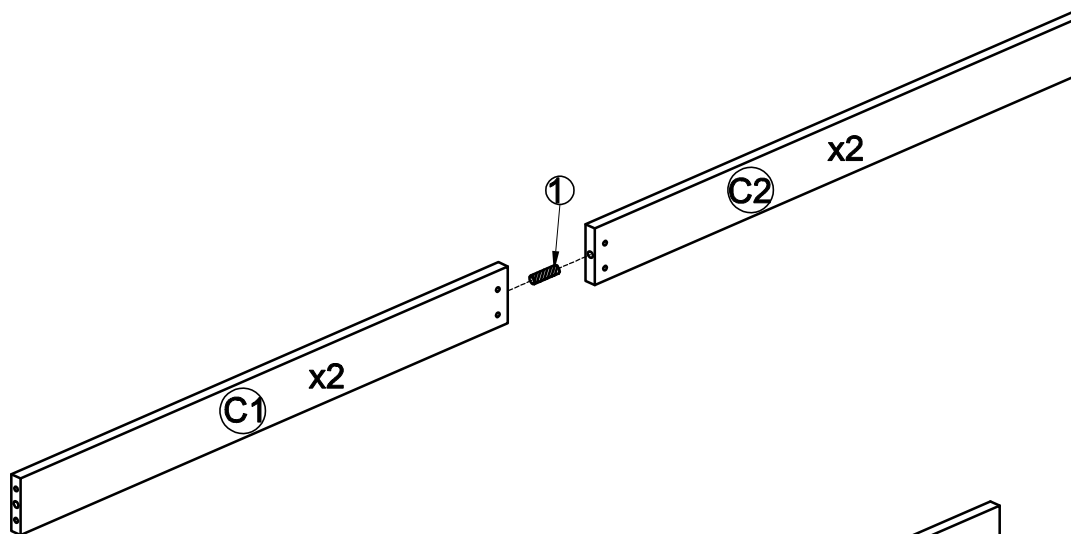

STEP 4:

Following below illustration Using hardware #7, #8 and dowel #1
to Assembly Headboard and Footboard with siderail. Look at detail view for more detail

8	7	1
		
8pcs	8pcs	4pcs

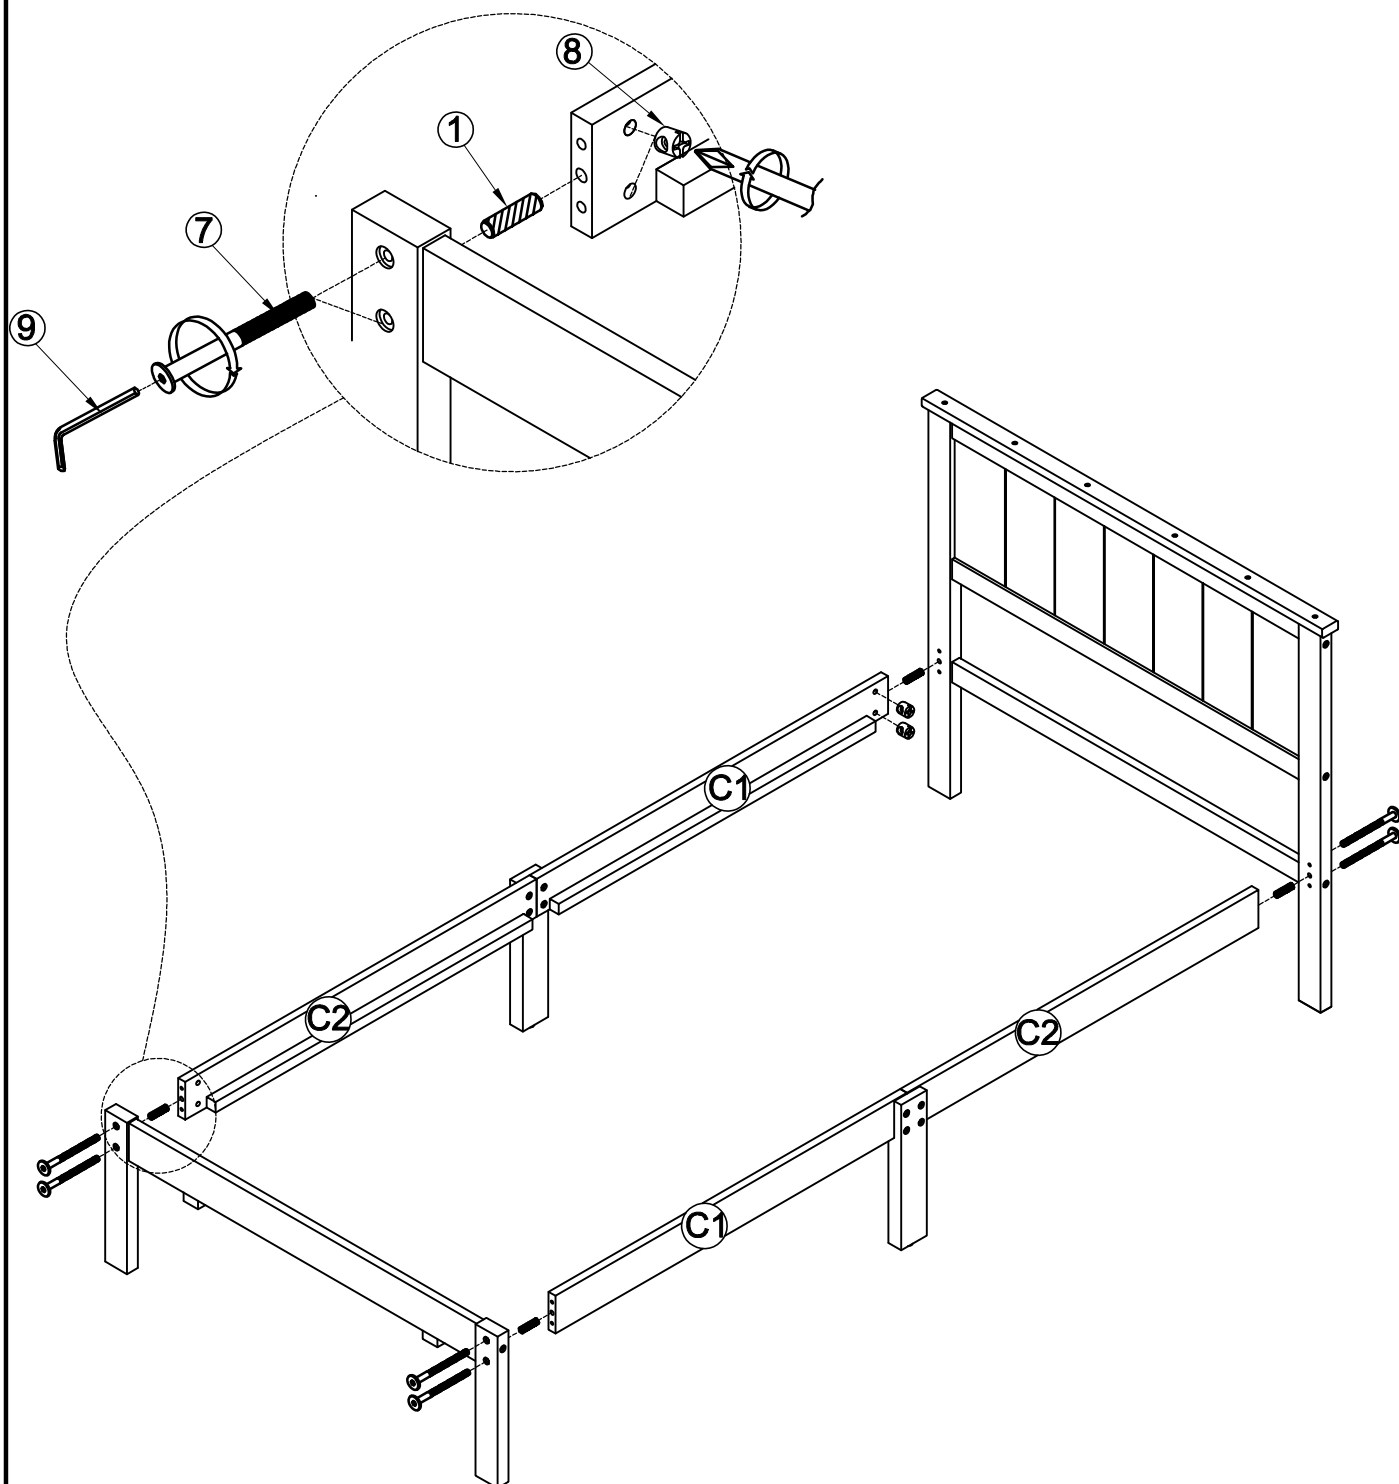


STEP 5:

Following below illustration:


-Assembly 2 slats E1 with 2 Support Slats(F) by using hardward #12.

Look at detail view

12



2pcs

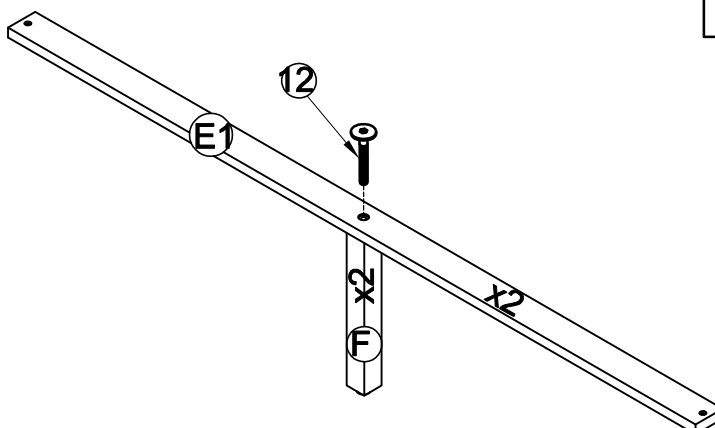

STEP 6:

Following below illustration:

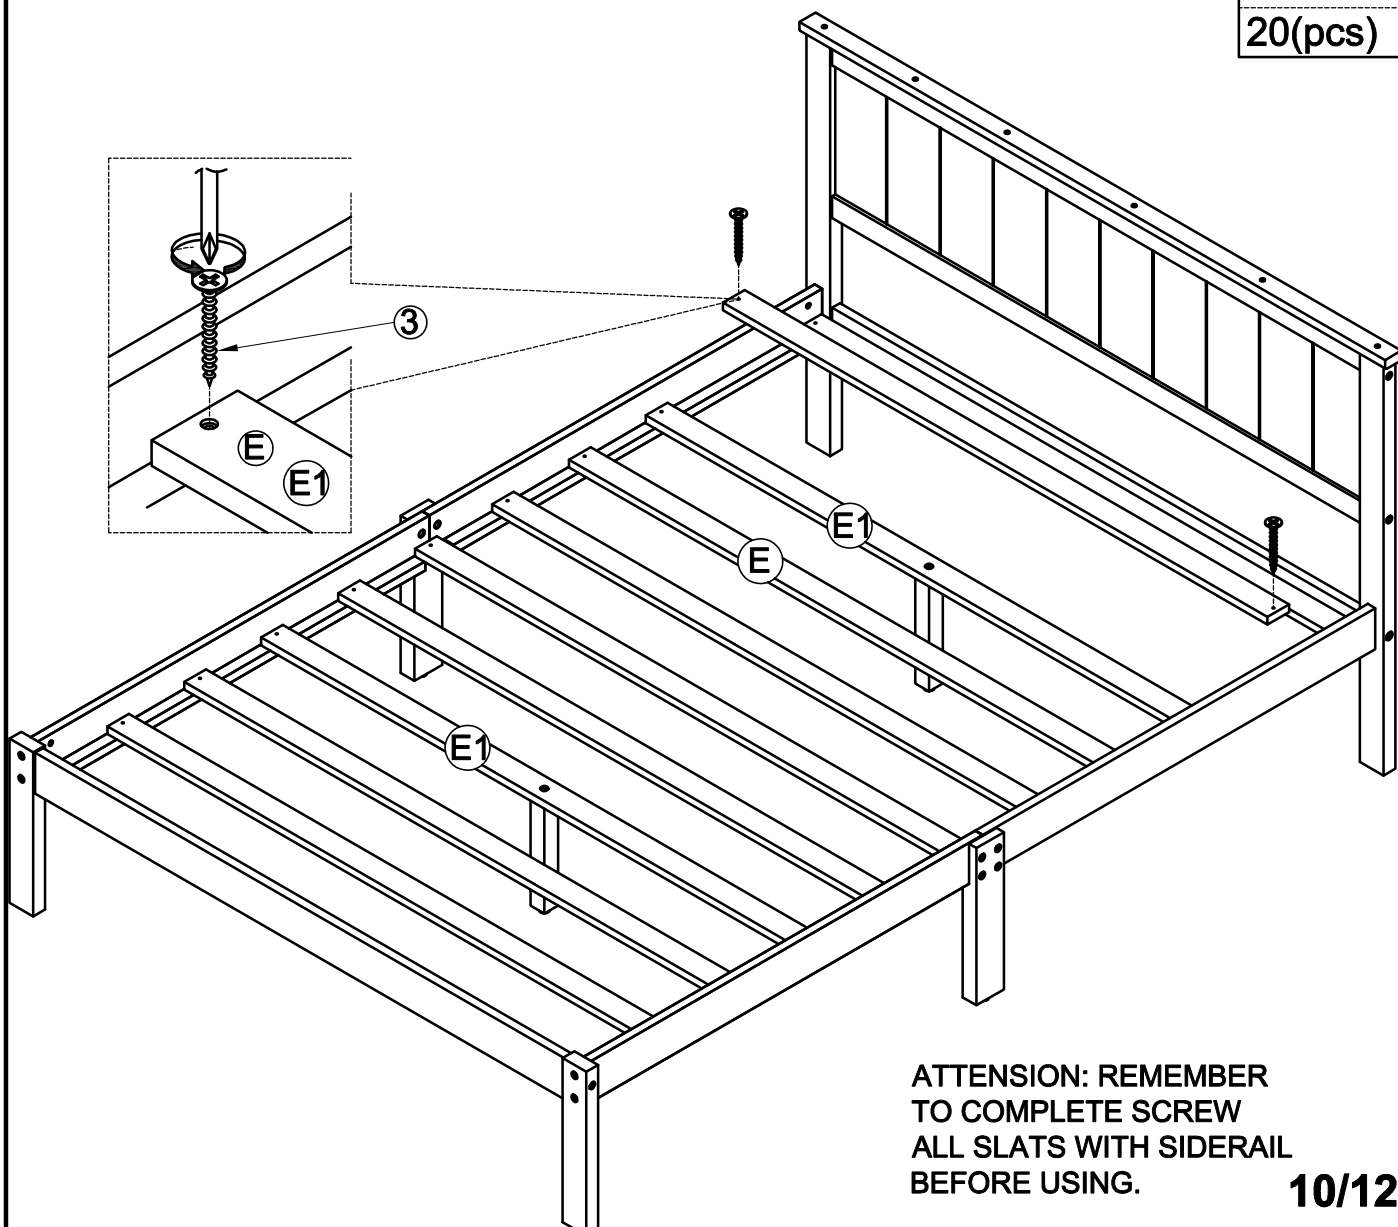
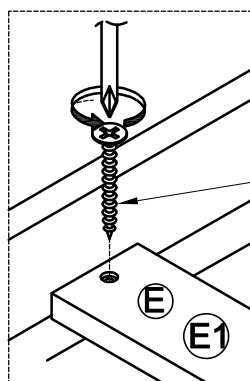
-Assembly 8 slat E & 2 slat E1 using hardward #3.

- Look at detail view

3




20(pcs)



ATTENTION: REMEMBER
TO COMPLETE SCREW
ALL SLATS WITH SIDERAIL
BEFORE USING.


10/12

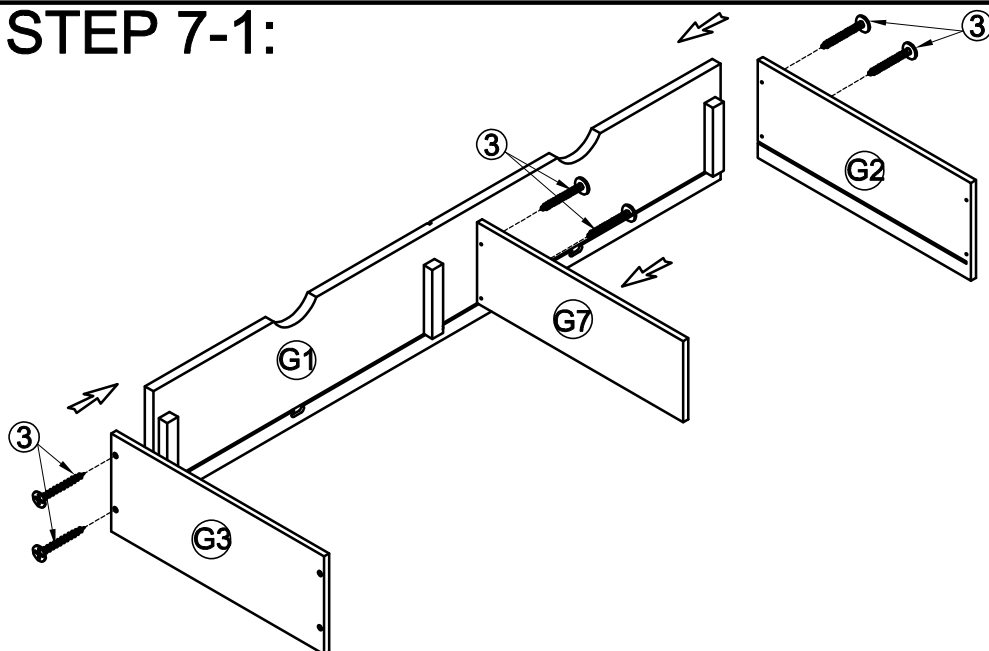STEP 7-1:




3
6(pcs)

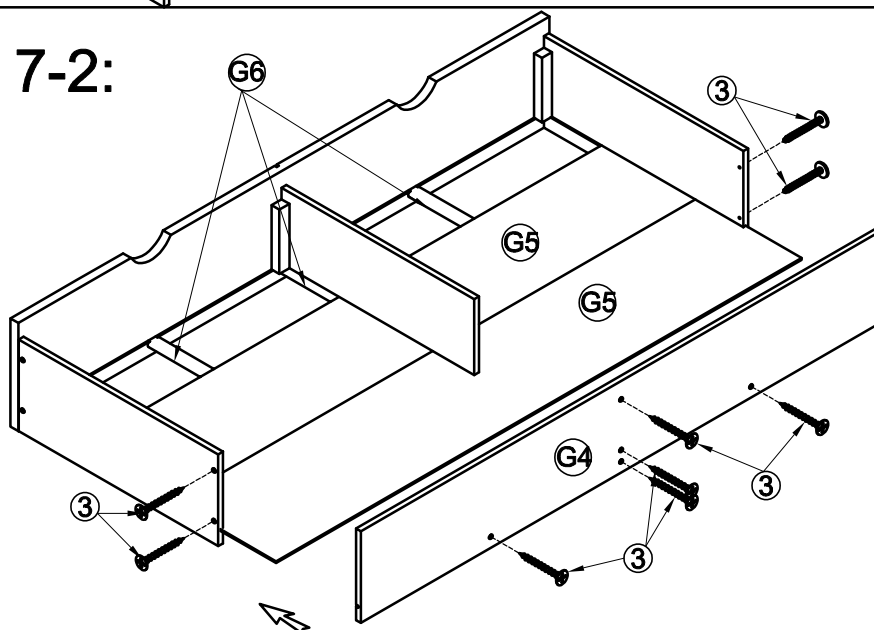STEP 7-2:



3
9(pcs)

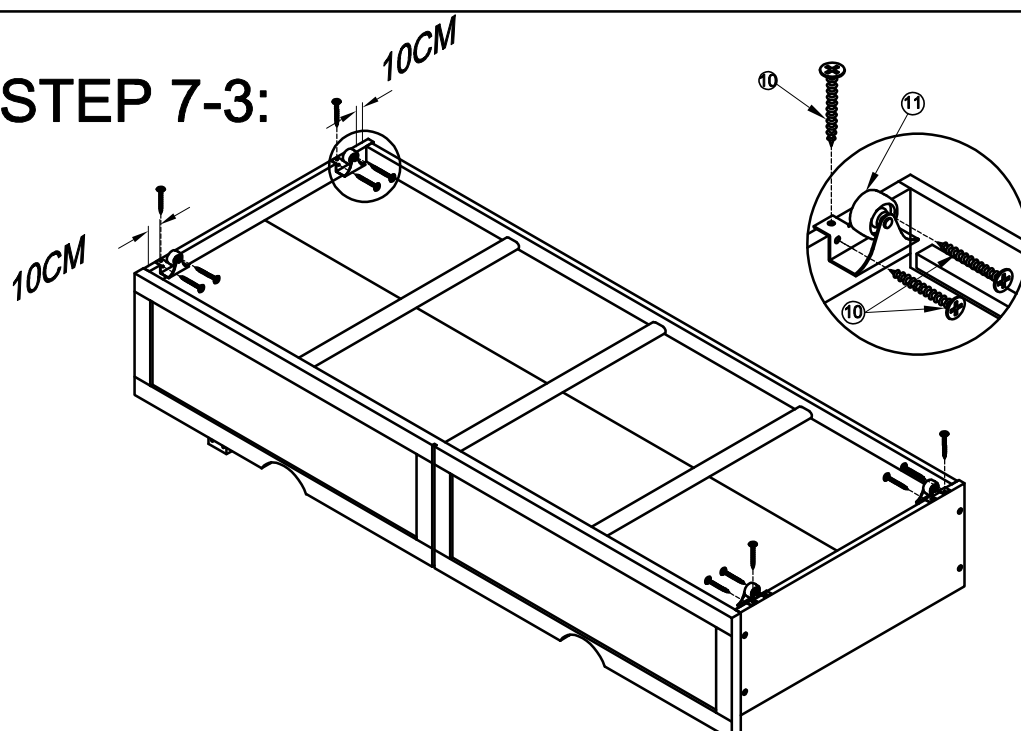STEP 7-3:



11
4(pcs)

10
12(pcs)

STEP 8: -Push Drawer in to under Footboard of Bed

