
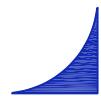


KOWO

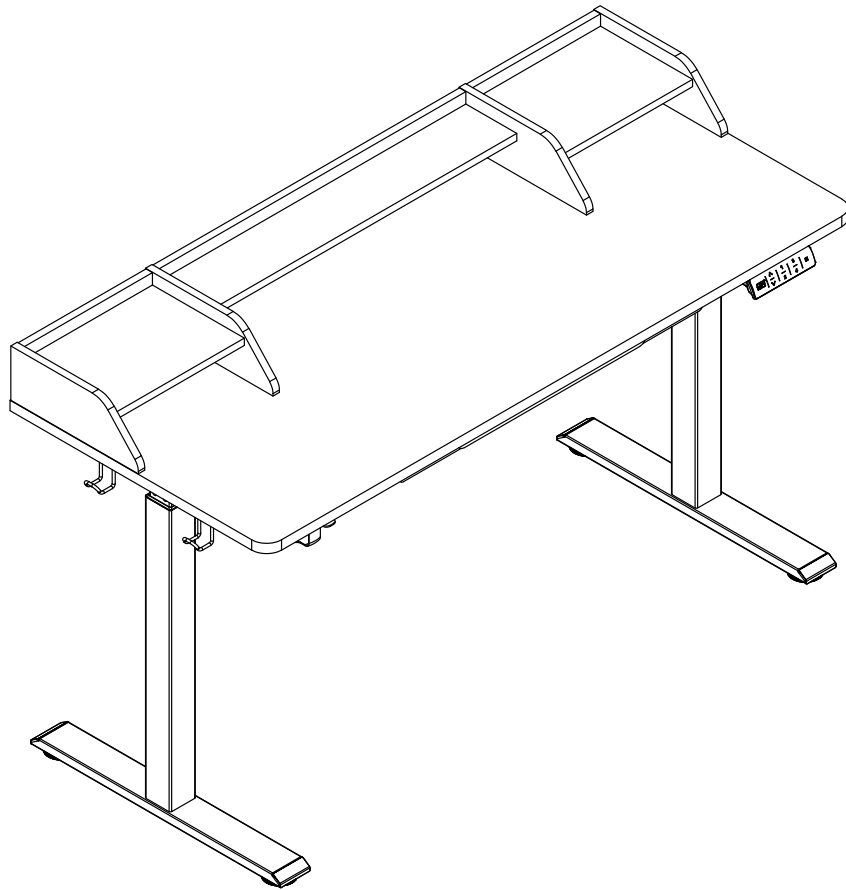

Hutch

Model#HD01-12/14

Any questions or issues please contact us


Tel : 020-8187-1190

Email:service.uk@kowohome.com

9:00 AM - 5:00 PM GMT Monday - Friday

Accessory Package


PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, please contact us for replacement parts.

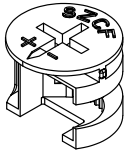


A. Cam Lock - 12




B. CAM SCREW - 12

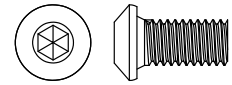


C. 1/2" Small Machine Screw - 8

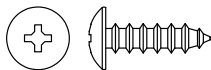

D. 1/2" Large Wood Screw - 8

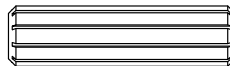


E. Wood Dowel - 9

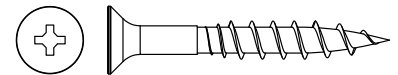


F. 1-1/2" Large Wood Screw - 13



G. 1/2" Medium Wood Screw - 15

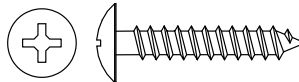


H. 1" Medium Wood Screw - 12

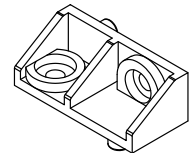


J. Mounting Bracket - 4




K. Slides - 2

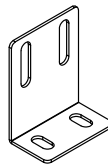

L. L Shaped Bracket - 2


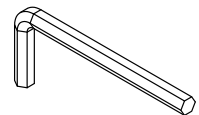


M. Wrench - 1

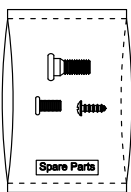

N. Spare Parts - 1


Diagram of Components

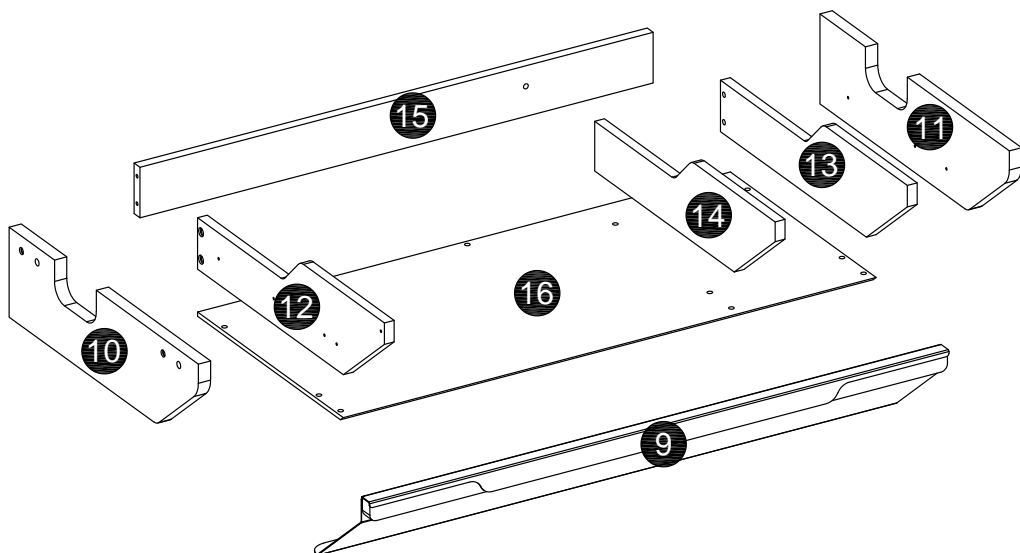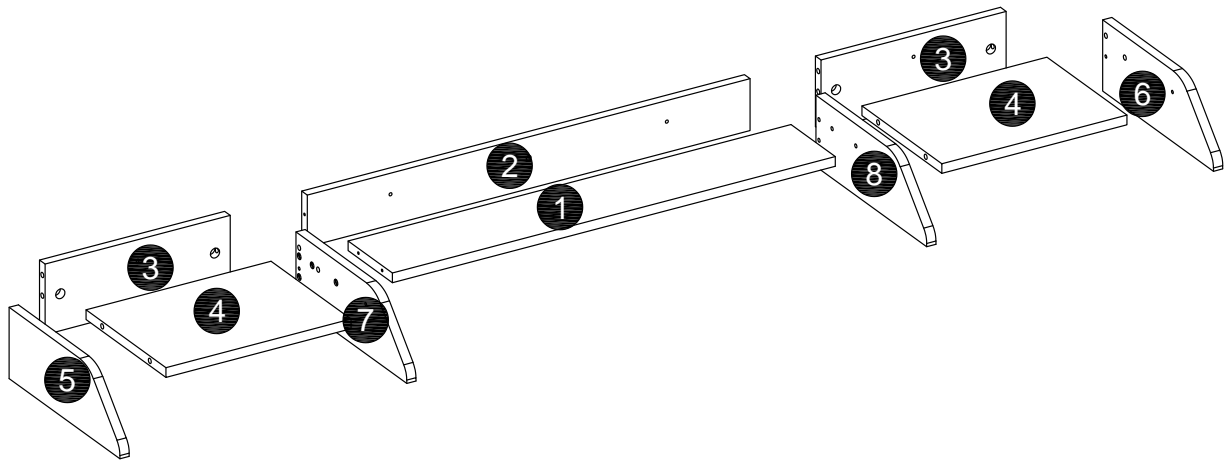




STEP 1

Detaching the Slide

Press lever to disconnect and separate the Extension Slide (K-2) from the Slide (K-1). Do this for both drawer Slides.

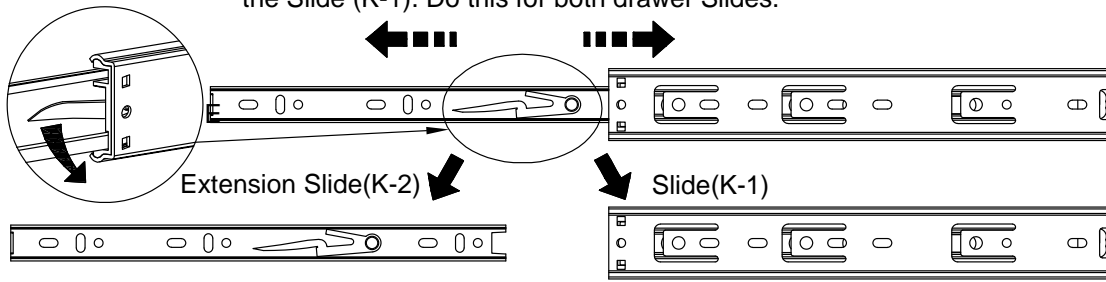

Adjust SLIDE to align with the screw holes.

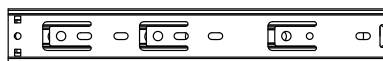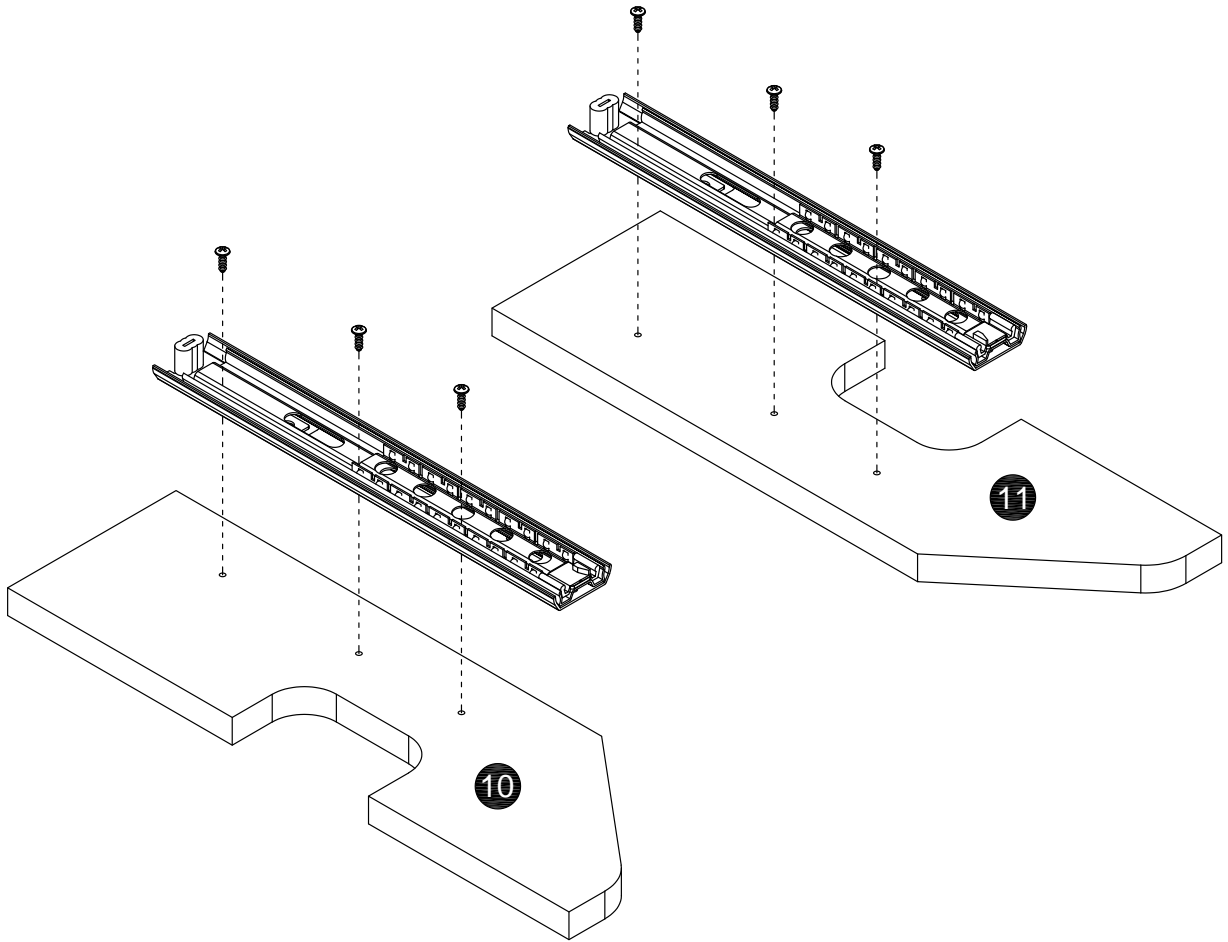
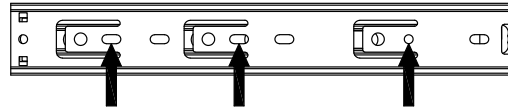


K.Slides -2




G.1/2" Medium Wood Screw-6


STEP 2

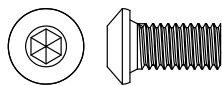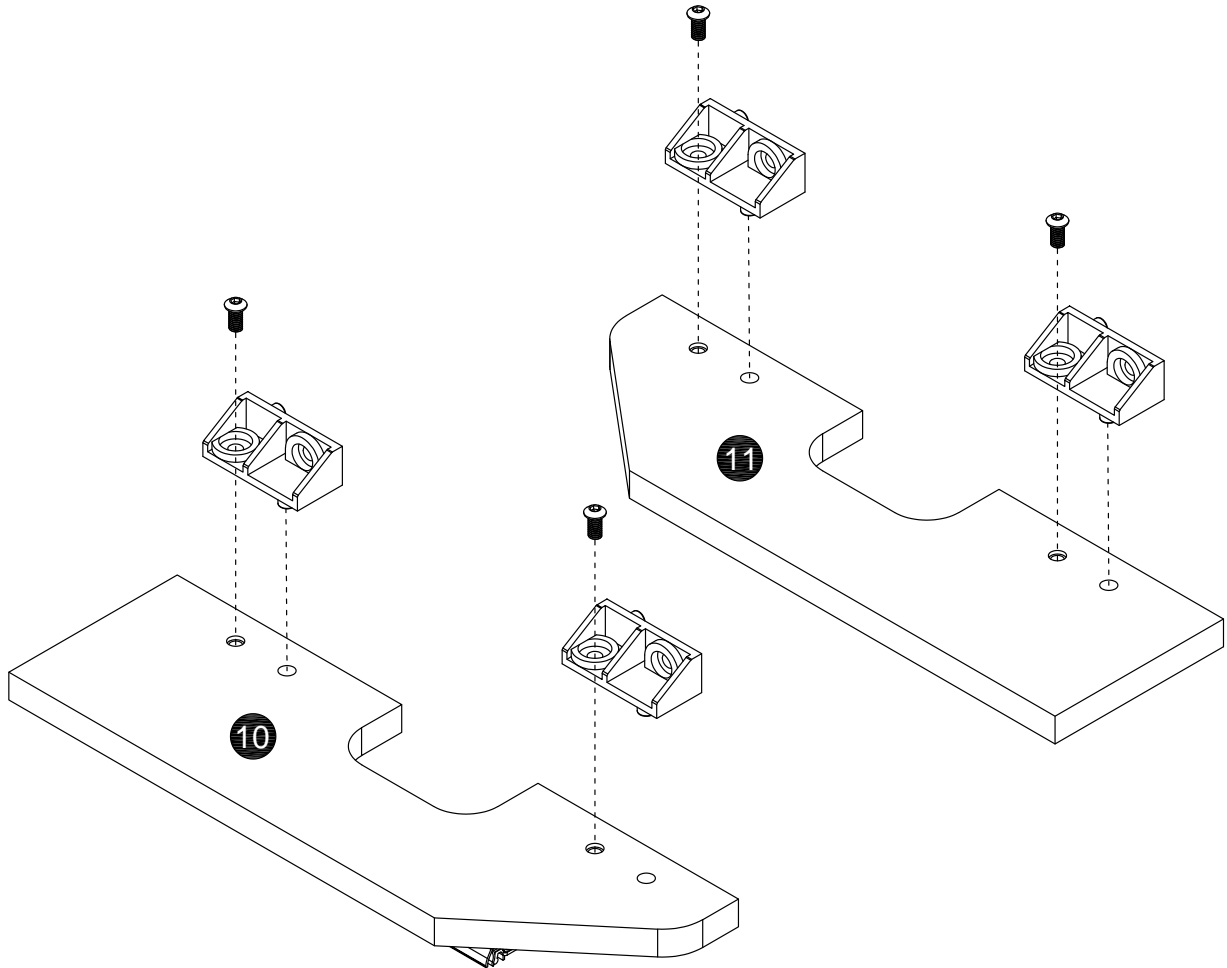

C. 1/2" Small Machine Screw - 4


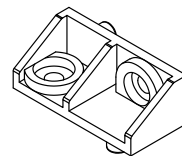


J. Mounting Bracket - 4

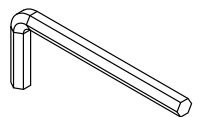



M. Wrench - 1

STEP 3

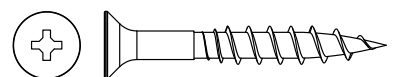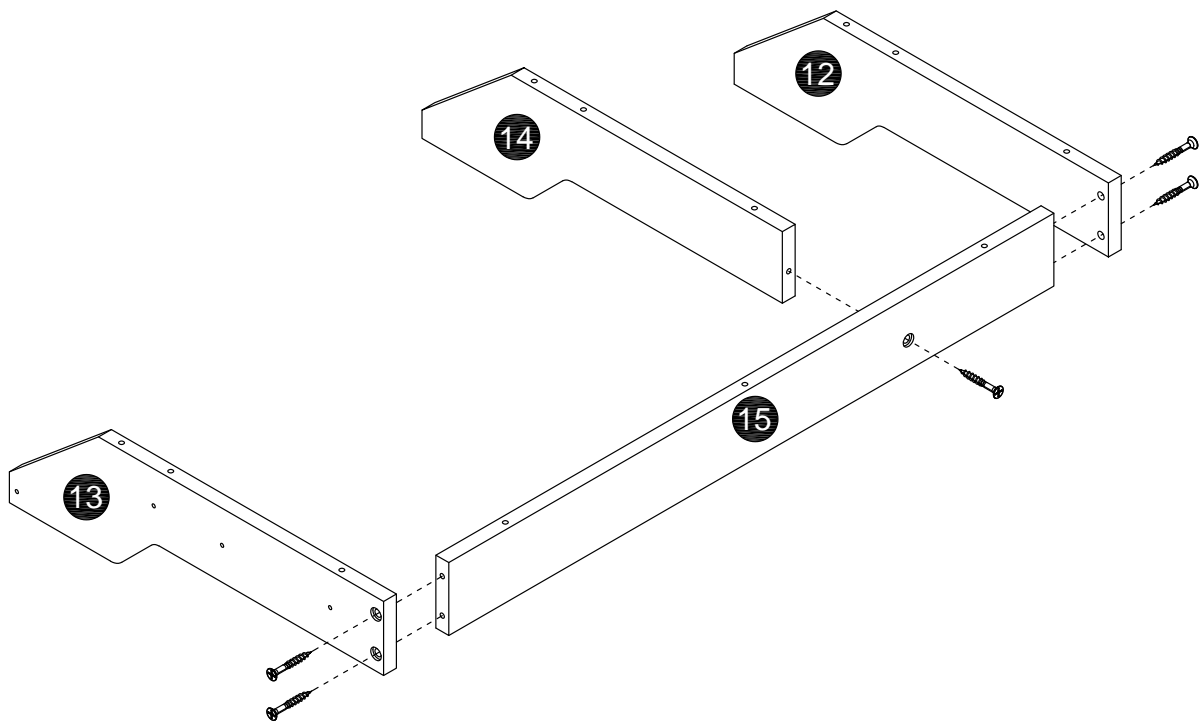



F. 1-1/2" Large Wood Screw - 5

STEP 4

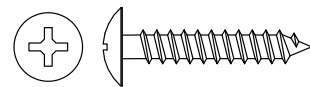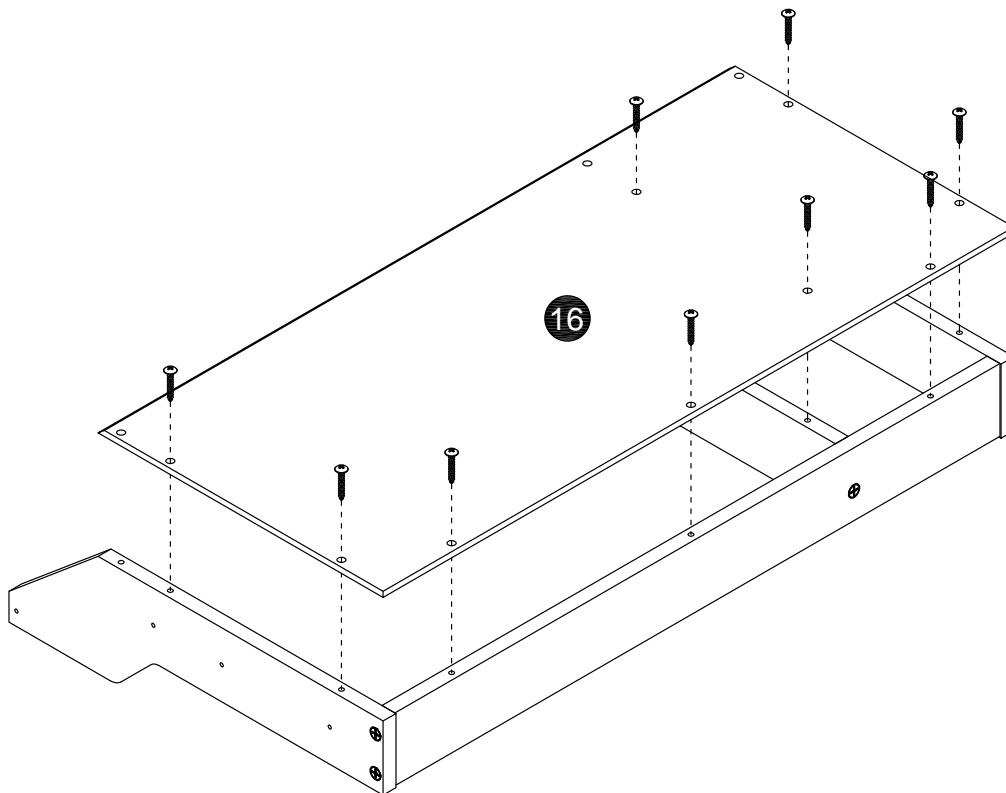

H. 1" Medium Wood Screw-9



STEP 5

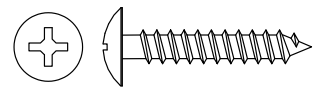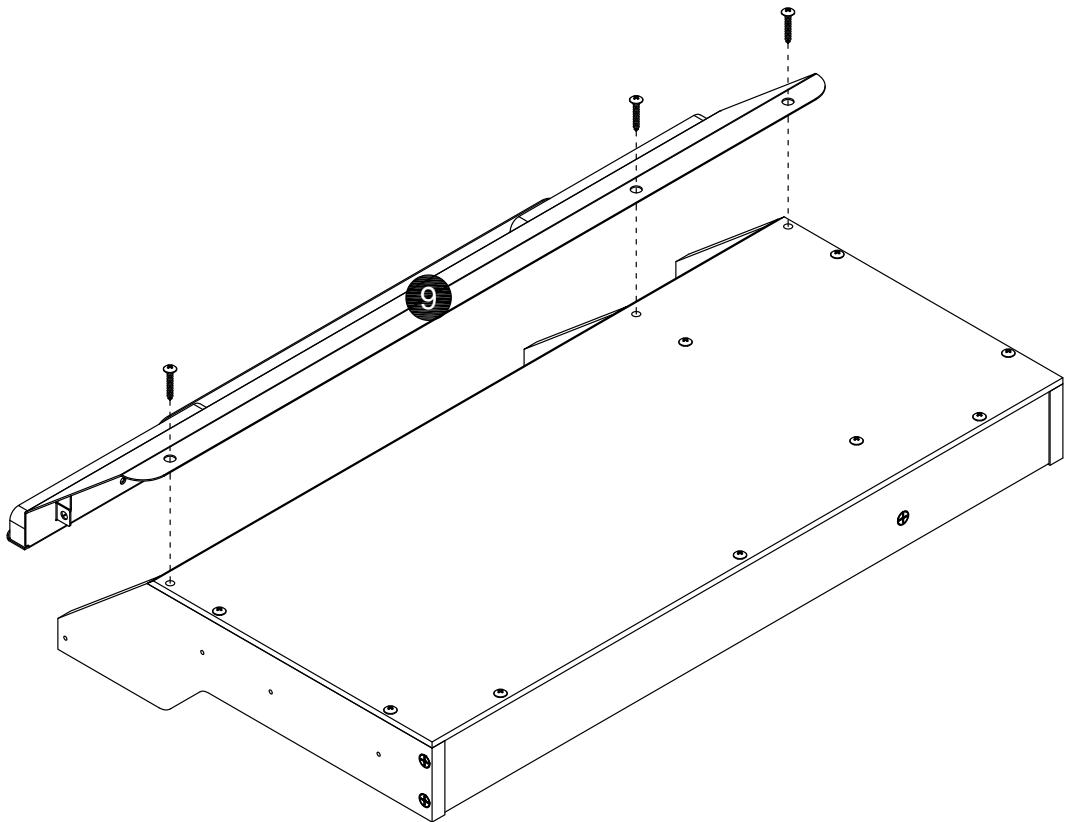

H. 1" Medium Wood Screw-3

STEP 6



Adjust runner to access the screw holes.

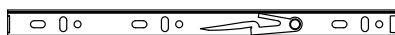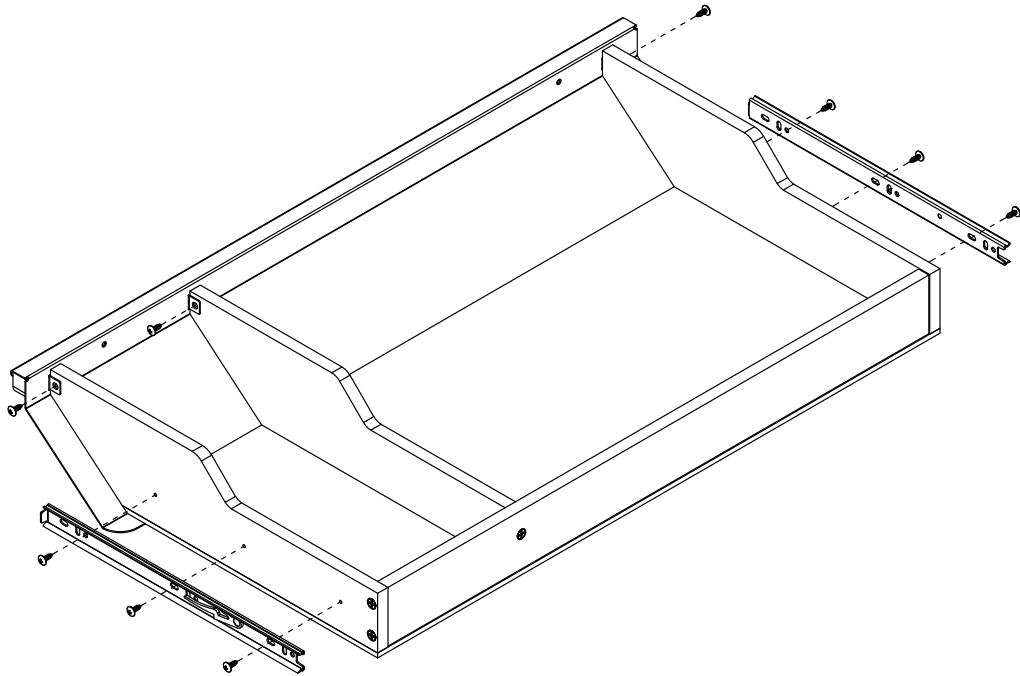


K.Extension Rail (K-2) - 2

G.1/2" Medium Wood Screw-9

STEP 7

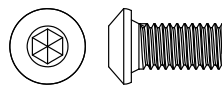
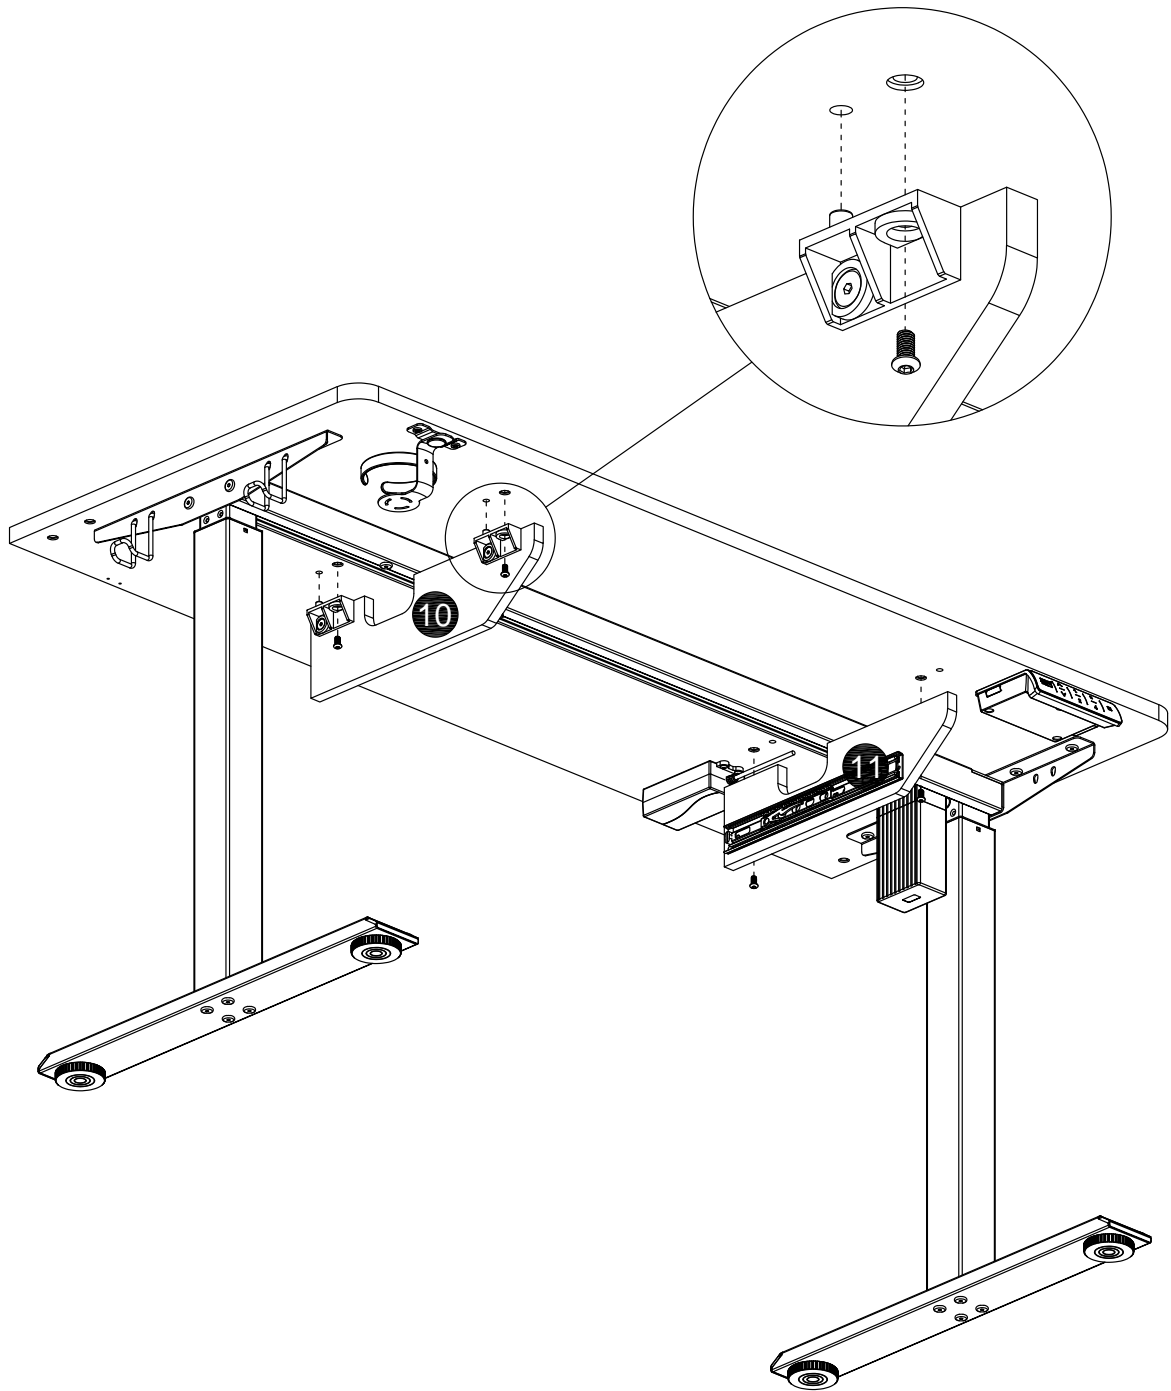


C. 1/2" Small Machine Screw - 4

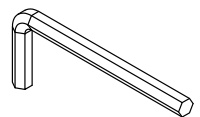

M. Wrench - 1


STEP 8

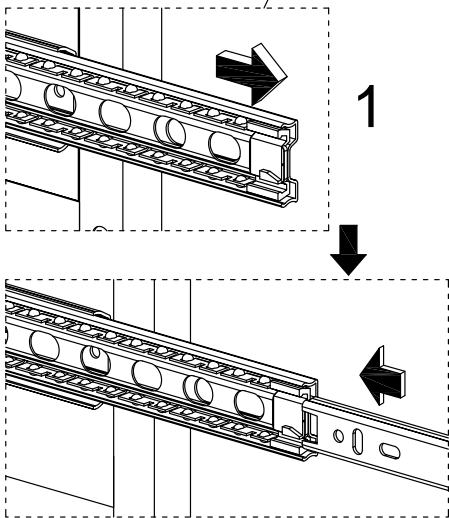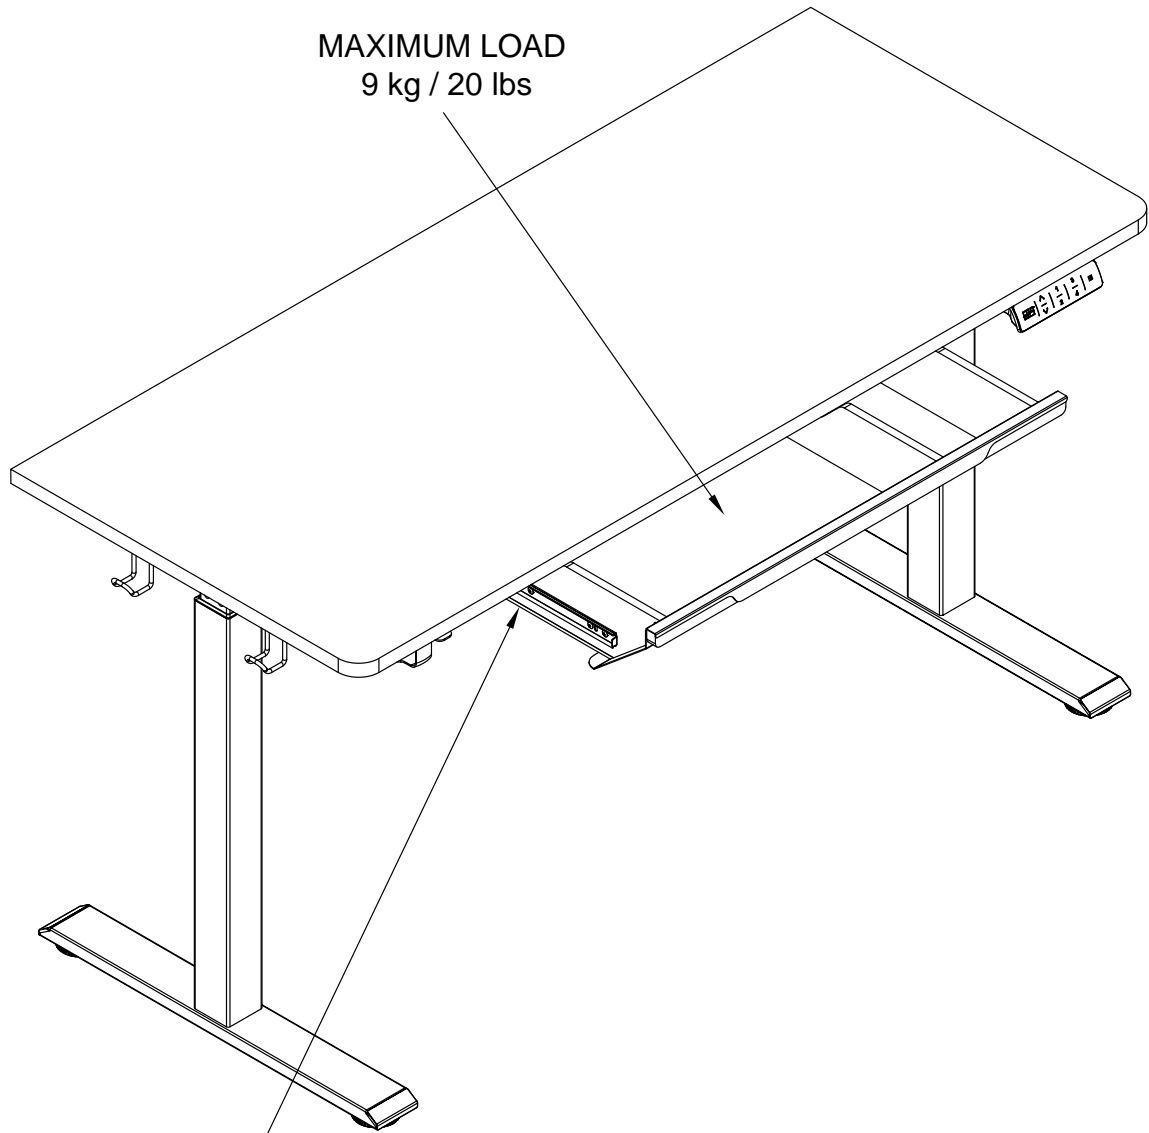

Attach the drawer to the desk.


1. Pull the internal part of the Slide (E-1) out.
2. Hold the drawer upright and insert the Extension Slide (E-2), aligning with the slide's internal part (E-1).
3. Slide the drawer into place. The first slide inward can sometimes push harder, but once the tracks are engaged, the drawer should slide in and out smoothly.

STEP 9



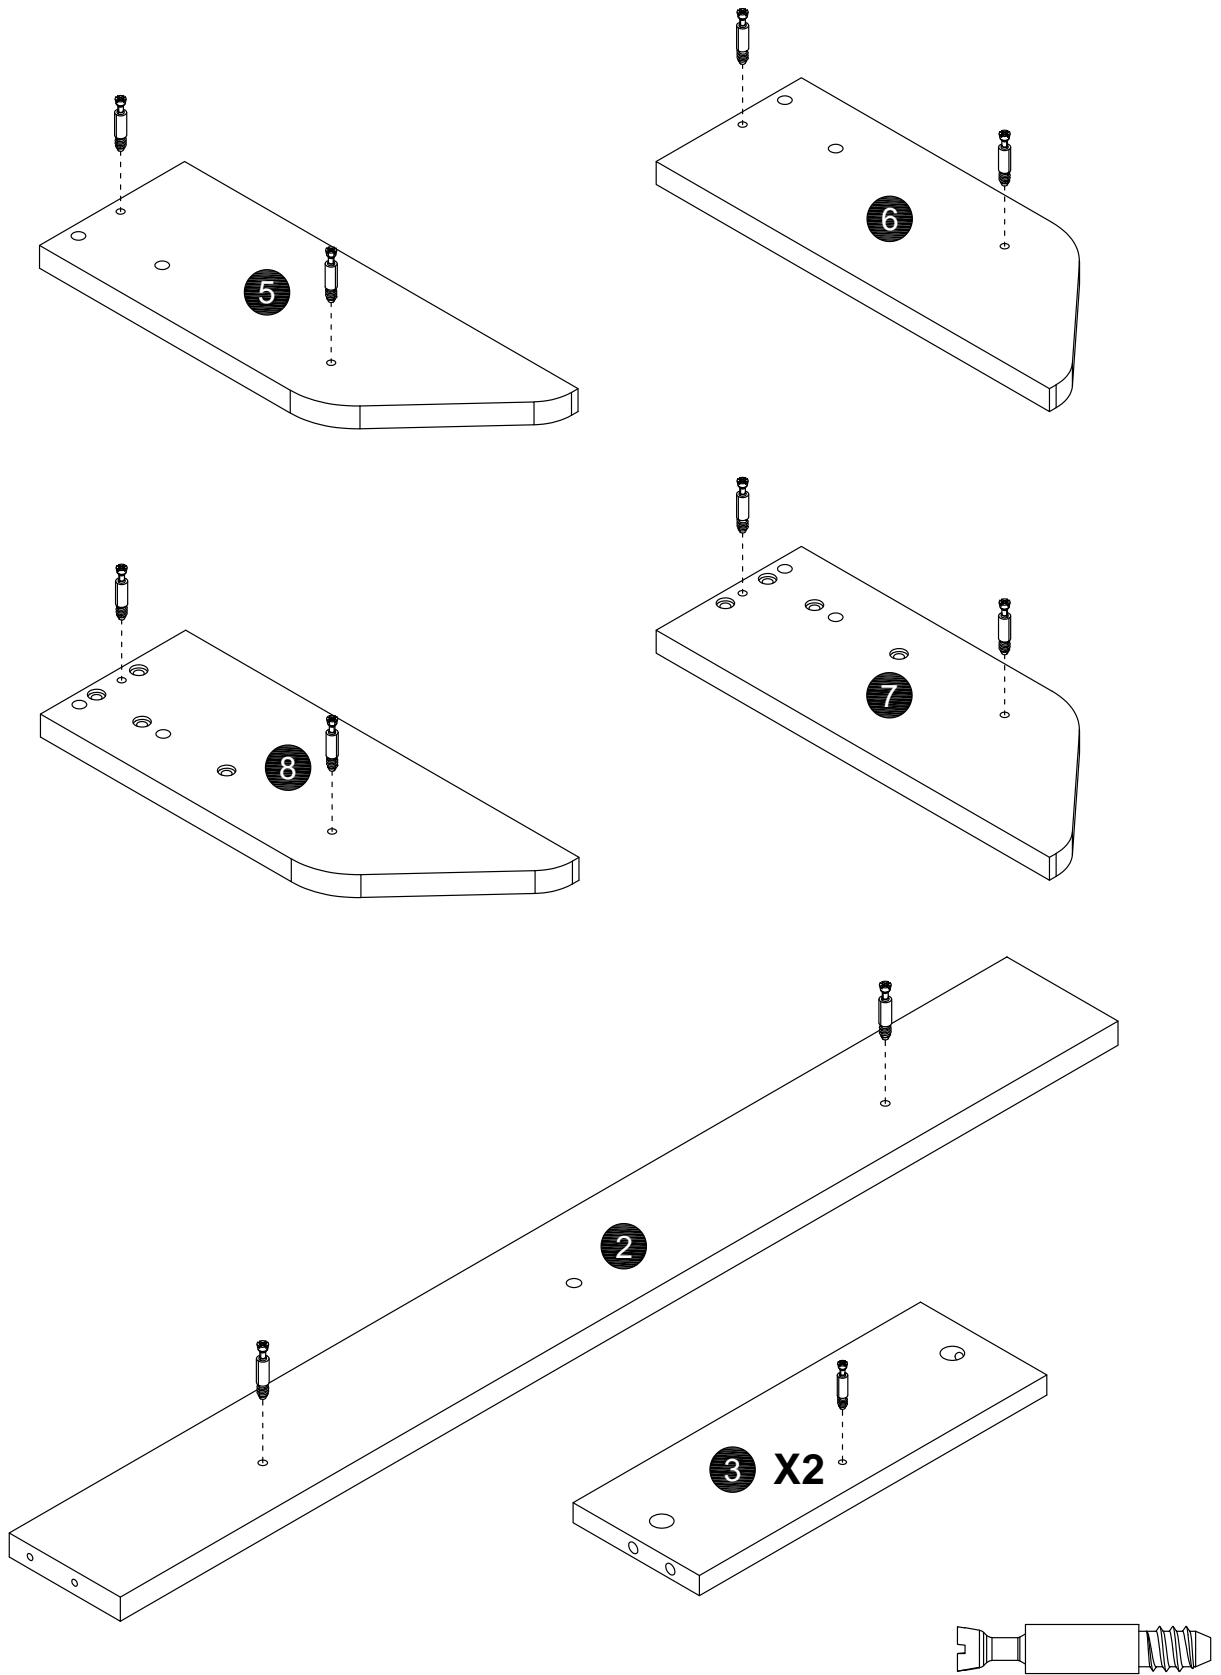


B.CAM SCREW - 12

STEP 10


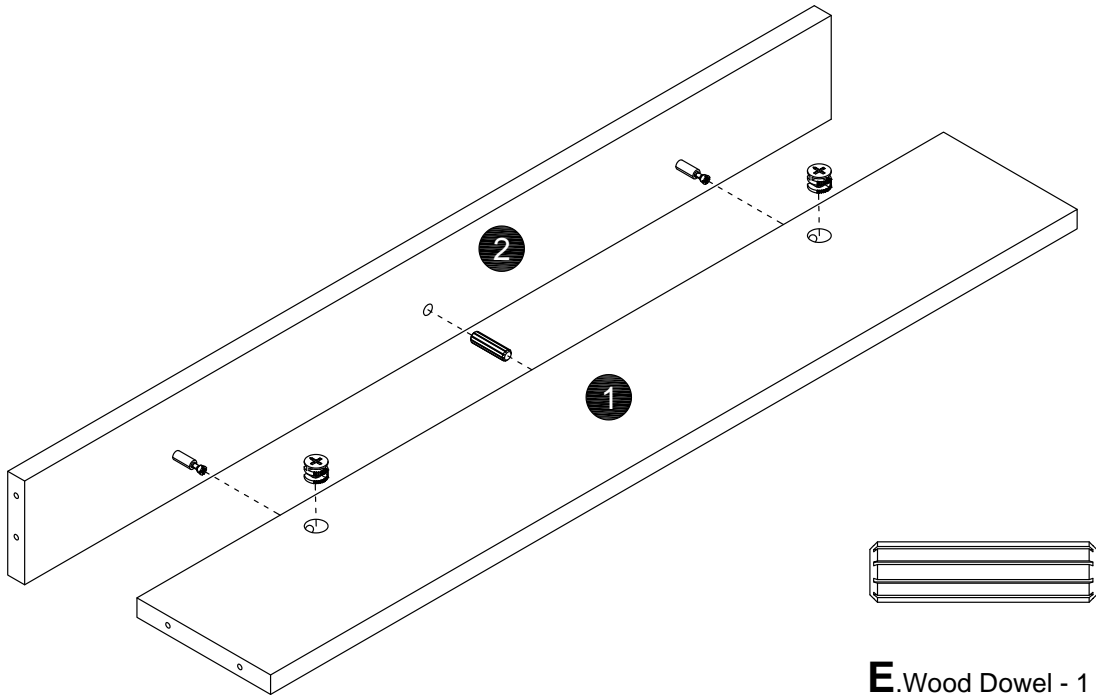


E. Wood Dowel - 1



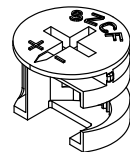
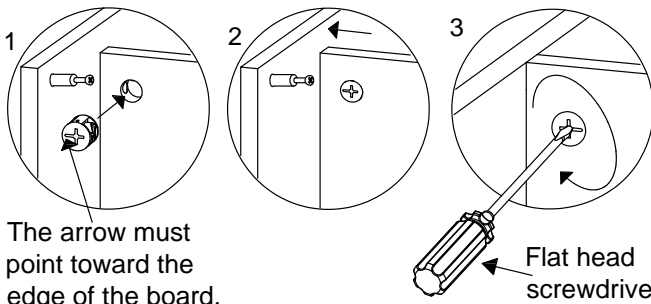
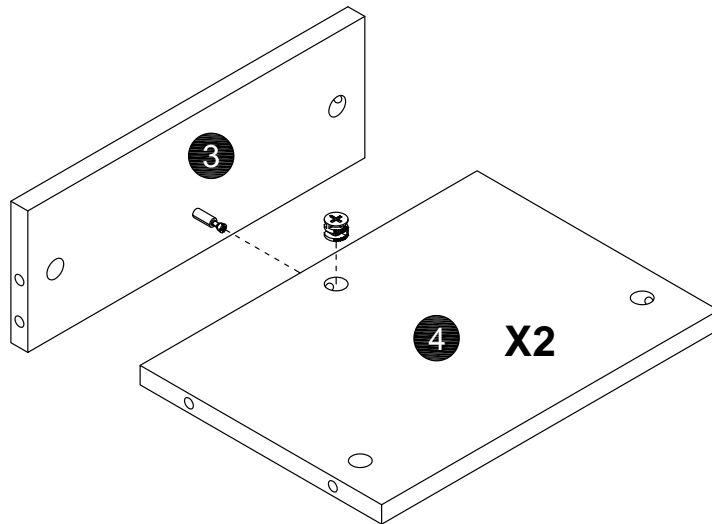


A. Cam Lock - 4

STEP 11

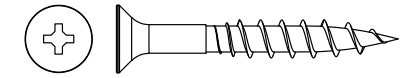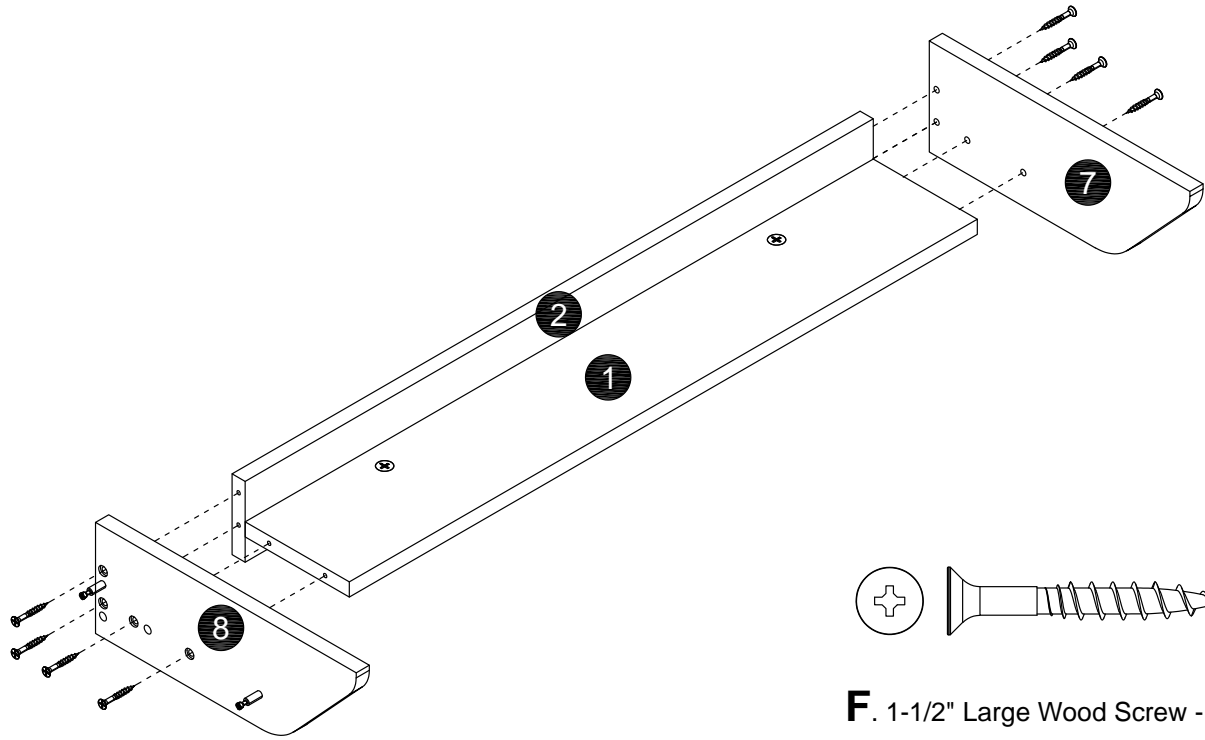


F. 1-1/2" Large Wood Screw - 8

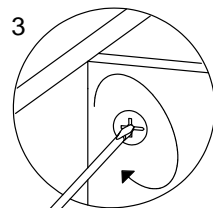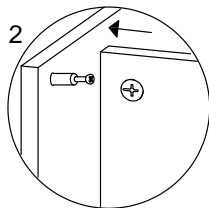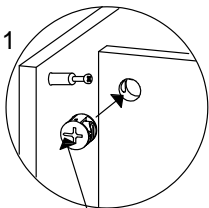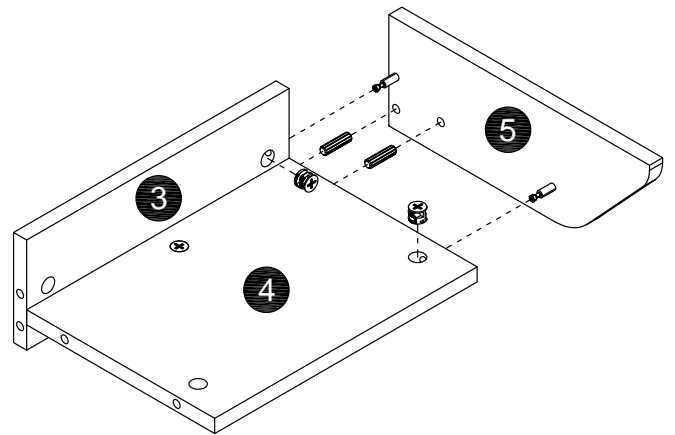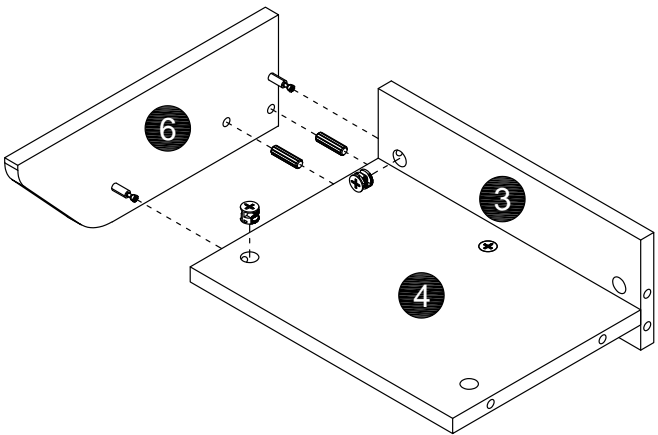

The arrow must point toward the edge of the board.

Flat head screwdriver



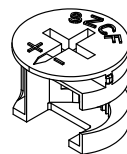


A. Cam Lock - 4



E. Wood Dowel - 4

STEP 12

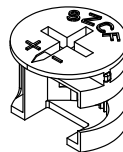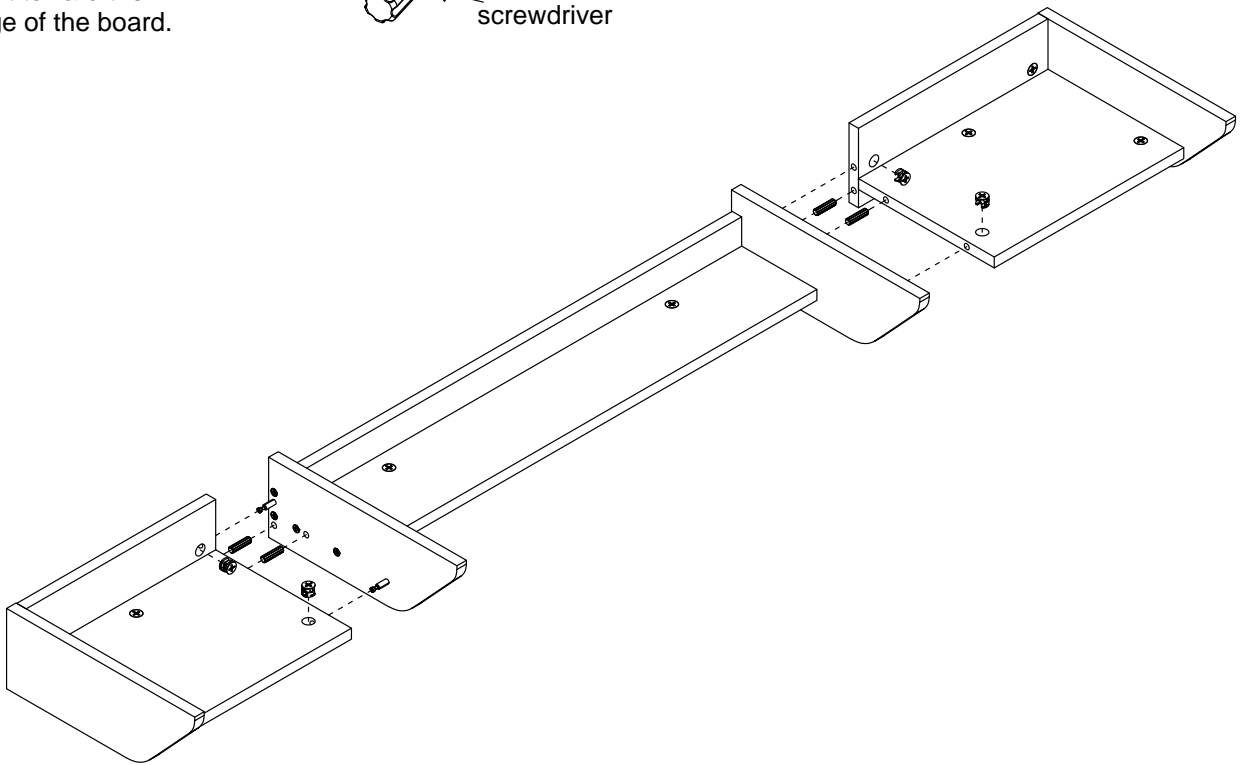
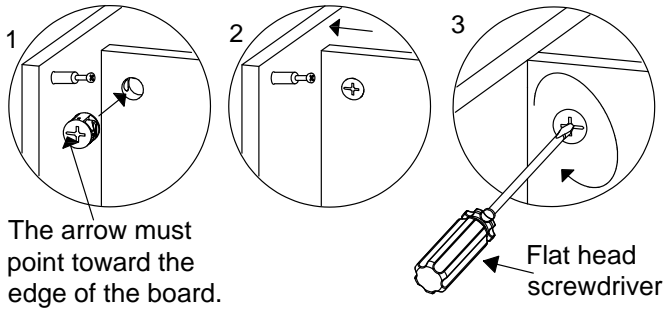


A. Cam Lock - 4




E. Wood Dowel - 4

STEP 13

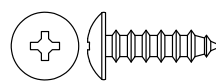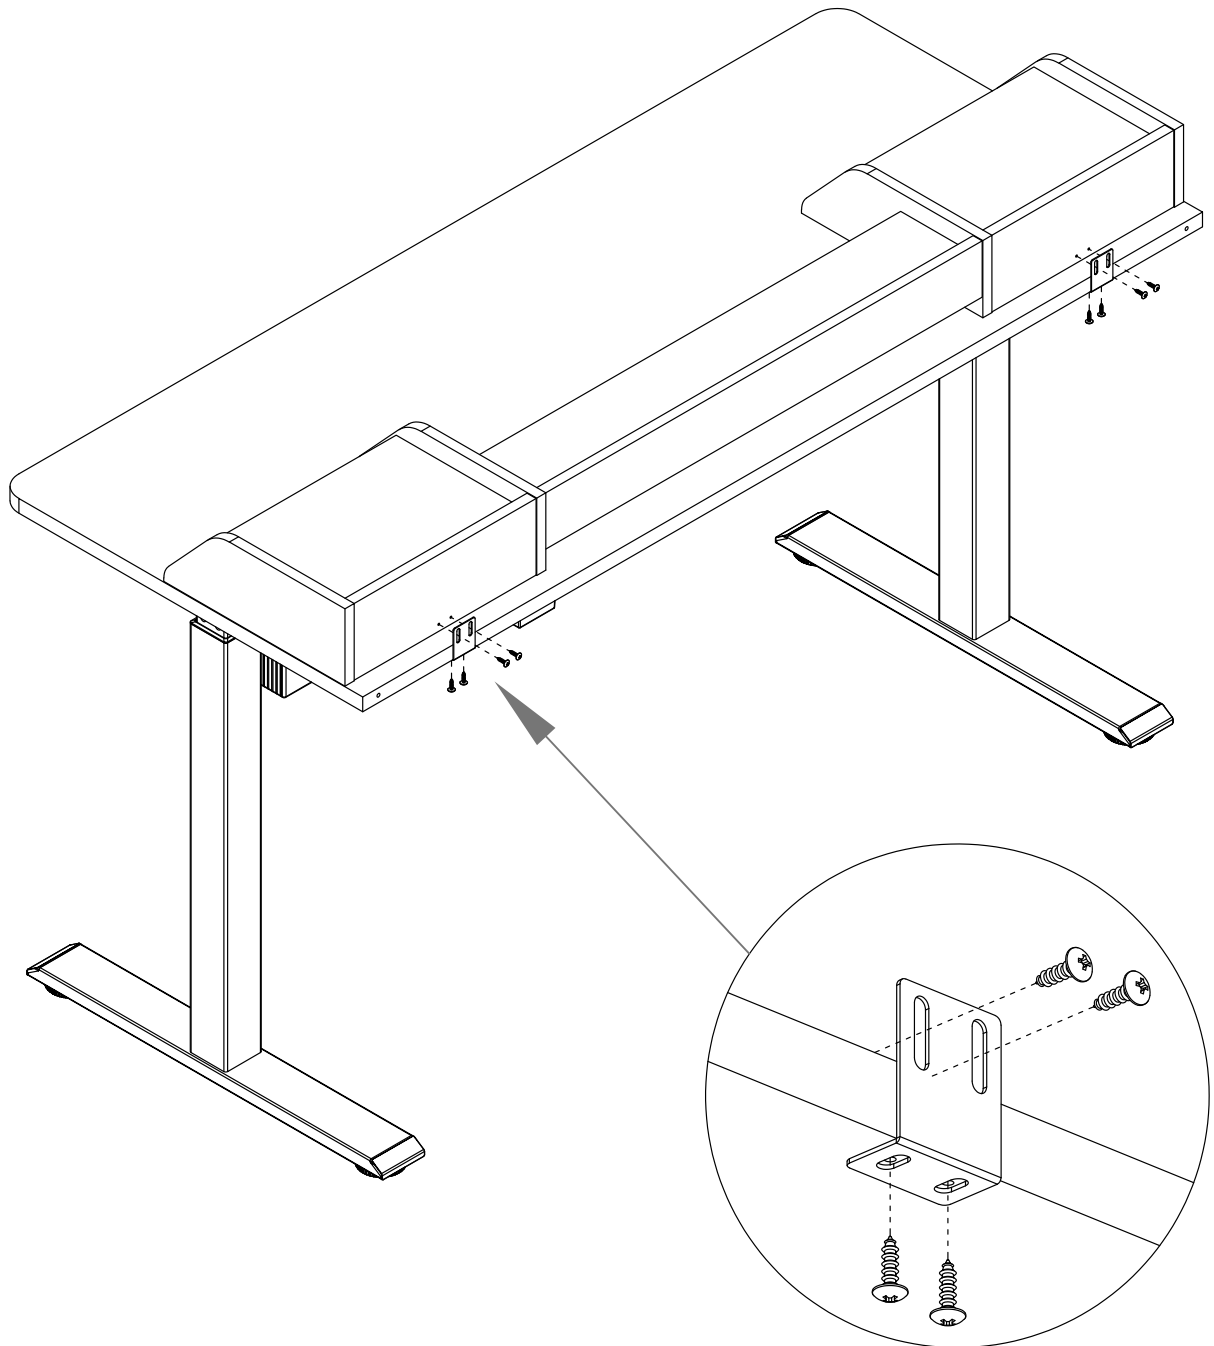

D. 1/2" Large Wood Screw-8

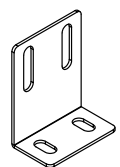

L. L Shaped Bracket - 2

STEP 14

