



## Kegeerator Assembly

Identifying your parts, this system contains 7 basic parts


- 1) Kegeerator Tower
- 2) Faucet
- 3) Regulator
- 4) Sanke D Keg Coupler
- 6) Spanner Wrench
- 7) 4 Hose Clamps (2 Extra)

### Tools Needed

- 1) Large Adjustable wrench
- 2) Pincers or straight handled wire snips

### Step 1 – Installing Kegeerator Tower


- Remove the large flat washer, rubber washer, and the mounting nut from the tower. Put your hose and tower mounting shaft through the hole on the top of the Kegeerator. Attach from the inside of the unit: the large flat washer, rubber washer, and mounting nut.
- Hand tighten your mounting nut.
- With a Large Adjustable Wrench gently tighten mounting nut.  
\*should not be more than a quarter of a turn. \*

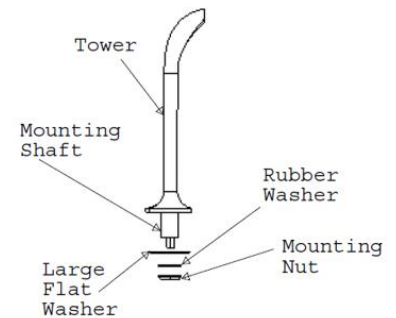

**\*NOTE: Tower should be firm against the kegeerator with no movement.**

### Step 2 – Installing the Faucet


- Place the faucet collar onto the faucet  
\*With Wrench Spanner provided, make sure faucet is tight to threaded shank. \*
- Screw faucet into tower by hand until faucet head is straight.
- Hand tighten faucet handle onto faucet

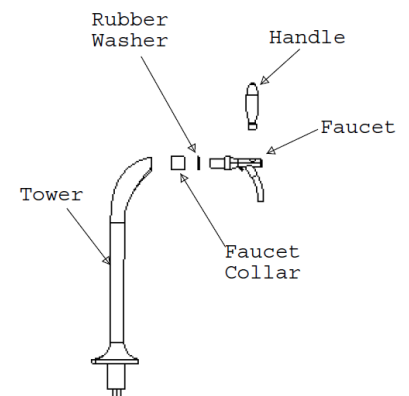


### Step 3 – Connect Beer Line to Sanke D Keg Coupler

- Place rubber washer on top of Sanke D Keg coupler, hand tighten tower hose onto Sanke D Keg Coupler


**\*NOTE: if you find it leaking after step 8 then you can tighten with a wrench. Do not over tighten.**

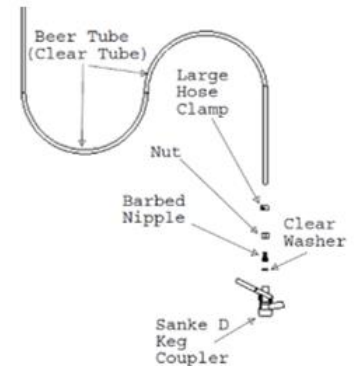

### Step 4 – Connect CO<sub>2</sub> hose to Sanke D Keg Coupler

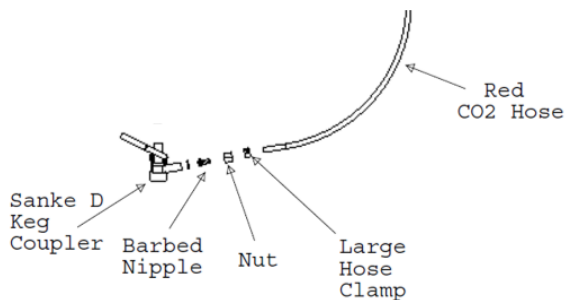


- Place hose clamp on Red CO<sub>2</sub> hose; install red CO<sub>2</sub> hose onto barbed Nipple on the Sanke D Keg Coupler. Then squeeze hose clamp with pincers or wire snips shown below.
- Connect Red CO<sub>2</sub> hose to Sanke D Coupler. Tighten until snug

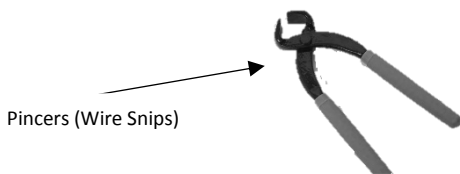

### Step 5 – Connect the Red CO<sub>2</sub> Hose to Regulator

- Place hose clamp on Red CO<sub>2</sub> Hose. Install Red CO<sub>2</sub> Hose onto the Barbed Nipple on Regulator. Then squeeze hose clamp with pincers or wire snips shown above.


**\*NOTE: if you find it leaking after step 8 then tighten with a wrench. Do not over tighten.**

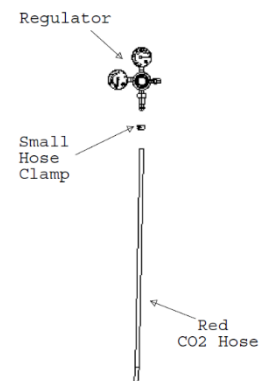

### Step 6 – Install Regulator


- With a charged/fill CO<sub>2</sub> cylinder (only use beverage/ food grade CO<sub>2</sub>) install Regulator to CO<sub>2</sub> cylinder; before tightening make sure the Regulator gauges are in the upright position, so they can be read properly.

**\* NOTE: Then tighten with Large Adjustable Wrench until snug.**

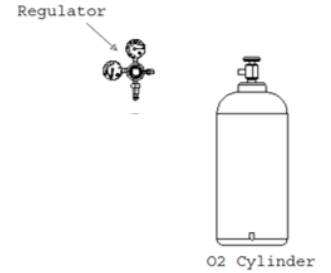

### Step 7 – Tapping the Keg

- Align Sanke D Keg coupler with lugs on keg and rotate clockwise until coupler is in locked position.

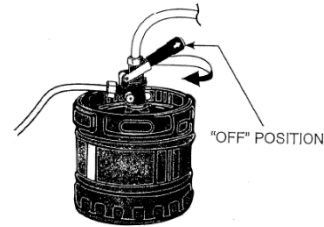


- Pull plastic handle out and push down to switch to the on position (this will lock in position)



### Step 8 – Turning on the CO<sub>2</sub>

- Make sure the yellow valve on the Regulator is in the on position to charge the keg (Parallel with CO<sub>2</sub> line)
- Turn knob on CO<sub>2</sub> tank counter clockwise to turn tank on.
- Use the set screw located in the center of the regulator to begin pushing CO<sub>2</sub> into your keg. Slowly turn set screw clockwise until the top gauge reads "5PSI".

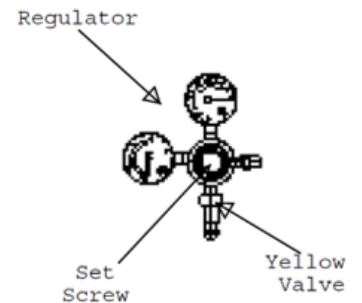

**NOTE: Test for leaks at each fitting, with soap and water mixture for CO<sub>2</sub> leaks.**

Once you have determined there are no leaks in the CO<sub>2</sub> and Beer lines you are now ready to pour.