











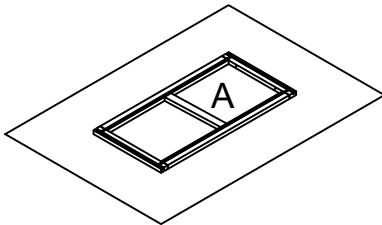


Wall Cabinet Assembly Instruction
(Item:W391224-W481224 / W391524-W481524/ W391824-W481824)


Hard Ware List			1	4PCS	Ø4×25mm	2	8PCS	Ø4×16mm	3	4PCS	Ø4×19mm	4	4PCS	1-1/4"
			Flat head screw			Flat head screw			Round head screw			Hinge		
														
5	32PCS	Ø4×12mm	6	8PCS		11	4PCS							
Flat head screw			Corner brackets			Bumper								
														

Cabinet Parts List	A	Frame	B	Side panels(2)	C	Top panel & Bottom panel(2)	D	Back panel	E	Door(2)
										


Step1: Lay flat on the cardboard with the back of the front frame facing up.




Step2: Insert the 2 side panels into the front frame.

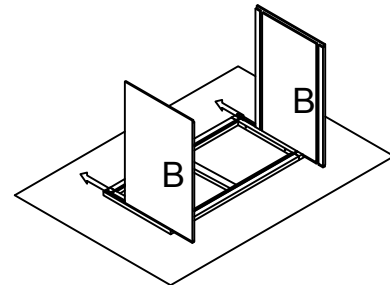


Step3: Insert the top and bottom plate between the two side panels.

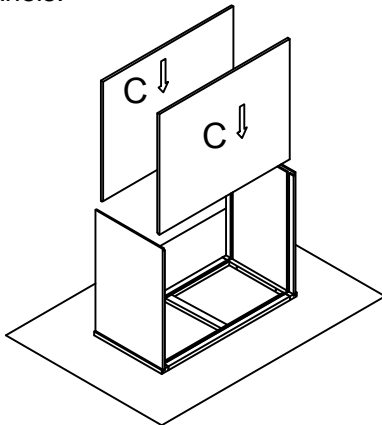


Step4: Insert the back panel between the side panels.

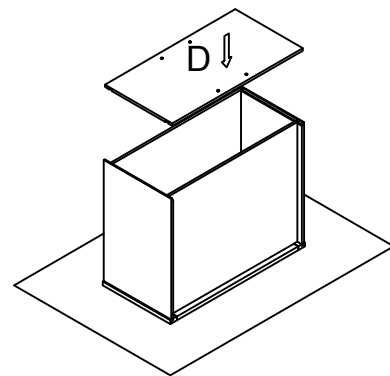

Step5: Use Φ4*25 flat head screws to lock into the back panel.

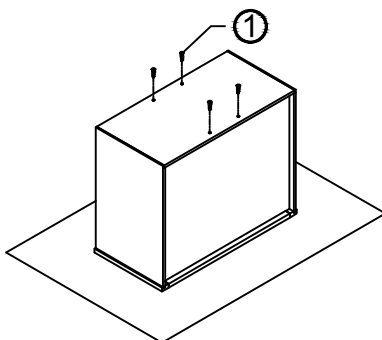


Step6: Use Φ4*12 flat head screw and Corner brackets to fix the side panel and front frame, and fix the side panel and back panel.

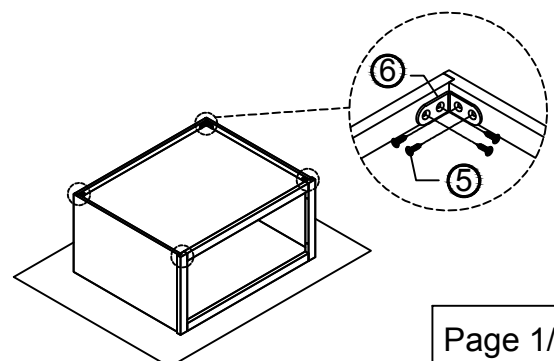

Wall Cabinet Assembly Instruction
(Item:W391224-W481224 / W391524-W481524/ W391824-W481824)

Step7: Fix the 4 hinges on the door panel with $\Phi 4 \times 16$ screws, and fix the other side of the hinge on the front frame with $\Phi 4 \times 19$ round head screws. Glue the bumper to the door panel.

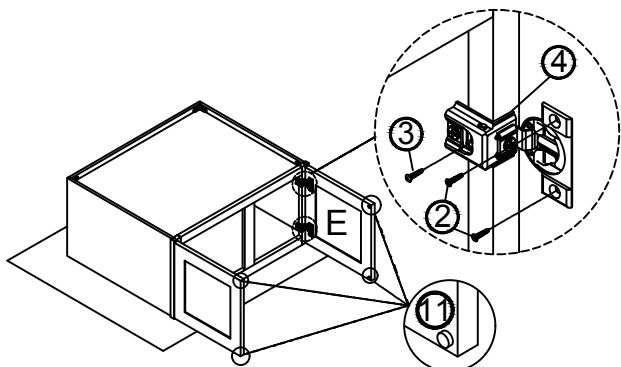

Step8: The product assembly is complete.

