




NORTHERN KENTUCKY CEDAR, LLC

Cube System Assembly

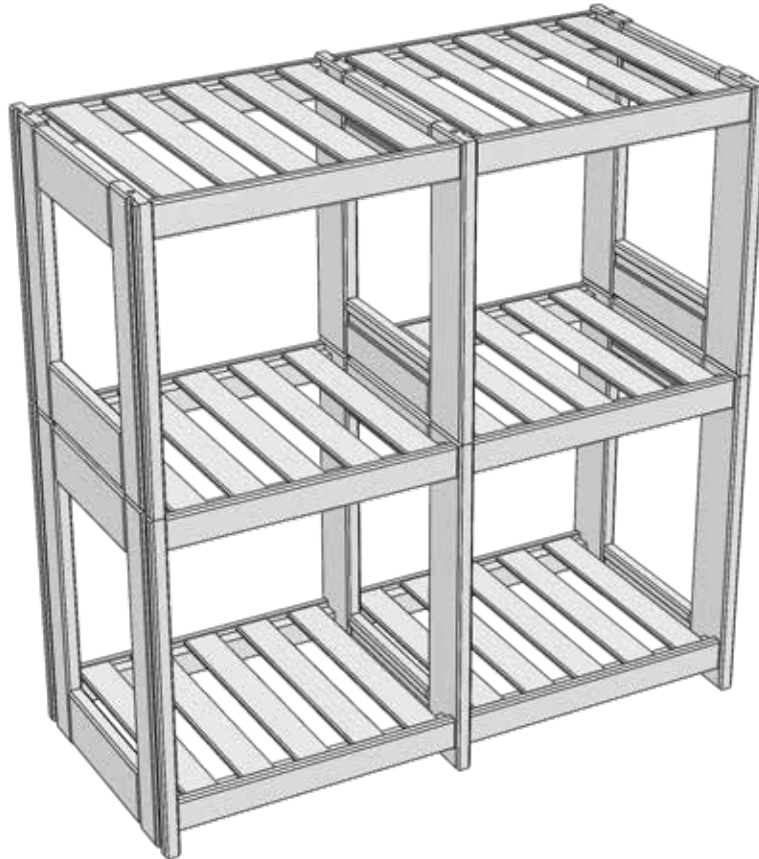

1. Use caution when assembling this unit. Excessive weight will cause damage to the unit. Serious or fatal injuries may occur from the unit falling if not properly fastened to the wall.
2. Products that are instructed to be fastened to the wall must either be connected to a stud or by drywall anchors (not included).
3. This unit is installed faster and much easier with the help of others.

For Support:

Call toll free 855.239.9498 or 606.742.2745 Email - sales@northernkycedar.com

Once your unit is complete, we would love to see it! Send us pictures at our Email!

Thank You For Your Purchase

Because this system is based around the concept of individuality, this system can be used in conjunction with any Northern Kentucky Cedar, LLC product. The different ways are limited only by your imagination, and as such, not all components have to be used during installation.

To ensure a proper and easy installation, thoroughly read and follow this document. Basic carpentry skills will help.

This system is designed for clothes, linens, and pantry items. Placing excessively heavy items in your closet may lead to structural failure.

Knots, checking, and light cracks are typical characteristics of Aromatic Red Cedar and do not warrant a cause for exchange or refund.

If scent wears off, lightly sand with a fine sandpaper to revitalize scent.

If you purchased a cubby add-on please refer to the instructions included with that unit before assembling anything. Special steps must be completed prior to installing this unit.


Tools you will need



Safety Glasses



Stud Finder

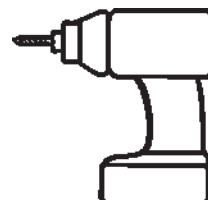


- 1/16" Drill Bit
- 1/8" Drill Bit
- #2 Square Bit

CBSCUBC14/CBVCUBC14: Base Cube Unit (per cube bought)

Your Kit Will Include

(x2) 18" Cube Panels

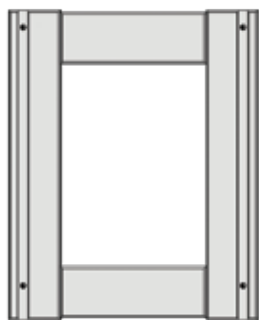

(x2) 15" Pre-Drilled Shelves [Ordered Style]




Hardware:
C1 - (x8) 2" Screws



CBSCUVC14/CBVCUVC14: Vertical Cube Unit (per cube bought)


(x2) 15" Cube Panels

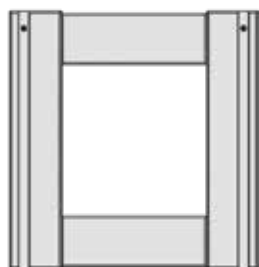

(x1) 15" Pre-Drilled Shelf [Ordered Style]




Hardware:
C1 - (x4) 2" Screws
D1 - (x1) 3" Screw

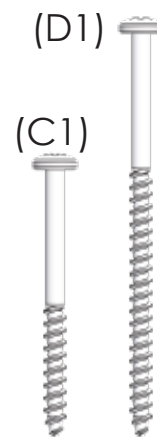

CBSCUBA14/CBVCUBA14: Base Cube Add-On (per cube bought)



(x1) 18" Cube Panels

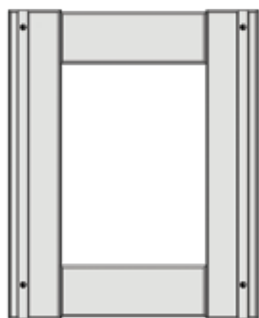

(x2) 15" Pre-Drilled Shelves [Ordered Style]




Hardware:
B1 - (x4) 1" Screws
C1 - (x4) 2" Screws
F1 - (x4) L-brackets

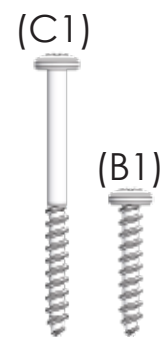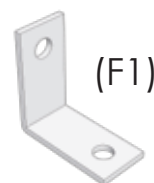

CBSCUVA14/CBVCUVA14: Vertical Cube Add-On (per cube bought)



(x1) 15" Cube Panels

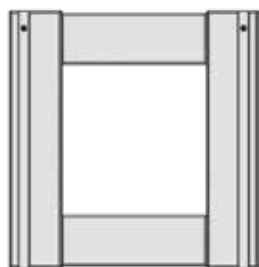

(x1) 15" Pre-Drilled Shelf [Ordered Style]



Hardware:
B1 - (x2) 1" Screws
C1 - (x2) 2" Screws
D1 - (x1) 3" Screw
F1 - (x2) L-brackets

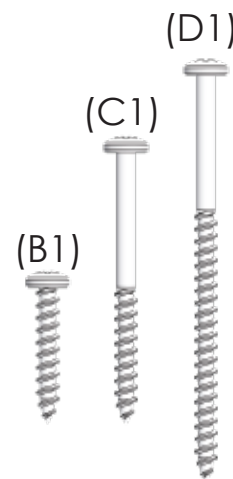
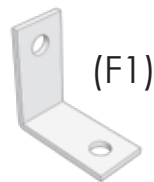


Base Cube Unit Assembly


CBSCUBC14/CBVCUBC14

Attach the 18" panel sides to the 15" shelves with 2" screws (C1) as shown.

(Note: the holes on the top of the panel are closer to the edge than the holes at the bottom are.)

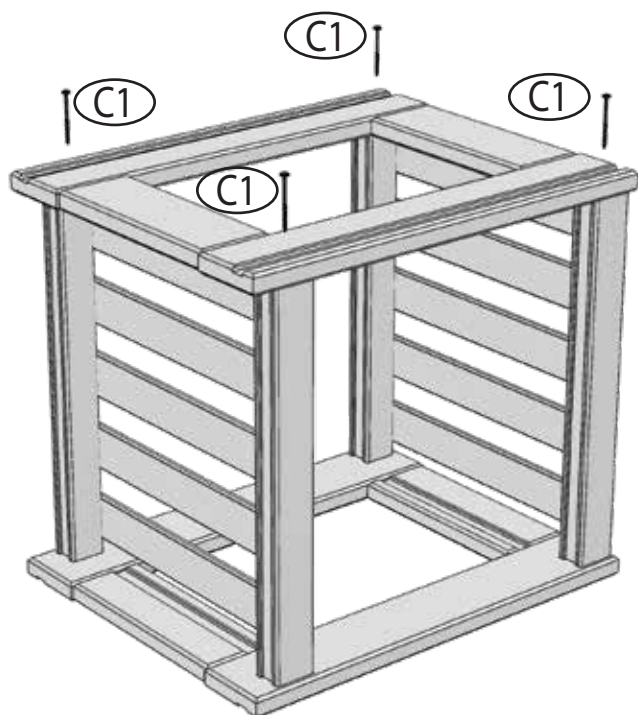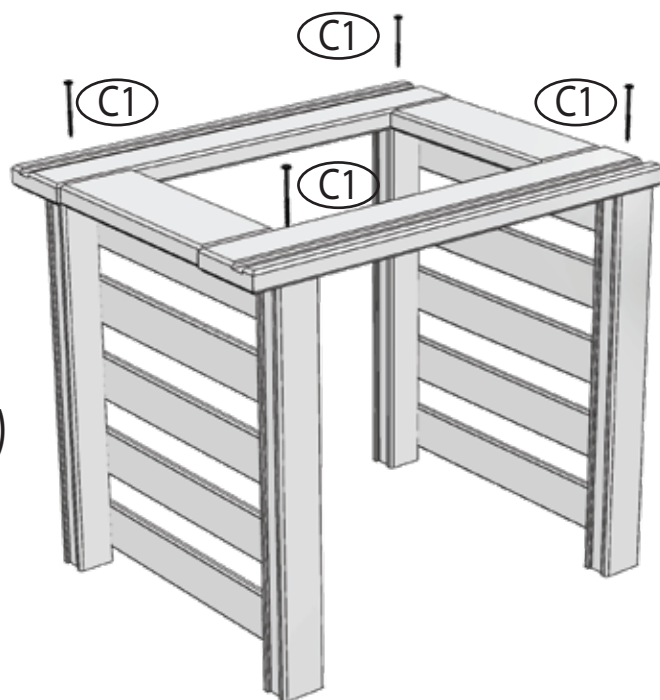



If you are adding any Add-On cubes then read pg 6 before attaching the second side.

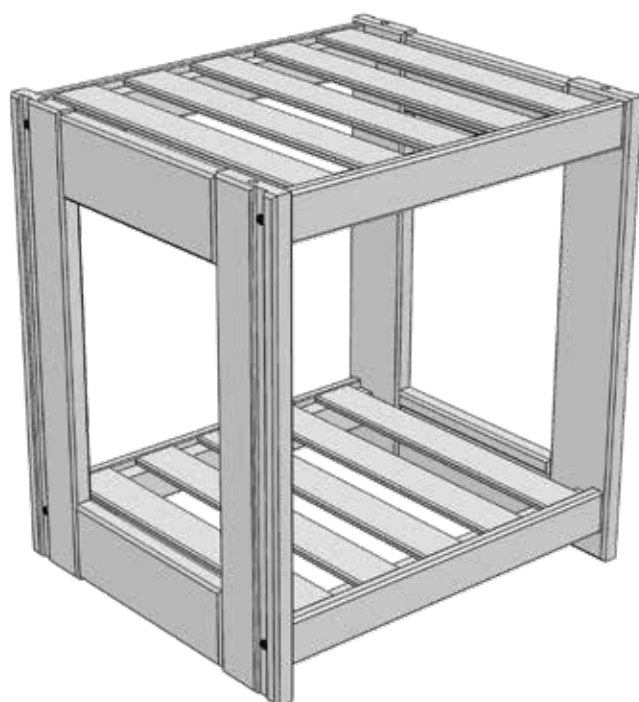

This is the starting point where the other cubes will attach to making your cube system.

Attach the 15" panel sides to the 15" shelf with 2" screws (C1) as shown.

If you are adding any Vertical Add-On cubes make sure to read pg 7 before attaching the second side.

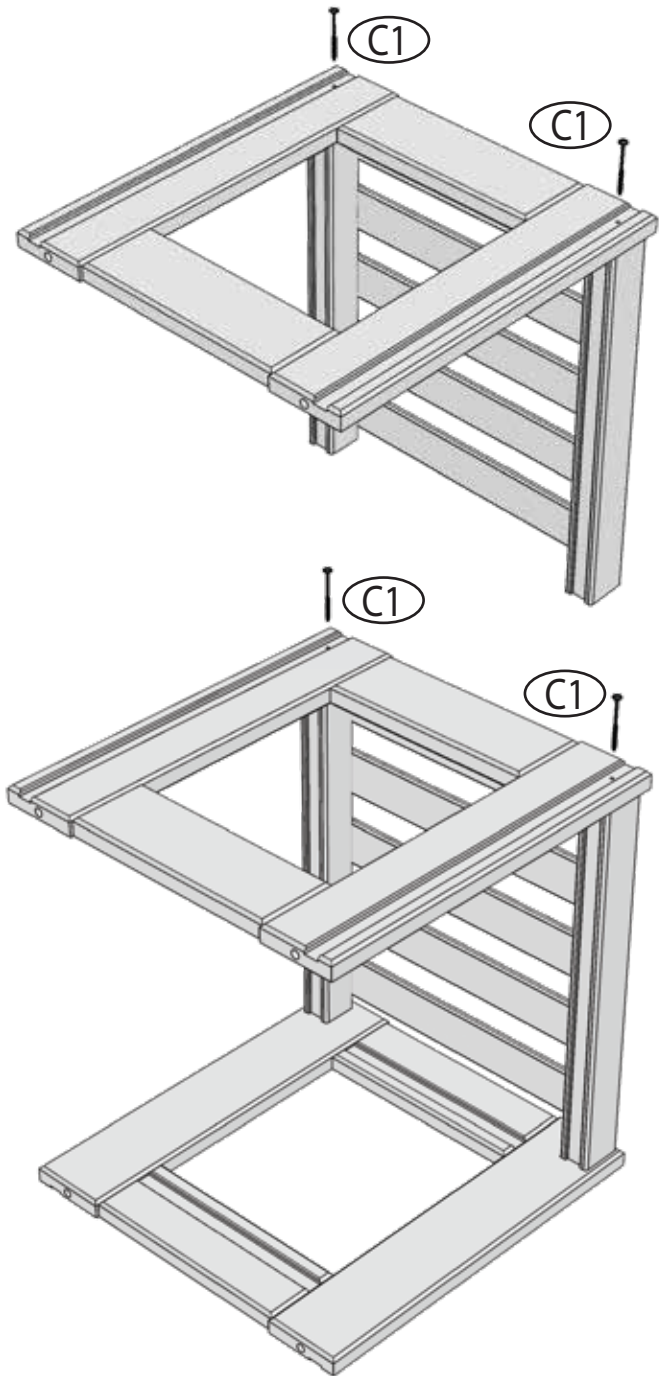
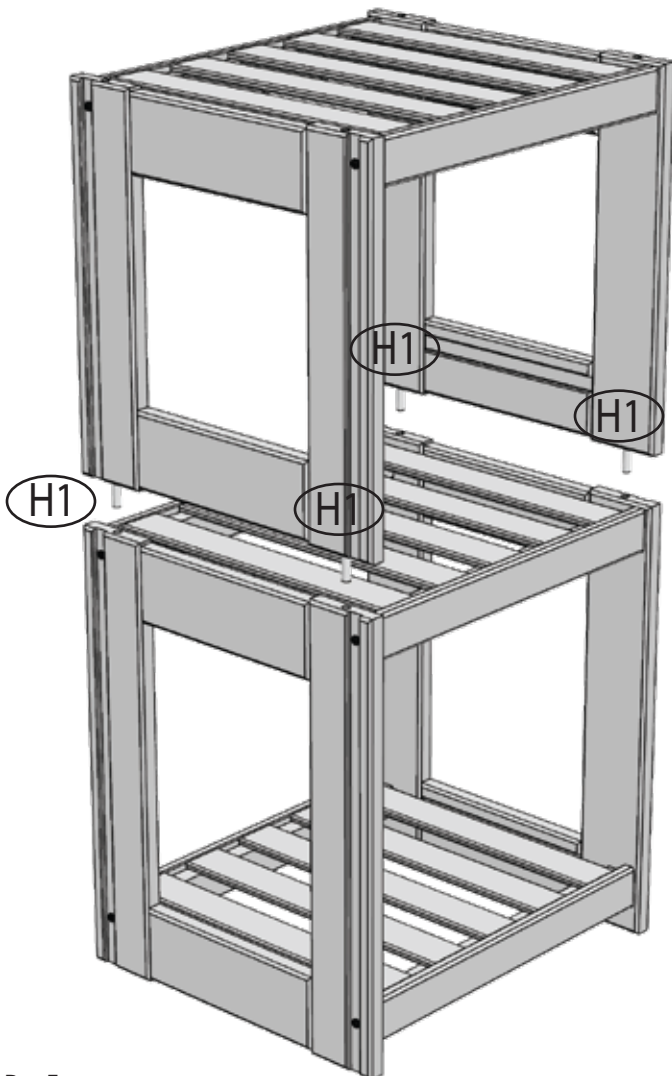


The Vertical Cube Unit will sit on top of the base unit or another vertical cube unit using the 4 dowels (H1) provided.

(the 3" screw (D1) is only used if you have 3 or more cubes stacked as shown on pg 8.)


Step 1:

Take out the 2" screws (C1) from the panel you will be attaching to and add the L-brackets on.

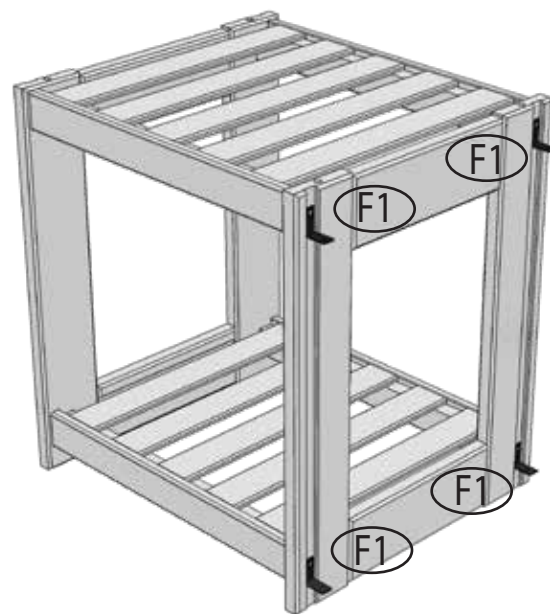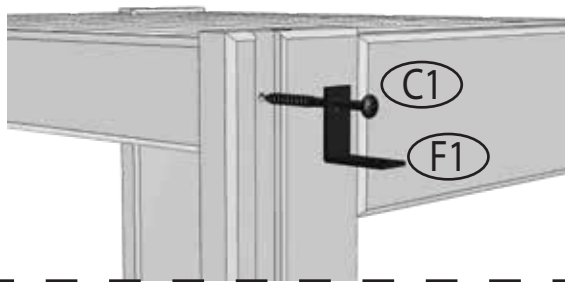



Step 2:

Assemble the Base Add-On cube by attaching 2 15" shelves to a single 18" panel.

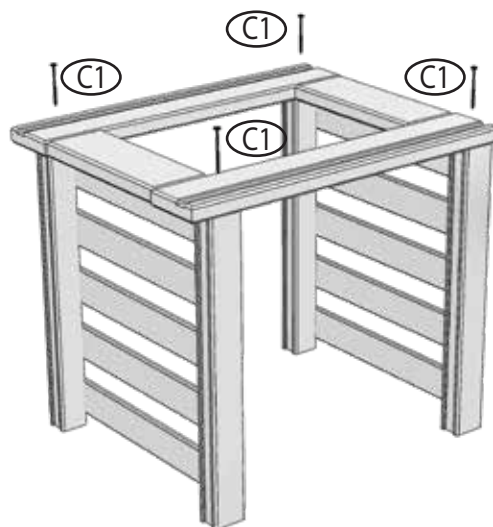


Step 3:

Attach the Base Add-On cube to the L-brackets using 1" screws (B1).

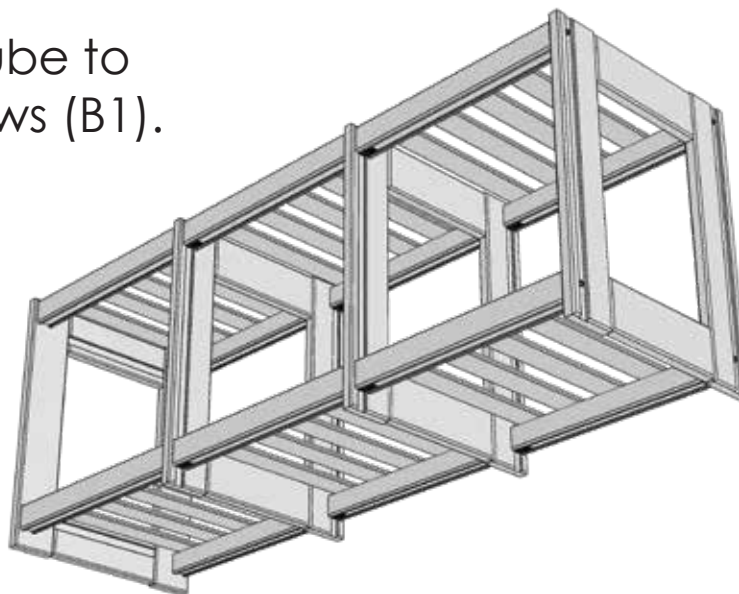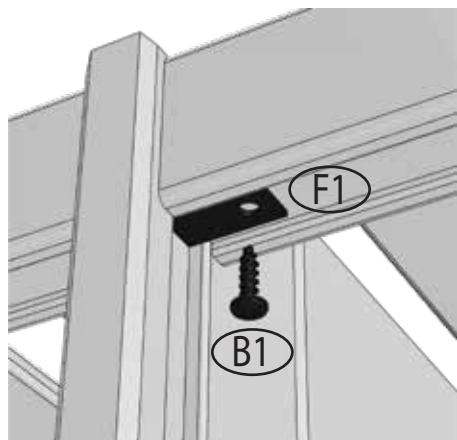


Step 1:

Take out the 2" screws (C1) from the panel you will be attaching to and add the L-brackets on.

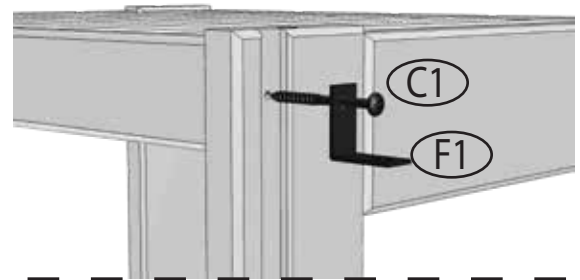


Step 2:

Place the 15" Panel onto the panel below it using the 2 provided dowels (H1).

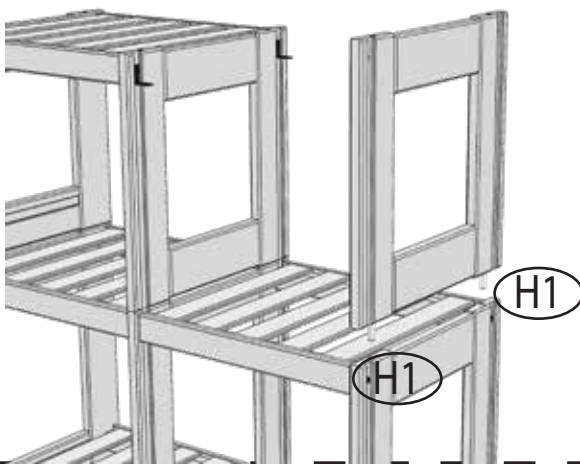



Step 3:

Attach the shelf to the panel using 2" screws (C1) while the shelf is resting on L-brackets (F1).

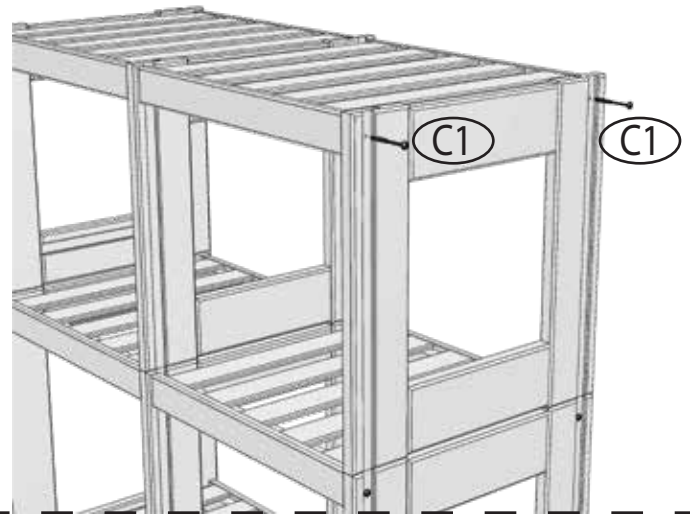

Step 4:

Attach the Vertical Add-On cube to the L-brackets using 1" screws (B1).

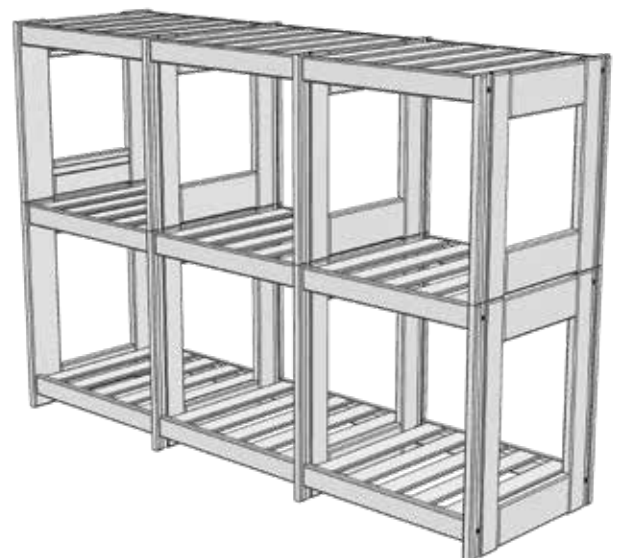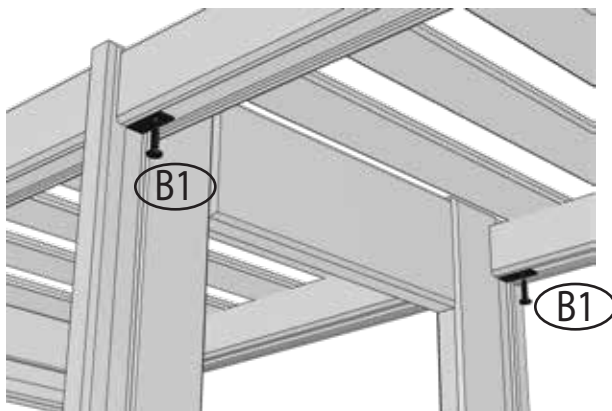

Attachment to a wall if needed.

All Vertical cubes and Vertical Add-On cubes come with a single 3" screw (D1). If the Cube System is 3 cubes tall or more, use the provided 3" screws (D1) to secure the top left and top right shelves to the wall with a stud finder as needed.

