

INSTALLATION INSTRUCTIONS

RAM 1500 DT FUSE BRACKET INSTALLATION PROCEDURE

NOTE: FAILURE TO INSTALL THIS PRODUCT AS SPECIFIED IN THE INSTALLATION PROCEDURE WILL VOID ALL WARRANTY. IF ANY PARTS HAVE ARRIVED DAMAGED OR WERE NOT SUPPLIED IN THE KIT, PLEASE TAKE PHOTOS AND THEN PROCEED TO CONTACT YOUR SUPPLIER.

IN THE BOX

- 1 x Fuse Panel Mounting Bracket
- 1 x Fuse Panel Bracket
- 1 x Bolt kit

TOOLS REQUIRED

- Ratchet/electric ratchet
- Trim Removal Tool
- Various sized sockets
- Various sized spanners
- Allen Keys



**OVERLANDING
THE AUSSIE WAY**



NOTE: FAILURE TO INSTALL THIS PRODUCT AS SPECIFIED IN THE INSTALLATION PROCEDURE WILL VOID ALL WARRANTY. IF ANY PARTS HAVE ARRIVED DAMAGED OR WERE NOT SUPPLIED IN THE KIT, PLEASE TAKE PHOTOS AND THEN PROCEED TO CONTACT YOUR SUPPLIER.

1

Start by removing the 2 plastic clips on the LHS of the vehicle's wiper scuttle panel, these clips can be discarded as they are not needed.

Refer Image (1 and 2)




2

2.1

Identify the fuse panel mounting bracket and manoeuvre it into place to line up the holes with the previously removed clips.

Refer Image (3)

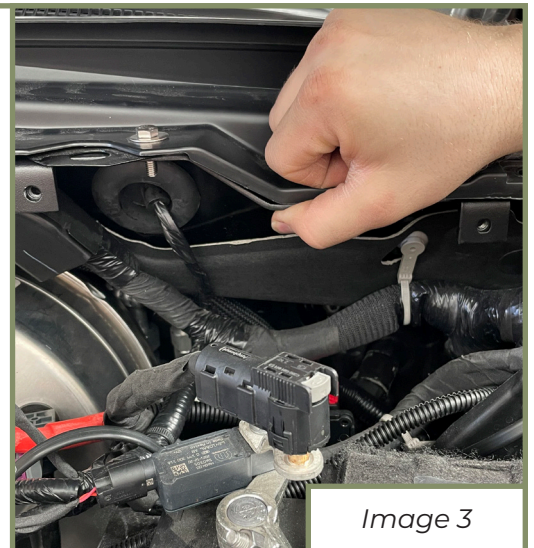

NOTE: FAILURE TO INSTALL THIS PRODUCT AS SPECIFIED IN THE INSTALLATION PROCEDURE WILL VOID ALL WARRANTY. IF ANY PARTS HAVE ARRIVED DAMAGED OR WERE NOT SUPPLIED IN THE KIT, PLEASE TAKE PHOTOS AND THEN PROCEED TO CONTACT YOUR SUPPLIER.

2.2

Loosely fasten the bracket to the scuttle using the supplied M6 hex head bolts, washers and lock nuts in both mounting holes.

NOTE: Ensure that the large washers are located on top.

Refer Image (4 and 5)

2.3

Tighten both fasteners.



3

3.1

Manoeuvre the fuse mounting panel into place and line up the mounting holes with the captive threads on the previously installed bracket.

3.2 Secure the panel to the bracket using the supplied M6 button head bolts and washers.

(Refer to Image 6)

3.3 Tighten both fasteners.



INSTALLATION COMPLETE!

NOTE: FAILURE TO INSTALL THIS PRODUCT AS SPECIFIED IN THE INSTALLATION PROCEDURE WILL VOID ALL WARRANTY. IF ANY PARTS HAVE ARRIVED DAMAGED OR WERE NOT SUPPLIED IN THE KIT, PLEASE TAKE PHOTOS AND THEN PROCEED TO CONTACT YOUR SUPPLIER.