

## Installation Guide for Farmhouse Sinks


To ensure this product is installed properly, please read these instructions carefully before you begin. ALLORA USA recommends that all products should be installed by a professional experienced installer.

ALLORA USA is not responsible for any damages due to improper installed. Also be sure your installation conforms to local codes.


Before installing the sink, inspect it for damage. DO NOT install a damaged unit. Notify your ALLORA USA distributor of any damage. Replace sink its original packing.



NOTE: Specialized tools may be necessary to install Allora USA Porcelain Topmount sinks depending on drain and faucet specifications.

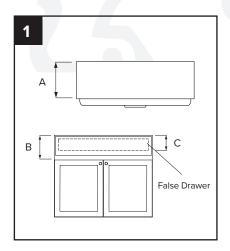


Before starting installation, check the farm sink against the cabinet. Measurement from the top of cabinet to top of doors (B) must be greater than apron height (A). Measurement from the top of cabinet to bottom of false drawer (C) must be less than apron height.

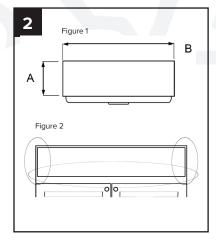

Remove false drawer from the cabinet.

Figure 1. Measure the apron length (B) and height (A). Find the center point on the cabinet face for the sink.

Figure 2. Apply painter's tape to the cutout area. Measure and mark the apron cutout area on the tape with at least three points on each side, then connect them with a straight edge.

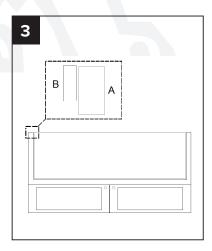

Cut the cabinet front along the outline, remove the painter's tape, and ensure the sink apron fits flush with the cabinet's top when installed.

Top of sink (A) must be flush or slightly lower than cabinet (B).

## Installation Guide for Allora USA Farmhouse Sinks


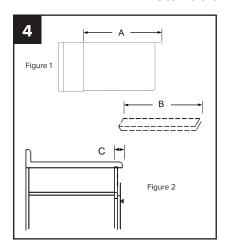



Figure 1. Measure the sink from the back edge to the rear of the apron (A). Cut two supports (B) 1/2 inch shorter than this measurement.

Figure 2. Determine the apron overhang (C). Match to the cabinet doors' overhang. It should not exceed 1-1/2 inches.

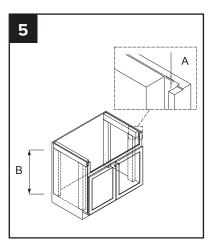


Mark the supports placement, ensuring that the sink rim is level or slightly below the cabinet top (A). Attach the horizontal supports using wood screws and adhesive. Ensure they are level.

Measure from the bottom of the horizontal supports to the cabinet's bottom. Cut four vertical supports to this size and install them using adhesive and wood screws.

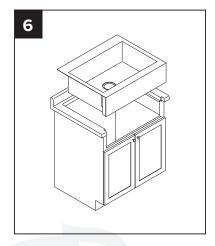


Place the sink on the supports, making sure it's level, and use shims as needed.


Take the sink back off, apply a bead of silicone on the top edges of the horizontal supports. Lower the sink onto the support framing, positioning it according to your desired location and apron overhang.

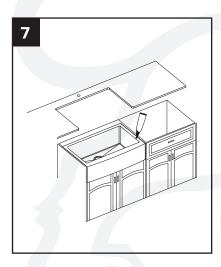

Measure and cut the countertop using the provided template. Mark and pre-drill clip locations on the sink's rear edge. Install the clip anchors. Apply silicone on the sink rim where the countertop will rest. Install the countertop onto the cabinet.

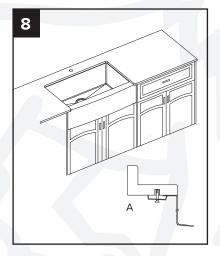

Verify that the countertop cutout is aligned with the sink. Securely tighten the clips on the sink's back edge (A). Clean any excess silicone.

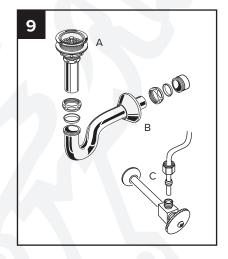

Install faucet and strainer according to manufacturer specifications.

Connect P-trap (B) to strainer (A). Connect water supply lines to faucet (C). Run water to check sink for leaks.

## Need help?

For technical assistance or replacement parts, please contact Allora USA Customer Service and one of our representatives will be happy to assist you:

Call 571-291-3484 or email Customerservice@allorausa.com



Scan the QR code to register your Allora USA product today!