



# KAWASAKI

360 PRAIRIE TO 650 BRUTE FORCE 4X4i

Thank You for considering or buying the SawGrip ATV Chainsaw Carrier  
[info@sawgrip.com](mailto:info@sawgrip.com)

## INSTALLATION


Install SawGrip on front rack using appropriate holes for your specific machine. ( Fig. 1 ) Line up front of SawGrip flush with front of ATV front tube. ( Fig. 2 ). A 5/16" hole will have to be drilled in the center of rails for the 450 and 660 rack rails. NO drilling necessary for 550 and 700. Mount SawGrip to the rack using the 5/16" bolts, flat washers and lock nuts provided. Tighten. ( Fig 3 )

**EXCESSIVE** tightening will break the UBolts.

## SET RESISTANCE

After the SawGrip is bolted to the ATV rack, open the bar clamp enough so chainsaw bar will go between the rubber pads. Tighten the 2 bottom lock nuts leaving about 1/8" or less gap. (FIG 4) then tighten top T-handle until snug. Pull on saw. If the saw moves easily in or out you may have to tighten the bottom 2 lock nuts more. Once the right tension is applied you can put the saw in or out by just loosening the top T-handle. No other tightening should be needed to the 2 bottom nuts. It is recommended to remove saw from the SawGrip before transporting ATV on trailer or any other means of transportation. If long trips are planned with your ATV we suggest you tighten the top T handle securely so that the saw is held firmly.

**Total chainsaw length must not exceed the width of the ATV.**

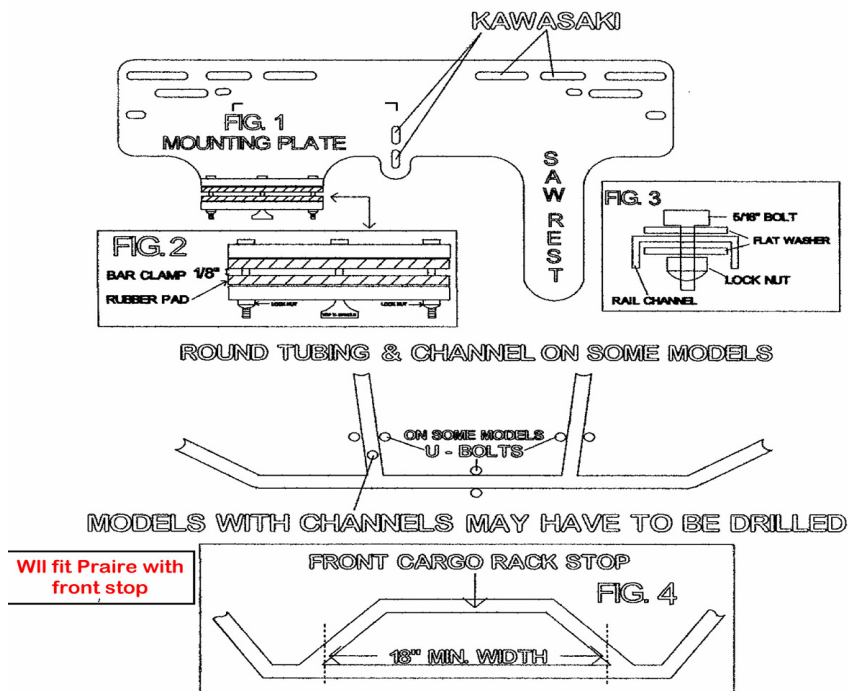

Will fit Prairie with front stop