




Eezi-Awn Swift



P.O. Box 68323, Bryanston 2021.
200 Cussonia Park, 3 Ridge Road,
Laser Park, Honeydew, South Africa.
Tel: (011) 794-6311 • Fax: (011) 794-6233


OPERATING INSTRUCTIONS

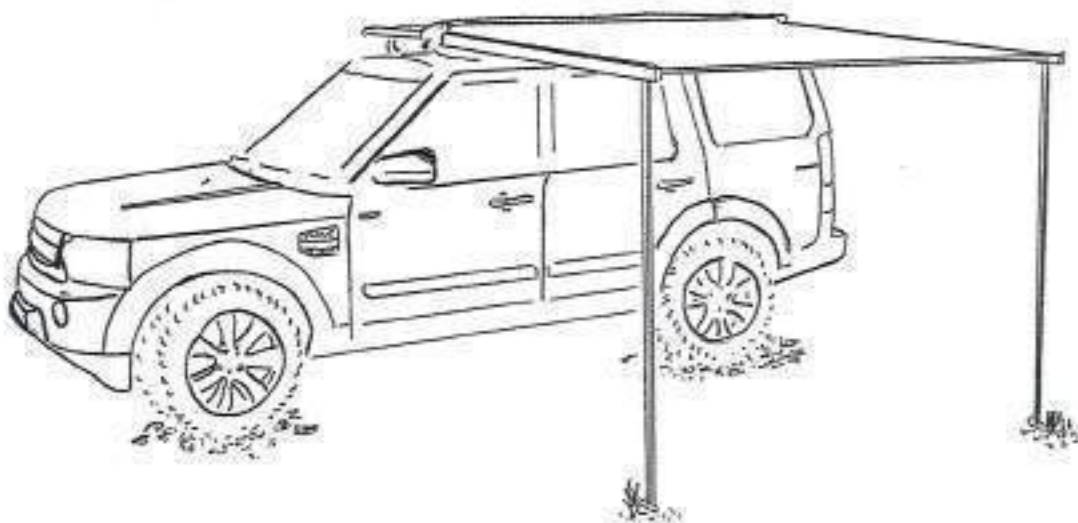


HELPFUL HINTS

1. Periodically clean the fabric with water. (Let the fabric dry before rolling it up. This also helps prevent mildew.)
Cleaning is especially important prior to storing the awning for long periods of time to prevent mildew and stains.
2. Use paraffin wax on Support Arms and Rafter Arms for smoother sliding movement.


TO OPEN

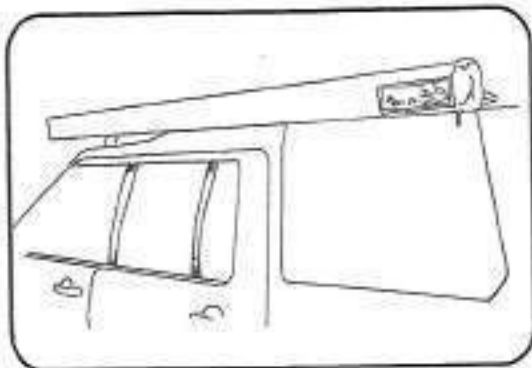


SWIFT in closed position:

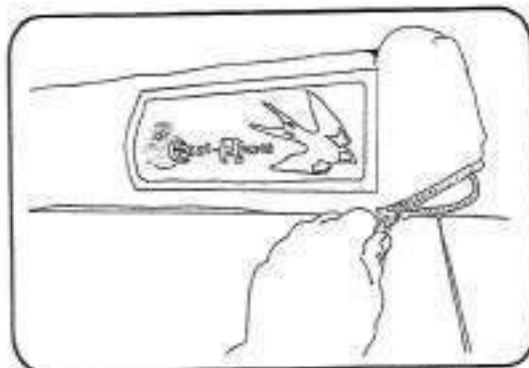


Unzip bag in order to open the SWIFT.

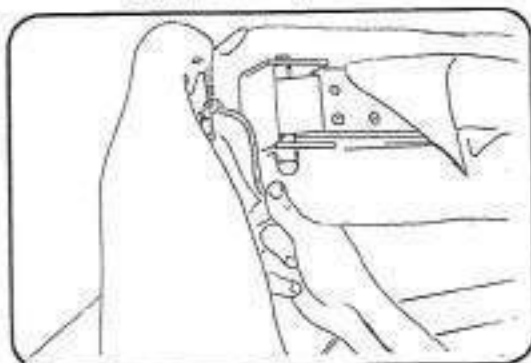


Fold bag back on the hinge side

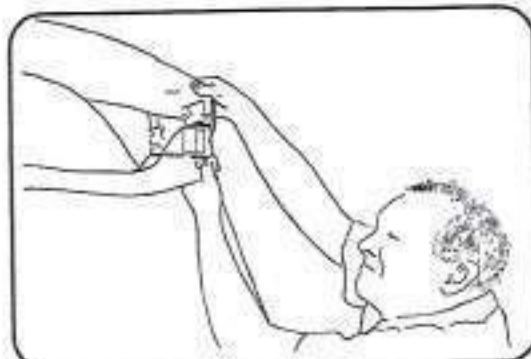


Fold bag back on profile side and loosen retaining strap

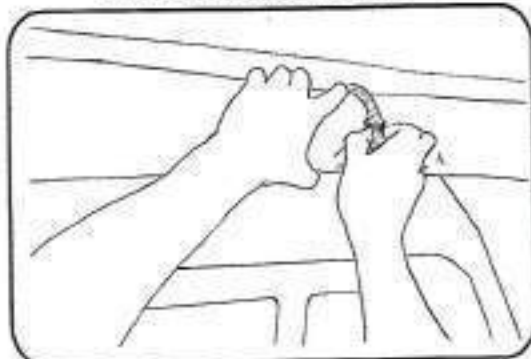


Undo all plastic clips that are retaining fabric in place

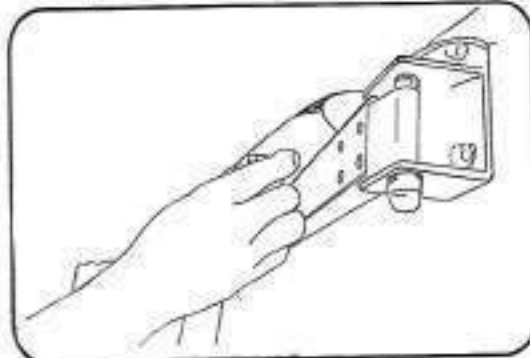

Take hold of aluminium profile

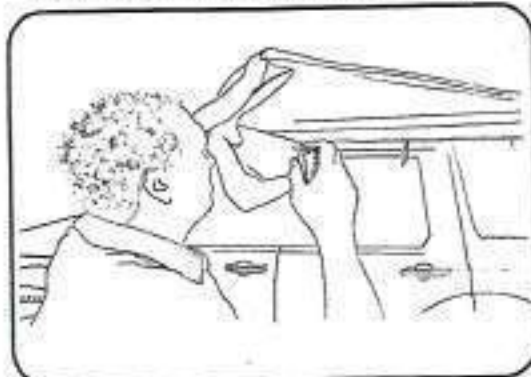


Pull on aluminium profile to release

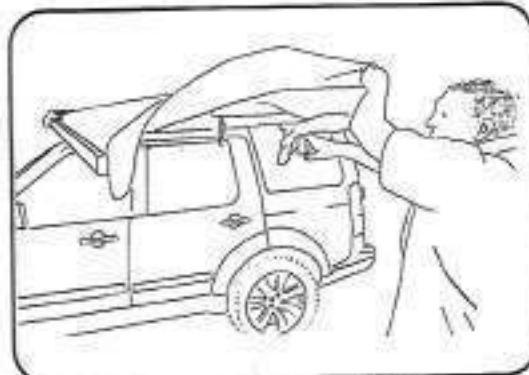


Walk with the profile in your hand in order to deploy


TO OPEN

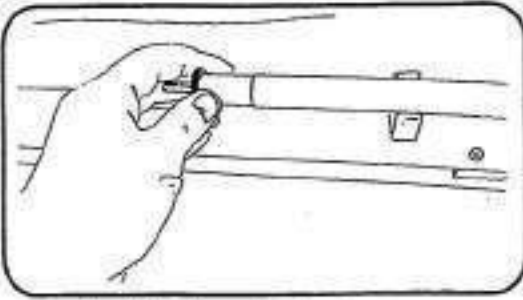


Unclip tension pole and swivel tension pole into position.

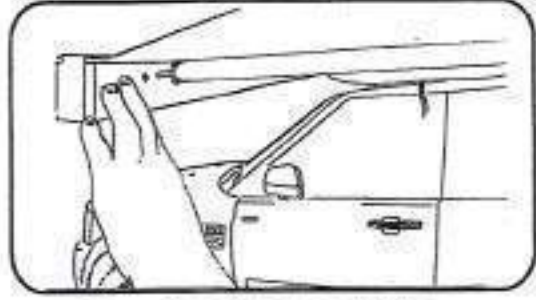


Place pole nib into hole on aluminium profile

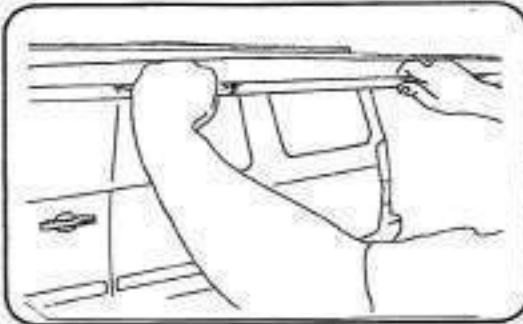


Twist pole in order to lock to secure.

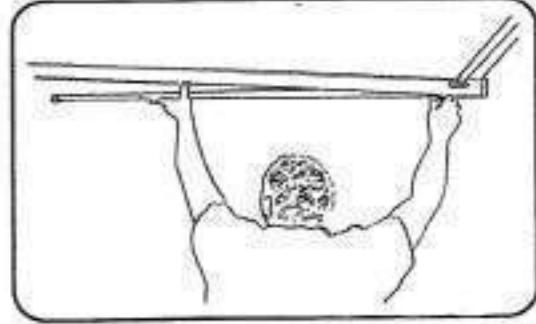


Drop the Swift legs out from aluminium profile

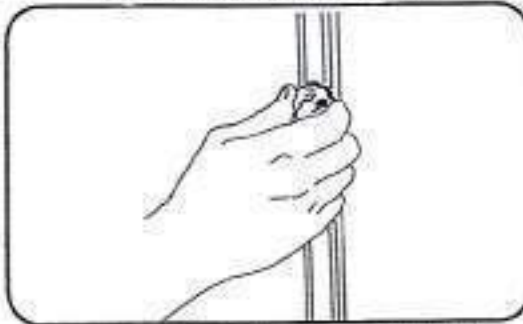


Adjust to correct height and secure black button

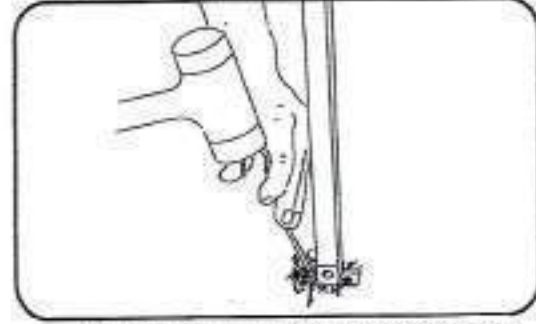

Secure Swift awning legs with pegs provided

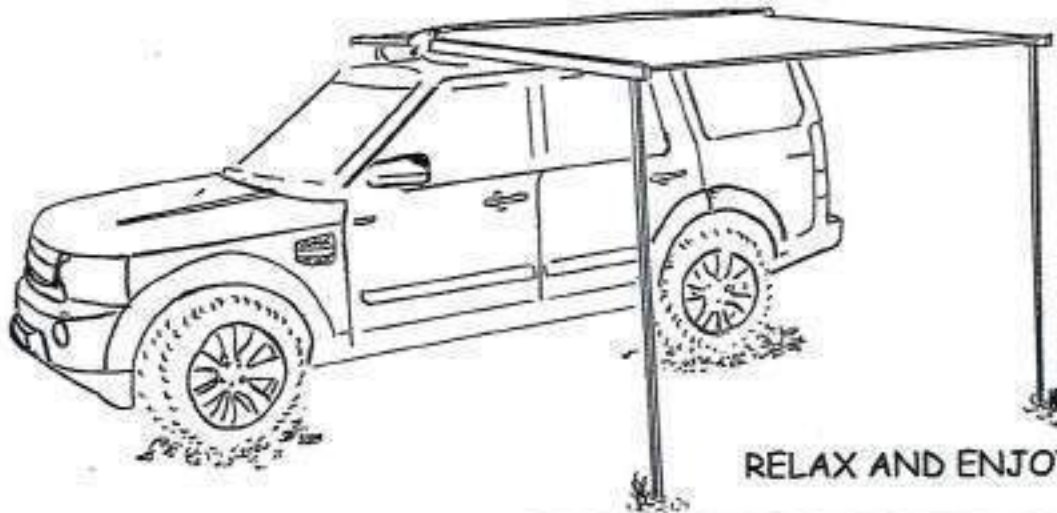


RELAX AND ENJOY!!!

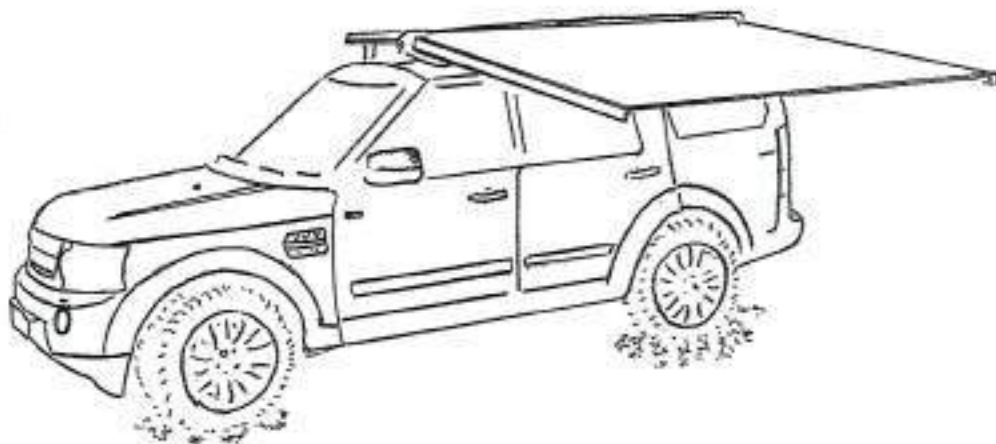


Legs must be deployed and anchored in wind and rain.


TO CLOSE

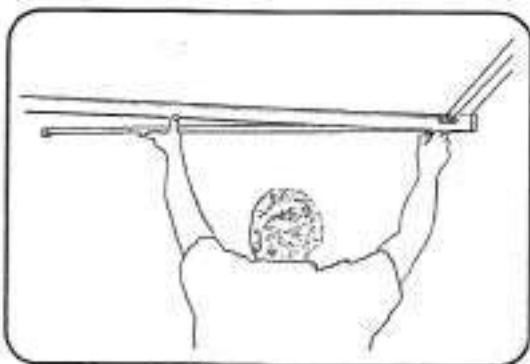


Replace awning legs back into aluminium profile

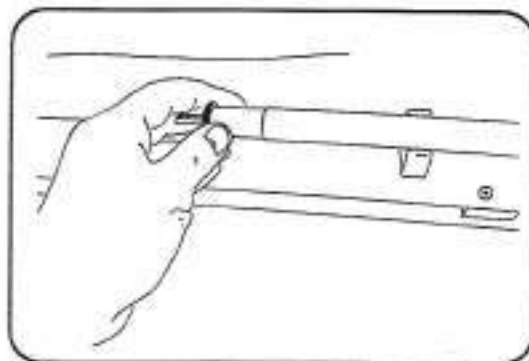


Replace tension pole back onto clip.

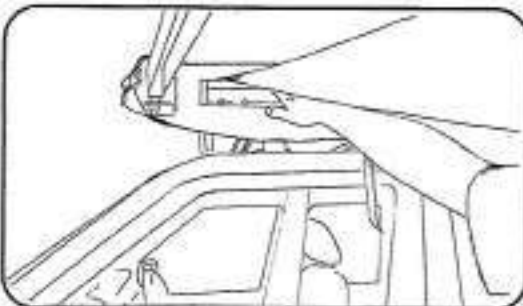


Fold aluminium profiles back into storage position - help guide them so that they sit on top of one another and secure with strap provided

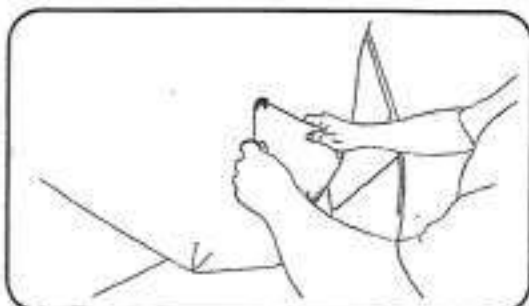

Roll fabric back up and secure with strap provided

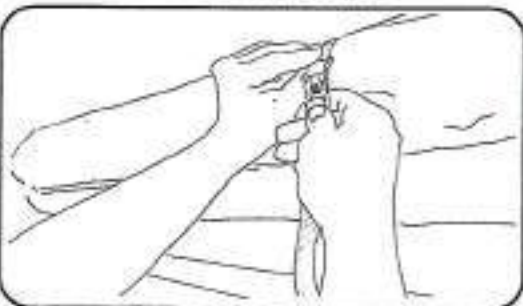


Secure fabric with strap provided

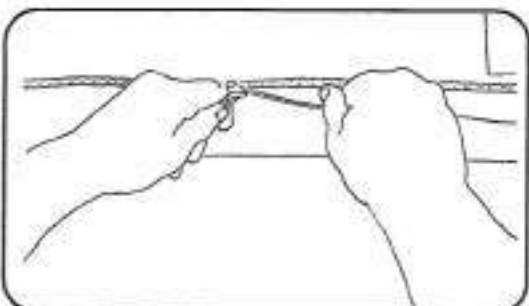


Help with one hand to push fabric in place and close zip




INSTALLATION

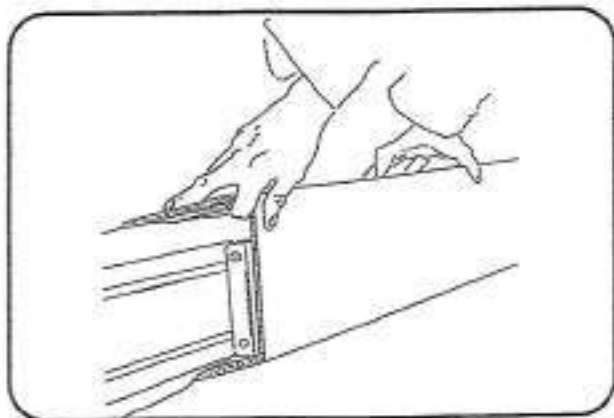


Remove SWIFT from its packaging and place it face down.

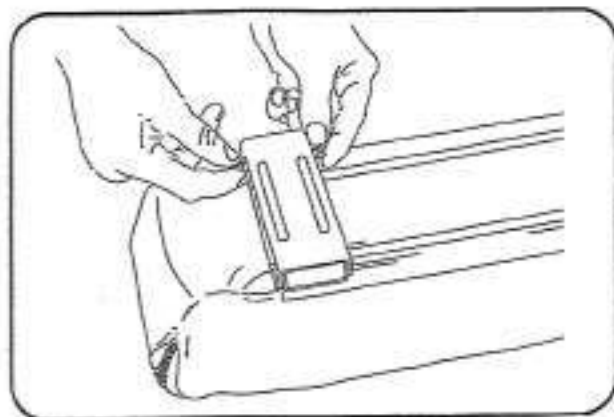


Undo top bracket of kit provided.

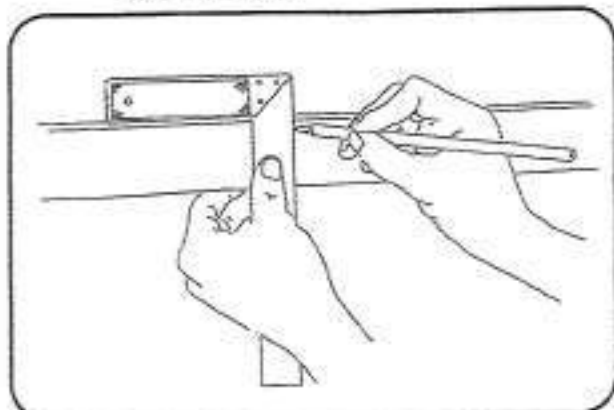


By using a set square, draw a straight line where you would like to mount the front kit to the roof rack.

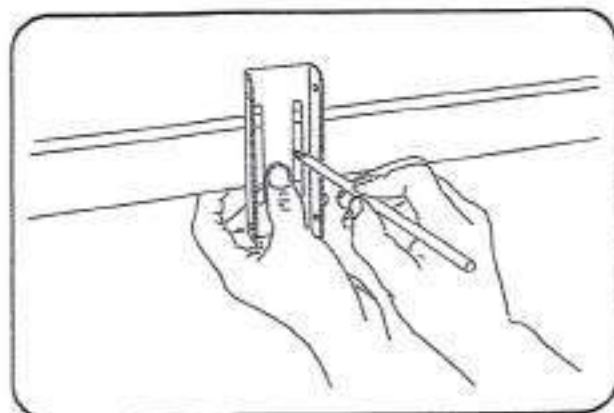

Place the kit into position and mark the holes on the roof rack.

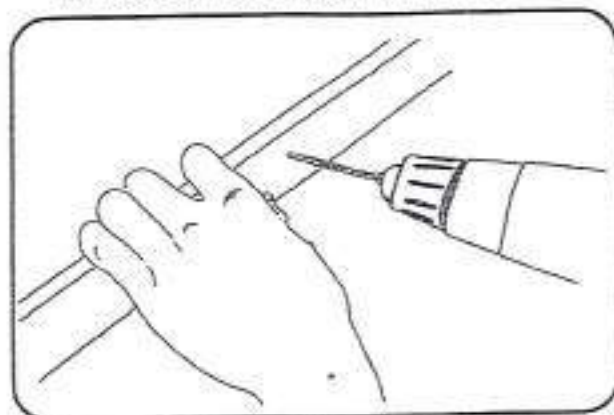

Drill holes in rack by using a 6,5mm drill bit.

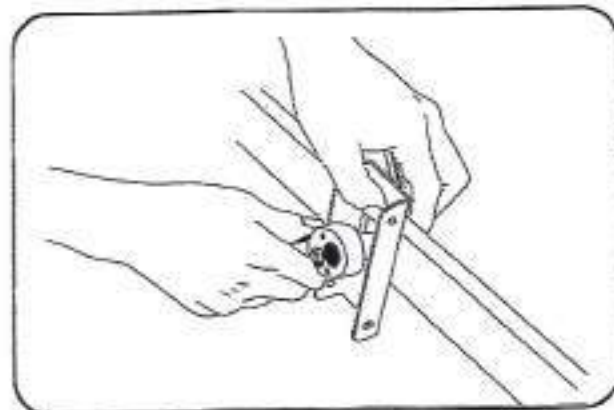


Secure brackets with bolts.




INSTALLATION


Optional extra K9 Roofrack L bracket kit
no drilling required.

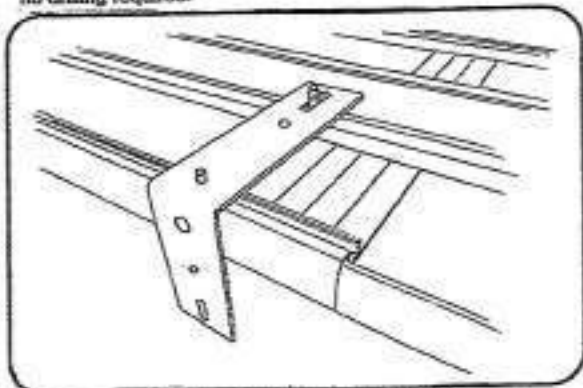




Slide bolts into K9 rack and position L bracket.

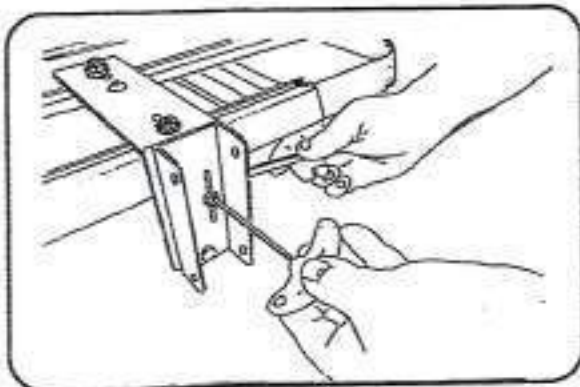

Secure L bracket, gusset in position and tighten with bolts provided.

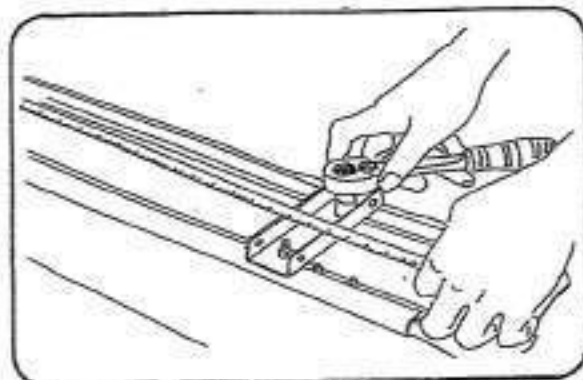

Use a measuring tape to align kits to a BAT270, MANTA 270 and SWIFT with the ones you have fitted to your roofrack. Do this by loosening the bolts on the kit. The kit on the hinge side of the BAT, MANTA should never be more than 300mm from the edge. Hold the BAT, MANTA and SWIFT in position and bolt the kits together.

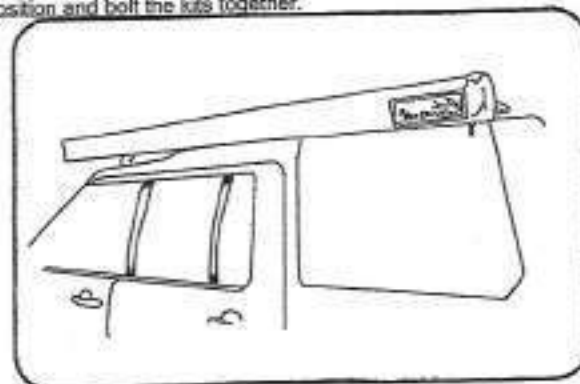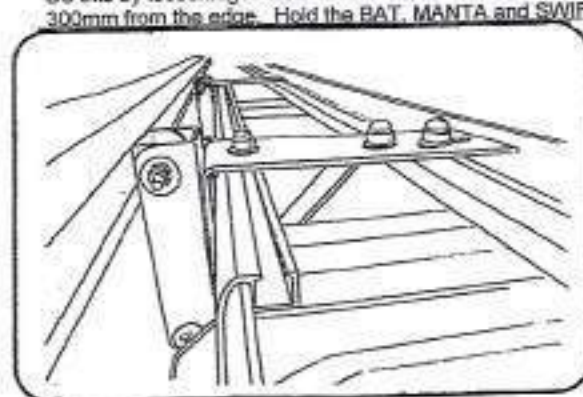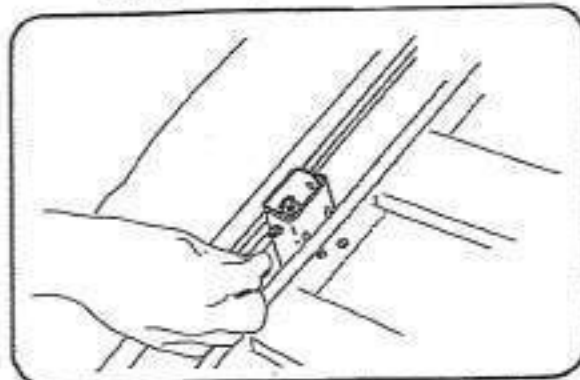

JOB WELL DONE!

Eezi-Awn reserves the right to modify their equipment at their own discretion.