



270 AWNING INSTRUCTION MANUAL

DEAR FREESPIRIT FAMILY,

As a family owned and operated business, it is our hope that as you get out there and use the Freespirit products, you feel like a part of our extended family and also feel like we are all out there exploring this great planet *together.*

Our goal at Freespirit Recreation has always been to re-invent the roof top tent from the ground up. We work hard to create the best designs using the best products that allow for a fast and easy set-up. We want you spending more time *exploring and enjoying life.*

You have asked us to be innovative, to provide the best quality, to provide great customer service, and to keep creating products that *Elevate Your Adventure* so stay in touch with us!

Follow us on social media and on our website, www.gofsr.com.

Have questions for us?

Reach out, we are here to help!

sales@gofsr.com

**Oh, and because we have to put this in here...
PLEASE REVIEW THIS INSTRUCTION MANUAL BEFORE USING
YOUR ROOF TOP TENT.**

From the Freespirit family to you, *THANK YOU*** for your purchase.
We hope that it really will *Elevate Your Adventure!***

**Renee Tewes: President and Team Leader, Customer Service
Tanner Tewes, Team Leader: Sales and Product Innovation
Kristine Sewell, Team Leader: Marketing
Ben Tewes, Team Leader: Sales and Product Innovation**

TABLE OF CONTENTS:

PRODUCT SPECIFICATIONS AND FRAME (PAGE 4)

WHAT'S INCLUDED WITH YOUR 270 AWNING (PAGE 5)

INSTALLATION WITH "L" BRACKETS (PAGE 6-7)


INSTALLATION WITH "U" BRACKETS (PAGE 8-9)

DEPLOYMENT / SETUP (PAGE 10)

PRODUCT SPECIFICATIONS:



270 AWNING

Open Dimensions	(see illustration below)
Closed Dimensions	93"L x 7"W x 7"H
Weight	170 lbs
Cover	600D PVC
Body	600D Oxford Ripstop
Flooring	600D PVC
Frame	Extruded Aluminum Alloy

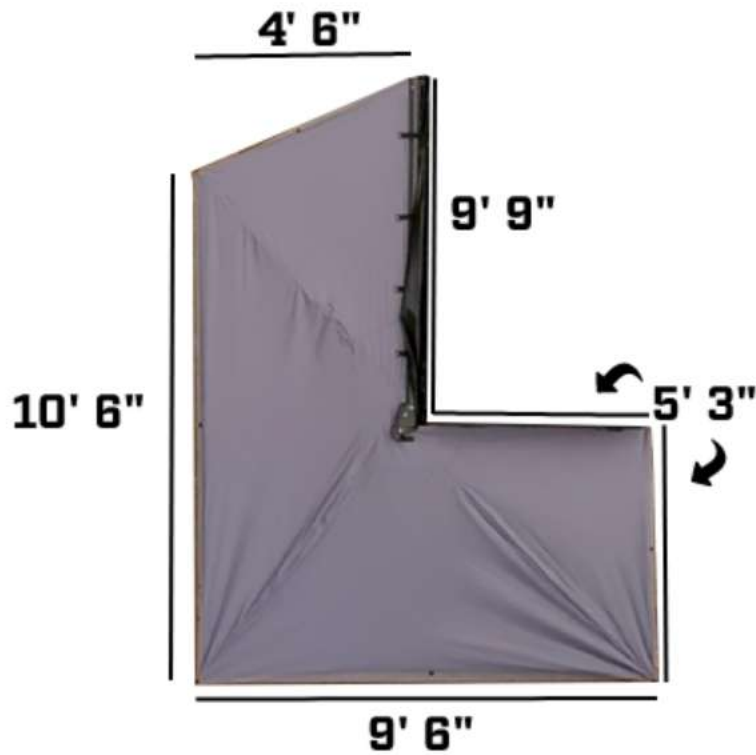

INCLUDES

- 270-degree Awning
- 3x Mounting Brackets
- Stick-on protective pads
- 4x heavy duty pegs
- 4x tie down ropes
- m8 mounting hardware

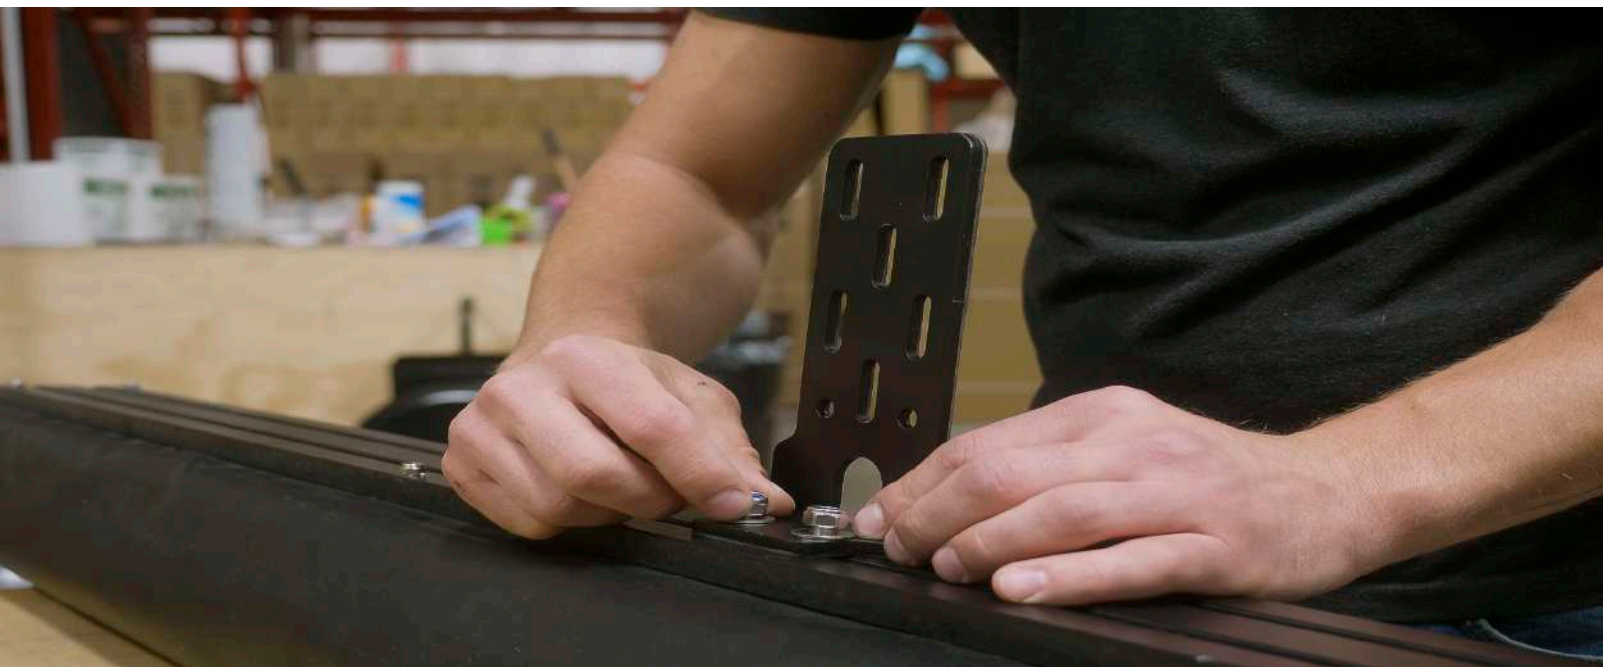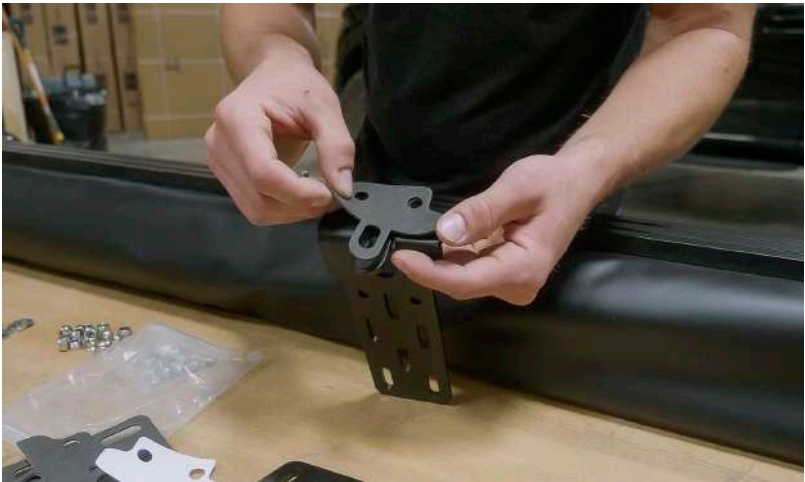


INSTALLATION ON USING "L" BRACKET

IMPORTANT NOTE:

The (3) "L" shaped brackets that are included with your 270-awning are designed to suit the majority of roof racks / roof bars. There's a rare chance that your particular vehicle-rack setup may require the inclusion of additional pieces.

Be sure to install with at least (3) brackets to ensure the free-standing awning is fully supported.

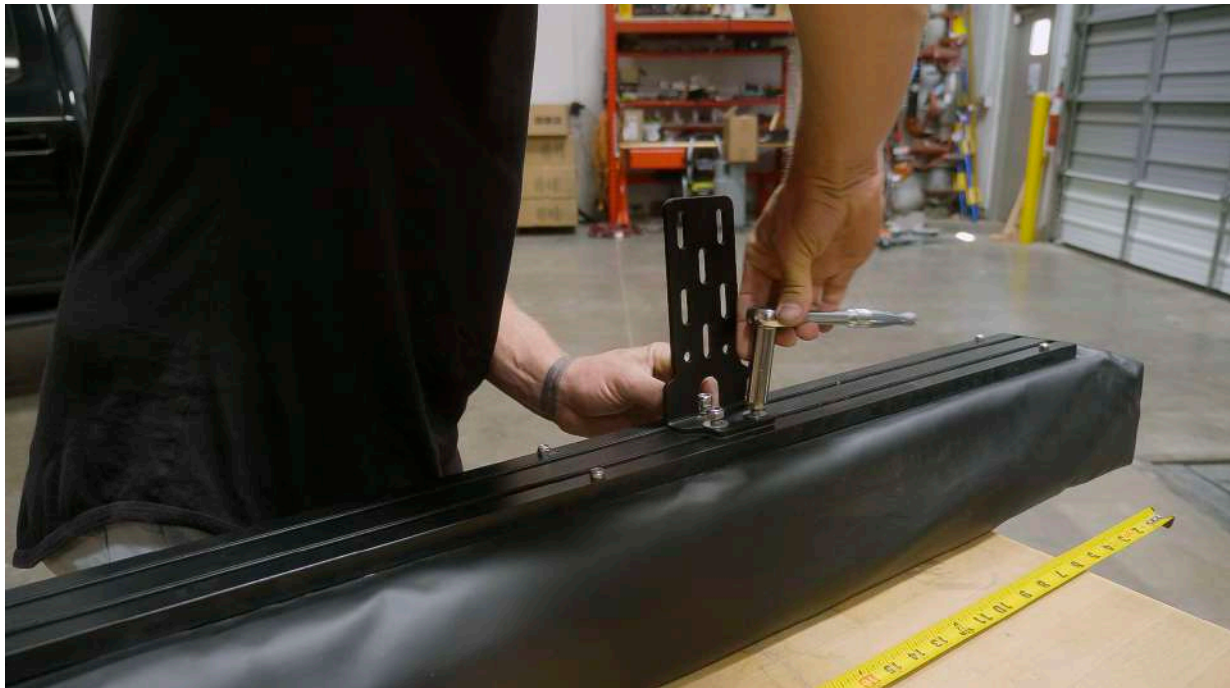

INSTALLATION ON USING "U" BRACKET

IMPORTANT NOTE:

The FSR "U" shaped brackets that are available for purchase are designed to suit FSR harshell rooftop tent side mounting channels.

Be sure to install with at least [3] brackets to ensure the free-standing awning is fully supported.

1. Remove Rubber Channel Cap

2. Slide [1] T-Slot nut into each half of the tent's bottom channel.

3. Place bracket over first T-slot nut and screw in the bolt with a locking washer.

4. Repeat for the second bolt.
[ensure bolts are not tightened all the way as you will have to move the bracket to adjust the width.]

5. Repeat 3-4 for the additional brackets.
3 minimum.

INSTALLATION ON USING "U" BRACKET

6 Slide brackets to evenly space them across a length as near as possible to the length of the awning.

7. Tighten all bolts, locking the brackets in place.

8. Insert bolts into the awning's channels, approximating the space needed.

9. Lift awning with bolts up toward brackets, and affix with nuts provided.

DEPLOYMENT

1. Unzip the PVC cover and flip the front half of the bag over the back of the awning to prevent it from getting caught in the pivot points

2. Undo the Velcro straps and unroll the awning.

3. Using the tension strap, carefully pull the awning around your vehicle, to the opposite side.

4. Hook your tension strap to your RTT or rack then tighten the thumb buckle. Do not over-tighten.

5. Flip up the leg on the second awning arm to tighten up the awning material.