
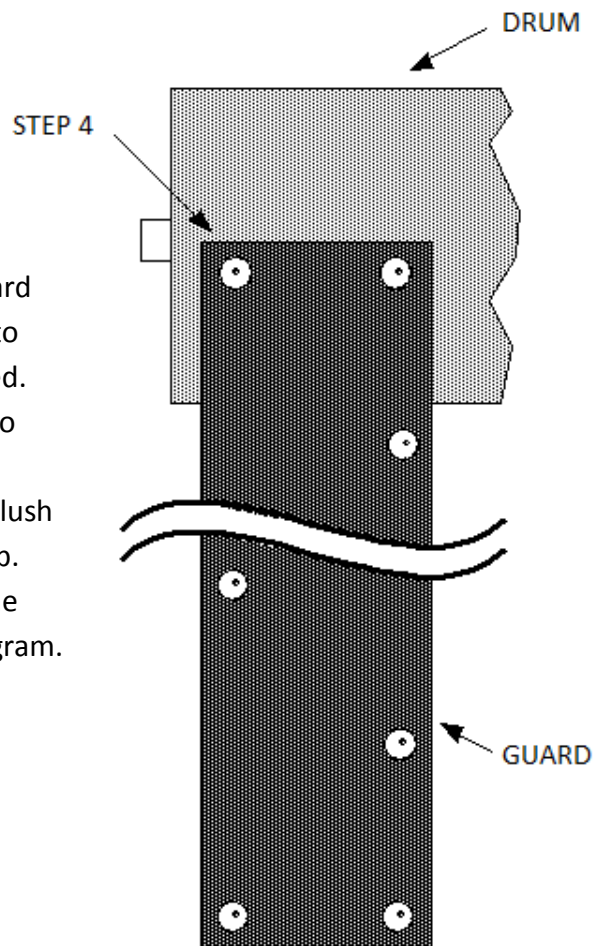


# DRUM GUARD

## INSTALLATION INSTRUCTIONS

1. The May Wes drum guard is made to fit a rock drum or a smooth drum. Pre-drilled holes for each length have been provided for your convenience.
2. Before removing the chain, mark the drum where the outside edges of both links go. Now remove the chain.
3. Take one of the drum guards and place it on the drum using the marks made in step 1 as a guide. Position the guard so the chain will rest in the center of the guard.
4. Using the drill bit sent with the guards, drill a hole through the predrilled holes in the guard end and the drum at the same time, then rivet the guard to the drum. Move to the other side of the guard and repeat so the end of the guard is attached to the drum with two rivets.
5. Turn the drum and pull the guard tight against it. Continue to drill holes through the predrilled drum guard and drum. Rivet into place, alternating from one side to the other. Leave the last two holes on the end undrilled. Be sure to always pull the guard as tight as possible. No space between the drum and the guard is wanted.
6. Once you have completed riveting the guard in place, flush the edges as close as possible and cut away any overlap.
7. Rivet guard end down with two rivets like in step 4. The guard should now look like the one side of the top diagram.
8. Repeat steps 3-8 for the second guard.
9. Replace the feeder house chain.

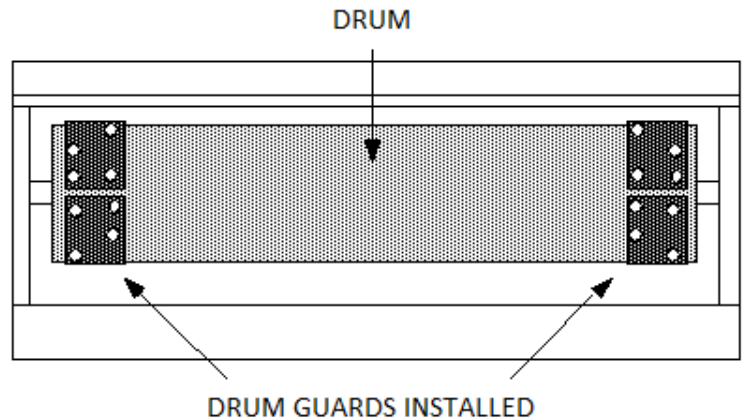

**MAY WES**  
*Original Poly People*  
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)