




STEP 1.
PLACE YOUR PORCELAIN MALABAR CABINET HANDLE WHERE YOU WOULD LIKE IT, THEN ROTATE THE HANDLE SO THAT YOU CAN MARK WHERE THE CENTRE OF THE RECYCLED POLYETHYLENE PLUG (ALREADY INSTALLED) SITS AGAINST THE CABINET.

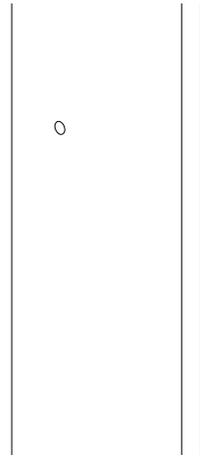

STEP 2.
DRILL 5MM HOLES WHERE YOU HAVE MADE YOUR MARK. DRILL THROUGH YOUR CABINET DOOR. THEN CLEAR THE HOLE OF ANY DEBRIS (WOOD-CHIPS, PAINT ETC).

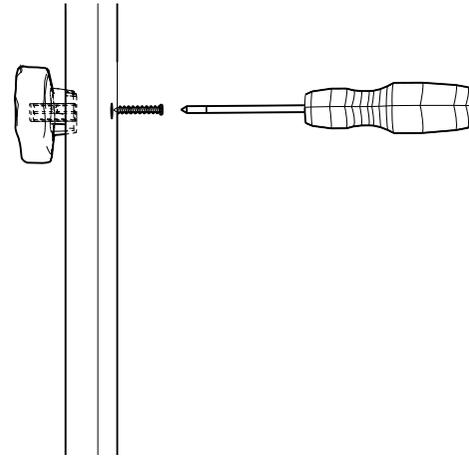


STEP 3.
PLACE YOUR MALABAR HANDLE OVER THE HOLE YOU HAVE DRILLED SO THAT THE HOLE IN THE PLUG LINES UP WITH THE HOLE IN CABINET. PLACE YOUR SELF TAPPING SCREW INTO THE HOLE, SO THAT THE SCREW JUST CATCHES THE HOLE IN THE PLASTIC PLUG.

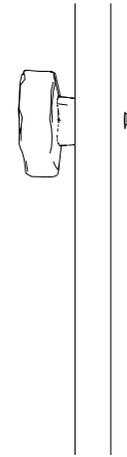

STEP 4.
USING A PHILLIPS HEAD SCREWDRIVER (DO NOT USE A POWER TOOL), THREAD THE SELF TAPPING SCREW INTO THE RECYCLED PLASTIC PLUG. YOU ARE CUTTING A THREAD INTO THE PLUG SO BE SURE TO KEEP YOUR SCREWDRIVER AT RIGHT ANGLES TO YOUR CABINET TO ENSURE A GOOD FIX.

OVER-TIGHTENING OR USING A POWER TOOL WILL CAUSE YOU TO SHRED THE PLUG AND WEAKEN YOUR FIX.

HANDLE&KATE PULL HANDLES ARE PACKED WITH THE FOLLOWING CONTENTS.

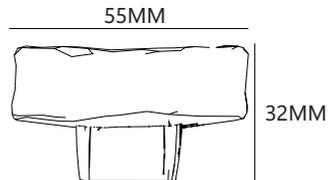

1 x MALABAR PORCELAIN HANDLE
(RECYCLED POLYETHYLENE PLUG INSTALLED
AND TACKED INTO PLACE WITH SILICON)



1 X SELF TAPPING SCREW

HANDLE & KATE