


## Nylon Installation Instructions


Place original nylon hose and new nylon hose parallel to each other. Cut each nylon hose at same measurement.

### Step 1

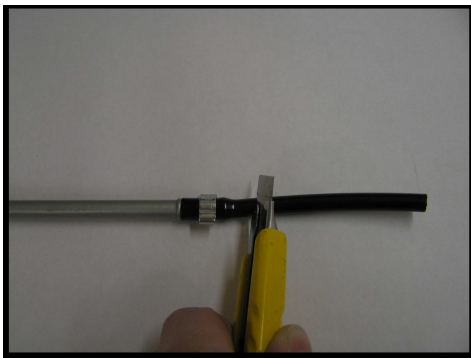

Cut Lines To Go nylon hose in the same position as the original hose.

### Step 2

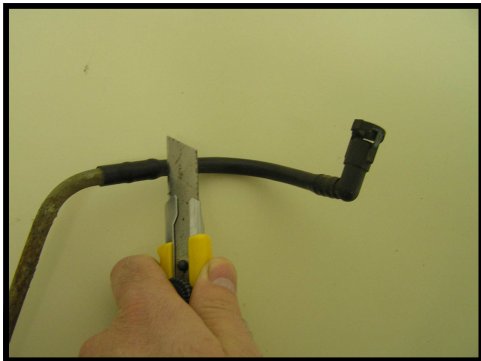

Cut original nylon hose in the same position as Lines To Go nylon hose.

### Step 3



Use original nylon hose with connector and attach with supplied union to the Lines To Go nylon hose.

