



Replacing the Sundream 12V Arm




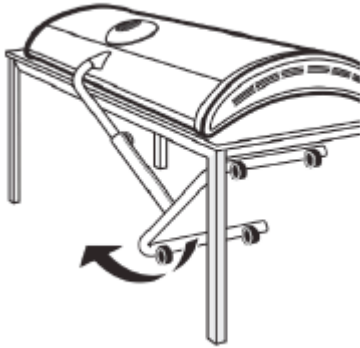

Place the sundream 12V canopy on a table or bed as shown in the picture. This needs to be a sturdy surface so that you can apply pressure without it giving away.

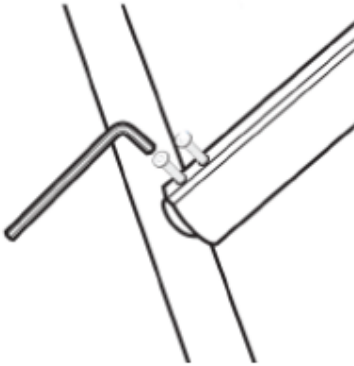

Use an allenhead handle that came with the unit to remove the two screws in the base of the arm of the unit.

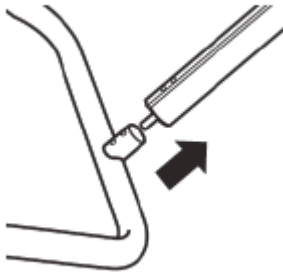

Separate the base from the arm. You will need to use pressure to remove the two pieces.




First remove the circular white plastic cover by using pressure to pop it out as shown in the picture.



After taking off the cover you're going to have to remove the top screw with a philips head screw driver. You might need to use a hammer to apply pressure on the arm to take it out. They are not meant to come out once they are installed so you will need to use some force.




Take the new part provided to you and replace the plastic cover onto the pole. Then place it into the canopy body where you previously removed it. You might need the hammer to push it back in, as shown. Use a rag so it does not scratch.

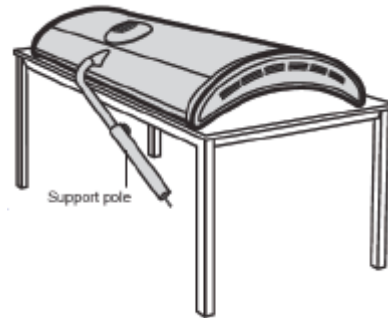





Once the pole is back in place you will need to replace the screw with the philips head screw driver. Once the screw is tightened then move the plastic cover that is outside the frame of this picture back up the pole and into the slots.

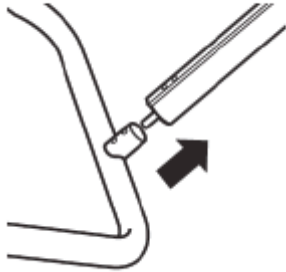

Place the arm into the base as shown. You will need to use a lot of force in order to get the shock to jump into position. If you do not use enough force the unit will not higher and lower, and you will not be able to attached the screws in the next step.

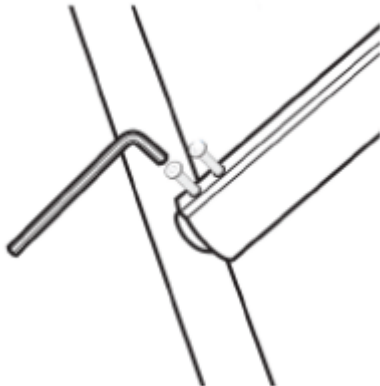

Using the allen wrench tool that came with the unit tighten the two screws as shown.

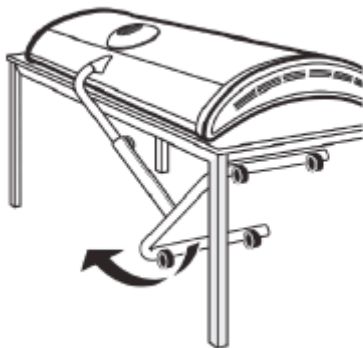

You can now stand the unit up right. If your unit still does not move up or down please follow instructions in this video:

https://drive.google.com/drive/folders/13CGjDRFBifHfx04p-s_zs9jCbeHr2pAT?usp=sharing