





You will receive with two complete sets of Bearclaw latches. In each set there should be:

- 2 Latches
- 2 Strikers
- 6 Bolts for Latches
- 6 Nuts for latch bolts
- 6 Washers for latch bolts
- 2 large striker washers
- 2 nuts for strikers

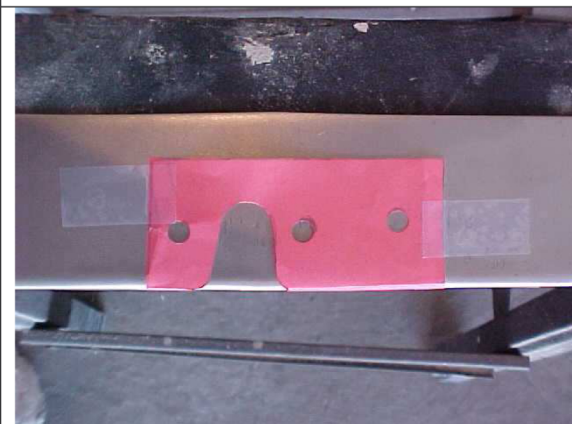


First, fold the latch cutout diagram where stated. Then tape it to the door frame where you wish it to go. As a rule of thumb, place latches near the vertical center of the door frame. This allows for even pressure.

Tape the cutout to the door. Make sure you have the appropriate side facing in and on the correct side of the vehicle. The cut out for the striker should be to the inside of the frame. The area shown in the picture should be on the side of the door frame.

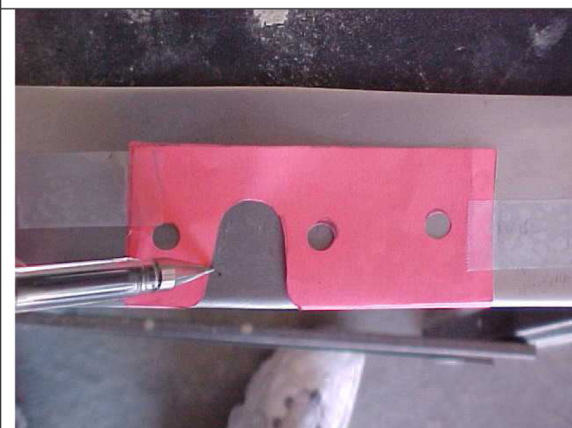

Use the latch as a template to mark holes for drilling

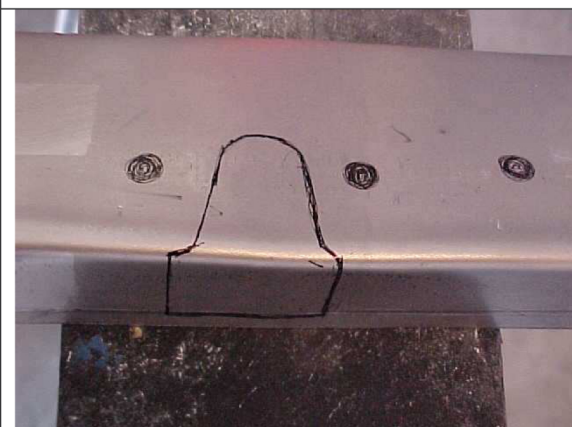

The marked area should look like this. Now you can begin cutting away the steel. Use a cutoff wheel or what ever your cutting device of choice is and have some fun!