






RAM 3500 2014-2018

NOTE: Both illustrations are of the left, or driver's side, of the vehicle. Reverse any orientations when assembling and installing the right, or passenger, side of the vehicle.

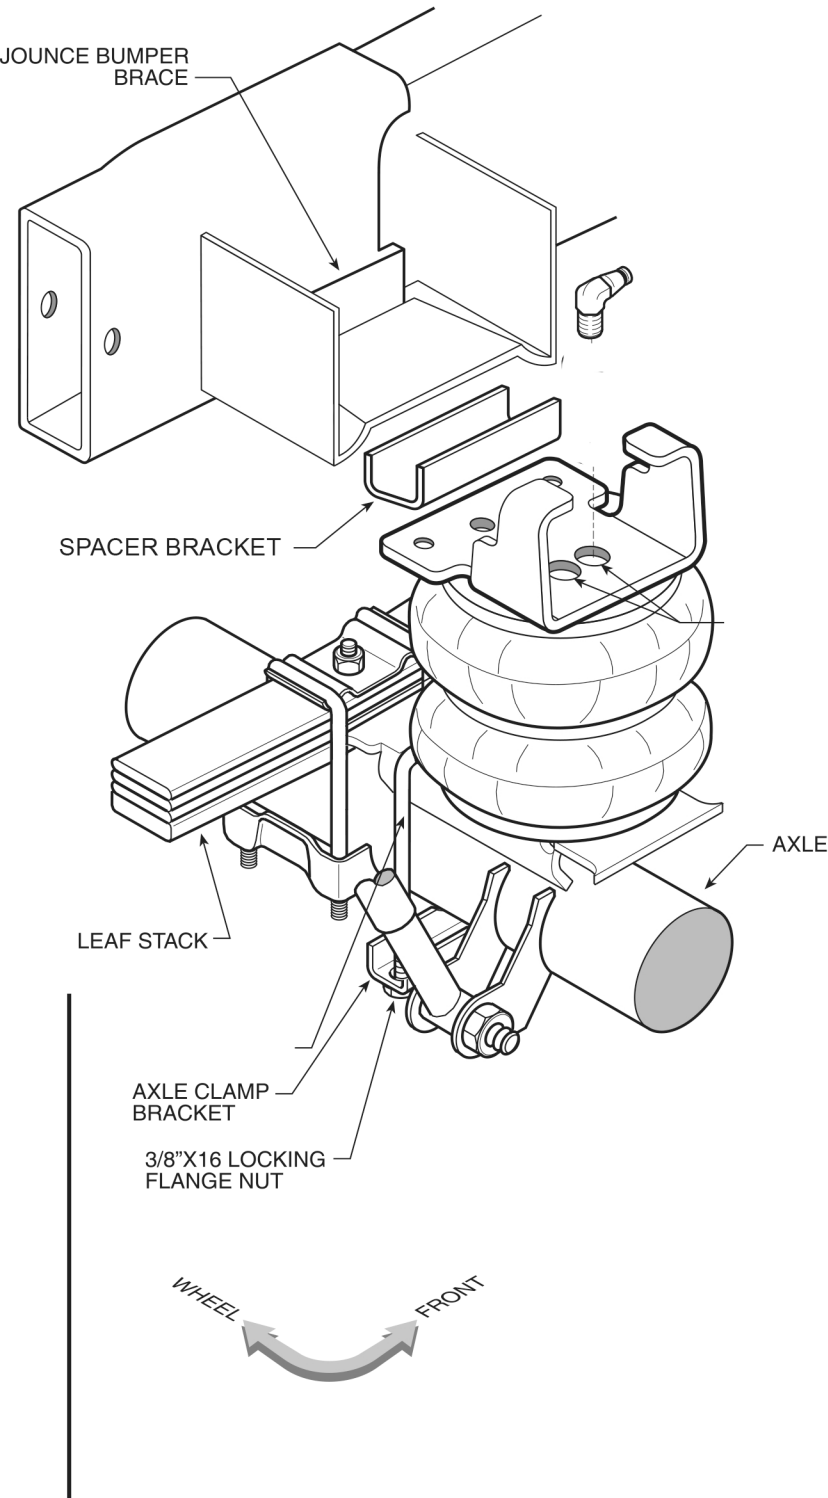

KIT ASSEMBLY

PUSH-TO-CONNECT ELBOW FITTING

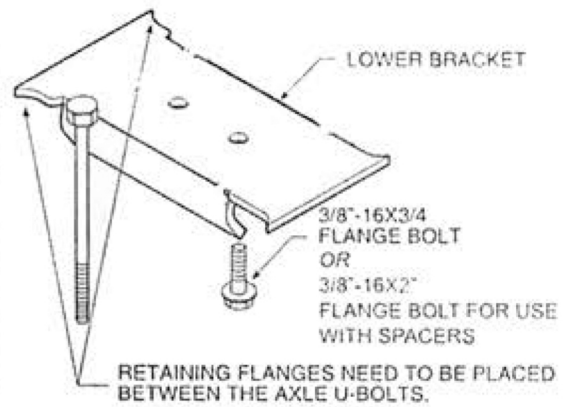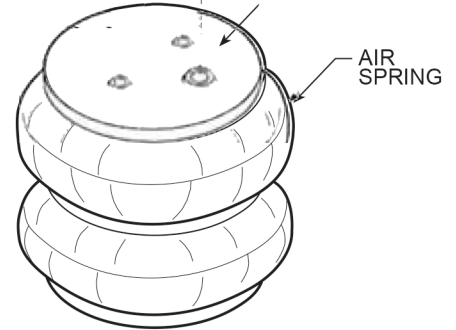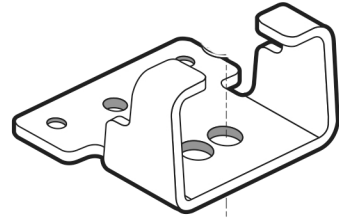

Lower Bracket Orientation

