
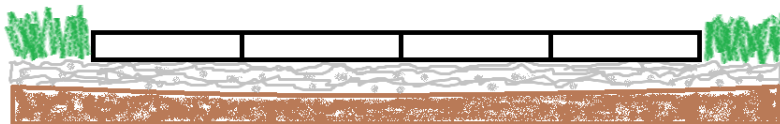


How to Build a Pad for Your Hot Tub (If not going on a deck)

You Will Need:

- Crusher Dust
- Patio Stones (2'x2' and at least 2 inches thick)

- 1) Remove sod in a 10'x12' shape and smooth out the dirt.
- 2) Bring in 2" of crusher dust to cover the area, compact and level it.
- 3) Place patio stones to make an 8'x8' square and add three patio stones in the front for your step. Make sure everything is even and level.
- 4) Rear side must have 27" clearance for cover lifter
- 5) Left and right sides need 20" clearance (can vary a little)
- 6) Front side needs 24" for steps

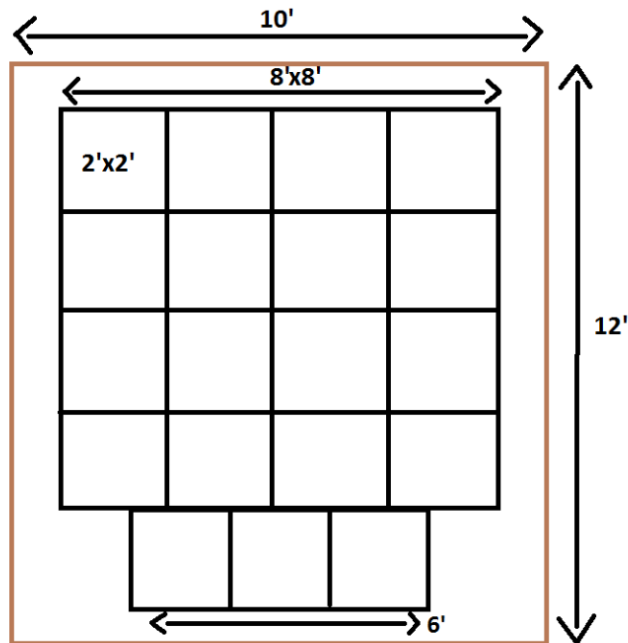

Suggested dimensions and clearances of wooden Platform

- 1) Platform size-10'x12'
- 2) Required clearance in the back where the cover goes when it's being opened against any structure - 27"
- 3) Required clearance on the sides against any structure- 20"
- 4) Leave the front of the tub open and accessible for initial wiring and regular maintenance.



27"

