LUX E90 LCI Halogen

Installation Guide

<u>Please Note:</u> It may be easier to remove the wheel and wheel liner prior to installing the LUX in order to have more visibility and working room. If so please refer to our <u>LUX E90 Install guide</u>. That guide has instructions on removing the wheel and well liner


Tools Needed: 15mm Torx wrench

Steps:

- 1. Unclip rear cover of headlights
- 2. Remove screws and twist out old bulb
- 3. Installed LUX LCI Halogen and put screws back in
- 4. Connect new wires
- 5. Replace rear cover





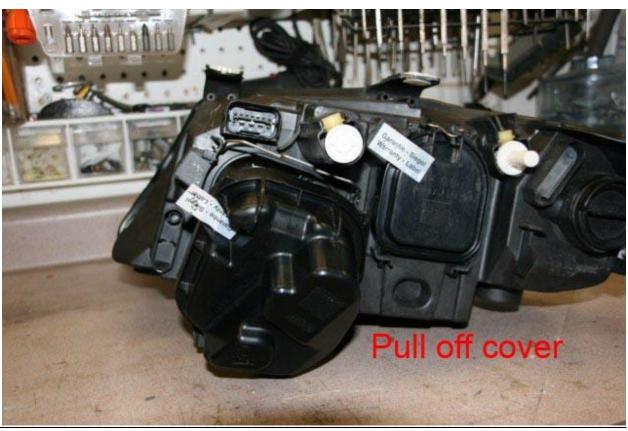









First twist the bulb as shown, then the bulb should Gently pull out

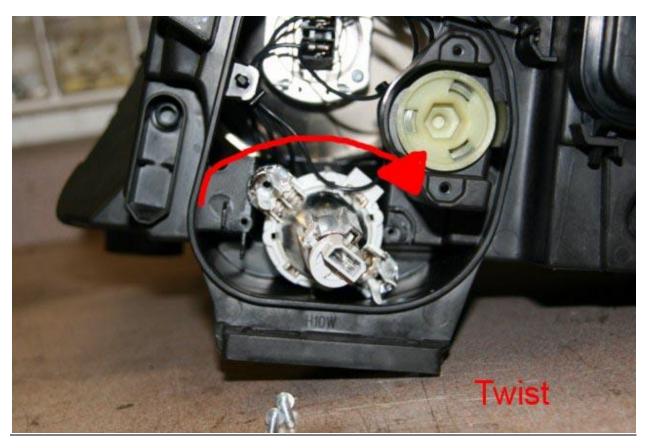




Insert the new LUX LCI Halogen unit and re-insert the screws

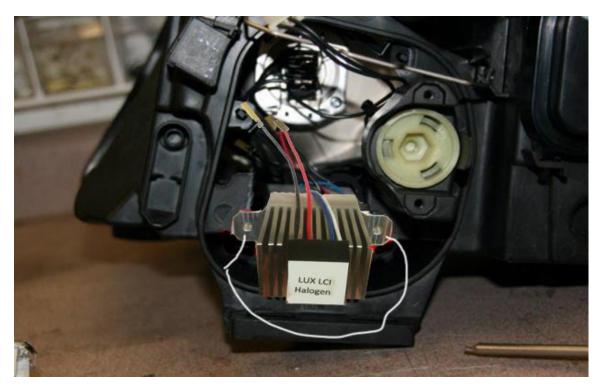

Connect the wires:

Follow the picture in the diagram. With the angle pieces on the Top – the Right is Positive, the left is Negative.

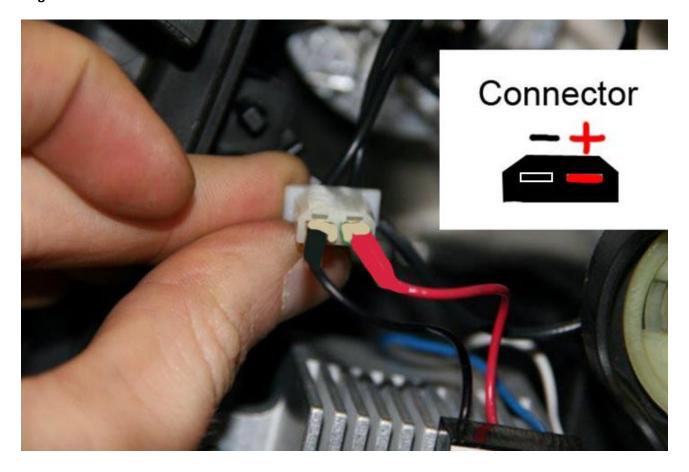

Re-install the back cover and push the metal clip back into place

For the driver side, everything is the same except you need to twist the OEM bulb in the opposite direction to remove it. The wires for the LUX LCI Halogen on the drives side connect in the same way as the passenger side.

Enjoy!!

