



EMERGENCY FLOOD PUMP KIT

INSTRUCTIONS



Protect Against:

[QUICK DAM]™ THE NEXT GENERATION IN FLOOD PROTECTION

WHAT'S INCLUDED

Kits Contains:

PUMP-Z44 x1
QDPHose x1
QDPFitting x1
QDCRATE x1
Instructions Packet
(Not Shown)



PUMP-Z44

Garden Hose
Connector

QDPFitting
Comes already
attached



QDPHose



QDCRATE

Absorbents Included:

WUB210-2 -
10ft Water Dam (2) x2
QD610-1 -
10ft Flood Barrier (1) x2



WUB210-2 (2)



QD610-1 (2)

Visit us at www.quickdams.com or call 888-761-4405



INSTRUCTIONS

Getting Started with Flood Control Products:



Remove instruction packet contents



Flood Barriers (Black)

Place outside in the path of problem water & try to redirect water to prevent intrusion.




Indoor Water Dams (Orange)

Place along the perimeter of problem areas—absorbing & containing any water present

Getting Started with Pump:



Place pump in low lying area or where potential water issues may happen. Pump will dry to 1/8" and is ok to run dry

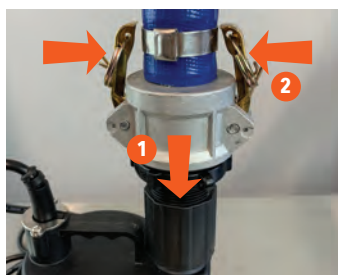

Attach hose fitting on the end of the upper pump fitting and clamp into position



Run hose to an area where water can run off and will not cause additional water issues



Plug Pump in. Depending on your situation, an extension cord or generator may be necessary

Break Down & Storage:



Once no longer needed, dry and place all items back in crate for storage



Absorbent materials can be disposed of in the garbage.



Flood Barriers can be left in place for about a season to assist in redirecting water or can be disposed of in the garbage

