



3 STAR INDUSTRIES

CAN AM Maverick Sport and Crew

1 PC WINDSHIELD


**DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD
THIS WILL BE YOUR LAST INSTALLATION STEP!**

Part	Qty	Description
	4	C-Clamp
	6	Neoprene Washer
	4	1-3/4" Bolt
	2	1-1/2" Bolt
	6	Small Washer
	6	Lock Nut
	4	Wingnuts

STEP 1:

Set windshield on roll cage. Peel back paper on both sides of the windshield to reveal the slots cut for the bolt and neoprene washer.

STEP 2: Assemble neoprene washer and 1 1/2" Bolt.

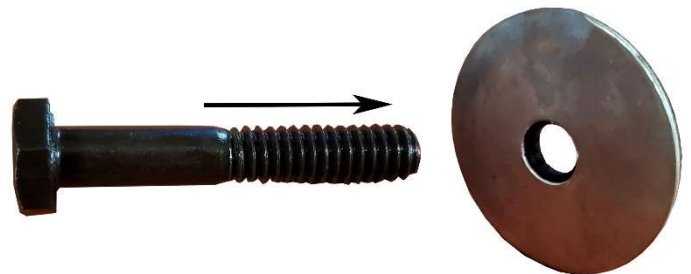

STEP 3: Insert bolt/neoprene washer assembly through the top of the windshield, then through the factory drilled hole in the top of the SXS frame. Secure with small washer and lock nut.



Factory drilled holes.



STEP 4

Assemble bolt, neoprene washer and wingnut.



STEP 5

Peel back the paper to expose the clamp holes.

STEP 6

Clip the C-Clamp to the outside edge of the pro-fit cage, the circular opening will face the windshield.

STEP 7

Insert the bolt assembly through the outside of the windshield through the holes in the clamp, secure with small washer and lock nut.



STEP 8

Install all remaining hardware.

STEP 9

Tighten all hardware.

STEP 10

Remove protective paper from both sides of the windshield.



Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called NOVUS, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.