




INDUSTRIES


CFMOTO Z800 SKID PLATE

Hardware Kit

Hardware	Description	Qty
	20MM BOLT	14
	30MM BOLT	2
	LARGE WASHER	16


YOU WILL NEED A 10MM SOCKET FOR
INSTALLATION, WE RECOMMEND USING A DRILL
BUT A SOCKET WRENCH WILL WORK AS WELL.

1: REMOVE EXISTING SKID PLATE

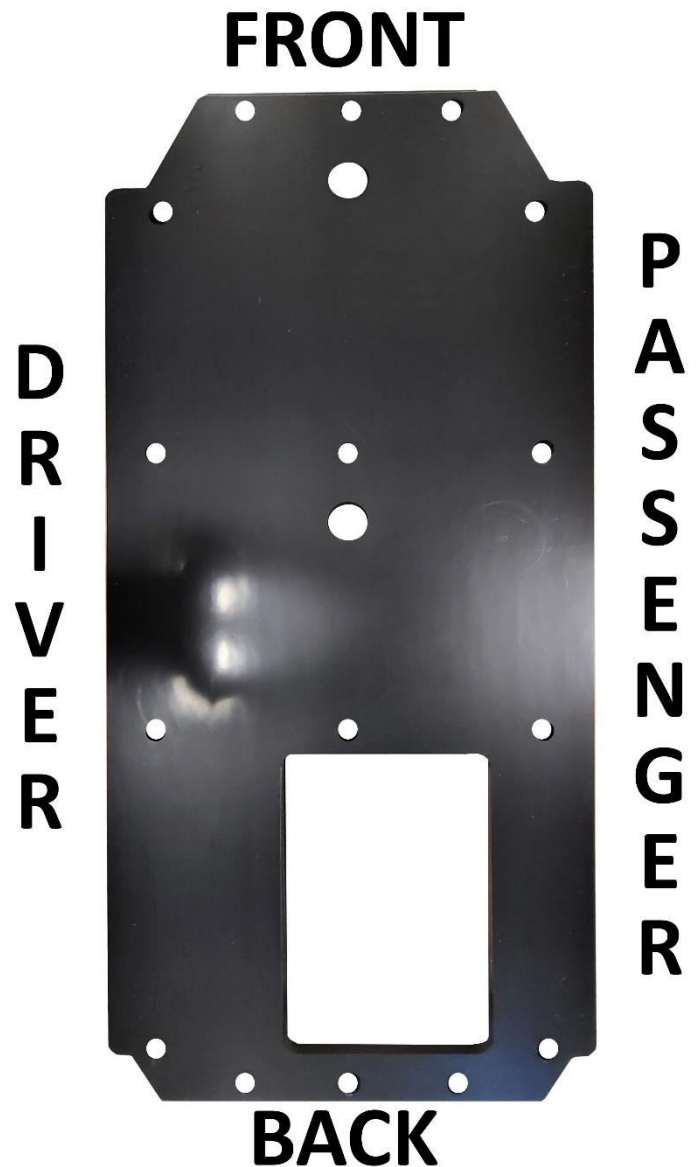


2: START 20MM BOLT/CUP WASHER IN FRONT TWO CORNERS OF THE SKID PLATE

Hold skid plate to the carriage frame and insert bolt into cup washer, hand start a bolt/cup washer assembly in each corner of the plate to hold it to the frame.

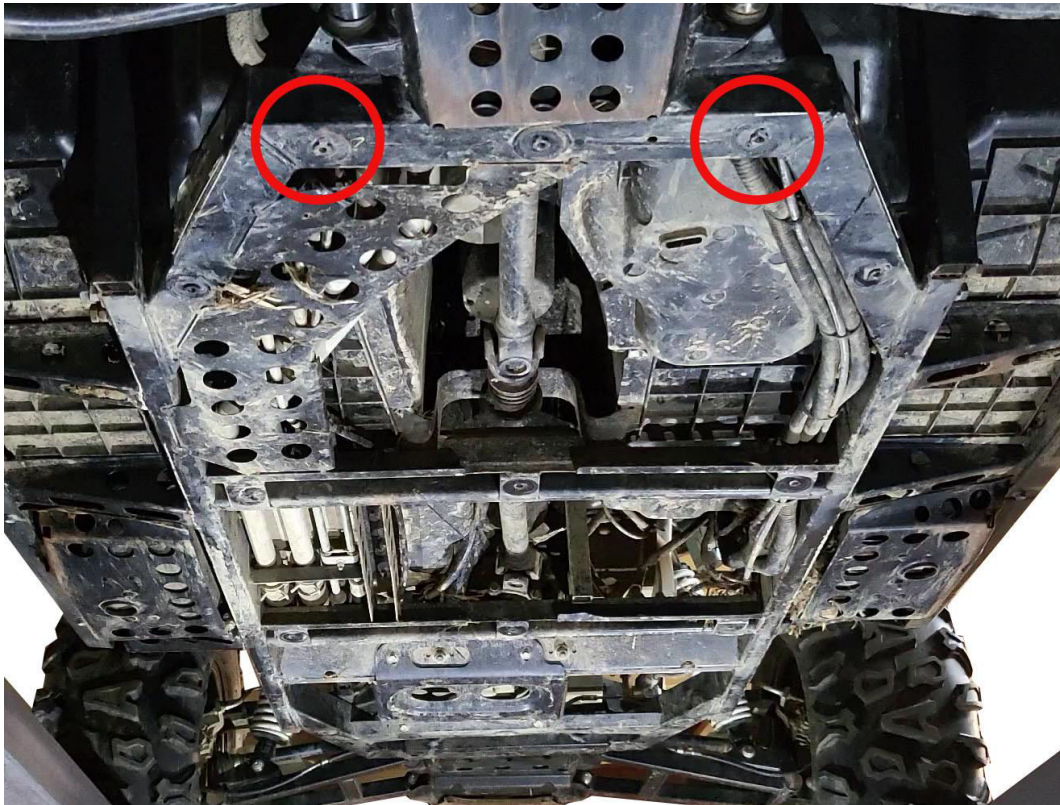


3: START 20 MM BOLT/CUP WASHER IN BACK TWO CORNERS OF THE SKID PLATE

Skid plate will stop short of the frame as shown in the photo.

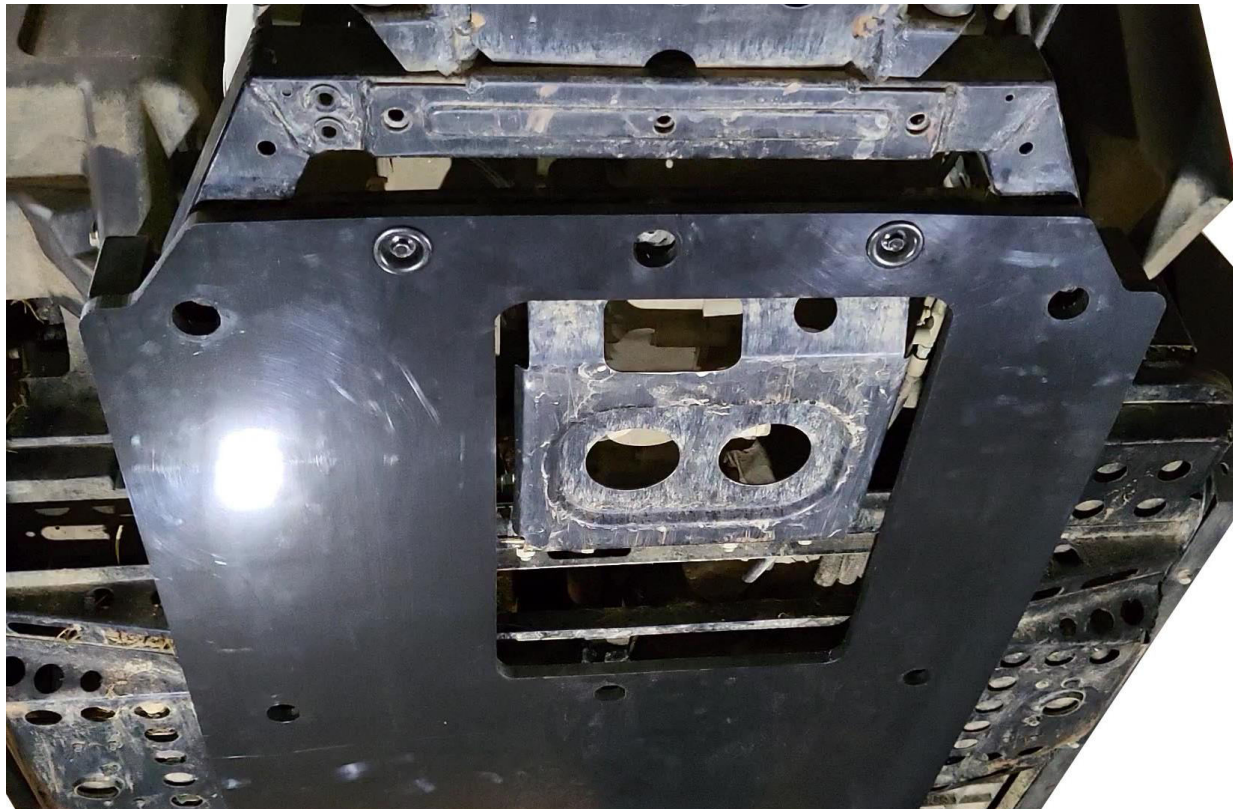

4: START 30MM BOLT IN THESE TWO SPACES ON THE FRONT OF THE SKID PLATE

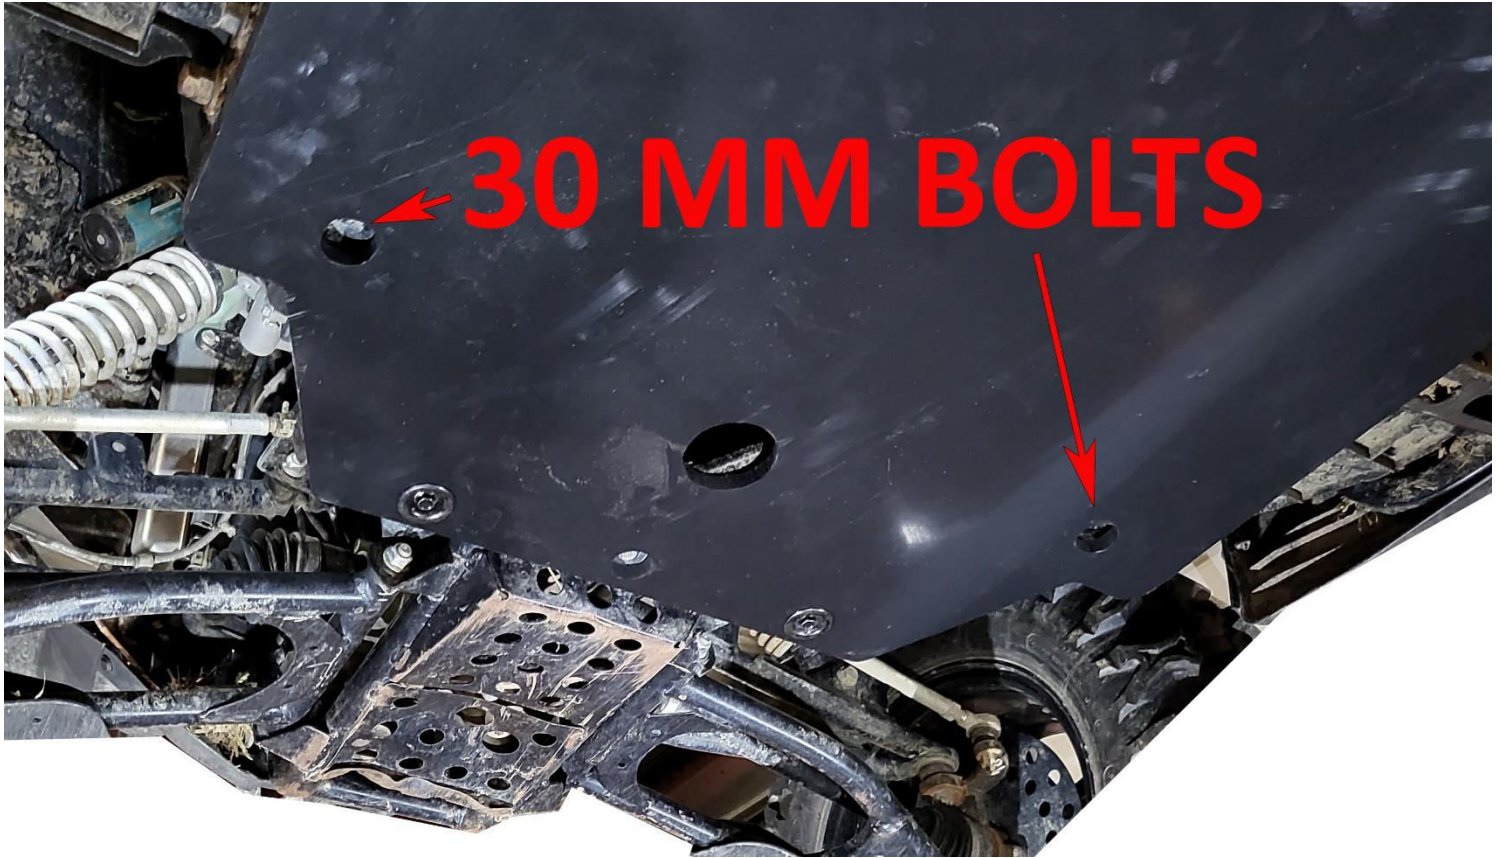

5: HAND START ALL 20MM BOLTS

6: USE DRILL TO TIGHTEN ALL BOLTS





