



# 3 STAR INDUSTRIES

CFmoto Uforce 600



2 PC WINDSHIELD

**DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD  
THIS WILL BE YOUR LAST INSTALLATION STEP!**

Part	Qty	Description
	6	C-Clamp
	6	Neoprene Washer
	6	1-1/2" Bolt
	6	Small Washer
	6	Lock Nut
	6	Wingnuts

STEP 1

Prepare bolt, wingnut and neoprene washer.

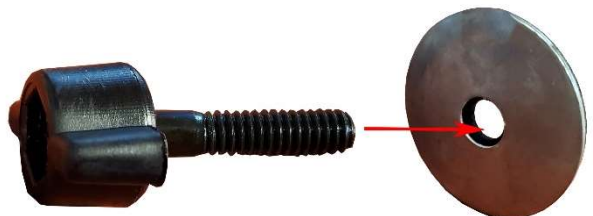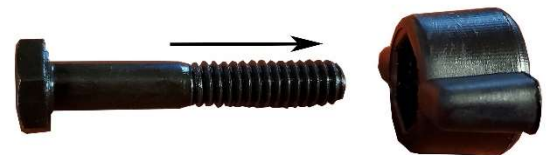

STEP 2

Set bottom portion of windshield on hood line.  
Peel back paper on both side of the windshield to reveal pre-cut slots in the windshield.

**STEP 3**

Clip C-Clamp around the outside edge of the pro-fit cage.

**STEP 4**

Insert wingnut assembly through the outside of the windshield and then through the circular opening in the C-Clamp. Secure with small washer and lock nut.

**STEP 5**

Repeat steps 3 and 4 for the opposite side.

**STEP 6**

Tighten the lock nuts.

**STEP 7**

Set the upper portion of the windshield on the lower portion. Install the remaining C-Clamps.

**STEP 8**

Tighten all lock nuts.



**Remove protective paper from both sides of the windshield.**



## Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called NOVUS, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.