



3 STAR INDUSTRIES

HONDA PIONEER 500

BACK PANEL

**DO NOT REMOVE PROTECTIVE PAPER FROM WINDSHIELD
THIS WILL BE YOUR LAST INSTALLATION STEP!**

Part	Qty	Description
	6	10" STRAP
	2	1-3/4" Loop Clamps
	2	Neoprene Washer
	2	Wingnut
	2	1 1/2" Bolt
	2	Small Washer
	2	Lock Nut
	1	Velcro Roll

ADHESIVE VELCRO CHART		
A	1-50	BEHIND THE BED
B	2-12	DOWN THE BOTTOM OF THE BACK ROLL BAR



STEP 1


Attach all adhesive Velcro for lower back panel.

STEP 2

Attach lower back panel to UTV. You may not need to install Velcro for strip A. Tucking the lower back panel down behind the bed should be all you need to hold it in place.

STEP 3

Install loop clamps on back roll bars. Flat side of the clamp should face the rear.

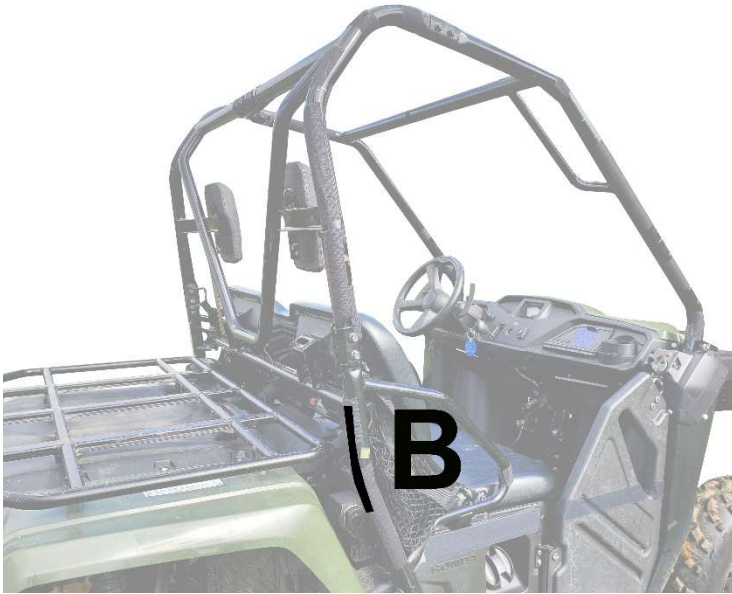

STEP 4

Set back panel on the inside of the UTV over the loop clamps. Peel the protective paper away from the slots cut in the back panel .



STEP 5

Install Velcro straps. Insert strap through the outside of back panel, fuzzy side facing inside the UTV. Wrap strap around the roll bar and insert the end of the strap through the plastic clip. Then wrap the strap around and attach it to the fuzzy Velcro on the opposite side of the strap.




STEP 6

Assemble wingnut, neoprene washer and bolt.

STEP 7

Install wingnut, neoprene washer and bolt assembly. Insert assembly through the outside of the panel, then through the holes in the loop clamps, secure with small washer and lock nut.

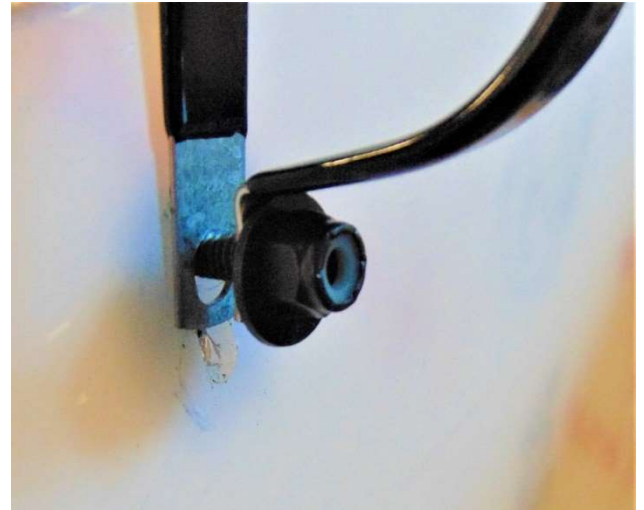

Hand tighten lock nuts for now.

STEP 8

Attach lower back panel to polycarb back panel by threading the small straps on the lower back panel through the pre cut slots in the bottom of the polycarb back panel. Attach straps to the hook sewn on the outside of the lower back panel.

STEP 9

Push the polycarb back panel into place. The top of the panel should set in the center of the top roll bar. Once you are satisfied with the position of the back panel tighten all hard ware and retighten straps.

STEP 10

You may now remove the protective paper from both sides of the back panel.

Cleaning Instructions.

Lexan, which is a brand of polycarbonate, is virtually indestructible. But it is also easily scratched. Please read the cleaning recommendations to limit damage to your product.

Never wipe your polycarb back panel with any just any old cloth. We recommend using micro fleece blanket. This is super soft material you can find at Walmart. Any other cloth even micro fiber will leave scratches on the polycarbonate. If you are unsure about the fabric please give us a call at 859-488-7447 ask for Sam.

Never use any abrasive cleaning products on your polycarb. Windex for example is not ok! This will cause the polycarb to develop a haze. Some chemicals may eat through the polycarb. I do not recommend using any kind of soap but if you must please use dish soap only, like dawn. Pour on and spray off, do not wipe!

Do not try to wipe off mud period! Spray mud and debris off with water hose first! If you have access to a leaf blower or air compressor we recommend using them to dry the windshield. If not, gently use a micro fleece blanket to blot the water away and then air dry.

I recommend using a product called MuddTraxx Ceramic Detailer, to apply a coat of wax that will prevent mud and dust from clinging to your windshield. If you are having trouble finding this product online please call Sam at the number listed above.